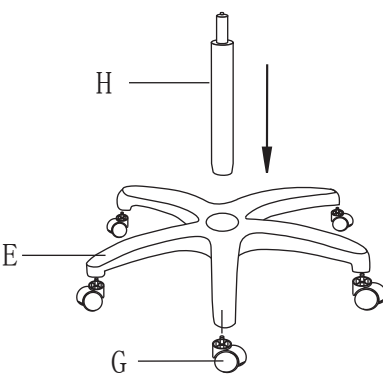
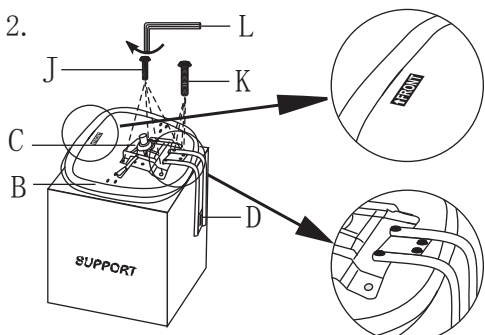




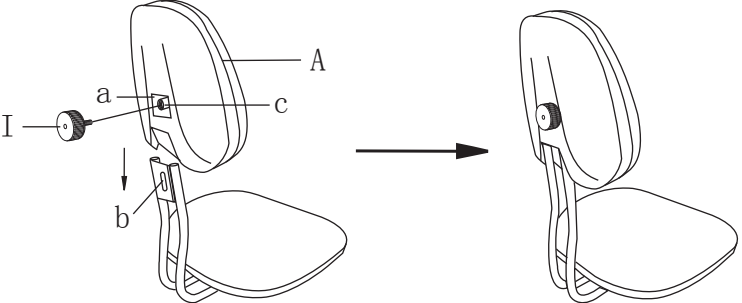
ASSEMBLY INSTRUCTIONS

Compatible with IN49AKA10B/IN49AKB10B armrests

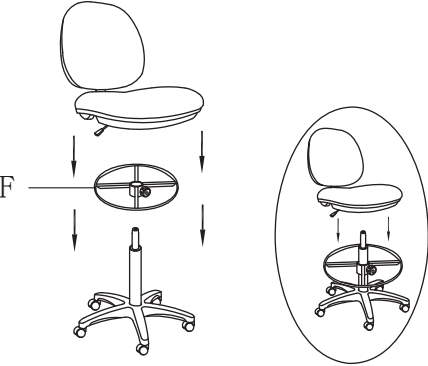
1. 

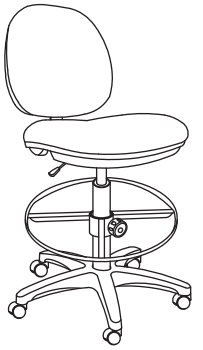
2. 

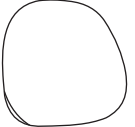

 

 
 
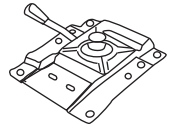


 
 

The back bar should be on top of the mechanism.

3. 

Attach the knob(I) insert three parts, Back plastic(a), Back bar(b), Screw hole(c).

4. 

5. 

<p>A.</p>  <p>1 PC</p>	<p>E.</p>  <p>1 PC</p>	<p>I.</p>  <p>1 PC</p>
<p>B.</p>  <p>1 PC</p>	<p>F.</p>  <p>1 PC</p>	<p>J.</p>  <p>25 mm 4 PCS</p>
<p>C.</p>  <p>1 PC</p>	<p>G.</p>  <p>5 PCS</p>	<p>K.</p>  <p>32 mm 4 PCS</p>
<p>D.</p>  <p>1 PC</p>	<p>H.</p>  <p>1 PC</p>	<p>L.</p>  <p>1 PC</p>

Model: ALE-IN4611/IN4621/IN4631/IN4641/IN4616/IN4651
 Manufactured for/ Hecho para/ Fabriqué pour Alera® / Essendant Co.,
 One Parkway North, Deerfield, IL 60015 © 2015 Essendant Co.
 Made in/ Hecho en/ Fabriqué en China
 Product support and parts: 1-800-733-4000
 Ayuda del producto y partes / Support technique et pieces

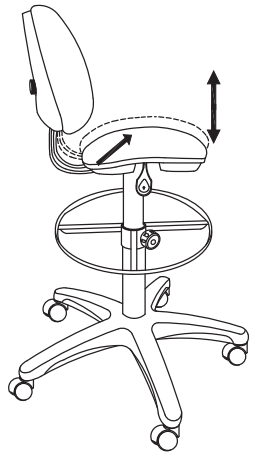


OPERATING INSTRUCTIONS

Model: IN4611/IN4621/IN4631/IN4641/IN4616/IN4651 with IN49AKA10B/IN49AKB10B armrests(sold separately)

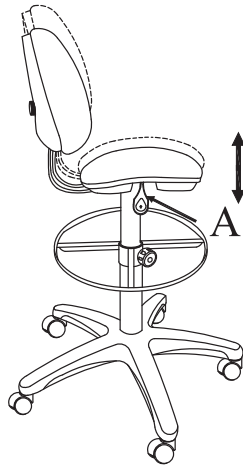
Arm Height (Armrest set sold separately)

To adjust the armrest height, lift the lever on the outside of the arm support and move the arm up or down. Release the lever to lock.



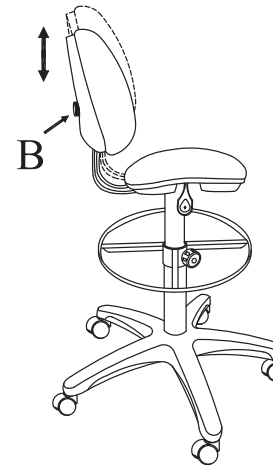
Seat Height

To raise the seat height, stand up from the chair while lifting the lever "A" under the right side of the seat. To lower the seat height, lift the lever "A" while sitting in the chair.



Back height

To adjust the back height loosen the knob "B" under the back left side support by turning clockwise, away from the seat.



Base Ring Height

To raise or lower the base ring height, loosen the knob "C" and adjust to the desired height.

