

 
 

 
 
 






ASSEMBLY INSTRUCTIONS

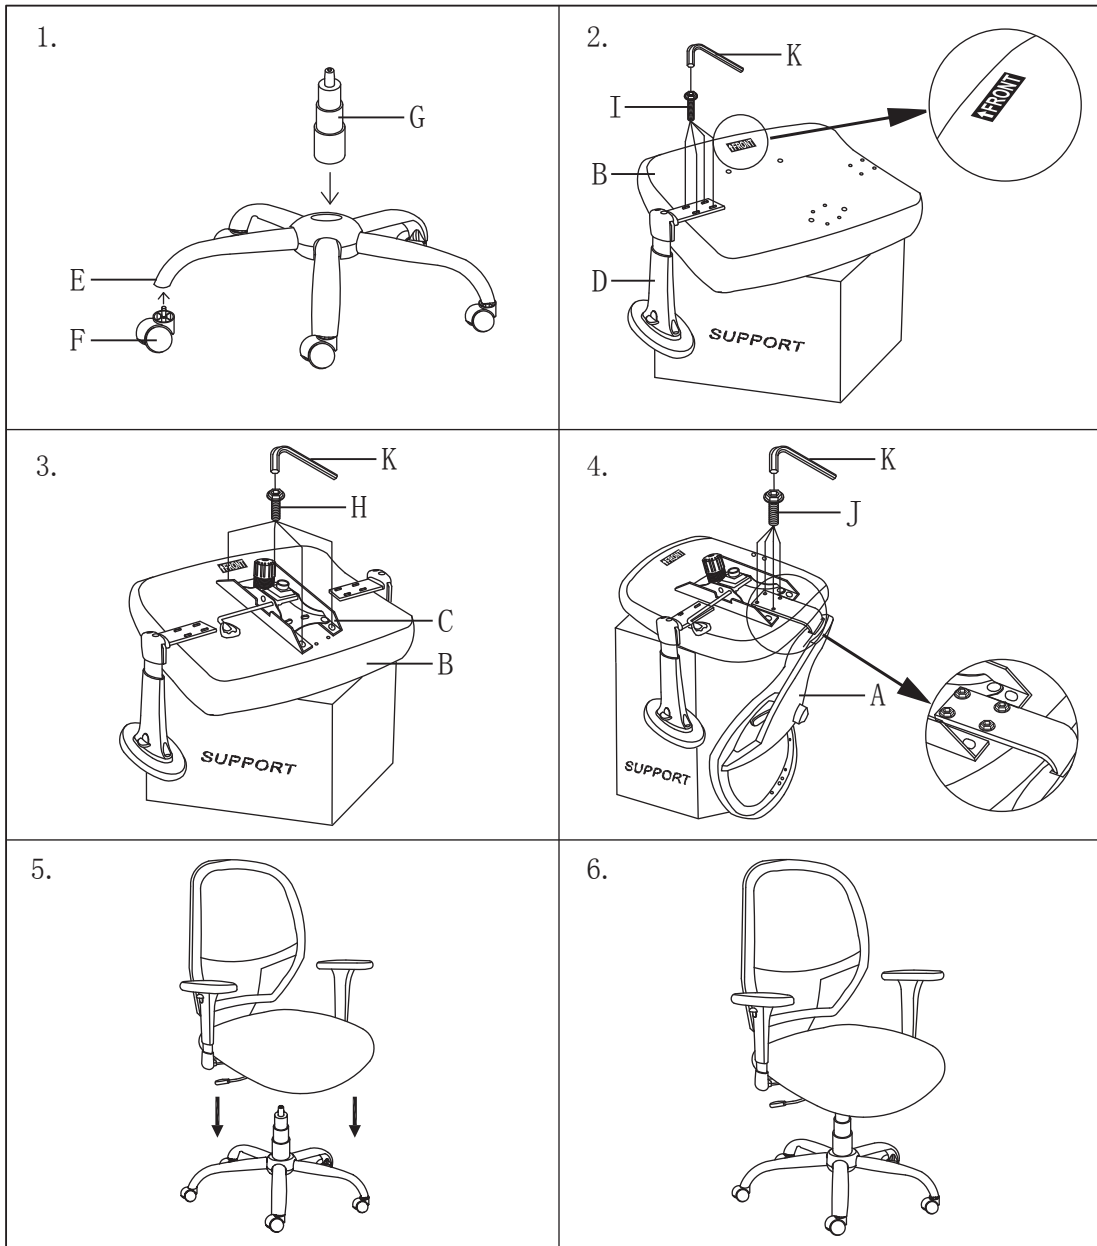

<p>A.</p>  <p>1 PC</p>	<p>E.</p>  <p>1 PC</p>	<p>I.</p>  <p>8 PCS</p>
<p>B.</p>  <p>1 PC</p>	<p>F.</p>  <p>5 PCS</p>	<p>J.</p>  <p>4 PCS</p>
<p>C.</p>  <p>1 PC</p>	<p>G.</p>  <p>1 PC</p>	<p>K.</p>  <p>1 PC</p>
<p>D.</p>  <p>1 PAIR</p>	<p>H.</p>  <p>4 PCS</p>	

  Model: ALE-MX4517
 Manufactured for/ Hecho para/ Fabriqué pour Alera®/ USSCo,
 1 Parkway North, Suite 100, Deerfield, IL 60015 ©2012 USSCo
 Made in/ Hecho en/ Fabriqué en China
 Product support and parts: 1-800-733-4000
 Ayuda del producto y partes / Support technique et pieces




OPERATING INSTRUCTIONS

Model: ALE-MX4517


Seat Height

To raise the seat height, stand up from the chair while lifting the lever, "A," under the right side of the seat. To lower the seat height, lift the lever, "A," while sitting in the chair.

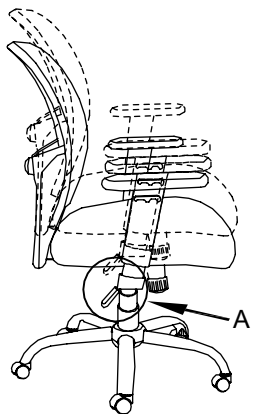


Arm height adjustment

To adjust the armrest height, lift the button on the outside of the arm support and move the arm up or down. Release the lever to lock.

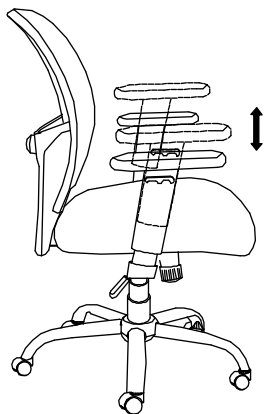


Tilt Lock

Pull lever, "A," on the right side of the seat away from the chair and lean back to recline. To lock chair in upright position, push lever back towards the chair.

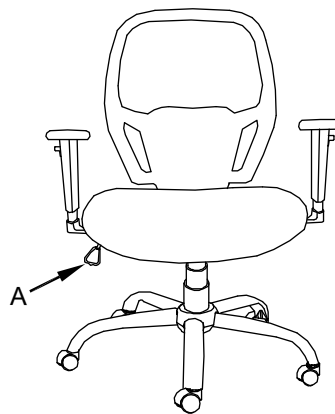

Lumber support adjustment

To adjust the lumbar support in and out, turn left the button on the chair back to move out and turn right to move in.

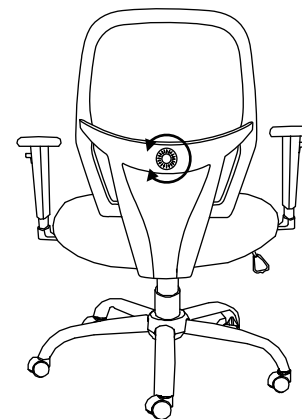

Tilt Tension

Knob underneath seat adjusts ease with which chair reclines to the different weights and strengths of different users. To increase tension turn knob to the right. To release tension (loosen), turn knob to the left.

