

| | | | | | | |
|-----------------|-----------------|--|-----------------|----------------------|-------------|---|
| 设计 DESIGN | 严岩 2015.9.17 | 图纸名称 PART NAME ALERA ALE-RF333B ALE-RF333W (UR-BC93A-S)说明书 | | | | 图号/物料编码 PART NO. 50200104C271 |
| 校对 CO. BY | 周凤霞 | | | | | 材料 MATERIAL 80g双胶纸 |
| 标准化 STANDARD | | | | | | |
| 业务 seller | 陈柏言 | 图样标记 REL | 版本号 REV. NO. | 重量(g) WEIGHT | 比例 scale | 美的冰箱事业部 MIDEA REFRIGERATION DIVISION |
| 批准 AUTHORIZE | | | 1 | | | |
| | | 共 页 TOTAL SHEETS | | 第 页 NO. OF SHEETS | | |

技术要求

- 1、 尺寸：32K
- 2、 印刷颜色：黑白
- 3、 样板需送设计部门封样。
- 4、 制件必须满足QMB-J53.005 产品说明书及其它类似印刷件技术规范。
需要符合美的冰箱事业的最新版《QMB-GC15.007 有害物质管理规定》的限值要求。

| 标记 MARKER | 变更内容 | 修改日期 | 签名 |
|--------------|---------------------------------|------------|----|
| ① | 此次更改在说明书版面更新，自订单444469之后的订单开始执行 | 2015.10.20 | 严岩 |
| ② | | | |
| ③ | | | |
| ④ | | | |
| ⑤ | | | |



3.3 cu.ft. Compact Refrigerator Instruction manual

Model ALE-RF333B
ALE-RF333W



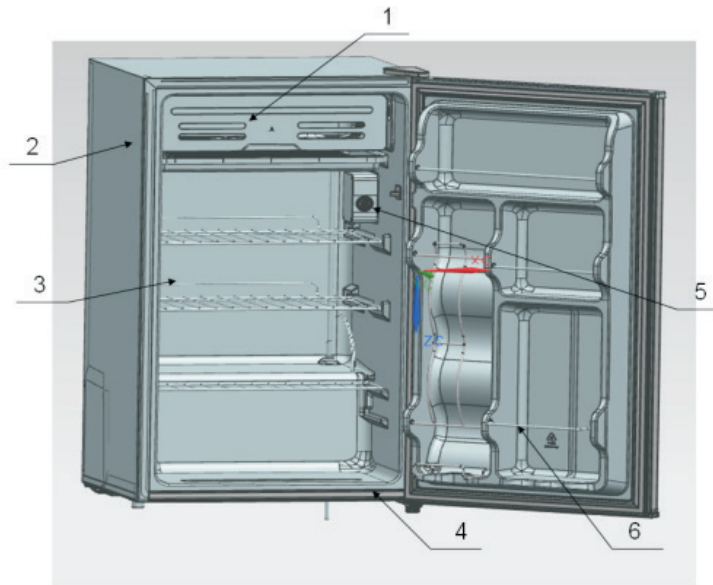
Thank you for purchasing this Alera refrigerator.

Warning: Please read and understand all instructions before using this product. Save these instructions for later use, and follow all warnings and instructions marked on product.

Please read thoroughly before operating this equipment

- Before using the refrigerator, read this manual and become familiar with the safety information, operating instructions, and maintenance requirements.
- Follow all warnings and instructions in this manual and as marked on the refrigerator
- Do not attempt to service this unit by yourself. Doing so will void the manufacturer's warranty and may expose you to sharp cutting blades and/or high voltage electric shock that could cause serious injury. Any repairs must be performed by qualified service personnel.

**CUSTOMER SERVICE INFORMATION
IF YOU NEED ASSISTANCE, PLEASE CALL
(800) 733-4000**



1. Chiller compartment
2. Drain pan
3. Wire shelf
4. Leveling glides
5. Thermostat
6. Wire steel bar

*All images in this instruction manual are for indication only; please refer to your individual unit for details.

IMPORTANT SAFETY INSTRUCTIONS

WARNING

To reduce the risk of fire, electrical shock or injury when using your refrigerator, follow these precautions

- Read all instructions before using the refrigerator
- Child entrapment and suffocation – Never allow children to operate, play with or crawl inside the refrigerator
- Unplug the refrigerator after use and before carrying out user maintenance
- Dispose of/recycle your refrigerator safely and responsibly according to local regulations.
- Remove door and shelves to avoid accidents of children entering and playing in the refrigerator.

- Never clean the refrigerator with flammable fluids. The fumes can create a fire hazard or explosion
- FOR YOUR SAFETY: DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS AND LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE. THE FUMES CAN CREATE A FIRE HAZARD OR EXPLOSION



Warning: Risk of fire

ELECTRICAL CONNECTION

- Do not pull the power cord when removing the power plug. Firmly grasp the plug and pull it from the socket.
- Do not use the appliance if the power cord is damaged or the plug is worn
- Use a dedicated three hole power socket (10A or more).
- Use of extension cord is not recommended. Do not have other appliances connected to the same socket through extension cord.
- Pull out the plug in case of power failure or for cleaning the unit.
- The refrigerator uses 115/60Hz AC power. Voltage fluctuations over the range of $115 \pm 10\%$ V will cause malfunction or even damage and would require installation of a 750W automatic voltage regulator.
- For safety reasons, it is not recommended to place rice cookers, microwave ovens and other appliances on top of the refrigerator.

SET UP

- Always have repairs and maintenance conducted by professional service personnel.
- For any damages to the power cord or other parts, please contact Alera Customer Service at 1-800-733-4000
- Place the refrigerator in a location allowing adequate ventilation and away from heat sources like stove, heater or radiator. Avoid installation in humid places.
- Do not wash down the refrigerator or place in moist environment. This could harm the electrical insulation properties of the unit.
- Do not place flammable items near the refrigerator to avoid fires

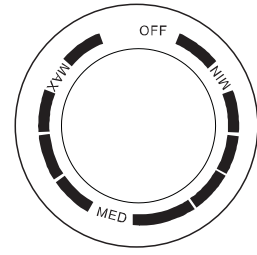
LEVELING

- Place your refrigerator on a floor strong enough to support it when fully loaded
- Adjust the leveling glides in case of uneven floors

THERMOSTAT

The temperature selector knob is located on the right hand side wall of the refrigerator interior

- Setting “Off” : Unit is off
- Setting “Min” : Warmest
- Setting “Med” : Normal cooling operation
- Setting “Max” : Coolest
- During high ambient temperature, e.g. hot summer days, it may be necessary to set the thermostat to the Coolest setting (position “Max”). This may cause the compressor to run continuously in order to maintain temperature.
- When the refrigerator is plugged in for the first time, set the temperature knob at “Med”. Allow your refrigerator time to cool down completely before adding food (recommended 2 to 3 hours).



MAINTENANCE OF REFRIGERATOR

CLEANING

WARNING: Unplug the refrigerator before cleaning and defrost.

- The refrigerator should be cleaned regularly (recommended about once a month) to prevent odor build-up.
- To clean your refrigerator, turn the temperature control to “OFF”, unplug the unit and take out all removable parts.
- Remove dust behind the refrigerator and on the ground to improve the cooling effect and energy savings.
- Use soft towels or sponge with water and non-corrosive neutral detergents
- Clean the chiller compartment with clean water and dry cloth
- Keep the door open for air drying before turning the unit back on
- Do not use hard or wire brushes, abrasives, organic solvents (alcohol, acetone, etc), boiling water, acid or alkaline items to clean the refrigerator. This may damage the surface and interior.
- Do not rinse with water. This will damage the electrical insulation properties.
- Use a dry cloth when cleaning light bulb, temperature control knob and electrical components.

DEFROST

WARNING: Do not use metal objects or electric heater (blow dryer) to defrost. This will damage the appliance. Remove all foods before defrosting

- Defrost the chiller compartment whenever the layer of frost on the surface of the evaporator reaches ¼ inch.
- When defrosting, remove all food and set the thermostat to “OFF”.
- Put a drip tray under the evaporator to collect melted water
- Dry up refrigerator and restart by turning the temperature knob to the desired setting.

CHANGING REVERSIBLE DOOR

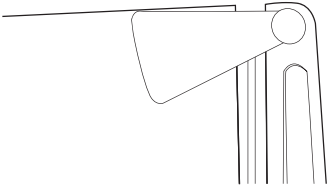
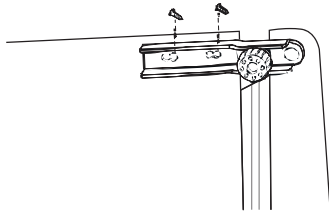
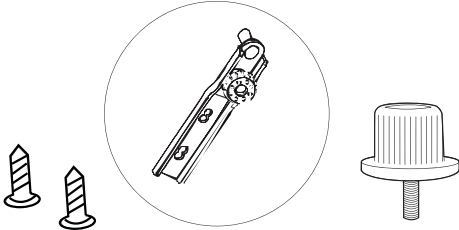
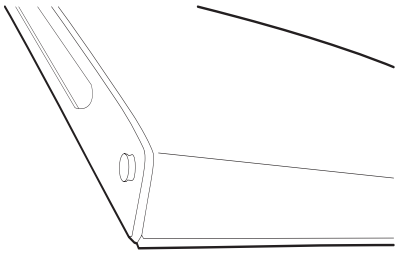
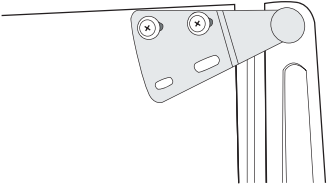
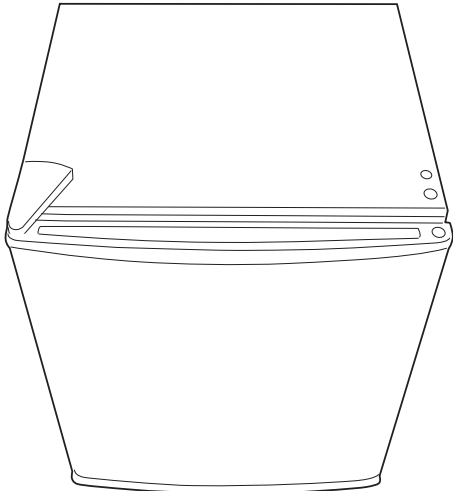
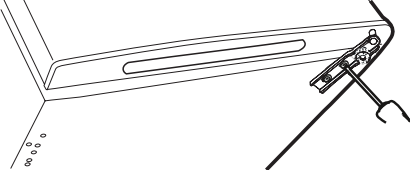
Unplug and empty the refrigerator

Adjust the two leveling feet to their highest position

Tools Required: Phillips Screw Driver

NOTE:

- Tilt the appliance backward to remove the door.
- Rest the refrigerator on a solid surface e.g. chair just below the top panel in order to access the bottom of the refrigerator.
- DO NOT lay the appliance completely flat as this may damage the coolant system

| | |
|---|--|
| <p>1</p>  <p>Remove the plastic cover from the top door hinge</p> | <p>2</p>  <p>Unscrew the two screws from the bottom bracket. Remove the foot glide from the opposite side</p> |
| <p>3</p>  <p>Set parts aside</p> | <p>4</p>  <p>Slide the refrigerator door downward about 6 inches and off the top hinge pin</p> |
| <p>5</p>  <p>Remove the two screws from the top bracket and replace on the other side. You will need to first remove the plastic caps from the other side</p> | <p>7</p>  <p>Check that the door is aligned horizontally and vertically and that the seals are closed on all sides before finally tightening the bottom hinge. Readjust the leveling feet</p> |
| <p>6</p>  <p>Slide the refrigerator door back onto the top hinge. Ensure it is the "right way up" Screw the bottom hinge into place on the new side. Replace the foot glide on the other side. Place the plastic cover by clicking back into position on the door hinge</p> | |

FREQUENTLY ASKED QUESTIONS

If the following troubleshooting guide does not resolve the issues, please contact Essendant customer service at 1-800-733-4000

| | |
|---|---|
| Refrigerator does not turn on | <ul style="list-style-type: none">• Check if power cord is plugged into a live circuit with proper voltage• Check for blown household fuse or tripped circuit breaker• Check if refrigerator control is correctly set |
| Odor | <ul style="list-style-type: none">• Check for rotten or spoiled food• Clean interior if necessary |
| Foods in the refrigerating chamber are frozen | <ul style="list-style-type: none">• Check if thermostat is over adjusted• Check if foods containing water are inside the glass partition |
| Long-term compressor operation | <ul style="list-style-type: none">• On hot days or if room is too warm, the compressor will run longer• Check if hot foods were placed in the refrigerator• Check for thick frost layer (defrost is needed)• Check if chiller compartment is overstocked |
| Refrigerator door does not properly close | <ul style="list-style-type: none">• Check if chiller compartment door is stuck by food packages• Check if too much food• Check if refrigerator is properly leveled |
| Loud noises | <ul style="list-style-type: none">• Remove items from top or behind the refrigerator• Compressor running when starting up or shutting down• Electric switch valve may rattle during normal operation |
| Condensation | Condensation may collect on the exterior surface and door seals of the chiller compartment during high humidity. Wipe away with dry cloth. |
| Water drops generated on the back of the refrigerator | The refrigerating chamber will periodically frost and defrost. This is normal. |