

设计 DESIGN	严岩 2015.9.17	图纸名称 PART NAME				图号/物料编码 PART NO.
校对 CO. BY	周凤霞	ALERA ALE-RF616B ALE-RF616W (UR-BC50A-S)说明书				50200104C272
标准化 STANDARD						材料 MATERIAL
业务 seller	陈柏言	图样标记 REL	版本号 REV. NO.	重量(g) WEIGHT	比例 scale	80g双胶纸
批准 AUTHORIZE			1			美的冰箱事业部 MIDEA REFRIGERATION DIVISION
		共 页 TOTAL SHEETS		第 页 NO. OF SHEETS		

技术要求

- 1、 尺寸：32K
- 2、 印刷颜色：黑白
- 3、 样板需送设计部门封样。
- 4、 制件必须满足QMB-J53.005 产品说明书及其它类似印刷件技术规范。
需要符合美的冰箱事业的最新版《QMB-GC15.007 有害物质管理规定》的限值要求。

标记 MARKER	变更内容	修改日期	签名
①	此次更改在说明书版面更新，自订单444471开始执行	2015.10.20	严岩
②			
③			
④			
⑤			



1.6 cu.ft. Compact Refrigerator Instruction manual

Model ALE-RF616B
ALE-RF616W



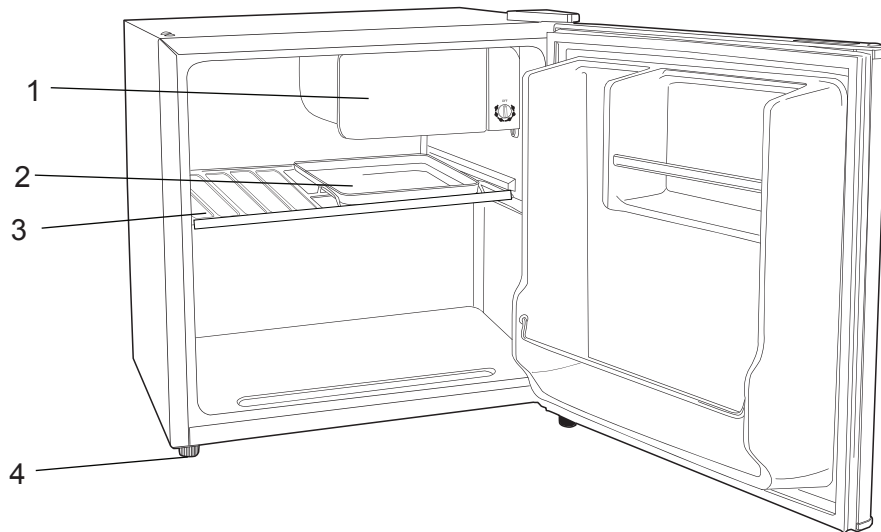
Thank you for purchasing this Alera refrigerator.

Warning: Please read and understand all instructions before using this product. Save these instructions for later use, and follow all warnings and instructions marked on product.

Please read thoroughly before operating this equipment

- Before using the refrigerator, read this manual and become familiar with the safety information, operating instructions, and maintenance requirements.
- Follow all warnings and instructions in this manual and as marked on the refrigerator
- Do not attempt to service this unit by yourself. Doing so will void the manufacturer's warranty and may expose you to sharp cutting blades and/or high voltage electric shock that could cause serious injury. Any repairs must be performed by qualified service personnel.

CUSTOMER SERVICE INFORMATION
IF YOU NEED ASSISTANCE, PLEASE CALL
(800) 733-4000



1. Chiller compartment
2. Drip Tray
3. Wire self
4. Leveling glides

*All images in this instruction manual are for indication only; please refer to your individual unit for details.

IMPORTANT SAFETY INSTRUCTIONS

WARNING

To reduce the risk of fire, electrical shock or injury when using your refrigerator, follow these precautions

- Read all instructions before using the refrigerator
- Child entrapment and suffocation – Never allow children to operate, play with or crawl inside the refrigerator
- Unplug the refrigerator after use and before carrying out user maintenance
- Dispose of/recycle your refrigerator safely and responsibly according to local regulations.
- Remove door and shelves to avoid accidents of children entering and playing in the refrigerator.

- Never clean the refrigerator with flammable fluids. The fumes can create a fire hazard or explosion
- **FOR YOUR SAFETY: DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS AND LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE. THE FUMES CAN CREATE A FIRE HAZARD OR EXPLOSION**



Warning: Risk of fire

ELECTRICAL CONNECTION

- Do not pull the power cord when removing the power plug. Firmly grasp the plug and pull it from the socket.
- Do not use the appliance if the power cord is damaged or the plug is worn
- Use a dedicated three hole power socket (10A or more).
- Use of extension cord is not recommended. Do not have other appliances connected to the same socket through extension cord.
- Pull out the plug in case of power failure or for cleaning the unit.
- The refrigerator uses 115/60Hz AC power. Voltage fluctuations over the range of $115 \pm 10\%$ V will cause malfunction or even damage and would require installation of a 750W automatic voltage regulator.
- For safety reasons, it is not recommended to place rice cookers, microwave ovens and other appliances on top of the refrigerator.

SET UP

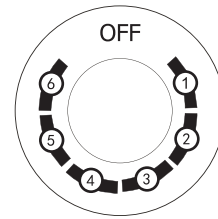
- Always have repairs and maintenance conducted by professional service personnel.
- For any damages to the power cord or other parts, please contact Alera Customer Service at 1-800-733-4000
- Place the refrigerator in a location allowing adequate ventilation and away from heat sources like stove, heater or radiator. Avoid installation in humid places.
- Do not wash down the refrigerator or place in moist environment. This could harm the electrical insulation properties of the unit.
- Do not place flammable items near the refrigerator to avoid fires

LEVELING

- Place your refrigerator on a floor strong enough to support it when fully loaded
- Adjust the leveling glides in case of uneven floors

THERMOSTAT

- Your refrigerator has one control for regulating the temperature. The temperature control is located on the upper right hand corner of the interior compartment.
- The first time you turn the unit on, adjust the temperature control knob to “4” and run for at least 2 hours before putting foods inside. This will ensure the cabinet is thoroughly chilled before food is put in.
- The range of the refrigerator temperature control is from position "1" (cold) to "6" (coldest). Adjust the temperature control to the setting that best suits your needs. The setting of “4” should be appropriate for home or office refrigerator use.
- Turning the temperature control knob to “OFF” position stops the cooling cycle but does not shut off the power to the unit.



MAINTENANCE OF REFRIGERATOR

CLEANING

WARNING: Unplug the refrigerator before cleaning and defrost.

- The refrigerator should be cleaned regularly (recommended about once a month) to prevent odor build-up.
- To clean your refrigerator, turn the temperature control to “OFF”, unplug the unit and take out all removable parts.
- Remove dust behind the refrigerator and on the ground to improve the cooling effect and energy savings.
- Use soft towels or sponge with water and non-corrosive neutral detergents
- Clean the chiller compartment with clean water and dry cloth
- Keep the door open for air drying before turning the unit back on
- Do not use hard or wire brushes, abrasives, organic solvents (alcohol, acetone, etc), boiling water, acid or alkaline items to clean the refrigerator. This may damage the surface and interior.
- Do not rinse with water. This will damage the electrical insulation properties.
- Use a dry cloth when cleaning light bulb, temperature control knob and electrical components.

DEFROST

**WARNING: Do not use metal objects or electric heater (blow dryer) to defrost.
This will damage the appliance. Remove all foods before defrosting**

- Defrost the chiller compartment whenever the layer of frost on the surface of the evaporator reaches ¼ inch.
- When defrosting, remove all food and set the thermostat to “OFF”.
- Put a drip tray under the evaporator to collect melted water
- Dry up refrigerator and restart by turning the temperature knob to the desired setting.

CHANGING REVERSIBLE DOOR

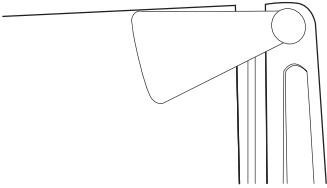
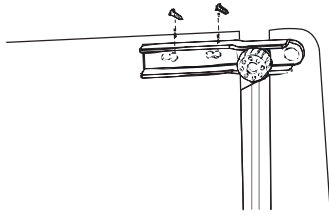
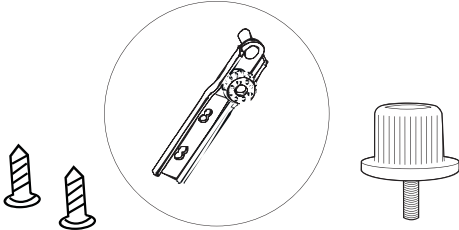
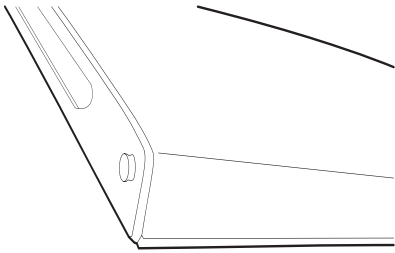
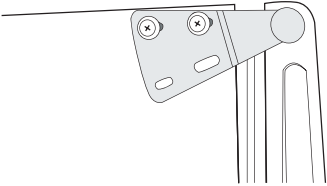
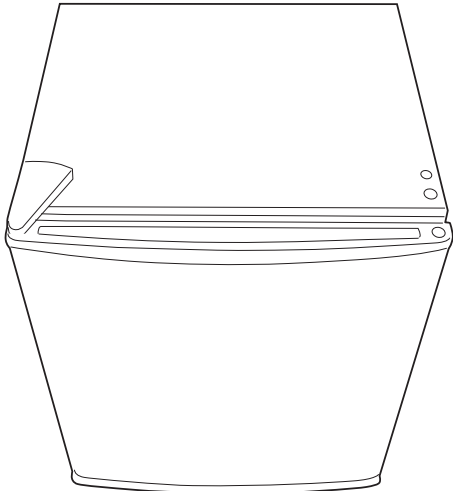
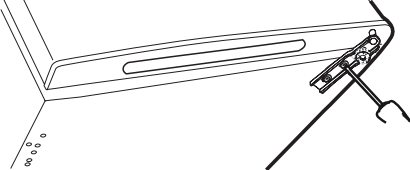
Unplug and empty the refrigerator

Adjust the two leveling feet to their highest position

Tools Required: Phillips Screw Driver

NOTE:

- Tilt the appliance backward to remove the door.
- Rest the refrigerator on a solid surface e.g. chair just below the top panel in order to access the bottom of the refrigerator.
- DO NOT lay the appliance completely flat as this may damage the coolant system

<p>1</p>  <p>Remove the plastic cover from the top door hinge</p>	<p>2</p>  <p>Unscrew the two screws from the bottom bracket. Remove the foot glide from the opposite side</p>
<p>3</p>  <p>Set parts aside</p>	<p>4</p>  <p>Slide the refrigerator door downward about 6 inches and off the top hinge pin</p>
<p>5</p>  <p>Remove the two screws from the top bracket and replace on the other side. You will need to first remove the plastic caps from the other side</p>	<p>7</p>  <p>Check that the door is aligned horizontally and vertically and that the seals are closed on all sides before finally tightening the bottom hinge. Readjust the leveling feet</p>
<p>6</p>  <p>Slide the refrigerator door back onto the top hinge. Ensure it is the "right way up" Screw the bottom hinge into place on the new side. Replace the foot glide on the other side. Place the plastic cover by clicking back into position on the door hinge</p>	

FREQUENTLY ASKED QUESTIONS

If the following troubleshooting guide does not resolve the issues, please contact Essendant customer service at 1-800-733-4000

Refrigerator does not turn on	<ul style="list-style-type: none">• Check if power cord is plugged into a live circuit with proper voltage• Check for blown household fuse or tripped circuit breaker• Check if refrigerator control is correctly set
Odor	<ul style="list-style-type: none">• Check for rotten or spoiled food• Clean interior if necessary
Foods in the refrigerating chamber are frozen	<ul style="list-style-type: none">• Check if thermostat is over adjusted• Check if foods containing water are inside the glass partition
Long-term compressor operation	<ul style="list-style-type: none">• On hot days or if room is too warm, the compressor will run longer• Check if hot foods were placed in the refrigerator• Check for thick frost layer (defrost is needed)• Check if chiller compartment is overstocked
Refrigerator door does not properly close	<ul style="list-style-type: none">• Check if chiller compartment door is stuck by food packages• Check if too much food• Check if refrigerator is properly leveled
Loud noises	<ul style="list-style-type: none">• Remove items from top or behind the refrigerator• Compressor running when starting up or shutting down• Electric switch valve may rattle during normal operation
Condensation	Condensation may collect on the exterior surface and door seals of the chiller compartment during high humidity. Wipe away with dry cloth.
Water drops generated on the back of the refrigerator	The refrigerating chamber will periodically frost and defrost. This is normal.