 
 






LOCK CORE & KEYS

Cerradura y llaves

ALE-VA501111


| | | | |
|----------|---|---|---------------------------|
| A | 1 |  | Normal key with lock core |
| B | 1 |  | Core removal key |

• The lock core can only be removed when the lock is opened.

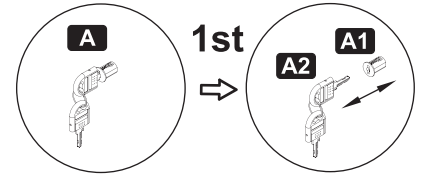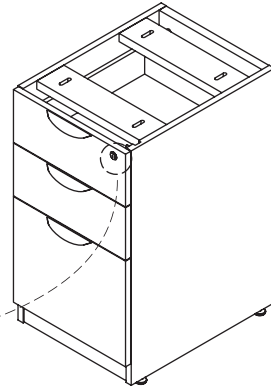

• Press the lock core and pull out removal key.

2nd

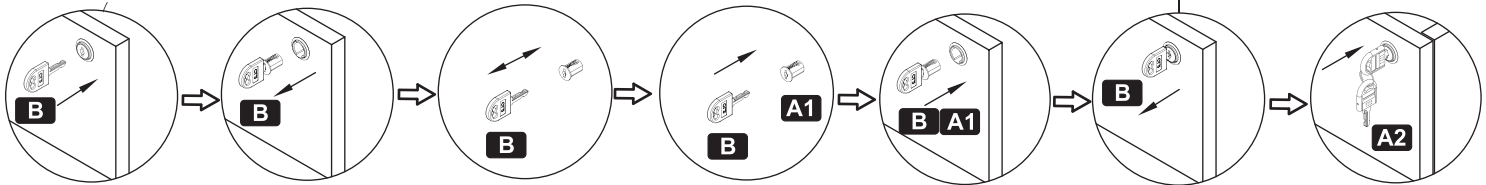

Product support and parts:
Ayuda del producto y partes: 1-800-733-4000
Support technique et pièces:

06-015/6C

Manufactured for / Hecho para / Fabriqué pour
Alera® / Essendant Co.
One Parkway North, Deerfield, IL 60015
©2015 Essendant Co.
Made in / Hecho en / Fabriqué en China