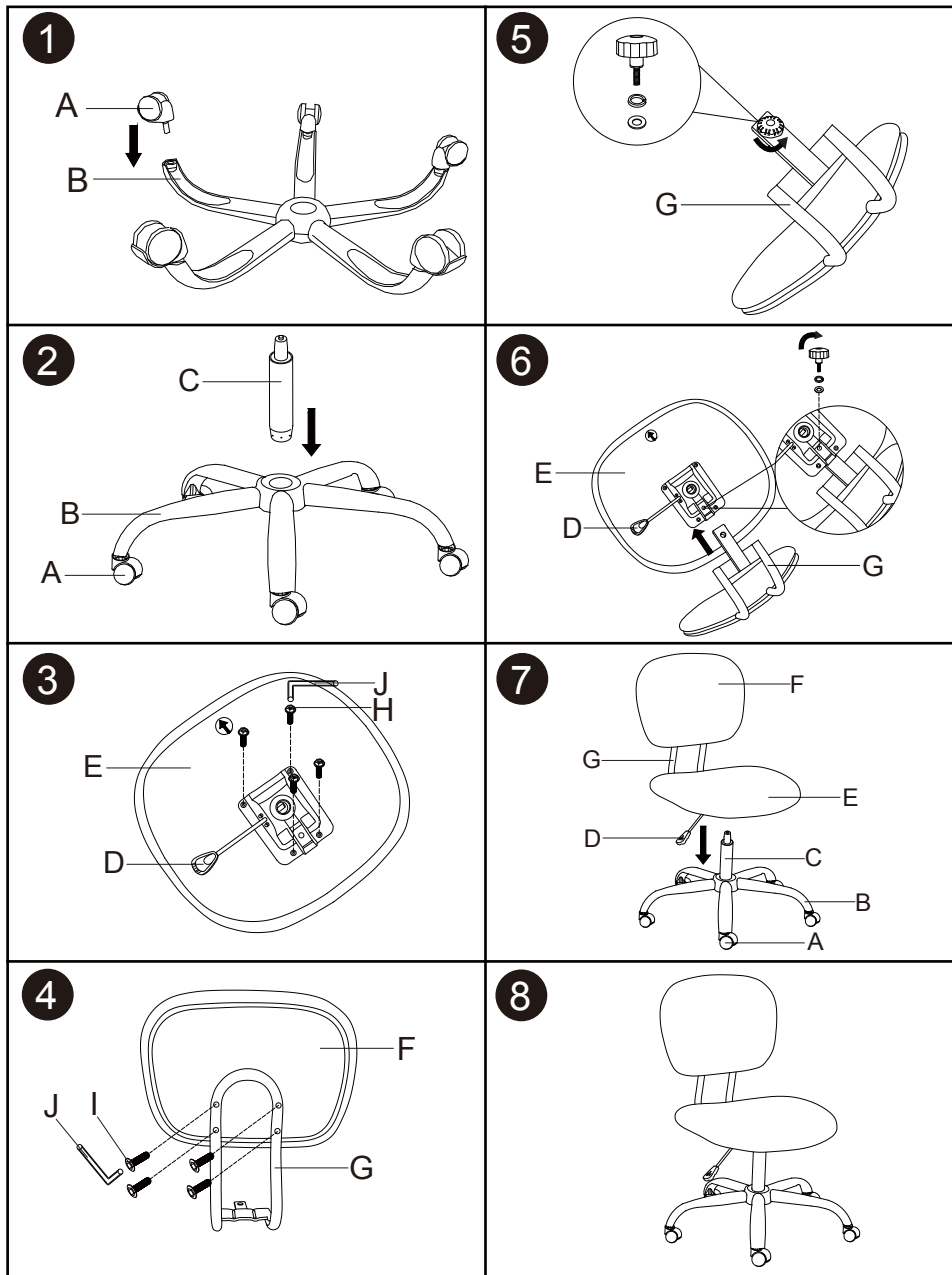
 

 
 
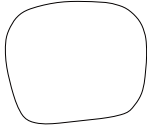


 
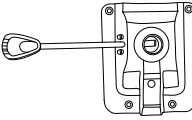
 


# ASSEMBLY INSTRUCTIONS



<p>A.</p>  <p>5PCS</p>	<p>E.</p>  <p>1PC</p>	<p>I.</p>  <p>4PCS</p>
<p>B.</p>  <p>1PC</p>	<p>F.</p>  <p>1PC</p>	<p>J.</p>  <p>1PC</p>
<p>C.</p>  <p>1PC</p>	<p>G.</p>  <p>1PC</p>	
<p>D.</p>  <p>1PC</p>	<p>H.</p>  <p>4PCS</p>	

Model: OIF-MM4917

Manufactured for/ Hecho para/ Fabriqué pour/ Essendant Co.,  
One Parkway North, Deerfield, IL 60015 © 2015 Essendant Co.

Made in/ Hecho en/ Fabriqué en China

Product support and parts: 1-800-733-4000

Ayuda del producto y partes / Support technique et pieces

11-015/4

# OPERATING INSTRUCTIONS

OIF-MM4917

## Seat height adjustment

To raise the seat height, stand up from the chair while lifting the lever (A) under the right side of the seat. To lower the seat height, lift the lever (A) while sitting in the chair.

