

SLV 1000127

Entnahme Lichtquelle zur Überprüfung / Removal of light source for verification
Ausbau Betriebsgerät zur Entsorgung / Removal of Control Gear for disposal

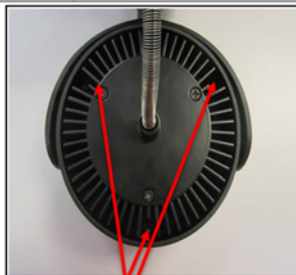


Figure 1
Remove the screws

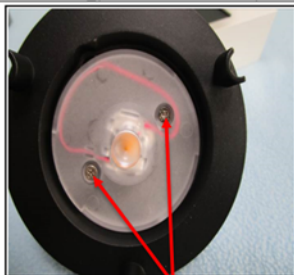


Figure 2
Remove the screws

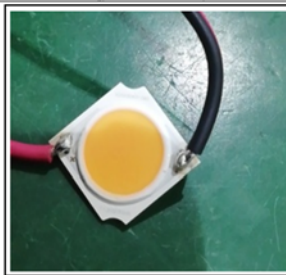


Figure 3

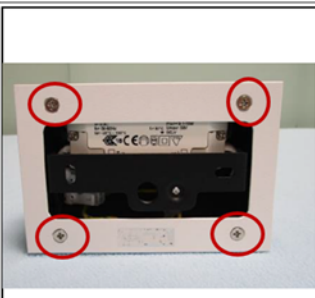


Figure 1
Remove the screws

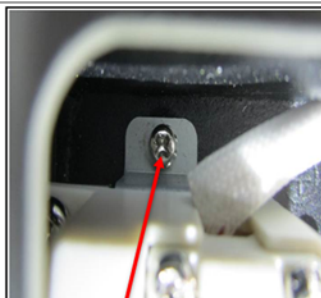


Figure 2
Remove the screws



Figure 3
Remove the screws



Figure 4
Remove the screws



Figure 5
Remove the screws