Ninja springs maintenance instructions

Anti-Vibration Mountings & Spring Hangers

The provided equipment does not require any routine maintenance, lubrication, or spare parts throughout its expected operating life.

To avoid premature mature decolourisation or corrosion, any materials coming in Contact with Ninja Springs products or components should be adequately protected and a physical barrier should be present between all dissimilar metals.

External Applications

When items are located in external applications, be sure you have purchased the appropriate product for your specific level of corrosion resistance.

Surface Treatment including Paint Finishes

All finish surfaces are subject to the following maintenance programme:

Monthly:

Wash down with warm mild detergent solution followed by rinse with cold water and final polish when dry.

The units should be inspected for damage, scratches or abrasions and treat immediately with rust inhibitor, primer and top coat to match colour finish.

Primed materials are not suitable for prolonged exposure and should be finished immediately upon completion of installation.

All surfaces to be cleaned using a soft cloth or sponge.

DO NOT USE Abrasives, wire wool, wire brushes or solvents for any cleaning purpose.

General:

In areas of high atmospheric pollution or near to coastal region it is recommended that cleaning is carried out more frequently and damage repaired immediately.

Any damages should be repaired by repainting, as required, to restore aesthetic appearance.

Recommended Products:

Suitable Spray on Plasticoat:

- Clear from Colour coordinated areas (Springs)
- Black for Cages



Product code: