

## Protect Your Vehicle Well Beyond the Manufacturer's Warranty



### Repairs Are Expensive!

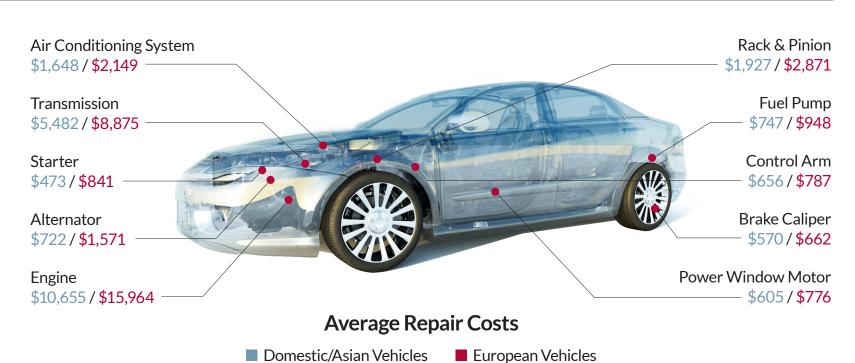

### Breakdown Risk and Cost Increase with Time and Miles!

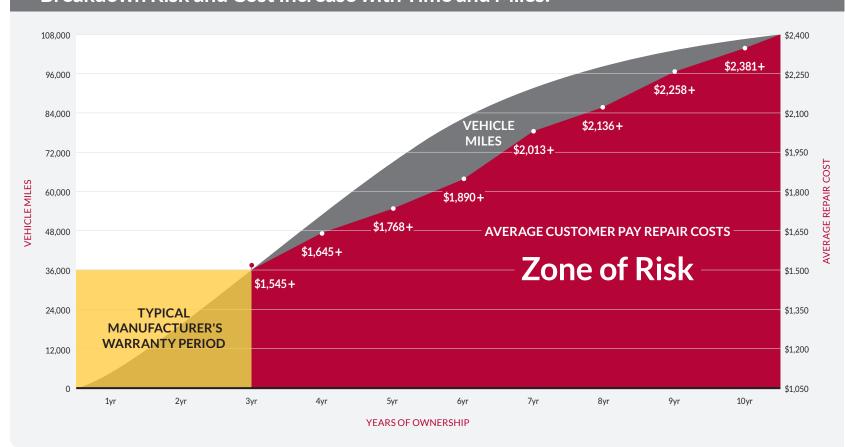

# Coverage Benefits During the Manufacturer's Warranty and Beyond!

**24-Hour Roadside Assistance** up to \$100 for towing, lost key, lock-out and other road services like jump start and fluid delivery

Rental Vehicle Assistance up to \$35 per day (maximum 5 days) while your vehicle is in the shop for covered repairs. Maximum 10 days if parts are delayed

**Key Fob Replacement** up to \$400 per 12 month period (Ultimate and Deluxe Protection Only and Not Available in all States)

Tire Protection up to \$150 per tire for repair or replacement due to damage during their normal life by glass, nails or other road hazards. Maximum of \$600

**Trip Interruption** up to \$150 per day for meals and lodging up to three days (\$450 per occurrence) if you are stranded more than 100 miles away from your home

Total Loss Refund. If your vehicle is deemed a total loss due to physical damage or theft we will refund the agreement purchase price (Not available in all states)

**Hybrid/Electric Drive Battery** up to \$2,000 (Ultimate Only)

### Why Choose Mercury?

- Repairs can be done at any licensed U.S. or Canadian repair facility
- No limit on the number of claims up to maximum liability
- Mercury pays the repairer directly by credit card. Out of pocket expense for covered repairs are limited to your deductible (if any)
- Mercury pays for fluids, filters, taxes and diagnostic fees for covered repairs
- All claims are handled by Mercury, not a third party administrator. Mercury is also the insurer
- Transferable one time for a small fee if you sell to a private party
- Cancellable (prorated based on the greater of time or miles)
- 60 day free look

### **Key Considerations**

- The risk of unexpected breakdowns increases with vehicle age and miles
- Repairs are expensive and repair costs increase over time
- Unexpected breakdowns can strain your budget and put your good credit at risk
- You effectively lock-in the cost of unexpected breakdowns for the term of the Agreement
- The ability to transfer coverage to a private party may increase your vehicle's resale value along with the chance of its sale

### Repairs Per 100 Vehicles\*

**8** \*Af

\*After manufacturer's warranty expiration

✓ **Ultimate Protection.** Factory-like coverage that remedies ANY mechanical or electrical breakdown of your vehicle that is not specifically excluded. See Exclusions Overview below for details.



Named Component Plan Options\* Deluxe Protection Select Protection - Limited to \$5,000

(Parts not listed are not covered)

| ENGINE                                 |   |   |
|--|---|---|
| Cylinder block and internal components | • |   |
| Cylinder head(s)                       | • | • |
| Engine oil pressure gauge              | • |   |
| Flexplate                              |   |   |
| Flywheel                               |   |   |
| Harmonic balancer                      |   |   |
| Intake manifold                        |   | I |
| Mounts                                 |   | ı |
| Oil pan                                |   |   |
| Oil pump                               | • |   |
| Timing belt                            | • | Г |
| Timing chain                           |   |   |
| Timing chain guides                    |   |   |
| Timing chain sprockets                 |   |   |
| Timing chain tensioners                | • |   |
| Timing cover                           | • |   |
| Timing gears                           | • |   |
| Turbocharger/Supercharger              | • |   |
| Valve cover(s)                         | • | Ī |
| Wastegate                              | • |   |

| Gear shift lever   | • |  |
|--|---|--|
| Mounts   | • |  |
| Pan  | • |  |
| Torque converter   | • |  |
| Transmission and transaxle cases and internal components | • |  |
| Transmission oil cooler                                  | • |  |
| Transmission shift linkage                               | • |  |
| Vacuum modulator   | • |  |

| DRIVE AXLE  |   |   |
|---|---|---|
| Axle shaft bearings                                   | • |   |
| Axle shafts   | • | , |
| Axles   | • | , |
| Center bearings                                       | • |   |
| Constant velocity joints                              | • | , |
| Final drive and axle housings and internal components | • | , |
| Hub bearings  | • |   |
| Hubs  | • |   |
| Locking rings   | • |   |
| Propeller shafts                                      | • | , |
| Universal joints                                      | • | , |
| Yokes   | • | , |

| TRANSFER CASE                         |   |  |
|---------------------------------------|---|--|
| Mounts                                | • |  |
| Transfer case and internal components | • |  |
|                                       |   |  |
| HYBRID / ELECTRIC                     |   |  |
| Battery cooling blower assembly       | • |  |
| Battery cooling blower motor control  | • |  |
| Battery heater                        | • |  |
| Battery junction board                | • |  |
| Battery junction bus                  | • |  |
| Battery thermistor                    | • |  |

Combination meter assembly

| HYBRID / ELECTRIC                             |   |  |
|---|---|--|
| Combination meter computer                    | • |  |
| Control panel display unit                    | • |  |
| Current sensor                                | • |  |
| Electric drive motor assembly                 | • |  |
| Electric drive motor mounts                   | • |  |
| Electric drive motor power relay              | • |  |
| Electric inverter assembly and converter      | • |  |
| Electric water pump; cooling system reservoir | • |  |
| Hybrid starter assembly                       | • |  |
| Main switch assembly                          | • |  |
| Onboard battery charger                       | • |  |
| Onboard power generator assembly              | • |  |
| Power source control computer                 | • |  |
| System main relay                             | • |  |
|   |   |  |

| STEERING  |   |  |
|---|---|--|
| Control valve and cylinder                                | • |  |
| Drag link   | • |  |
| Gear housing, rack assembly and their Internal components | • |  |
| Idler arm   | • |  |
| Pitman arm  | • |  |
| Power cylinder assembly                                   | • |  |
| Power steering pump                                       | • |  |
| Power steering pump mounting bracket                      | • |  |
| Power steering pump pulley                                | • |  |
| Steering column shaft bearings                            | • |  |
| Steering column shaft couplings                           | • |  |
| Steering column shaft(s)                                  | • |  |
| Steering knuckle  | • |  |

| BRAKE                           |   |  |
|---------------------------------|---|--|
| Backing plate assembly          | • |  |
| Brake lines and fittings        | • |  |
| Brake pedal assembly            | • |  |
| Master cylinder                 | • |  |
| Parking brake cable             | • |  |
| Parking brake pedal             | • |  |
| Parking brake release mechanism | • |  |
| Power brake assist boosters     | • |  |
| Self adjusters                  | • |  |
|                                 |   |  |
| SUSPENSION                      |   |  |

| SUSPENSION                   |   |   |
|------------------------------|---|---|
| Control arm bushings         | • | Г |
| Control arm shafts           | • |   |
| Spindle and support          | • |   |
| Strut bar                    | • |   |
| Sway bar bushing             | • |   |
| Sway bar linkage             | • | Г |
| Upper and lower ball joints  | • | Г |
| Upper and lower control arms | • |   |
| Wheel bearings               | • |   |
|                              |   |   |
| FLECTRICAL                   |   |   |

| Clock                                 | • | L |
|---------------------------------------|---|---|
| Cruise control actuator               | • |   |
| Cruise control module                 | • |   |
| Door operated courtesy light switches | • |   |
| Electric door lock relay and actuator | • |   |
| Electric hatchback actuators          | • |   |
| Electric mirror motors                | • |   |
| Electric tailgate actuators           | • |   |
| Electric trunk actuators              | • |   |
| Electric window motors                | • |   |
| Headlamp dimmer switch                | • |   |
| Horn                                  | • |   |
| Horn relay                            | • |   |
| Manually operated electrical switches | • |   |
| Map lights                            | • |   |
| Neutral safety switch                 | • |   |
| Starter motor                         | • |   |
| Starter motor drive                   | • |   |
| Starter motor solenoid                | • |   |
| Tachometer                            | • |   |
| Windshield washer pump                | • | Ĺ |
| Wiper motors                          | • | Ī |

| SPECIAL ELECTRONICS   |   |   |
|-----------------------|---|---|
| Back up camera        |   |   |
| DVD player            | • |   |
| GPS/Navigation system | • |   |
| Night vision system   | • | Π |
| Proximity sensors     |   |   |
| Video game player     | • | _ |
| Video touch screen    | • |   |

| FUELSYSTEM                       |   |  |
|----------------------------------|---|--|
| Accelerator pedal                | • |  |
| Accelerator pedal linkage        | • |  |
| Fuel gauge                       | • |  |
| Fuel level sending unit          | • |  |
| Fuel pressure regulator          |   |  |
| Fuel pressure sensor             | • |  |
| Fuel pump                        | • |  |
| Fuel pump relay                  | • |  |
| Fuel shutoff control             |   |  |
| Fuel tank                        |   |  |
| Fuel tank filler pipe            | • |  |
| Metal fuel lines fuel pump relay | • |  |

| AIR CONDITIONING            |   |   |
|-----------------------------|---|---|
| Accumulator/Drier           | • | • |
| Blower motor                |   | • |
| Compressor                  |   | • |
| Compressor clutch           | • | • |
| Compressor clutch coil      | • | • |
| Compressor mounting bracket | • | • |
| Compressor pulley           | • | • |
| Condenser                   | • | • |
| Evaporator                  | • | • |
| Expansion valve             | ٠ | • |

| AIR CONDITIONING                         |   |   |
|--|---|---|
| Heater control valve                     | • |   |
| Idler pulley and bearing                 | • |   |
| Idler pulley tensioner                   | • |   |
| Manual temperature control selector head | • |   |
| Orifice tube                             | • | • |
|  |   |   |

| IGNITION AND CHARGING                  |   |   |
|--|---|---|
| Alternator                             |   | • |
| Alternator pulley and mounting bracket | • | • |
| Amp gauge                              | • |   |
| Camshaft position sensor               |   |   |
| Crankshaft position sensor             | • |   |
| Electronic ignition distributor        |   |   |
| Electronic ignition module             | • |   |
| Fuel control temperature sensor        | • |   |
| Idle control actuator                  | • |   |
| Igniter                                | • |   |
| Ignition coil                          |   |   |
| Manifold vacuum sensor                 | • |   |
| Throttle position sensor               |   |   |
| Volt gauge                             | • |   |
| Voltage regulator                      | • | • |
|  |   |   |

| ENGINE COOLING                     |   |   |
|------------------------------------|---|---|
| Electric radiator fan motor relay  | • |   |
| Electric radiator fan motor sensor | • |   |
| Electric radiator fan motor switch | • |   |
| Engine coolant temperature gauge   | • |   |
| Fan clutch                         | • | • |
| Fan shroud                         | • | • |
| Radiator coolant recovery unit     | • |   |
| Radiator fan motor                 | • | • |
| Water pump                         | • | • |
| Water pump housing                 | • |   |
| Water pump pulley                  | • | • |
|                                    |   |   |

| SEALS AND GASKETS                    |   |   |
|--------------------------------------|---|---|
| Included for covered parts           | • |   |
| In conjunction with a covered repair | • | • |

| CONSEQUENTIAL LOSS – Limited to \$2,000                              |   |  |
|--|---|--|
| Non-covered components damaged by the failure of a covered component | • |  |

\*EXCLUSIONS OVERVIEW: Abuse; misuse; lack of customary maintenance; non-mechanical, electrical, pneumatic, hydraulic components; Normal Maintenance and Service Items. Examples: Batteries, Brake Pads, Shoes/Drums/Rotors, Shocks, Struts, Wiper Blades, etc. Aftermarket equipment. Body Structure and parts, trim, moldings, glass, upholstery, paint, etc. Non-covered parts: Bumpers; Cables; Chassis; Clamps; Fasteners; Convertible Top Assemblies; Exhaust/EGR System; Air Pump and Catalytic Converter; PCV System; Fuel Vapor Recovery System; Hoses; Tubes; Lines and Fittings; Mirrors; Manual Clutch Components; Passenger/Driver Restraint Systems; Seat Components; Suspension Springs and Torsion Bars; Wheels; Tire Pressure Sensors; Fuses; Lights/Bulbs/Lens Assemblies; Audio Speakers; etc. REFER TO THE AGREEMENT FOR A COMPLETE LIST OF EXCLUSIONS AND CONDITIONS OF COVERAGE.

Auxiliary power point

Backup light switch
Brake light switch

Cigarette lighter(s)