

# CUSTOM FEATURES



## HORN HONK

This advanced remote starter has a built in horn honk output which can be connected to the vehicle's factory horn to give an audible conformation of locking , unlocking and the remote starting of the vehicle.

The horn honk option will also provide the user with a remote panic option.



## STARTER DISABLE

The system has an optional starter disable output that can be connected by your dealer to a starter disable relay.

When the starter disable relay is installed and connected to the system, the vehicle's starter will be disabled when the lock button is pressed and the LEDS are flashing steady.

To re-activate starter, press the unlock button and the LEDS will stop flashing and the starter will be re-enabled.



## CAR FINDER MODE

1. Press and hold the # button for 2 seconds.
2. System flashes lights and honks the horn (optional) 5 times to help find your vehicle in a crowded parking lot.

# Your Professional



## Installation Center



**OPTIONS** Ask your installation center about these and other options

- |                           |                         |
|---------------------------|-------------------------|
| Dome-light Supervision    | Additional Transmitters |
| Parking Light Supervision | Driver's Door Unlock    |
| Starter Kill              | Trunk Release Kit       |
| Radar Sensor              | Window Roll-up          |
| Pager                     | Satellite Activation    |

## Limited Lifetime Warranty

The manufacturer warrants to the original purchaser of their remote starters and alarms, that the product shall be free from defects in material and workmanship. However, should this product be proven to be defective, within a one year period from the original date of purchase, the manufacturer will, without charge to the purchaser (excluding any charges incurred to have the product delivered to the manufacturer) , repair or replace any part of the remote starters and alarms which the manufacturer agrees to be defective. Thereafter this warranty applies only to the main computer control module which will be warranted for life to the original purchaser and the vehicle in which it is originally installed. Repairs or replacement of defective modules shall remain at the discretion of the manufacturer. All other parts, components, accessories and/or optional equipment pertaining to the remote starter and alarm are not included in the extended warranty. This warranty is non-transferable. Request for warranty service from any Factory Authorized Dealer must be accompanied with the original purchase receipt. This warranty does not cover the following: removal and reinstall labor charges, shipping charges, abuse, misuse, or accidental damages to the remote starter and alarm, automobile, and/or parts thereof. This warranty is void upon modification, repairs, or alterations of any part of the System. The manufacturer does not guarantee or insure against theft of the vehicle or its contents. Alarm models are designed only to act as a deterrent against possible theft. This alarm may qualify for auto insurance discounts, contact your Insurance Agent for further information . The manufacturer shall not be held liable for any consequential damages due to breach of this or any other warranty, expressed, or implied. This warranty gives you specific legal rights. Your specific legal rights may vary for each region.

### **CERTAIN DAMAGES EXCLUDED**

The manufacturer expressly disclaims any liability or responsibility for incidental damages caused by the product, including economic loss, loss of use of the product, car rentals, or any other costs relating to the care and custody of the product. The manufacturer disclaims liability or responsibility for any consequential damages caused by the product or resulting from its use, including the cost of repairing or replacing other property damaged by the product or caused by its use, whether or not the product is working properly. The product is intended to deter unauthorized use of the vehicles in which it is installed. The manufacturer does not warrant that the product is fool-safe against theft and/or vandalism and/or human error or misuse. The manufacturer accepts no liability or responsibility for any damage of any kind whatsoever caused to any vehicle in which the product is installed or any resulting damage from its use. The manufacturer accepts no responsibility or liability for any damage resulting to or theft of the vehicle or its contents, caused or alleged to be caused, directly or indirectly, by failure of the product.



# RS-1000 Pro Series



## Remote Vehicle Starter Automatic Transmission

### Owners Guide



WWW.ULTRASTARTERS.COM

Rev.112700

# BASIC OPERATION



## LOCK DOORS

1. Press & release the **LOCK** button.
2. Park lights will flash 1 time.
3. Doors will lock.
4. LED starts flashing within 5 seconds.



## UNLOCK DOORS

1. Press & release the **UNLOCK** button.
2. Park lights flash 2 times.
3. Doors will unlock.
4. LED stops flashing.



## TRUNK RELEASE

1. Press and hold the **UNLOCK** button for 3 seconds.
2. Doors will unlock, continue holding unlock for 3 seconds, the trunk release will activate. Trunk release is confirmed by 1 light flash.
3. This option will not activate when ignition key is in the "on" position.



## PANIC MODE

1. Press & hold the **LOCK** button for 3 seconds.
2. Park lights will flash and horn will honk. (Must have horn honk installed for horn to activate).

## PANIC MODE DISABLE

- Press **LOCK** button to disable panic.



# REMOTE STARTING



## REMOTE START VEHICLE

1. Press & release the \* button (optional programmable safety start feature requires 2 presses of the button)
2. Park lights will flash 1 time and horn(optional) will honk 1 time.
3. When vehicle has started, system flashes lights 4 times and lights remain "on" while vehicle is running. Vehicle will continue to run for programmed runtime (Normally 15 minutes).



## REMOTE STOP VEHICLE

1. Press \* button for 3 seconds while the car is running.
  2. Park lights will flash 2 times and the horn(optional) will honk 2 times.
- Note:** Pressing brake pedal or opening hood will also stop vehicle.



 
## QUICK STOP MODE

1. While vehicle is running with key, press the \* while pressing the brake pedal.
2. Lights will flash and the vehicle will continue to run for up to 15 minutes (default run time).



## TURBO STOP MODE

1. While vehicle is running with key, press the \* button 2 times
  2. Horn(optional) will honk 1 time and the parking lights will turn "on".
  3. Turn ignition "off" and the vehicle will continue to run.
  4. Exit vehicle and lock or unlock doors while vehicle is running.
- NOTE: System will run for 2 minutes and turn off.




## COLD START MODE

1. Press & Release the # button then press and hold the Button until lights flash 4 times.
3. System will start vehicle every 4 hours for up to 24 hours.

## CANCEL COLD START MODE

Start the vehicle with the ignition key
 
# ADVANCE OPERATIONS



## EMERGENCY VALET MODE

Disables system if remote is lost or system malfunction.



## ENTERING VALET MODE

1. While ignition is "on" press and hold the antenna button for 5 seconds until horn (optional) honks 5 times.
2. Remote start functions will be disabled and LED will be "on" steady. Door locks and trunk release are still operational.

## EXITING VALET MODE

1. While ignition is "on" press and hold the antenna button for 5 seconds until horn (optional) honks 2 times.

Note: System can be programmed into "High Security Mode" to enhance or disable this



## IGNITION LOCK/UNLOCK

### Optional Feature

- Doors will lock 3 seconds after ignition is turned to the "on" position. Will not lock doors if doors are open.
- Doors will unlock upon turning ignition "off".

Ultra  
**Start**

PRO SERIES