

ALARM OPERATIONS



PASSIVE ARMING

This optional feature will arm your system automatically upon leaving vehicle.

1. Turn ignition off and then open and close door.
2. LED will flash rapidly indicating system will arm in 30 seconds. If door is opened during this time, the system will wait for door to close to start passive arming and LED will come "on" solid.
3. If passive lock feature is turned "on" system will lock doors upon arming.



ENABLE - REMOTE VALET

This operation disables the remote starter & alarm functions..

1. Press & Release button #4 rapidly.
2. Press & hold the LOCK button for 5 seconds.
3. The system will chirp the horn/siren 5 times to confirm remote valet mode has been activated.



DISABLE - REMOTE VALET

1. Press & Release button #4 rapidly.
2. Press & hold the LOCK button for 5 seconds.
3. The system will chirp the horn/siren 2 times to confirm remote valet mode has been deactivated.

CAR JACK MODE - Optional Feature

When activated, system waits 30 seconds then flashes LED rapidly for 30 seconds, then chirps siren as warning for 10 seconds then goes into full alarm.

ACTIVATING CAR JACK MODE Programmable - Mode 1, Mode 2

Activates upon any of the following steps:

- Mode 1 & 2 While ignition is "on" press & release # button.
- Mode 1 & 2 Open door while ignition is "on".
- Mode 2 only Each time ignition is turned "on"

DEACTIVATING CAR JACK MODE

1. During countdown period - Turn ignition "on" and press & release antenna button.
2. After full alarm - Turn ignition "off & on" and press and hold antenna button for 8 seconds.

DIAGNOSTICS

LED	SYSTEM STATUS
OFF	Alarm Disarmed
Flashing Steady	Alarm Armed
Flashing Rapidly	Passive Arming Activated
On Steady	System in Valet Mode

Your Professional

Ultra*
Start*

Installation Center



OPTIONS Ask your installation center about these and other options

Domelight Supervision
Parking Light Supervision
Starter Kill
Radar Sensor

Additional Transmitters
Driver's Door Unlock
Trunk Release Kit
Window Roll-up

Limited Lifetime Warranty

The manufacturer warrants to the original purchaser of their remote starters and alarms, that the product shall be free from defects in material and workmanship. However, should this product be proven to be defective, within a one year period from the original date of purchase, the manufacturer will, without charge to the purchaser (excluding any charges incurred to have the product delivered to the manufacturer), repair or replace any part of the remote starters and alarms which the manufacturer agrees to be defective. Thereafter this warranty applies only to the main computer control module which will be warranted for the life of the original purchaser and the vehicle in which it is originally installed. Repairs or replacement of defective modules shall remain at the discretion of the manufacturer. All other parts, components, accessories and/or optional equipment pertaining to the remote starter and alarm are not included in the extended warranty. This warranty is non-transferable. Request for warranty service from any Factory Authorized Dealer must be accompanied with the original purchase receipt. This warranty does not cover the following: removal and reinstall labor charges, shipping charges, abuse, misuse, or accidental damages to the remote starter and alarm, automobile, and/or parts thereof. This warranty is void upon modification, repairs, or alterations of any part of the System. The manufacturer does not guarantee or insure against theft of the vehicle or its contents. Alarm models are designed only to act as a deterrent against possible theft. This alarm may qualify for auto insurance discounts, contact your Insurance Agent for further information. The manufacturer shall not be held liable for any consequential damages due to breach of this or any other warranty, expressed, or implied. This warranty gives you specific legal rights. Your specific legal rights may vary for each region.

CERTAIN DAMAGES EXCLUDED

The manufacturer expressly disclaims any liability or responsibility for incidental damages caused by the product, including economic loss, loss of use of the product, car rentals, or any other costs relating to the care and custody of the product. The manufacturer disclaims liability or responsibility for any consequential damages caused by the product or resulting from its use, including the cost of repairing or replacing other property damaged by the product or caused by its use, whether or not the product is working properly. The product is intended to deter unauthorized use of the vehicles in which it is installed. The manufacturer does not warrant that the

Ultra*
Start*



2000
Pro Series

Advanced Vehicle Security
with
Integrated Remote Starter

Automatic Transmission Only

Owners Guide

BASIC OPERATIONS

REMOTE STARTING

ADVANCED OPERATIONS



ARM SYSTEM & LOCK DOORS

1. Press & release the **LOCK** button
2. Park lights will flash 1 time and siren will chirp 1 time.
3. Doors will lock
4. Alarm system arms. Alarm sensors activate and LED starts flashing within 5 seconds.



DISARM SYSTEM & UNLOCK DOORS

1. Press & release the **UNLOCK** button.
 2. Park lights flash 2 times and siren will chirp 2 times.
 3. Doors will unlock.
 4. Alarm system disarms & LED stops flashing.
- If siren chirps 3 times alarm was triggered - see system diagnostics*

Optional Driver's Door Unlock Feature

This optional feature allows you to unlock the driver's door independently from the other doors.

1. Press & release the **UNLOCK** button once to unlock driver's door
2. Press & release the **UNLOCK** button a second time within 2 seconds to unlock all doors.



SILENT ARM & DISARM

1. Press & Release Button 3
2. Press the Lock or Unlock Button
3. System will Arm or Disarm without siren / horn chirps.
4. Next time system is arm or disarmed siren / horn will chirp normally.



TRUNK RELEASE

1. Press and hold the **UNLOCK** button for 3 second
2. System disarms (2 chirps) and then trunk release will activate (1 chirp)
3. This option does not activate when ignition key is in the "on" position.



CAR FINDER / 4th CHANNEL

1. Press and hold the **#** button for 2 seconds
2. System flashes the siren & lights 5 times to help find your vehicle in a crowded parking lot.
3. Optional 4th channel output can be connected to activate additional features.



REMOTE START VEHICLE

1. Press & hold the ***** button for 3 seconds
2. Park lights will flash 1 time and siren will chirp 1 time.
3. When vehicle has started, system flashes lights 4 times and lights remain "on" while vehicle is running. Vehicle will continue to run for programmed runtime (normally 15 minutes).




REMOTE STOP VEHICLE

1. Press the ***** button for 3 seconds
 2. Park lights will flash 2 times and siren will chirp 2 times.
- Note: Pressing brake pedal or opening hood will stop vehicle.



IDLE MODE (Quick Stop Mode)

1. While vehicle is running with key, press the ***** button
2. Siren will chirp 1 time and parking lights turn "on".
3. Turn ignition "off" and vehicle will continue to run.
4. Exit vehicle and alarm can be armed and disarmed while vehicle is running.

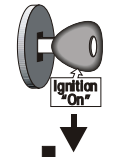

COLD START MODE

1. Ensure ignition key is in the "ON" position
2. Hold down the brake pedal.
3. Press the antenna button (valet) 1 time for each hour that you would like the vehicle to start (ie 3 times = every 3 hours)
4. Turn ignition key off within 10 seconds
5. LED on Antenna will flash in pulses equal to the time set (ie 3 flashes confirms every 3 hours).
6. To CANCEL turn ignition key to the "ON" position.



LOW VOLTAGE MODE

1. Ensure vehicle is running with ignition key
2. Hold down the brake pedal.
3. Press and release button #4
4. Vehicle will give 1 siren/horn chirp to confirm
4. Turn ignition key off, vehicle will remain running.
5. Exit vehicle and press button 1 on the remote to arm the alarm.
6. Vehicle will shut down and low voltage mode will be activated.
7. Vehicle will now start if battery voltage drops below 9 volts.



PANIC MODE

1. Press & hold the **LOCK** button for 5 seconds
2. Park lights will flash and siren will activate.

PANIC MODE DISABLE

- Press **LOCK** button to disable and arm system.
- Press **UNLOCK** button to disable and disarm system.
- Panic Mode will shut off after 60 seconds if not




EMERGENCY DISARM MODE

Disables system if remote is lost or system malfunction.

ENTERING VALET MODE

1. Open door & Hood
2. Turn ignition "ON-OFF-ON-OFF-ON-OFF-ON-OFF"
3. System will respond with 2 chirps to confirm disarming.

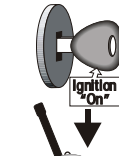

VALET MODE

Disables alarm system.

ENTERING VALET MODE

1. While ignition is "on" press and hold the antenna button for 5 seconds until siren chirps 5 times.
2. Alarm and remote start functions will be disabled and LED will be "on" steady. Door-locks and trunk release are still operational.

EXITING VALET MODE

1. While ignition is "on" press and hold the antenna button for 5 seconds until siren chirps 2 times.
- Note: System can be programmed into "High Security Mode" to enhance or disable this feature, check with installation center.



IGNITION LOCK/UNLOCK

Optional feature

- Doors will lock 3 seconds after ignition is turned "on". Does not lock doors if doors are open.
- Doors will unlock upon turning ignition "off".