



REQUIRED ON MANUAL TRANSMISSION VEHICLES ONLY. RESERVATION MODE MUST BE SET TO REMOTE START THE VEHICLE.

RESERVATION MODE TYPE -1 (DEFAULT SETTING)

- 1) PLACE THE TRANSMISSION INTO NEUTRAL (VEHICLE RUNNING).
- 2) APPLY THE PARKING BRAKE.
- 3) PRESS AND RELEASE THE # BUTTON ON THE REMOTE.
THE PARK LIGHTS WILL FLASH AND THE HORN (IF CONNECTED) WILL HONK TWICE.
- 4) REMOVE THE KEY. (THE VEHICLE WILL STAY RUNNING).
- 5) EXIT THE VEHICLE. THE ENGINE WILL SHUT OFF WHEN THE DOOR IS CLOSED.

THE SYSTEM CAN NOW BE ACTIVATED BY PRESSING THE START BUTTON.

RESERVATION MODE TYPE -2 (DEALER PROGRAMMABLE)

- 1) PLACE THE TRANSMISSION INTO NEUTRAL (VEHICLE RUNNING).
- 2) APPLY THE PARKING BRAKE.
THE PARK LIGHTS WILL FLASH AND THE HORN (OPTIONAL) WILL HONK TWICE.
- 3) REMOVE THE KEY. (THE VEHICLE WILL STAY RUNNING).
- 4) EXIT THE VEHICLE. THE ENGINE WILL SHUT OFF WHEN THE DOOR IS CLOSED.

THE SYSTEM CAN NOW BE ACTIVATED BY PRESSING THE START BUTTON.

NOTE- LCD 2WAY MODELS WILL DISPLAY TURBO ON THE SCREEN AFTER PRESSING THE # BUTTON TO SET THE RESERVATION MODE.

RESERVATION MODE WILL CANCEL IF A DOOR IS RE- OPENED. TO ENTER THE VEHICLE WITHOUT CANCELLING RESERVATION MODE REMOTE START THE VEHICLE THEN SHUT THE SYSTEM OFF BY THE REMOTE ONCE THE DOORS ARE CLOSED AGAIN.