



**BENDEZU
PORT
EQUIPMENT**

Bendezu Port Equipment

MAQUINARIA PORTUARIA DE SEGUNDA MANO – USED PORT EQUIPMENT FOR SALE – GEBRAUCHTE HAFENTECHNIK

GOTTWALD HMK 170 E



YEAR: 2011

LIFTING CAPACITY: 63 TN.



WORKIN HOURS: 10.000 hrs.

GOOD WORKING CONDITIONS



GOTTWALD HMK 170 E

Lifting Capacity

Capacity (t)					
Radius					
	normal load	spreader	grab	special load	heavy load
m	66 2/3%	66 2/3%	60%	75%	66 2/3%
10	45.0	35.0	32.0	63.0	63.0
11	45.0	35.0	32.0	63.0	63.0
12	45.0	35.0	32.0	63.0	63.0
13	45.0	35.0	32.0	63.0	63.0
14	45.0	35.0	32.0	63.0	63.0
15	45.0	35.0	32.0	63.0	63.0
16	45.0	35.0	32.0	63.0	63.0
17	45.0	35.0	32.0	63.0	63.0
18	45.0	35.0	32.0	63.0	63.0
19	45.0	35.0	32.0	63.0	63.0
20	45.0	35.0	32.0	63.0	63.0
21	45.0	35.0	32.0	63.0	58.8
22	45.0	35.0	32.0	58.9	54.7
23	45.0	35.0	32.0	55.3	51.0
24	45.0	35.0	32.0	52.2	47.8
25	45.0	35.0	32.0	49.4	45.0
26	42.3	35.0	31.6	46.8	42.3
27	39.9	33.0	30.0	44.4	39.9
28	37.7	30.8	28.5	42.2	37.7
29	35.7	28.8	27.0	40.1	35.7
30	33.9	27.0	25.6	38.2	33.9
31	32.2	25.3	24.3	36.5	32.2
32	30.7	23.8	23.1	34.8	30.7
33	29.2	22.3	22.0	33.2	29.2
34	27.9	21.0	21.0	31.7	27.9
35	26.6	19.7	20.1	30.3	26.6
36	25.5	18.6	19.2	28.9	25.5
37	24.4	17.5	18.3	27.7	24.4
38	23.4	16.5	17.5	26.6	23.4

Spreader weight: EH12 = 6.9t

The lifting capacities in the columns are to be understood as follows:

1. Normal, Heavy-duty, Special operation = Load below hook
2. Grab on the ropes = load on the ropes
3. Spreader operation = Load below spreader