

Hola



MODEL:TF-710

INTRODUCTION

Thank you for purchasing our newest Caller ID phone. This manual is designed to familiarize you with this phone. To get maximum use from your new phone, we suggest that you read this Instruction Manual carefully before operating it.

FEATURES

- FSK/DTMF/ETSI compatible with auto-detection
- 16 ring tones selectable
- 5 levels of LCD brightness adjustable
- 50 incoming and 15 outgoing memories
- Hands-free dialing and speaking function
- 2 way key lock function
- Set PABX and local area code
- Pre-dialing and edit function
- Music on Hold function
- LCD backlight function
- 3 groups of alarm clock
- Flash time selectable

GETTING STARTED

Input 3*AA batteries into the batteries compartment according to the correct polarity. The upper line of LCD displays month, date and time. The lower line displays the number.

Insert one end of the line cord to the line jack of the base and the other end to the exchange.

Connect the handset and the unit with coiled line.

1

RECEIVING CALLS

The unit rings when a call comes, if you have subscribed caller ID service to your local telecom, the upper line of LCD displays month, date, time and serial no .of the incoming call, **NEW** icon is shown on the left of the middle line, and lower line displays the incoming number. If a call comes in twice or more, the left of middle line displays **REP** icon. You can answer the phone by picking up the handset.

> From the handset

1. Pick up the handset and talk to the other end.
2. After finished, return the handset to the base.

> Switch to HF

1. When talking by handset, press **H.F** key and return the handset to the base.
2. After finished, press **H.F** key again.

> From HF

1. When the unit rings, press **H.F** key and talk to the caller.
2. After finished, press **H.F** key again.

NOTE:

Generally telecom transmits the incoming message between the first ring and the second ring.So please answer the phone after the second ring.

MAKING CALLS

> From the Handset

1. Pick up the handset;
2. When hearing the dialing tone, dial the desired number. LCD times the conversation after 6 seconds automatically;
3. After finished, return the handset to the base.

> From HF

1. Press **H.F** key.
2. When hearing the dialing tone, dial the desired number,talk to the caller with speaker.(LCD times the conversation after 6 seconds automatically)

2

Calling back the local area call: The unit can auto filter local area code, after setting the local area code (Refer local area code setting).

NOTE: Please make sure batteries are loaded when you use this function.

> DELETING INCOMING CALL

1. In on-hook state, press **▲** key to review the desired incoming number.
2. Press **DEL** key to delete the number, then LCD displays the next number.

NOTE: Press **DEL** key for 3 seconds, all the incoming message are erased.

REVIEWING CALLING BACK AND DELETING OUTGOING CALL

The phone can record 15 outgoing messages, sequence number and conversation time. You may review, call back and delete outgoing calls.If over 15 outgoing calls, the earliest one is replaced. When you review outgoing call, LCD do not display real date and time, but displays the conversation time.

> REVIEWING OUTGOING CALL

1. In on-hook or off-hook state, press **OUT** key, LCD displays the last dialed number.
2. Press **OUT** key continuously, LCD displays ---- END-----.

> REDIAL OUTGOING CALL

1. In on-hook state, press **OUT** key to check the desired number.
2. Press **BACK** key, the number is dialed out automatically.

> DELETING OUTGOING CALL

1. In on-hook state, press **OUT** key to check the number.
2. Press **DEL** key to erase the number, and LCD displays the next number.

NOTE: Press **DEL** key for 3 seconds, all the outgoing calls are erased.

> ADJUSTING RING VOLUME

1. In on-hook state, press **VOL** key to enter the menu for selecting the ring volume, at this time press **▲** key to select the desired ring volume.There are four levels adjustable in total.
2. In off-hook state,press **VOL** key to enter the menu for selecting the hands-free volume,select the different hands-free volume through pressing

4

VOL key. There are two levels adjustable in total. The default is maximum level.

KEY LOCK FUNCTION

1. Turn the key to green point the number led by "o" will be locked
2. Turn the key to red point all number can be dialed out.

SETTING THE TELEPHONE

> Setting the Date

1. Press [FLASH/SET] button, the LCD display "SE 12345678".
2. Press Number Key "1",LCD display "1-DATE 2-CL".
3. Press Number Key "1"to select setting of Date, the LCD display "d 2006 01-01"and blink, press Number Key to input the Date. For example, if Date is June 05 .2012, press "120605".
4. Press [FLASH/SET] button to confirm.

> Setting the Time

1. Press [FLASH/SET] button, the LCD display "SE 12345678".
2. Press Number Key "1",LCD display "1-DATE 2-CL".
3. Press Number Key "2"to select setting of Clock, ,the LCD display "CL 00-00" and blink, press Number Key to input the Time. For example, if time is13:45 PM, press "1345".
4. Press [FLASH/SET] button to confirm.

> Setting Ring Tone

1. Press [FLASH/SET] button, the LCD display "SE 12345678".
2. Press Number Key "2",the LCD display "r 1T 2VIP 3VoL" and blink.
3. Press Number Key "1"to select normal ring tone, the LCD display "ring type 01"or use [**▲**] or [**▼**] to select other normal ring tones.
4. Press [FLASH/SET] button to confirm.

Or:

1. Press Number Key "2"to select VIP ring tone, the LCD display "ring vip 01"or use [**▲**] or [**▼**] to select other normal ring tones.

5

2. Press [FLASH/SET] button to confirm.

> Setting the Alarm Clock

1. Press [FLASH/SET] button, the LCD display "SE 12345678".
2. Press Number Key "3",LCD display "AL 1-2-3".
3. Press Number Key "1"to enter into the first alarm clock setting, LCD display ALAROFF, directly input the time when OFF blinks.
4. Press [FLASH/SET] button to confirm.

If need to turn off the alarm clock, press FLASH/SET first, then select any group that needs to be turned off, use [**▲**] or [**▼**] to select OFF; the setting method of the second and third group is same as of the first; The first group of alarm clock can only be used once, but for the second and third group, it will alarm everyday. During alarm, press any key to stop it.

> Setting Do-Not-Disturbing time

1. Press [FLASH/SET] button, the LCD display "SE 12345678".
2. Press Number Key "4",LCD display "off r 00-00".
3. Press the time(00-99) directly when see the characters blink.
4. Press [FLASH/SET] button to confirm.

After the DND function is started, LCD display DND time and count down until 00-00, then automatically cancel DND function, pick up the handset or press **H.F** to exit it. During DND time, it will not ring for the incoming call (except VIP number).

> Setting FLASH time

- 1.Press [FLASH/SET] button, the LCD display "SE 12345678".
- 2.Press Number Key "5", LCD display "1-F 2-PT 3-D" and blink.
- 3.Press Number Key "1" to select setting of the FLASH time.
- 4.The LCD will display "FLASH 600", then press [**▲**] or [**▼**] to select FLASH timing from 90 / 95 / 100 / 120 / 180 / 300 / 600 / 1000ms.

> Setting Dialing Mode

- 1.Press [FLASH/SET] button, the LCD display "SE 12345678".
- 2.Press Number Key "5", LCD display "1-F 2-PT 3-D" and blink.

6

3. If the speaker is not clear you can pick up the handset and talk to the other end.
4. After finished, return the handset to the base.

> REDIAL

When dialing out a number but the line is busy, return the handset to the base.

1. Pick up the handset or press **H.F** key.
2. Press **REDIAL** key, the last number is dialed out again.

> DIALING WITH PABX CODE

1. In off-hook state.
1. Press PABX access number (normal 0 or 9), then press **REDIAL** key and the desired number.

NOTE: If the exchange cannot transmit the information from the telecom, the unit cannot display Caller ID message.

REVIEWING CALLING BACK AND DELETING INCOMING CALL

The phone can record max. 50 incoming calls. Over 50 incoming calls, the earliest one is replaced, for repeat incoming call, LCD displays "REP".

A Secret number comes, LCD displays "...p..."

For error incoming message, LCD displays "...E..."

If incoming call is from an area without Call ID service, LCD displays "...o..."

> REVIEWING INCOMING CALL

1. In on-hook state, press **▲** key, LCD displays the latest incoming message.
2. Press **▲** key continually, LCD displays ...END... , it reminds all records are checked.

> CALLING BACK INCOMING CALL

1. In on-hook state, press **▲** key to check the desired number.
2. Press **BACK** key, the number is dialed out automatically. Or,
3. Press **BACK** key twice, the unit auto-add "o" to long distance call number and dial it out.

3

- 3.Press Number Key "2" to setting the dialing mode.

The LCD displays **PT Tone**

Press **▲** or **▼** key to select **PULSE** or **TONE**.

Press FLASH/SET to confirm.

Press **DEL** to quit.

> Setting Local Area Code

- 1.Press [FLASH/SET] button, the LCD display "SE 12345678".
- 2.Press Number Key "6",LCD display "1-LOC 2-OL" and blink.
- 3.Press Number Key "1" to select setting of Local Area Code.
- 4.The LCD will display "Loc -----", then press number key to input max 8 digits Local Area Code.
- 5.Press [FLASH/SET] button to confirm.

> Setting LCD Contrast

1. Press [FLASH/SET] button , the LCD display "SE 123456".
2. Press Number key "7", LCD display "Lcd con 4".
3. Press [**▲**] or [**▼**] to select LCD contrast from 1-5.
4. Press [FLASH/SET] button to confirm.

> To put a Call on Hold

1. Press [**HOLD**] button when you are talking.
2. You may place the handset on the cradle, the line still be hold and the other party will hear a music sound.
3. To release the hold, pick up the handset.

> Using the Pre-dialing Function

- 1.You can pre-dial the telephone number with picking up the Handset.
- 2.If any digits wrongly enter, you can press [**DEL**] button to delete it.
- 3.When all numbers were entered correctly,press [**BACK**] button to dial out the numbers automatically.

7