

# Hola

## User Manual



## 1. Instruction

Thank you for buying our product.

To ensure the proper use of this product, please read this manual before using.

- ◇ Avoid using this product while driving or during thunderstorm .
- ◇ Shut down this product on airplane, in hospital, near gas station or dangerous goods/chemicals.
- ◇ Clean the phone with a soft cloth. Never use a strong cleaning agent or abrasive powder because this will damage this unit.
- ◇ This product may interfere the performance of pacemaker, hearing aid or other medical device.
- ◇ Do not expose to direct sunlight or moisture.
- ◇ Avoid putting the phone near heating appliances and devices that generate electrical noise ( for example, motors or fluorescent lamps).


## 2. Main Features

- Frequency: 4G:B1/B3/B5//B8/B38/B39/B40/B41  
3G:B1/B5/B8  
2G:B3/B5/B8
- Phonebook, Hands free dialing, Redial function
- Recorder
- MP3 Player
- Ringer selection
- FM Radio
- Alarm, Calendar, Calculator, Timer
- SMS send and receive, SMS storage capacity up to 500
- Date, time, week., signal strength, battery life display etc

## 3. Technical conditions

- Temperature: -10°C ~+45°C
- Relative humidity: 10% ~95%
- Atmospheric pressure: 86~106Kpa
- Voltage: AC220V, 50Hz, DC 5V 1000mA
- Backup battery: rechargeable battery 2000 mAh
- Standby time: more than 72 hours
- Talking time: More than 2 hours

## 4. Package contents

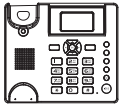

(1) Base unit - 1pc



(2) Handset and core - 1Set



(3) Adaptor-1pc




(4) Battery-1pc



(5) User Manual-1pc

## 5. Phone layout

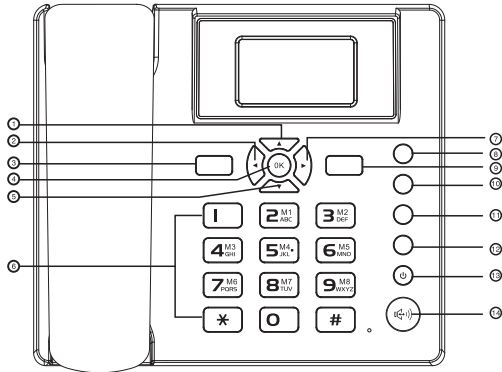

1. UP KEY 【▲】 : Access to Calendar, Increase volume.
2. LEFT KEY 【◀】 : Ring settings and volume adjust, Navigating from right to left.
3. MENU KEY: Access to main menu.
4. OK KEY : Access the submenu in the any menu.

Press to go into main menu in idle screen.

5. DOWN key 【▼】 : Calculator, decrease volume.
6. Digit keys: In the idle, press this key to input number, and press REDIAL/SEND key to attempt to make a call; input corresponding character by press it in the editing state.
7. RIGHT KEY 【▶】 : SMS Compose, navigating from left to right .
8. FM/MP3 KEY: Access to FM radio and play MP3 audio files.
9. CONTACTS/CANCEL KEY : Access to contact menu or turn back to the last menu.
10. RECORD KEY: Rrecord calling conversation or common environment sound
11. IN/OUT KEY: View missed/outgoing/received/rejected calls
12. REDIAL/SEND KEY: Make phone call :input the phone number and press SEND key.
13. Power ON or OFF KEY: Long press to power ON/OFF the phone.
14. SPEAKER PHONE KEY: Make hands-free operation.


Redial the last dialed number directly.

## 6. Installing your Phone

### 6-1 Install SIM and Battery

Open battery cover, insert SIM card and install battery. Close the battery cover.

### 6-2 Power on and off the Phone

Power on: long press  , the phone will be powered on, The screen shows operator name, time, signal and battery life. The phone will auto search the network.

**Power off:** Long press  3 seconds.

## 7. Basic operation

### 7-1 Make a phone call

Input numbers and the numbers will be show in the screen. Press REDIAL/SEND key, then press REDIAL/SEND key or OK key to dial out. Press CONTACTS/CANCEL key if inputted wrong numbers.

During the call, you can adjust volume by press LEFT button or RIGHT button.

### 7-2 Answer the phone call

When there is incoming call, the phone will ring and the screen shows caller ID.(need network support). Lift the handset or press SPEAKER PHONE key, then press the REDIAL/SEND key when you hear the tone.



### 7-3 Redial

Press REDIAL/SEND key,the last dialed number will be dialed out automatically with SIM1 card.

### 7-4 Hands-free function

Press the SPEAKER PHONE key , you can answer the incoming call or dial out the numbers you input in standby mode

### 7-5 Adjust volume

During a phone call , Press  key , you can increase the volume ; Press  key , you can decrease the volume ; Total 7 levels for adjusting.

## 8. Menu Function

### 8-1 Phone Book

When the phone is in idle screen, please press CONTACTS/CANCEL key to enter phone book.

Detail: view the current record detail

New: add a new record

Write message: write a message and set the current record as recipient

Call: dial out the current number

Delete: Delete the current record

### 8-2 SMS

In the standby, press MENU to enter Messaging, and select Message to access it in main menu. You can Write message and view message and so on.

#### 8-2-1 Write message:

Select Write message to enter new message editing box in the Message menu, after editing SMS, you can do some operations as listed below:

Send: Send the message.

Insert template: Insert template message.

Save to Draft: Save the current editing content to [Draft] document.

Exit: Exit the current editing interface.

#### 8-2-2 Inbox:

All messages the phone received are all stored in Inbox.

Open a message and press MENU key to access sub menus and you can do some operations: View, Reply, Call, Forward, Move, Delete, Save to phonebook and so on.

#### 8-2-3 Outbox:

SMS which fail to send out will be saved to Outbox.

Open a message and press MENU key to access sub menus and you can do some operations: View, Resend, Delete, and Delete all.

#### 8-2-4 Drafts:

SMS which are not sent out can be saved to Draft.

#### 8-2-5 SMS Templates:

There are 10 message templates available.

#### 8-2-6 SMS Settings:

Setting includes status report and reply path ON or OFF Preferred storage.etc

### 8-3 Call logs:

#### 8-3-1 Missed Calls:

Press IN/OUT key, enter Missed calls, the screen will display the missed calls'information, including date, phone number or name of person (if the number exists .

#### 8-3-2 Dialed Calls:

Press IN/OUT key, enter Dialed calls, the screen will display the outgoing calls'information, including date, duration, time and phone number or name of person (if the number exists in the contact list).

#### 8-3-3 Received Calls:

Press IN/OUT key, enter Received calls, the incoming calls'information, including date, time, duration and phone number or name of person (if the number exists in the contact list) of incoming call, shall be displayed on the screen.

#### 8-3-4 Delete call:

This function could delete all records of Dialed, Received and Missed call in the Phone.

### 8-3-5 Call timers:

You can view the duration of last, received and outgoing calls and call history

## **8-4 Settings:**

### 8-4-1 Phone settings:

Time and Date: Set time and date (year, month and day), date and time format, time update mode

Language settings: English,Hindi and Marathi, ,the default language is English.

Restore settings: Switch to the factory default settings. The phone will clew input password, the password default 1234

### 8-4-2 Call settings:

You can set Dual-SIM,Call Voice mail sever ,forwarding, Call waiting, Call barred.etc

## **8-5 Profiles**

You can set ring settings,adjust volume,ring type, other alert rings

## **8-6 Application**

### 8-6-1 Alarm

You can set 8 groups of alarm clocks.

On (or Off): set the current alarm statue as on(or off).

Add: Add a new alarm.

Edit: Edit the current alarm.

Delete: Delete the current alarm.

### 8-6-2 Calendar:

You can view the current date or the assigned date.

### 8-6-3 Calculator:

You can calculate something as a simple calculator

### 8-6-4 Timer:

You can time something as a simple timer.

## **8-7 FM radio&MP3**

### 8-7-1 FM radio:

Select FM radio in main menu or press FM/MP3 key,then press OK to into FM radio.

Activate: Activate the current FM channel .

Off: Deactivate the current FM channel .

Auto Search and Save: Auto Search Available FM channel and save to Channel list.

Channel List: You can choice FM channel saved in it to play.

Save: Save the current channel to channel list.

### 8-7-2 MP3

Select MP3 in main menu Press FM/MP3 key to inter MP3,you can play MP3 files or recorded files and do other operation.

## **8-8 Recorder**

During talk by phone,press RECORD button,the conversation will be recorded to phone,or record common inviroment sound without talking by phone.user can find the recorded files and play them.Recorded files can be played,renamed and deleted.

Note:It does work without installing memory card.

## **8-9 WLAN**

It can be set WiFi ON or OFF, to set auto connect and auto search ON or OFF or do othe setting.

## **8-10 Bluetooth**

It can be set Bluetooth to ON status or close it.When it is ON status,it can be set Bluetooth visibility,paired device,rename device name etc.

## 8-11 Hotspot

It can be set hotspot to ON status or close it and do other setting

## 8-12 Spead dial

### 8-12-1 Spead dial setting

Press MENU key to set spead dial number **【Contacts-Others—Spead dial】** , screen display M1-M8,then you can set the selected person's phonebook to M1,M2-M8 setting is the same operation.

Note:Before setting spead dial number,persons' name and phone number should be added to phonebook firstly.

### 8-12-2 Spead dial operation

Press M1 key for 3 seconds,it will dial out the phone number directly.,the same operation for dialing M2-M8.

Note:Spead dial works ony in ON status,the default status is ON.

## 9. Input method instruction

This phone support English input uppercase and lowercase and digital input mode.

Main applications: Input names in the phonebook and write message, etc.

In the input method, press "CONTACTS/CANCEL" button to delete one character before the cursor , long press "CONTACTS/CANCEL" key to delete all characters; Press **【▲、▼、◀、▶】** KEY to move the cursor.

The functions of digital keys and how to use them:

key	(ABC) (abc)	Digital 123	remark
1	.,-?! ' : @_ #\$/	1	
2	A B C a b c	2	
3	D E F d e f	3	
4	G H I g h i	4	
5	J K L j k l	5	
6	M N O m n o	6	
7	P Q R S p q r s	7	
8	T U V t u v	8	
9	W X Y Z w x y z	9	
*	Select symbols.,?!'")@V/:;+*=%& ◇ £\$ \$ € □ <b>【】</b> {} ~ # ^		
0	Blank space	0	
#	change different input method		

Please Note:



You can only enter not more than 160 characters.

## 10. Common trouble and repair methods

phenomenon	May caused by:	Solve methods
No display, no backlighting	Not connect the power adaptor well	Use our factory power adaptor, And make sure to connect the power socket well.
After dialing couldn't get through	1. Signal is not good in your place. 2. signal interferenc	1. Dial later. 2. Power off your phone and power on again.
No display, but have backlighting	Low battery	Charge your phone
Noise	Network problems or weak signal	Dial later
Can not find SIM	1. Low battery 2. Wrong installation of SIM card	1. Charge your phone and power on your phone again. 2. Put on your SIM in correct place.
No signal, no network	Set the wrong network parameters	Contact with the local operators, or dial the hotline.

## Warranty Card

Hola!

This Product is under warranty for manufacturing defects for Model ..... Bearing serial number ..... for a period of 8 months from the date of manufacturing or from 6 month from the date of sale, whichever is earlier

Dealer Signature & Stamp

Date of Sales

Manufactured by.  
**RAVARTECH OPC PVT. LTD.**  
 A-21, Sector-65, Nolda (U P) 201301  
 Customer Care Cell  
 Contact +919310160637  
 E-mail info@ravatech.com