

User Manual Hola - TF 310

Caller ID Corded Phone



- * Corded telephone with caller ID function
- * Max 50 groups incoming calls memories
- * Max 20 groups outgoing calls memories
- * 5 levels LCD display adjustment
- * 4 levels ringer volume adjustment
- * Flash, Hold, Volume function
- * LCD display with time and date
- * Redial last number function
- * FSK/DTMF dual system compatible

Package Contents:

- * Telephone base*1
- * Telephone handset*1
- * Telephone line cord*1
- * Handset coil cord*1
- * User manual*1

Please read the complete instruction before operating this unit

Usage Instructions:

Making a Call

Lift the handset or press the speaker button and wait for the dial tone, then dial the desired number.

Ending a Call

Place the handset on the phone base or press the speaker button.

Setting The Date

When handset is on the base, press "SET" key and press "1" twice. Use "UP" or "DOWN" keys to select the year. Press "SET" key to confirm and move to set the month, date in similar manner.

Setting The Time

When handset is on the base, press "SET" key and press "1" and then press "2". Use "UP" or "DOWN" keys to select the time. Press "SET" key to confirm, and week will be updated automatically.

Redialing

Lift the handset or press the speaker button and press the "Redial" button.

Adjusting Ringer Volume

When handset is on the base, press the "VOL" button and use "UP" or "DOWN" keys to select the volume, and then press "SET" to confirm.

Adjusting Display Brightness

When handset is on the base, press "SET" key and press "7". Use "UP" or "DOWN" keys to select the brightness level and then press "SET" key to confirm.

Reviewing Incoming Calls

Press "DOWN" key and LCD will display the last incoming call. Then press "UP" or "DOWN" keys to review the incoming calls.

Reviewing Outgoing Calls

Press "OUT" key and the LCD will display the last outgoing call. Then press "UP" or "DOWN" keys to review the outgoing calls.

Hod Function

During a call, press the "HOLD" button to place the call on hold and play music. To resume the call, press the "HOLD" button again.

Deleting Records

Press the "DEL" button to delete the current record or to correct a mistake when entering a phone number. Press and hold the "DEL" button for 3 seconds to delete all records automatically.