

User Manual- TF- 600

Features

- DTMF/FSK dual system caller ID (automatic identification)
- 31 groups 16 digits incoming calls memory, 43 groups 10 digits incoming calls memory
- 9 groups 16 digits outgoing calls memory, 12 groups 12 digits outgoing calls memory, 16 groups 8 digits outgoing calls memory.
- Real-time date and week display,.
- 3 levels LCD brightness adjustable (default is 2 levels)
- Software PT switch
- FLASH time can be set 90/95/100/120/180/300/600/1000ms, default is "300ms"
- HOLD function
- PABX code 8 digits code
- Local area code 8 digit code
- 2 levels volume adjustable of handset
- 3 levels (Hi, Lo, Off) ringer volume adjustable
- LED of Ringer

Menu function settings

In the on-hook state, press the setting button to enter the setting state, the LCD displays SET 1234567, at this time, press the number keys or press the up and down keys to select the setting option, and the LCD will display the corresponding setting item at the same time. After setting a certain item, press the delete button to exit the previous directory, and then press the number keys or up and down keys to select the next setting item. (When using the up and down keys to select a setting item, to enter the sub-menu setting item of the item, you need to press the setting key and then the up and down keys to select, here only the number keys are used to select the setting item).

The specific setting items are as follows :

1. Set the date/time: Press the set button to select 1, and the LCD will prompt 1—DATE, 2—CL. Select 1 to enter the date setting, see the font flashing, then directly enter the number, and then press the set button to confirm; when the date setting is completed, the program will automatically recognize the week, select 2 to enter the time setting, the setting method is the same as the date setting. Press the hands-free key to exit.
2. Special function selection setting: press the setting key to select 5, the LCD will prompt 1-f 2-pt 3-d, select 1 to enter the flash time setting, the LCD displays flash 600, and press the up and down keys to select the flash time. The flash time is: 90, 95, 100, 120, 180, 300, 600, 1000ms; select 2 to enter P-T conversion, LCD displays pt tone, press the up and down keys to select the dialing mode, the initial value is the audio dialing state; Select 3 to enter the anti-theft setting, LCD displays defend off, press the up and down keys to select on/off. (The anti-theft code is *#).
3. OFF. Local code and PABX code setting: Press the setting button to select 6, the LCD will prompt 1-LOC 2-OL to select 1 to enter the local code setting, and the LCD displays loc. At this time, directly input 1~8 digits and press the set key to confirm. If you want to cancel the local code, press the delete key to delete the entered number while in the input state, and then press the set key to confirm. Select 2 to enter the PABX code setting. The screen displays out off. The setting method is the same as the local code setting method. If you want to cancel the PABX code, press the up and down keys to select OFF.
4. LCD brightness adjustment: Press the setting key to select 7, the LCD will prompt LCD con 2. At this time, press the up and down keys to adjust the LCD brightness, the default value is the second level, a total of 3 levels.

On-hook function operation

1. Call back: Press the call back button directly during Pre-dial or number search to dial the selected number and pick up the handle immediately; if you want to add "0" before the number, you need to press and hold the call back button for 3 seconds to pick up it immediately handle.
2. Incoming call inquiry: In the on-hook or off-hook state, press the up or down key to view the incoming call information; in the on-hook state, press and hold the # key for 3 seconds to enter the incoming call inquiry state.
3. Outgoing call inquiry: In the on-hook or off-hook state, press the outgoing call key to enter the outgoing call check state, and then press the up or down key to check

Outgoing call information; long press the * key for 3 seconds in the on-hook state to enter the outgoing call query state.
4. On-hook pre-dial: In the on-hook state, directly enter the phone number, if there is an error, you can use the delete button to modify it. After the number is entered, you can pick up the phone or press the callback button to directly dial the number), press and hold for 3 seconds Add "0" to call back.
5. Delete function: In the state of entering a number, the delete key can be used to delete the wrong number; in the state of querying the number, the delete key can be used to delete the current number and its information or long press the key for 3 seconds to delete all incoming or outgoing calls number.
6. VIP storage: Press the up and down keys to find out the caller number, and press the volume/VIP to save or cancel the number as a VIP number.

Off-hook function operation

1. Music Hold: off-hook state, press the hold button to enter the music-hold state, while the reserved music sounds. At this time, you can put down the handset, then go off-hook, the hold music stops, and automatically enters the handset talking state.
2. Volume/VIP: Press this key to enter the handset volume selection when off-hook, (volume is adjustable in 2 levels)
3. Mute: In the off hook state, press the mute button and the screen displays MUTE. At this time, the other party cannot hear you when you speak. Press the mute button again, the MUTE disappears on the screen and the mute is released.

Manufactured by:
RAVARTECH OPC PVT. LTD.
A-21, Sector-65, Noida (U.P.) 201301
Customer Care Cell :
Contact : +91 9310160637
E-mail : info@ravatech.com