


# USER MANUAL

## MODEL: TF 310

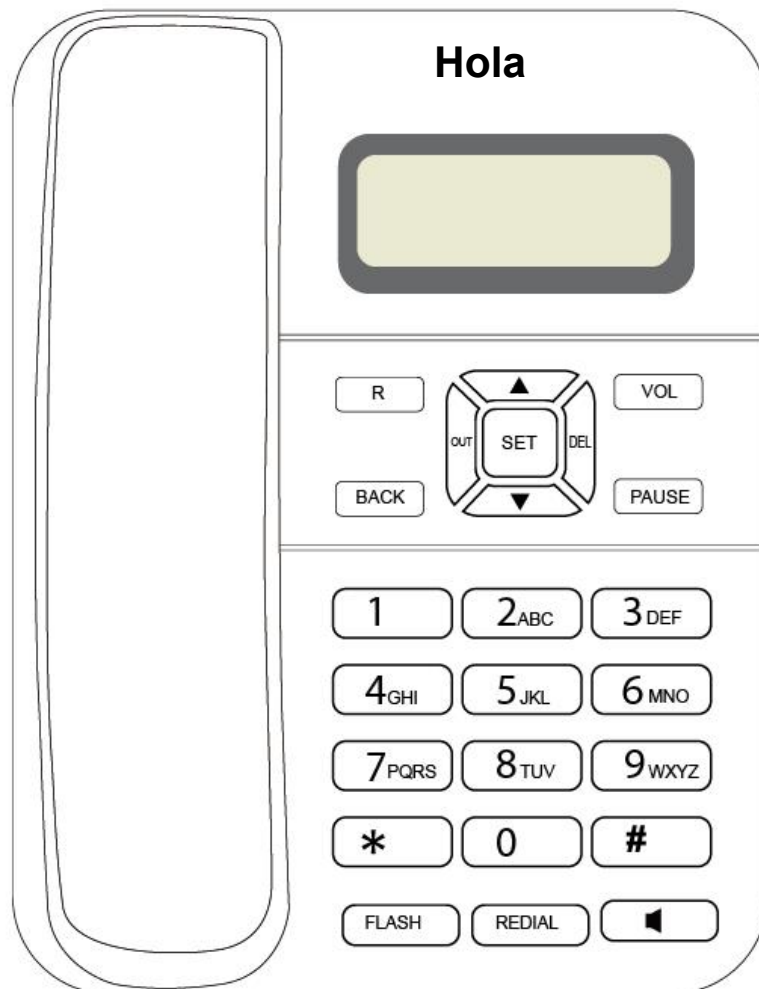

- Corded Telephone
- FSK/ DTMF Compatible Caller-Id
- LCD Display with Date and Time
- 50 Incoming Memory
- 15 Outgoing Memory
- Pre-dialing & Clearing Function
- Redial
- Hands free dialing
- Flash Key
- Hold Function

**Please read the complete instruction before operating this unit**

## **THE PACKAGE INCLUDES:**

- Phone
- Handset
- Line Cord
- Handset Cord
- User Manual

## **SETTINGS**

- **SPEAKER VOLUME**

Use "Volume" key in order to increase or decrease the speaker volume.

- **DATE/TIME**

When handset is on the base, press "SET" key for 3 seconds. The display will show "SET 1 DATE". Press "SET" key again to set the year. Use "UP" or "DOWN" keys to select the year. Press "SET" key to confirm and move to set the month, date, hours and minutes in similar manner.

Note: Week will be updated automatically.

- **REVIEWING INCOMING CALLS**

Press [DOWN] and LCD will display the last incoming call. Then press [UP]/ [DOWN] buttons to review the incoming calls.

- **REVIEWING OUTGOING CALLS**

Press "OUT" key and the LCD will display the last outgoing call. Then press [UP]/ [DOWN] buttons to review the outgoing calls.

## **OPERATION**

- **MAKING A CALL**

- i. **USING A HANDSET/SPEAKERPHONE**

Go Off-hook and hear the dial tone. Dial the desired telephone number. When the called party answers, begin the conversation. After the conversation hang up

- ii. **USING PRE-DIALING**

In On-hook state, enter the number to be dialed (Use Del key to correct any input mistake). Go Off-hook and the number will be dialed out directly within 3 seconds.

## **USING CALL BACK**

Select the Incoming/Outgoing number. Press “Redial” and the number will be dialed out. When the called party answers, begin the conversation.

- **PRE-DIAL**

At on-hook mode, use number button to input the number you want to dial out, and use “DEL” button to modify it. After finishing the input, press “REDIAL” or “SPEAKERPHONE” button or pick up the handle for dialing out.

- **REDIAL**

Go Off-hook and press the “Redial” key. The last dialed number will be dialed automatically.

- **FLASH**

Flash is designed for disconnecting telephone line during the pause. After pressing FLASH, dialer will send one flash signal to disconnected telephone lines for flash time.

- **HOLD**

In off hook mode, enter the HOLD mode by pressing “HOLD” button and you will hear the music. Now, hang up the phone.

- a) When you pick up the handset again, the music will stop and return to the handset mode.
- b) Press “HOLD” again, the music will stop and return back to the original mode.
- c) In On-hook state, press “Hands free” key. The music will stop and return back to the hands-free mode.

- **DEL**

Pressing DEL key can exit the operation.

- a. In pre-dialing mode, press DEL key to delete or modify a wrong number.
- b. While checking the incoming/outgoing calls, press DEL key to delete the number displayed on the LCD.
- c. Press DEL key for 3 seconds to delete all the incoming or outgoing calls.

- **OUT**

Out key is used to view the outgoing calls made through the phone.