

FX FLASHBACK


MONTEREY POP



What the FX66 Does
The FX66 is a distortion pedal reminiscent of the old fuzzy faced distortions of the 60's. You'll feel like you've had a flashback from the Monterey Pop Festival just by connecting your guitar to the FX66 and playing.

Connecting The FX66

Connect your guitar to the input of the FX66. Connect the output of the FX66 to the input of your amplifier (or to the input of another effect device you may be running). To eliminate the need for a 9 volt battery, connect the PS200R to the AC power jack on the FX66.

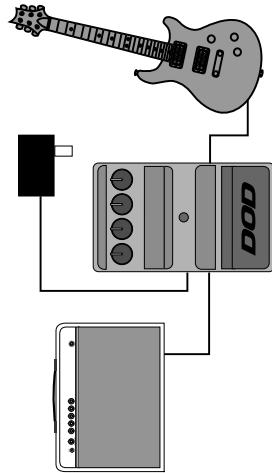

DOD Electronics Corporation
8760 S. Sandy Parkway
Sandy, UT 84070
Telephone (801) 566-8800
Fax (801) 566-7005
International Phone (801) 568-7642
International Fax (801) 568-7638

Copyright 1999 DOD Electronics Corp.
The specifications in this manual are subject to change without notice.

FX66 18-0066-01

H A Harman International Company

Printed in China

Declaration of Conformity

Manufacturer's Name: DOD Electronics Corporation
Manufacturer's Address: 8760 S. Sandy Parkway
Sandy, Utah 84070, USA
declares that the product:
Product Name: FX66
Product Options: All (includes includes internal battery power and with a Class II power adapter that conforms to the requirements of EN60065, EN60742, or equivalent).
Conforms to the following Product Specifications:
Safety: EN 60065 (1993)
IEC85 (1983) with amendments 1, 2, 3
EMC: EN 55013 (1990)
EN 55020 (1991)
Supplementary Information:
The product herewith complies with the requirements of the Low Voltage Directive 72/23/EEC and the EMC Directive 89/336/EEC as amended by Directive 93/68/EEC.
DOD Electronics Corporation
Vice President of Engineering
8760 S. Sandy Parkway
Sandy, Utah 84070, USA
March 2, 1999
European Contact: Your local DOD Sales and Service Office or International Sales Office
8760 S. Sandy Parkway
Sandy, Utah 84070, USA
Tel: (801) 568-7638
Fax: (801) 568-7642

- Warranty**
- The warranty registration card must be mailed within ten days of purchase date to validate this warranty.
 - DOD warrants this product when used solely within the U.S., to be free from defects in materials and workmanship under normal use and service.
 - DOD liability under this warranty is limited to repairing or replacing defective materials that show evidence of defect, provided the product is returned through the original dealer, where all parts and labor will be covered up to a period of three years. The company shall not be liable for any consequential damage as a result of the product's use in any circuit or assembly.
 - Proof-of-purchase date is considered to be the burden of the consumer.
 - DOD reserves the right to make changes in design or make additions to or improvements upon this product without incurring any obligation to install the same on products previously manufactured.
 - The foregoing is in lieu of all other warranties, expressed or implied, and DOD neither assumes nor authorizes any person to assume for it any obligation or liability in connection with the sale of this product. In no event shall DOD or its dealers be liable for special or consequential damages or from any delay in the performance of this warranty due to causes beyond their control.

Operation of the FX66

The FX66 was designed to give you the vintage sound typical of what bands in the 60's used. A few simple knob adjustments and the groovy tones will make you feel the flower power. You'll find yourself saying, "peace, love and rock & roll, man."

Start by adjusting the Volume knob to match the level of the bypassed signal. Bypass the FX66 and listen to the volume level. Then engage the distortion and turn the Volume knob until the level is relatively the same.

Next, you'll want to tune in the amount of Fuzz that you need. Rotate the Fuzz knob until you find that psychedelic groove you're looking for.

Now use the Low control to adjust how heavy you want the bass frequencies to be.

Finally, use the tone knob to give your guitar the amount of high end edge that you want.

Don't be afraid to experiment with different knob settings. After all, only you know the colors that you want your music to show. It's now up to you to "tune in, turn on and drop out."

Important Notes

- The FX66 battery is in use whenever you are plugged into the INPUT jack. To extend the life of the battery, be sure to disconnect the input when the FX66 is not in use.
- Remove the battery when the FX66 will not be used for an extended period of time. This will prevent possible damage due to leaking battery fluids.
- Battery replacement is indicated when the FX66 fails to switch in and out, or when the LED stays lit.
- Keeping the battery in the FX66 while using an AC adapter will provide continuous operation in the event of a power failure.
- Use of any power adapter other than the PS200R will void the warranty of this product.
- No user serviceable parts inside. Removal of the bottom plate will void the warranty of this product. Should your FX66 require servicing, contact your authorized DOD dealer for return/repair information.