

QUICK TIPS

CONSPIRACY™



Pay attention to your controller **MODE (Toggle/Momentary)** when assigning pads or switches (Buttons). **TOGGLE MODE** is ideal for playing sustained instrumentation, as it will hold the sound until pressed once more. It's also ideal for turning On/Off functions such as EQ filters and the Play/Rec transport button. The Pad/Switch LEDs will be lit until the control is pressed a second time.

In use, **MOMENTARY MODE** can be thought of as a switch pedal. It's a quick on/off that is commonly used for transport STOP. This is the mode you would use if playing/recording live drums and percussion samples or un-sustained musical notes. It is the mode you would choose to trigger "Mode" is set to "Toggle" the loop. The LED does NOT continue to be lit in this mode.

When assigning **CONTINUOUS CONTROLLERS (CC)** messages, what do all the numbers mean? Here's a great little article that will give you enough information to make you dangerous: <http://tweakheadz.com/midi-controllers/>

If the Conspiracy™ has been connected and NOT used for 5 minutes, it enters **VEGAS MODE**. The Pad's colors will cycle and the unit's controls become locked. Simply press the STOP button to "wake" the Conspiracy™ up to get back to work.