

CONTAINS 2 TUBELESS TIRE VALVES

1. Deflate tire and remove from rim
 2. Remove old valve stem
 3. Insert new stem from inside rim until it snaps into place
 4. Reinstall tire and inflate to recommended PSI
-

CONTIENE 2 VÁLVULAS PARA LLANTAS

1. Desinfe y quite la llanta del rin
2. Quite la válvula vieja
3. Meta la nueva válvula asegurandola en su lugar
4. Vuelva a montar la llanta y infle a la presión recomendada

WARNING: This product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

PART# 20004

09.01.16



Made in China

ITW GLOBAL TIRE REPAIR

125 Venture Drive, Suite 210,
San Luis Obispo, CA 93401 USA

ITW AAMTECH

100 Hassall Street, Wetherill Park,
NSW 2164 Australia

WWW.SLIME.COM