

## **TUBELESS TIRE VALVES**

1. Deflate tire and breakdown tire off rim
2. Remove old valve stem
3. Insert new stem from inside rim until it snaps into place
4. Reinstall tire and inflate to recommended PSI

---

## **VÁLVULAS PARA LLANTAS**

1. Desinfle y quite la llanta del rin
2. Quite la válvula vieja
3. Meta la nueva válvula asegurandola en su lugar
4. Vuelva a montar la llanta y infle a la presión recomendada

**WARNING:** this product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

**Accessories Marketing, Inc, a division of ITW, Inc.**

125 Venture Drive, Suite 210, San Luis Obispo, CA 93401 USA

**ITW AAMTech**

100 Hassall Street, Wetherill Park, NSW 2164 AUS

**[www.slime.com](http://www.slime.com)**

**PART# 20161**

**06.20.14**



Made in China