



**TIRE VALVE TOOL**

Removes valve core  
Re-taps threads inside  
Re-taps threads outside  
Reams inside valve

---

**HERRAMIENTA PARA VÁLVULAS**

Saca piston de la válvulas  
Corte roscas internas  
Corte rosca externas  
Limpia válvulas por dentro

©Accessories Marketing, Inc.

800 Farroll Road Grover Beach, CA 93433 USA  
P.O. Box 197, Oaklands Park, SA 5046 Australia

[www.slime.com](http://www.slime.com)

PART# 2044-A

11.08



Made in China