

## **VALVE ADAPTER**

1. Loosen Presta valve nut
2. Screw on Presta valve adapter

**NOTE:** Tighten Presta valve nut after use.

---

## **ADAPTADOR DE VÁLVULA**

1. Afloje la tuerca de la válvula Presta
2. Enrosque el adaptador de válvula Presta

**NOTA:** Apriete el uso posterior de la tuerca de la válvula de Presta.

### **ACCESSORIES MARKETING, INC, A DIVISION OF ITW, INC.**

125 Venture Drive, Suite 210,  
San Luis Obispo, CA 93401 USA

**WWW.SLIME.COM**

### **ITW AAMTECH**

100 Hassall Street, Wetherill Park,  
NSW 2164 Australia

**WWW.SLIME.COM.AU**

**WARNING:** This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.