




ALL PURPOSE INFLATOR

TIRES • INFLATABLES • BALLS



! ATTENTION! READ ALL INSTRUCTIONS CAREFULLY

Failure to follow warning instructions can result in fire, injury to persons or property damage.

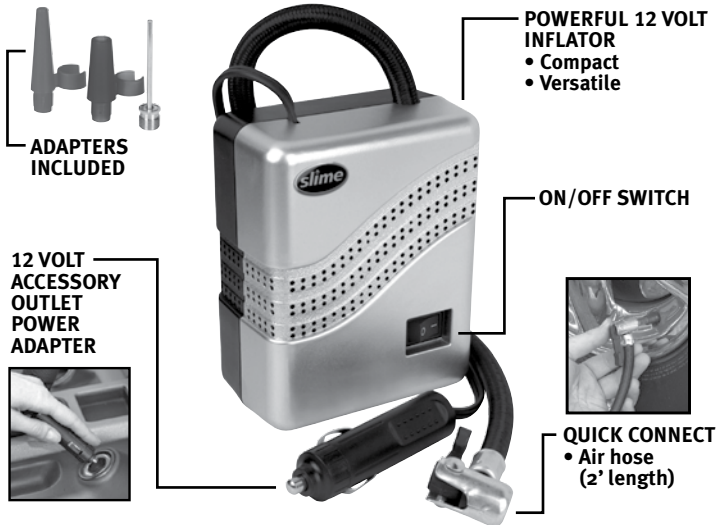

CAUTION: HOT ► DO NOT HOLD IN HAND WHILE OPERATING, PLACE INFLATOR ON A HARD, CLEAN SURFACE

1. DO NOT use inflator continuously for more than 10 minutes. Allow unit to cool approximately 25 minutes between uses. Do not leave inflator unattended.
2. DO NOT run vehicle while inflator is operating. Engine must be turned OFF. Always ensure air hose chuck touches the core of the valve stem for proper inflation.
3. ALWAYS use a pressure gauge to check actual tire pressure. DO NOT OVERINFLATE!
4. Read all instructions thoroughly before use. Failure to follow warning instructions can result in fire, injury to persons or property damage.
5. For use with 12-volt DC power outlets rated 15 amps or higher. Do not use with older 8 amp cigarette lighter receptacles.

TO INFLATE TIRES:

1. Place connector on air valve stem and push down, then close thumb latch connector.



2. Plug power cord into power accessory outlet.



3. Switch inflator "On," and inflate tire to manufacturer's recommended air pressure. In passenger vehicles, this information can be found on the driver's side door jamb and owner's manual.

When proper pressure is reached, unplug power cord and remove connector.



TROUBLESHOOTING:

Inflator fails to operate when plugged in:

1. The fuse, located in the plug adaptor, may have blown.
2. Unscrew the tip of the plug adaptor, remove fuse, and inspect (if necessary, replace fuse with one of the same ampage).



Inflator does not start or blows fuses:

1. Push the power plug firmly into the receptacle and twist it back and forth.
2. Check receptacle and plug terminals for dirt, particularly tobacco. (Use a non-conductive probe, not fingers or metal)
3. Check vehicle power outlet fuse, should be 15 amps minimum.

Inflator runs but does not inflate:

1. Be sure the connector is on the valve stem as far as possible before closing locking lever.
2. Check tire for leaks, and check hose for breaks and leaks at fittings.

Inflator runs slowly:

1. Overheated from excessive use, shut it off and allow to cool for 25 minutes.
2. Voltage too low, check condition of battery.

NOTE: If tire is totally deflated, it is possible that the tire could separate from the rim allowing air to leak out when trying to inflate. **In the event this situation occurs, you will have to jack up the tire prior to inflation.**

Dispose of this product at an e-waste recycling collection point or facility. Do not place in the trash or standard recycling receptacle.

CAUTION: Keep inflator out of reach of children. Always use a tire gauge to check the actual pressure in tires. Do not over-inflate tire.

Limited Warranty: For the period of one year from date of purchase, manufacturer guarantees that this Product will meet the specifications when used as directed. Manufacturer's sole liability and Customer's sole remedy under any warranty claim is limited to refund of purchase price or new product upon return of unit and proof of purchase. QUESTIONS OR COMMENTS: Call 888-45-SLIME or visit www.slime.com
Accessories Marketing, Inc, a division of Illinois Tool Works, Inc. 125 Venture Drive, Suite 210, San Luis Obispo, CA 93401 USA
Slime® is a trademark of Illinois Tool Works, Inc., registered in the U.S. and other countries.