



# INFLATOR & VACUUM: 2-N-1

CARS • TRUCKS • BIKES • INFLATABLES



## CAUTION:

1. DO NOT run vehicle while inflator is operating. You may need to be in “accessory” or “on” position. Please make sure emergency brake is set and car is in park.
2. Always ensure the valve connector is fully seated to depress the core of the valve stem for proper inflation.
3. DO NOT use inflator continuously for more than 10 minutes. Allow unit to cool approximately 10 minutes between uses. Do not leave inflator unattended.
4. ALWAYS use a pressure gauge to check tire pressure. DO NOT overinflate.
5. Soft inflatables (i.e. rafts, balls, etc.) may not have recommended pressure markings. Be careful not to inflate items beyond their capacity.
6. While operating, never block the inflator input or output.
7. Keep inflator out of reach of children.
8. For use with 12 volt DC power outlets rated 15 amps or higher. Do not use with older 8 amp cigarette lighter receptacles.

**! ATTENTION! READ ALL INSTRUCTIONS CAREFULLY**  
FAILURE TO FOLLOW WARNING INSTRUCTIONS CAN RESULT IN FIRE,  
PERSONAL INJURY OR PROPERTY DAMAGE.

PART#40058 | REV031918ART