


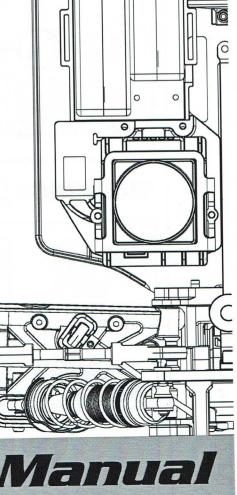

1/8 4WD RACING BUGGY PRO KIT



0

0

((())



PRECAUTIONS

•This is a radio control model, not a toy!

In order to enjoy running the car, you need to finish assembly before operation. You also need to do routine maintenance work after operation. Replacement and optional parts are available separately.

• Improper usage with alkaline cells or rechargeable store batteries may damage the car.

In order to operate the car safely, be sure that you have observed the following points:>

WARNING: Please tollow the points as 2015 happening to the car and others. Please follow the points as below in order to prevent an accident from




Be sure to read the manual thoroughly before you begin. New users should seek advice from our forums in order to make sure assembly is correct if questions arise that the manual doesn't answer.



Never reverse the connections or disassemble the batteries. This will lead to damage and/or leakage.



This product contains small and sharp parts. Assemble and store this product only in places out of the reach of children.

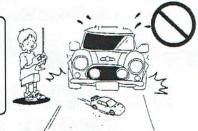

Do not operate the model or public roads, in crowded places and near children as it may cause accidents.

WARNING:


Please follow the following steps to operate this product in a safe manner in order to prevent potential damage or injuries.



Cutters, pliers, and screwdrivers need careful handling.



Painting must be done in a well ventilated area.

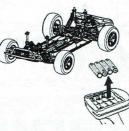

When the model is not is use. always turn off the receiver, then the transmitter. Furthermore, disconnect the batteries and remove them from the model and transmitter to prevent possible electronics




Never use the same frequency with someone else at the same time. Otherwise, the radio signals will be mixed and you will lose control of your model. This may lead to accidents.

damage.



SAFETY PRECAUTIONS

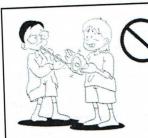

 As the actual antenna may be dangerous, do not aim it or swing it towards anyone's face.



 Do not expose this model to high temperature, humidity, or direct sunlight for extended periods of time.

Operating your model safely

WARNING: Do NOT operate the model in the following places and situations. (Non-observance may lead to an accident!)

- Operate your model in open areas only out of the way of people. Do not operate it:
 - 1. On public streets.
 - 2. In places where people gather.
 - 3. In residential areas and parks.
 - 4. Indoors or in limited spaces.

Non-observance may result in personal injury and/or property damage.

Stop the car immediately if it is operating abnormally and check it out.

If the problem is not identified and fixed, do NOT operate

The problem is not identified and fixed, do NOT operate.

If the problem is not identified and fixed, do NOT operate the car until it is fixed. This may lead to further trouble and unforeseen accidents.

 Keep in mind that people around you might also be operating radio control models.

Never share the same frequency with someone else at the same time. Otherwise, radio signals will cross and you will lose control of your model which might lead to an accident.



Always check the radio batteries.

Weak batteries will lead to lower reception and you can lose control of your model. This may alos cause a potential accident.





(PROHIBITED)

WARNING: In order to avoid accidents and personal injury, be sure that you observe the following points:

- Precautions when using batteries
- 1. Proper disposal of old batteries.
- 2. Do not attempt to recharge non rechargeable batteries. They could cause a fire or explode.
- 3. Do not throw batteries in a fire. They will explode.
- Do not swallow batteries.
- 5. Store only in cool and dry places out of the reach of children.
- 6. If the batteries leak liquid, do not get it in your eyes, otherwise, consult an emergency physician.
- Do NOT put fingers or any other objects in any rotating or moving parts.
- Right after use, do not touch the motor.
 There is a potential danger of burning yourself.



(PROHIBITED)



(PROHIBITED)



| BAG A DIFFERENTER SET ASSEMBLY | P.1-2 |
|--|---------|
| BAG B GEAR BOX ASSEMBLY | рз |
| BAG C FRONT SUSPENSION SYSTEM ASSEMBLY | P.4-6 |
| BAG D C-HUBS ASSEMBLY ···································· | P6-7 |
| BAG E STEERING SYSTEM ASSEMBLY | P.7-9 |
| BAG F REAR SUSPENSION SYSTEM ASSEMBLY | P.9-11 |
| BAG G REAR HUBS ASSEMBLY · | P.11-12 |
| BAG H WINGMOUNT AND REAR CHASSIS BRACE ASSEMBLY | P.12-14 |
| BAG I CENTER DIFF MOUNT AND MOTOR ASSEMBLY | P.15 |
| BAG J SIDEGUARD ASSEMBLY | P.15 |
| BAG K CHASSIS ASSEMBLY ······ | P.16 |
| BAG L BATTERY BOX ASSEMBLY | |
| BAG M SERVO AND RECEIVER BOX ASSEMBLY | P.17 |
| BAG N SHOCKS ASSEMBLY | P.18-19 |
| BAG O WING ASSEMBLY | |
| BAG P WHEEL AND BODY ASSEMBLY | P.20-21 |
| SPARE PARTS | P.22-26 |
| | |

SYMBOLS USED THROUGHOUT THE MANUAL



Apply silicon oil



Pay attention





Assemble as many times as specified



Apply threadlocker



Must be purchased separately



3

Assemble left and right side the same way



Apply grease




Cut off shaded portion

TOOLS REQUIRED FOR ASSEMBLY






BAG A Differenter Set Assembly View

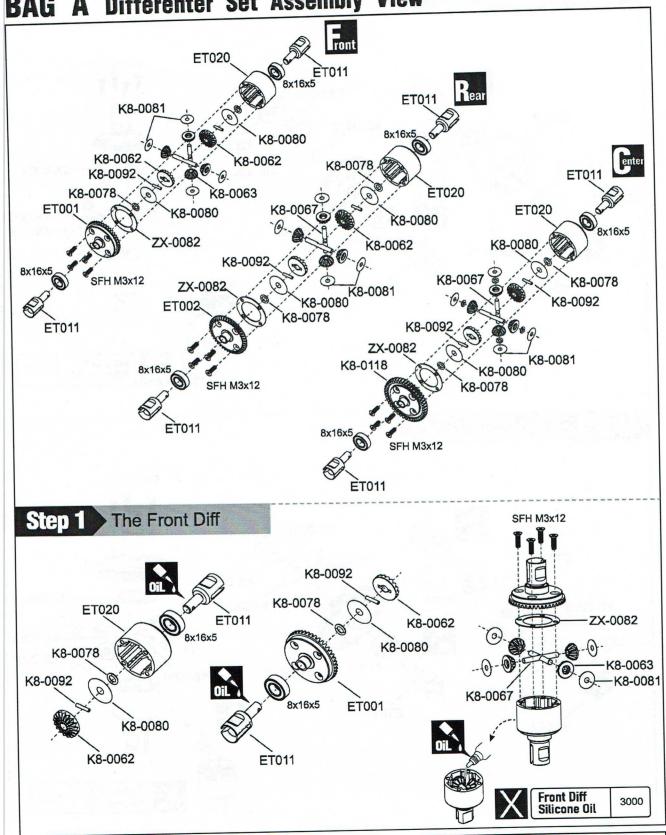




 The Rear Diff SFH M3x12 K8-0092 ET020 K8-0078 ET011 K8-0062 8x16x5 ZX-0082 K8-0078 K8-0080 K8-0092 K8-0063 -K8-0081 ET002 8x16x5 K8-0067 K8-0080 K8-0062 ET011 Rear Diff Silicone Oil 1000 Step 3 The Center Diff SFH M3x12 K8-0092 ET020 K8-0078 K8-0062 ET011 ZX-0082 8x16x5 K8-0080 K8-0078 K8-0092 8x16x5 K8-0067 K8-0118 K8-0080 ET011 K8-0062 Center Diff Silicone Oil 5000







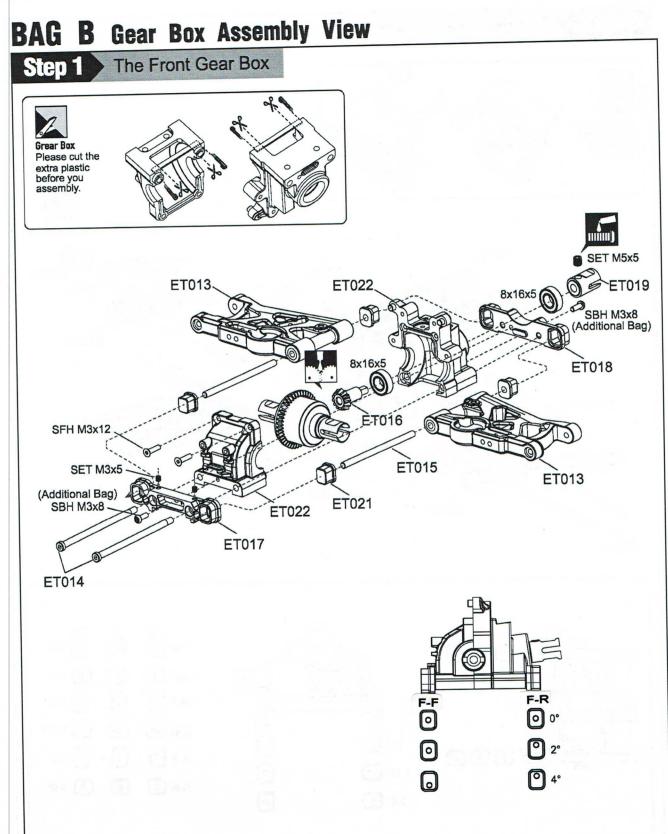





 Step 2 The Rear Gear Box

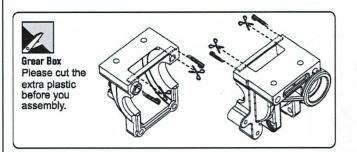

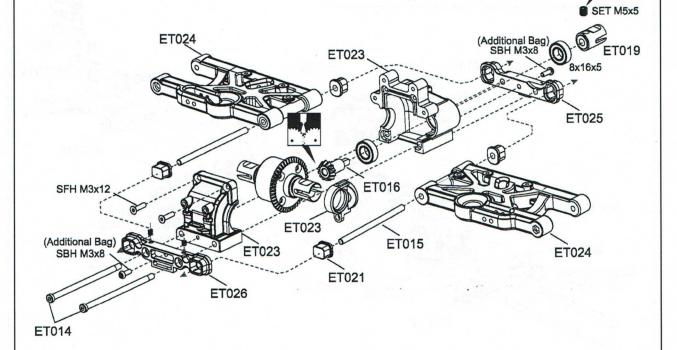


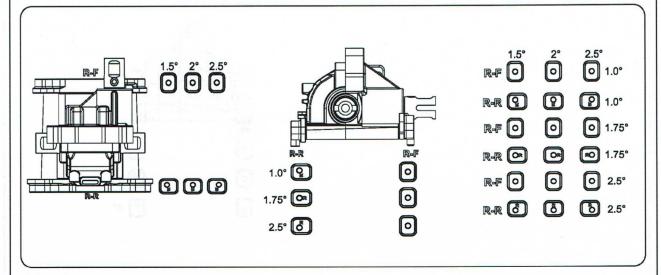






BAG C Front Suspension System Assembly View

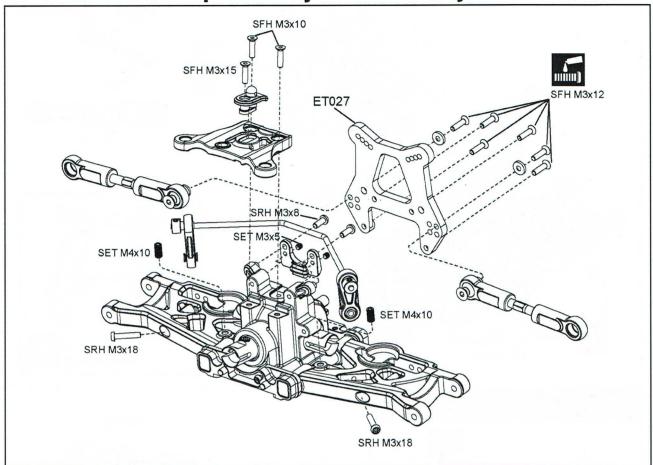


Step 1 The Front Shock Tower

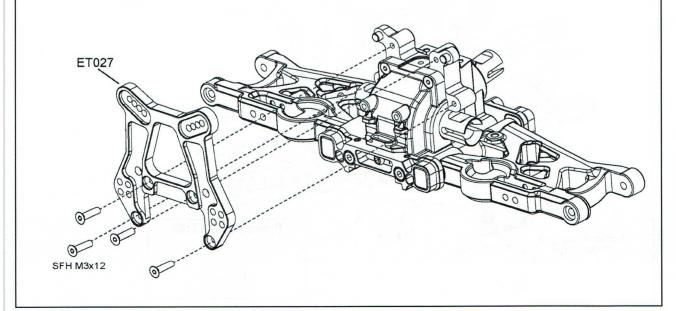

App

Apply threadlocker




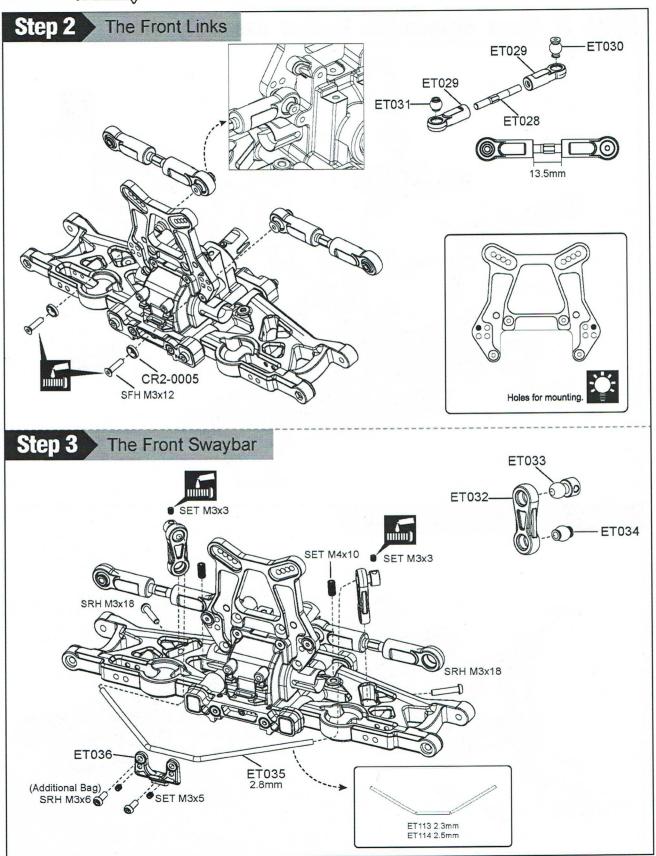


Apply threadlocker






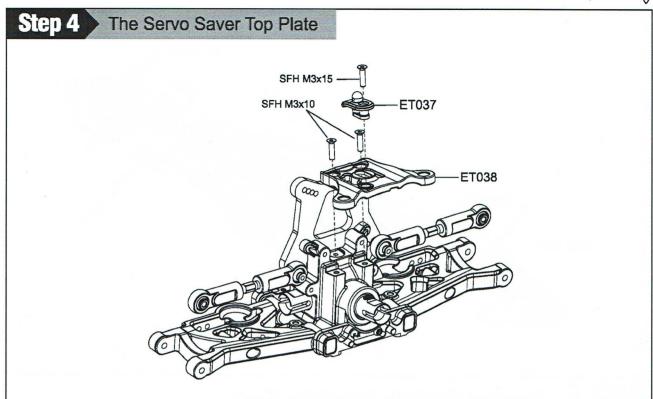


BAG D C-Hubs Assembly

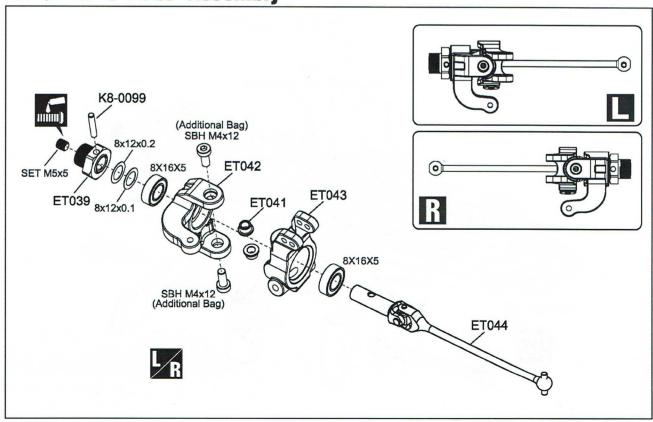



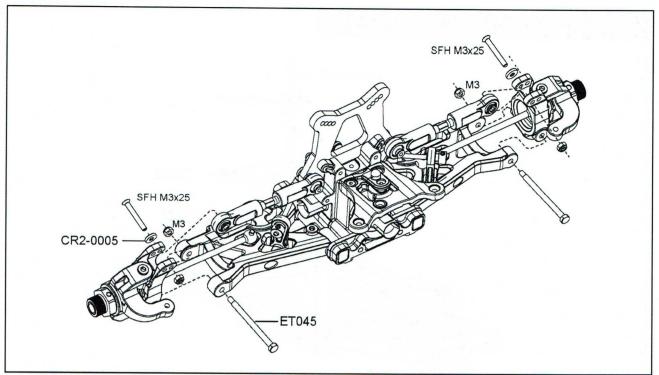


BAG E Steering System Assembly View

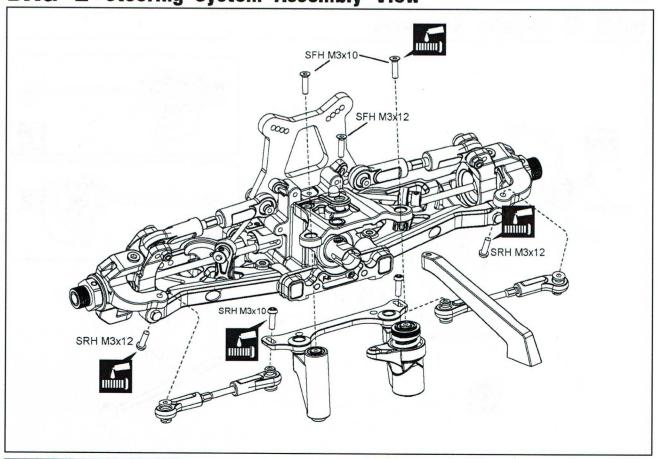

Apply threadlocker



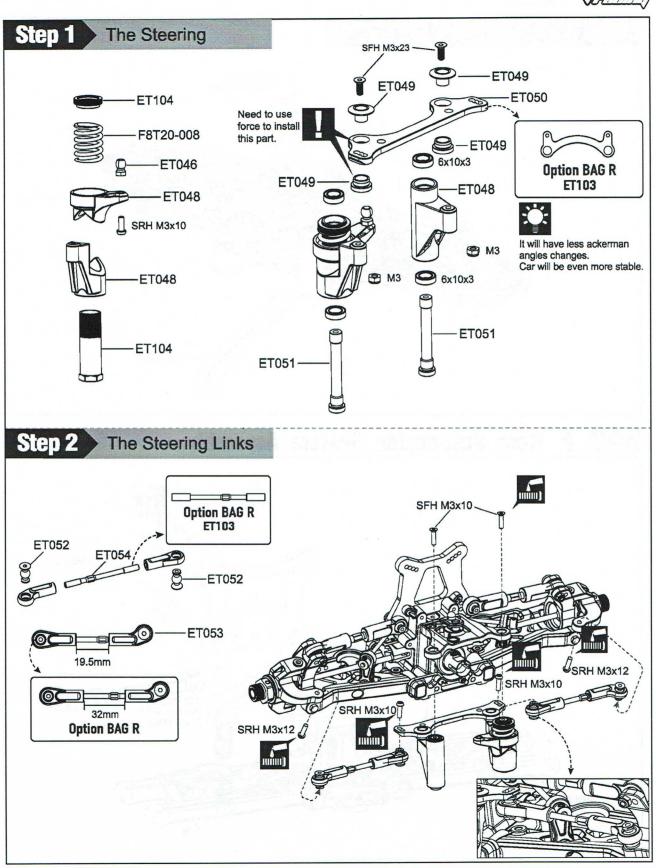


Pay attention


Apply threadlocker

Hint



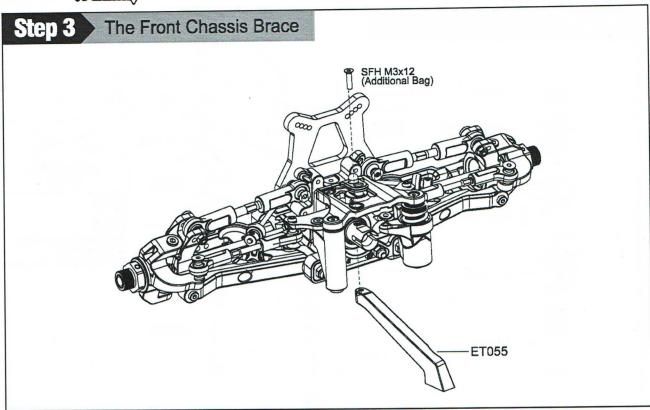


BAG F Rear Suspension System Assembly

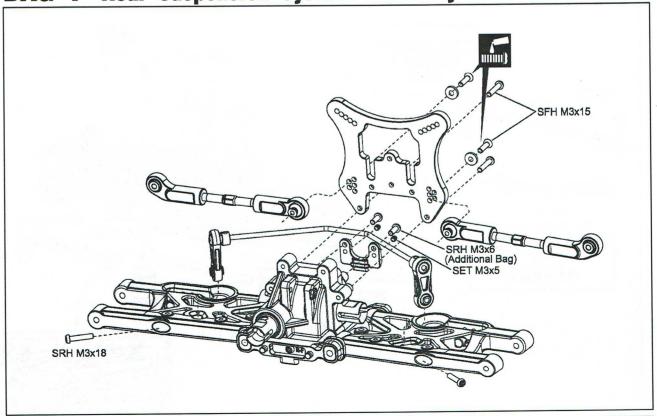





Step 1 The Rear Shock Tower

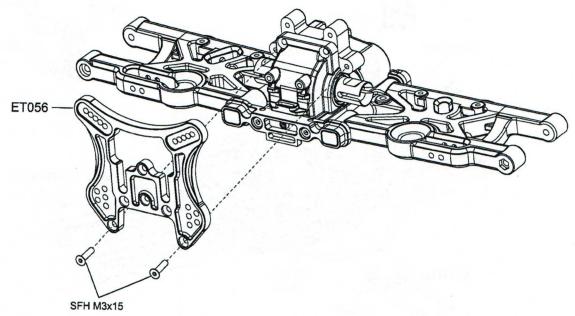


Step 2 The Links

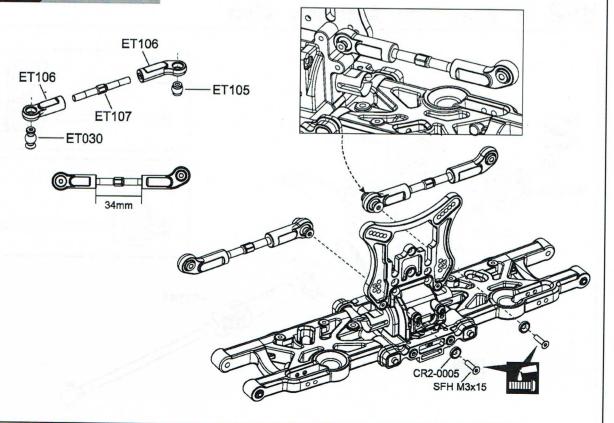




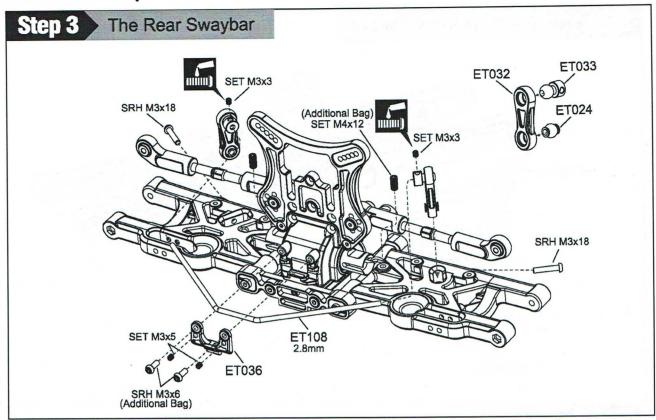


BAG G Rear Hubs Assembly View

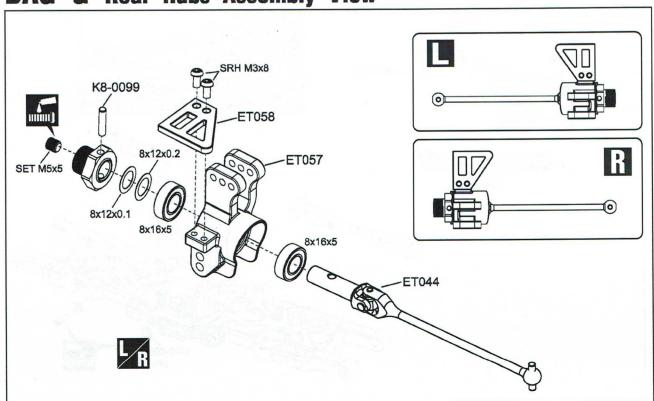



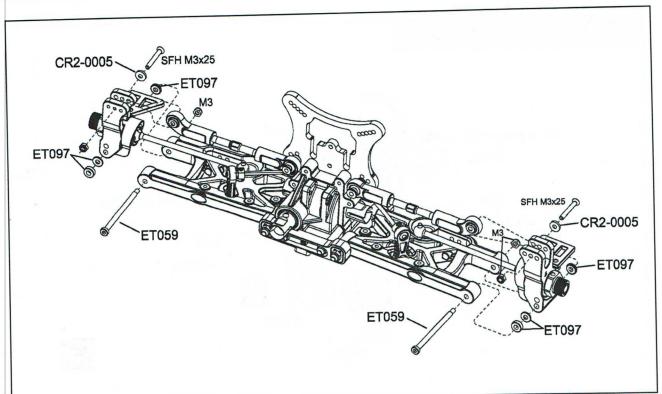

BAG H Wingmount And Rear Chassis Brace Aaaembly View

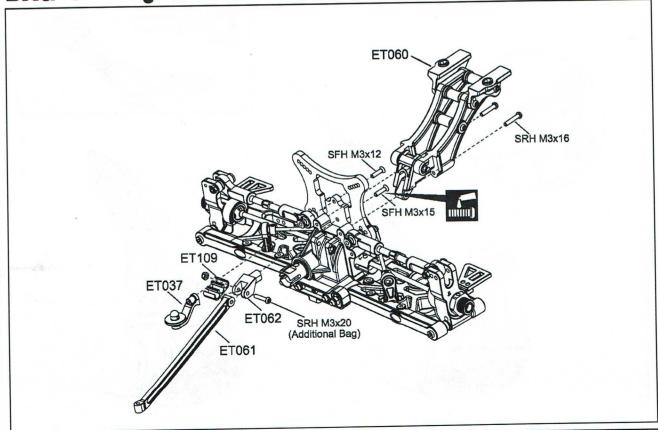





Apply threadlocker



Step 1 The Wingmount

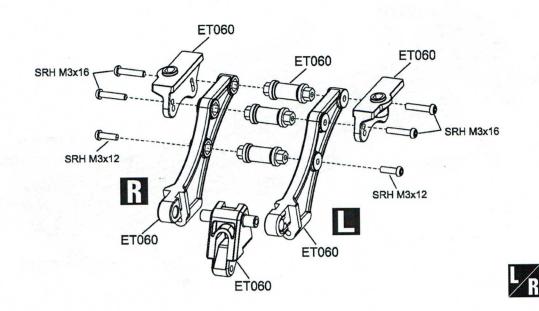


Step 2 The Wingmount

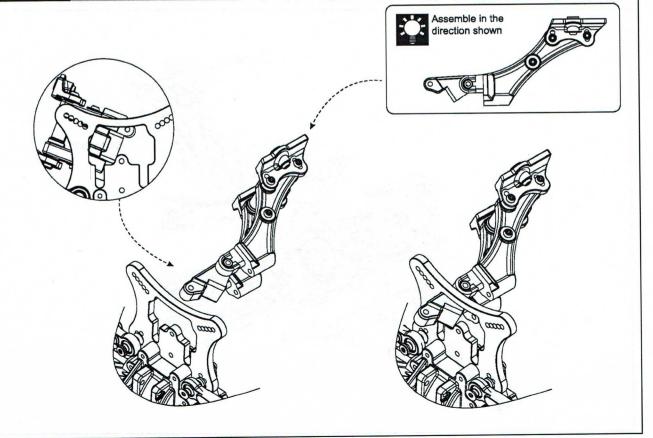




Step 3 The Wingmount

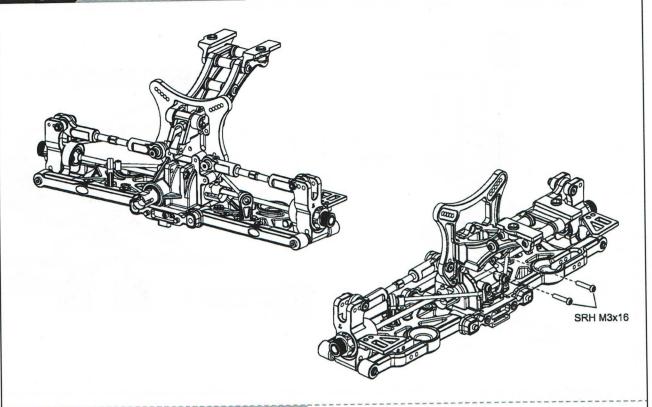


The Rear Chassis Brace Step 4

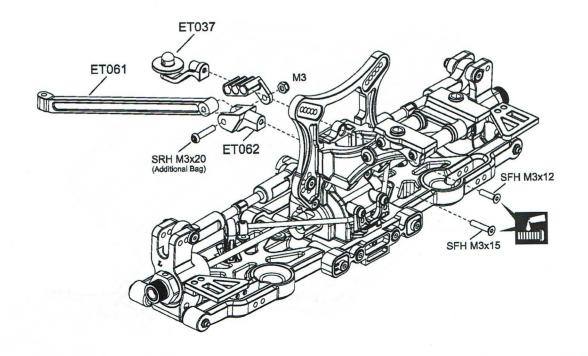




BAG I Center Diff Mount And Motor Assembly View

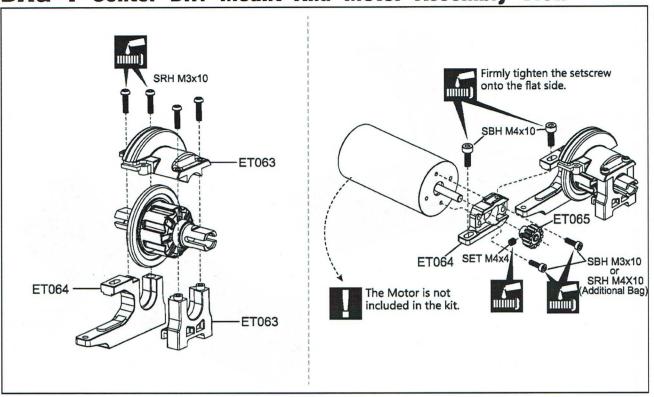


BAG J Sideguard Assembly View

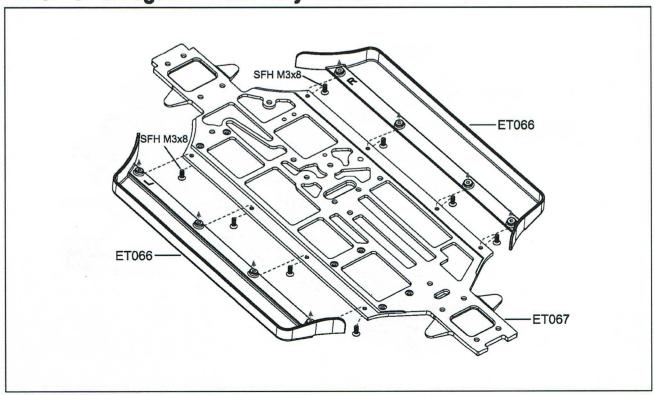




BAG K Chassis Assembly View

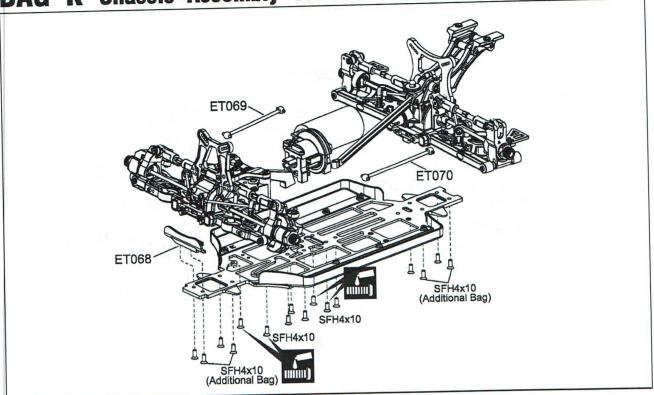



BAG L Battery Box Assembly View

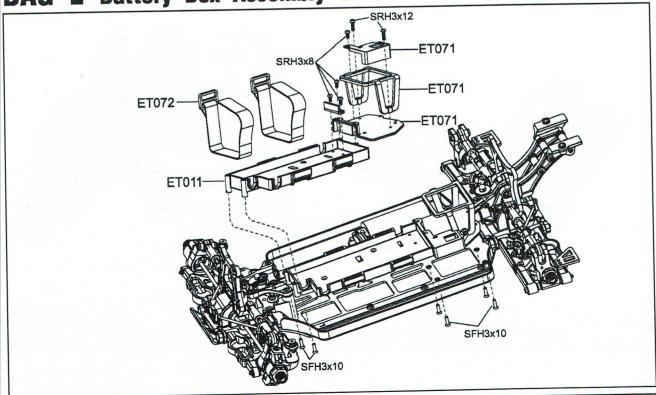




BAG M Servo And Receiver Box Assembly View

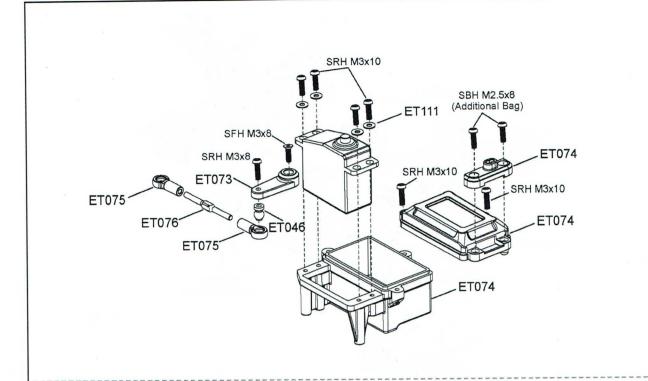

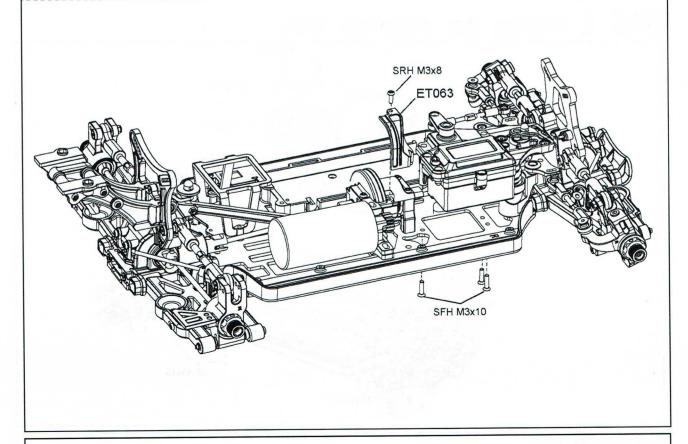





BAG N Shocks Assembly View

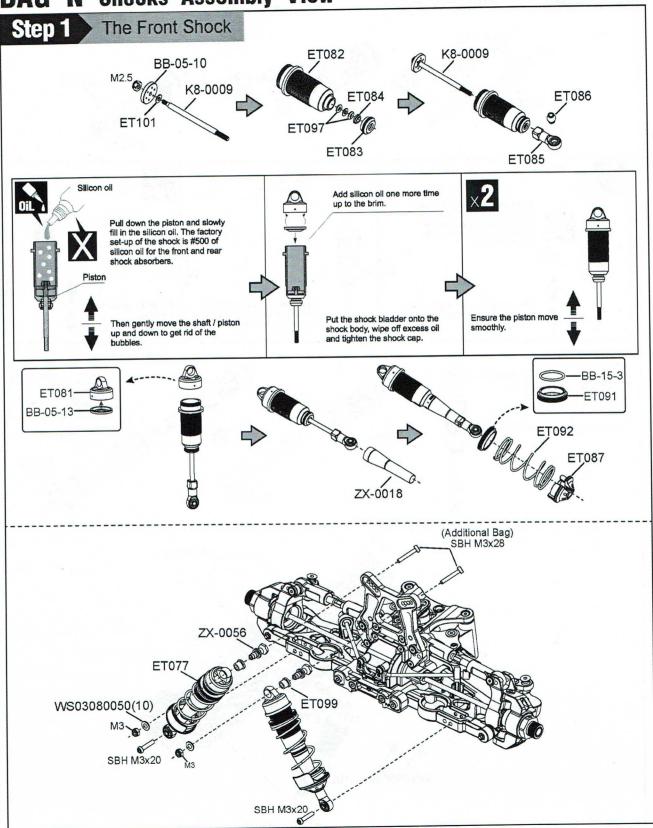




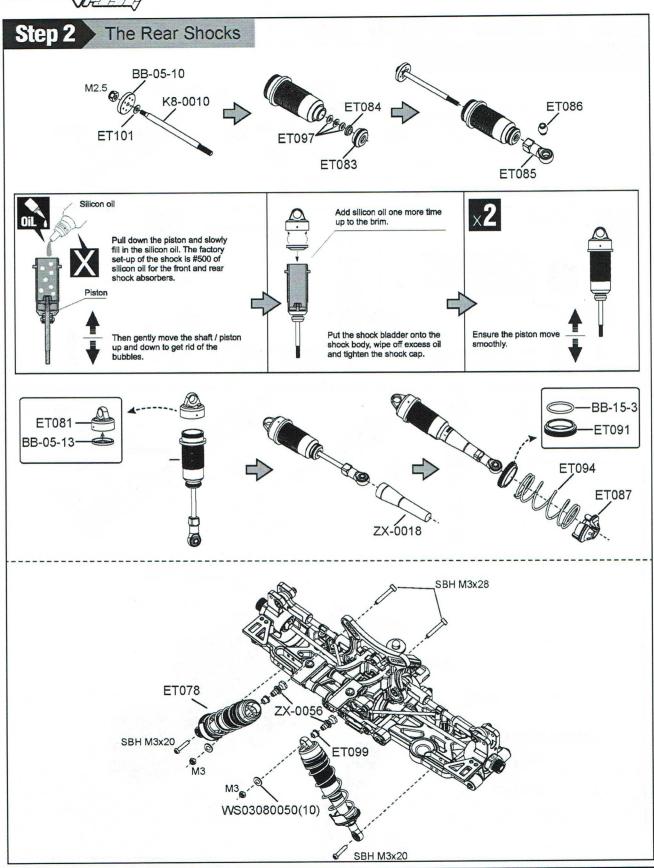


Apply silicon oil

 

 





BAG O Wing Assembly View

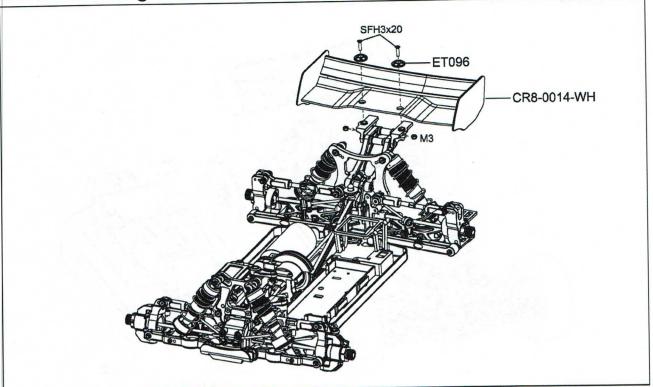

BAG P Wheel And Body Assembly View



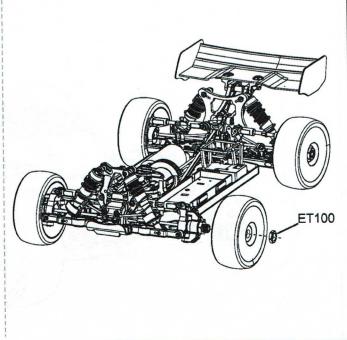

 









Step 2 Body

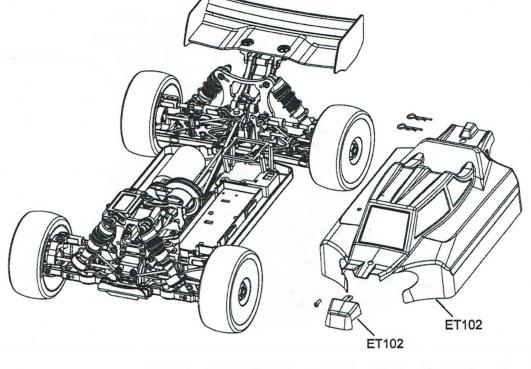

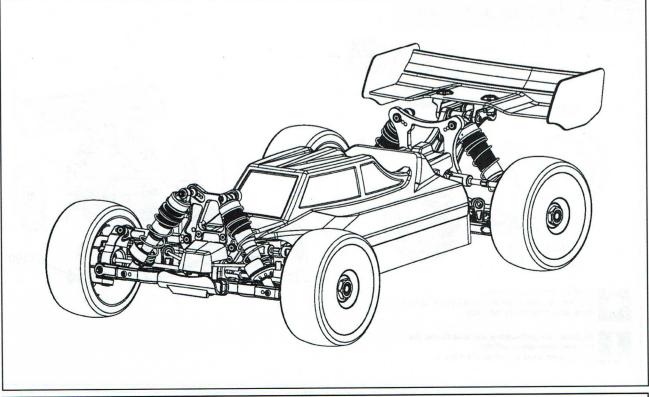



ET001 Front Crowngear 43T 6mm



ET002 Rear Crowngear 43T 6mm



K8-0118 Truggy Steel Spur Gear 46T 6mm



K8-0063 Diff Bevel Gear



 
K8-0062 Diff Bevel Gear 20T



K8-0080 Diff. Washer Large 6mm



K8-0081 Diff. Washer Small 3mm



K8-0078 Diff. O-Ring 8.5 x1.5mm



K8-0092 Diff. Pin



K8-0067 Diff. Bevel Gear Shaft



ET011 Lightened Diff Outdrives



ZX-0082 Diff. Gasket



ET013 Front Arms



ET014 Gearbox Hinge pins



ET015 Suspension Hinge Pin



ET016 Diff Bevel Gear 13T



ET017 Front Lower Suspension Arm Holder-F



ET018 Front Lower Suspension Arm Holder-R



ET019 Lightened Centre Outdrives Outdrives



ET020 Gear Diff Case



ET021 Plastic Washer Set



ET022 Front Gearbox



ET023 Rear Gearbox

 


ET024 Rear Arms






ET025 Rear Lower Suspension Arm Holder-F



ET026 Rear Lower Suspension Arm Holder-R



 ET027 Front Shock Tower



ET028 Front Upper Adjustable Tumbuckle



ET029 Front Adjustable Tumbuckle Arm Ball End



ET030 Ball with Nut



ET031 Ball for Upper Link



ET032 Sway Bar Ball End



ET033 Ball Stud For Sway Bar



ET034 Ball For Sway Bar 6.8mm



ET035 Front Sway Bar



ET036 Sway Bar Plate



ET037 Body mounts



ET038 Front Support Plate



ET039 Wheel Hub



K8-0099 Wheel Hub Pin



ET041 Knuckle Bushings



ET042 Front Steering Knuckle



ET043 Degree C-hub 10°



ET044 Driveshaft Pair



ET045 C-hub Hinge pins



ET046 Balls for Steering Link 6mm

88

F8T20-008 Servo Saver Spring



ET048 Servo Saver Plastic parts







ET049 Ackermann Plate Bushing



ET050 Steering Linkage



ET051 Steering Servo Saver Post



ET052 Ball For Steering

8888

ET053 Steering Ball Cups



ET054 Steering Turnbuckle



ET055 Front Chassis Brace



ET056 Rear Shock Tower



ET057 Rear Hub



ET058 Mud Scrape



ET059 Rear Hingepin



ET060 Wing Stay Set



ET061 Rear Chassis Brace



ET062 Rear Chassis Brace Holder



ET063 Center Differential Cover



ET064 Motor Mount



 
ET065 Motor Gear 14T



ET066 Side Guard




ET067 Chassis




ET068 Bumpers



 ET069 Center Front Drive Shaft



ET070 Center Rear Drive Shaft

 

ET071 ESC Mount Plate



ET072 Magic Tape









ET074 Receiver Box



ET075 Servo Ball End



ET076 Turnbuckle 3x35mm



ET077 Front Shock Set



ET078 Rear Shock Set



K8-0009 Shock Shaft Front Lengthened



BB-05-10 Shock Tapered Piston 1.2mm



ET081 Aluminium Shock Cap



ET082 Front Shock Body



ET083 Shock Lower Cover



ET084 Shock Lower Cover Bushing



ET085 Shock Ball End



ET086 Shock and Stabilizer Ball Bottom



ET087 Spring Support



ZX-0018 Shock Piston 2-hole 1.5mm



BB-05-13 BB Shock Bladder



BB-15-3 Threaded BB Shock O-ring Outsides



ET091 Shock Adjustment Nut



ET092 Front Shock Spring



K8-0010 Rear Shock Shaft



ET094 Rear Shock Spring

3333

CR8-0014-WH U-WIN Downforce White Wing



ET096 Wing Shims









ZX-0056 Shock Bushing



ET099 Shock Bushing



 
ET100 Wheel Nut

0000

ET101 Piston Washer



ET102 Clear Body



ET103 Short Steering Linkage Set



CR2-0005 Washer M3

ET104 Servo Saver Post + Nut



ET105 Ball For Rear Upper Link



 
ET106 Ball For Front/Rear Upper Links



ET107 Rear Upper Adjustable Tumbuckle



ET108 Rear Sway Bar 2.8



ET109 Wire Slot



ET110 Battery Box



ET111 Washer 3x7x0.1mm



ET112 Degree C-hub 15°



ET113 Front Sway Bar 2.3



ET114 Front Sway Bar 2.5






 CR2-0010-R Round Foam Tire Insert







CR8-0017-YE light Weight, bevel Locking Race Style Dish Rims YE









