

INTRODUCTION

Thank you very much for selecting this Serpent rc car and thus become a member of the ever growing worldwide Serpent racing family. Serpent started in 1980 and has been growing its product-line and fan -base ever since.

The Serpent Taipan 988pancar is a state of the art 1/8 scale 4wd Pancar which will give you the true Serpent racing experience. The assembly manual will guide you through all the steps to complete the car, so you can hit the track with a good base-set-up soonest. The Serpent design department succeeded to create a superbly performing car combined with eas of assembly and maintenance. The high quality standards of all parts and hardware will make racing your Serpent car a very rewarding activity!

Through our team, website and social media we will keep you up-to-date on all developments of the Serpent cars. We hope to meet you on the track and through our various media! Enjoy the drive!

Team Serpent

Multiple World Champions

Instructions

Serpent's long tradition of excellence extends to the instruction manuals, and this instruction manual is no exception. The easy-to-follow layout is richly illustrated with 3D-rendered full-color images to make your building experience quick and easy. Following the instructions will result in a well-built, high-performance race-car that will soon be able to unleash its full potential at the racetrack. The kit includes bags, with bagnumbers, which refer to the same step in the manual. Open only the indicated bag(s) per step and finish that part of the assembly. Remaining parts will be needed lateron in the assembly process.

PLASTIC PARTS

The Serpent moulded parts are very durable and hard. When assembling longer screws in new composite parts, make sure to use new hex bits in your (power) tools. Pre-threading also helps to avoid screw damage.

SETUP

In certain assembly steps you need to make basic adjustments, which will give you a good initial setup for your Serpent Taipan 988pancar . Fine-tuning the initial setup is an essential part of building a high-performance racecar like your Serpent Cobra 988pancar .

EXPLODED NIEWS AND PARTS LIST

The exploded views and parts lists for the Serpent Taipan 988pancar are presented in the Reference Guide section in the back of this manual. The exploded views show all the parts of a particular assembly step along with the Serpent part number and hotlink to the Serpent website. Partnumbers in orange indicates that this part is an optional. Optionals part names and numbers are showed below.

CUSTOMER SERVICE

Serpent has made a strong effort to make this manual as complete and clear as possible. Additional info may be published in our website: www.serpent.com or you may ask your dealer or the Serpent distributor for advice, or email Serpent direct: info@serpent.com. The Serpent Facebook, Twitter and Youtube pages give additional means of support and communications.

Safety

Read and take note of the 'Read this First section' before proceeding to assemble the car-kit. This car-kit is intended for persons aged 16 or older.

READ THIS FIRST!

- This is a highly technical hobby product, intended to be used in a safe racing environment. This car is capable of speeds in excess of 80 km/h or 50mph. Please follow these guidelines when building and operating this model.
- Parental guidance is required when the builder/user of this car is under 16.
- Follow the building instructions. If in doubt, contact your dealer or importer.
- Be sure to use the proper tools when assembling the car. Always exercise caution when using electric tools, knives and other sharp objects.
- Be careful when using liquids like lubrication oil, fuel or glue. Do not swallow.
- Follow the manufacturer's instruction in case you experience irritation after using the product.
- Be careful when operating the car. Stay away from any rotating parts such as wheels, gears and transmission. Stay away from motor, engine and exhaust pipe system or speedo during and immediately after use, as these parts may be very hot. We advise to use protective hand cloves.
- Only operate this car in a safe environment, like a special racing track or a closed parking lot. Avoid using this car on public roads, crowded places or near infants.
- Before operating this car, always check the mechanical status of the car. Also check that the transmitter and receiver frequencies correspond and are not used by any other racer at the same time. Check that the batteries of the transmitter and receiver- are fully charged.
- After use, always check all the mechanics of the car. We advise to clean the car immediately after use, and inspect the parts for wear or fractures. Replace when necessary. Do not use water, methanol, thinner or other solvents to clean the car.
- Empty the fuel tank (depending on model) if needed and disconnect the receiver battery.
- Store the car in a dry and heated place to avoid corrosion of metal parts.
- Avoid using this car in wet conditions as the water will cause corrosion on the metal parts and bearings and these parts will cease to function properly. If driven in the wet, ensure that all the electric equipment is waterproofed and after use, that all moving parts are dried immediately.

CONTENTS





Lines Description

Each step contains a variety of numbers, lines, and symbols. The numbers represent the order in which the parts should be assembled. The lines are described below.

1 2 3	Step number; the order in which you should assemble the indicated parts	
←	Length after assembly	
	Assembly path of one item into another	
	Group of items (within lines) should be assembled first	
-	Direction the item should be moved	
·····	Glue one item to another	
	Press/Insert one item into another	
O	Connect one item to another	
<u> </u>	Gap between two items	

ICONS DESCRIPTION

Each step contains a variety of symbols described below.



Carefull, read and check very well.



Apply a small amount of cyano glue. Use wear protection for eyes and hands.



Detail view to explain assembly or order of parts better.



Default set-up: This symbol indicates the default setup.



Grease: apply a small amount of grease to the parts shown.



Left and right parts should be assembled in the same way.



Thread lock: apply a small amount on the parts shown. Before to apply the threadlock, make sure to degrease the parts very well, as otherwise the threadlock will not work.



Silicone oil: use the indicated silicone oil for the shocks and differentials.



Parts or items not included in the kit.




Optional part, not standard in the kit.






 


 
STEP 1 BAG 1

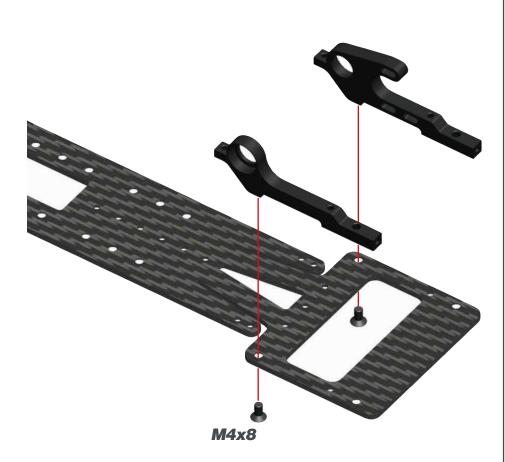

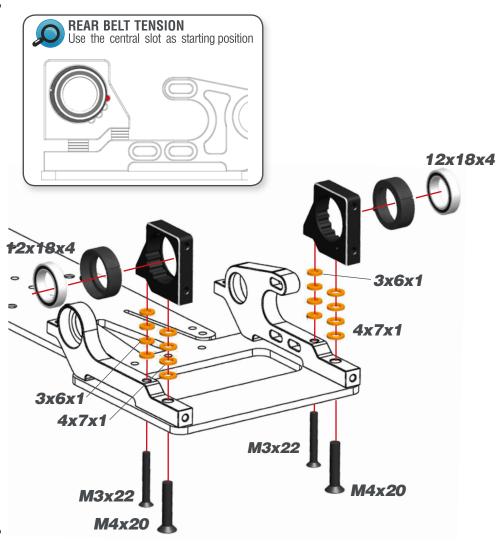























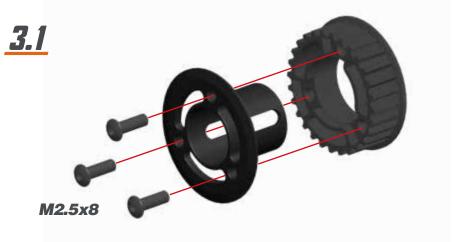

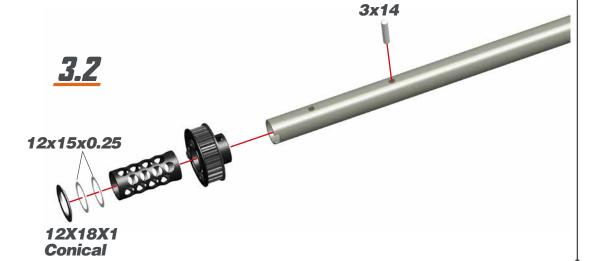

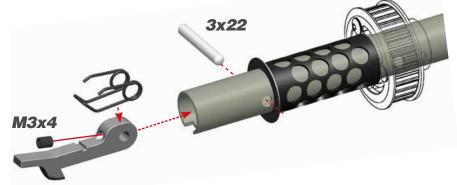

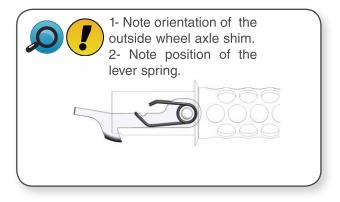










◎ □ M3x4


3x22







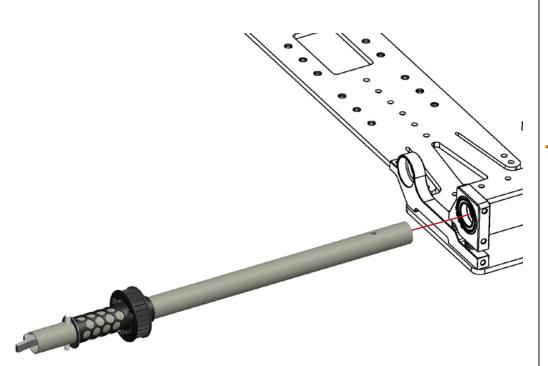

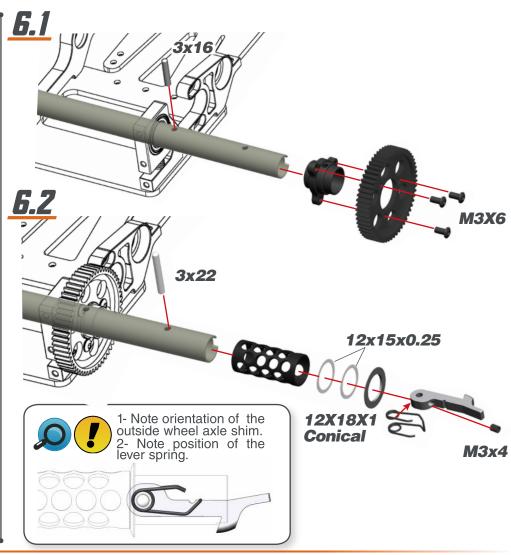





◎ □ M3x4

3x22

3x16


○ 1 □ M3x6






<u>7.1</u>



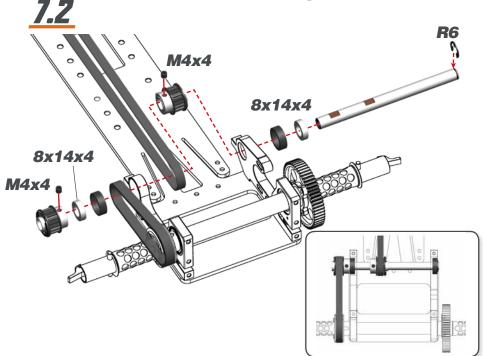

STEP 8 BAG 3



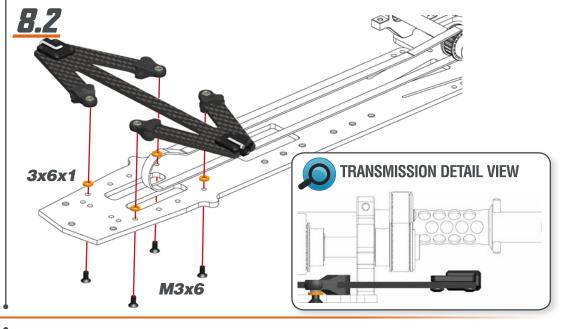































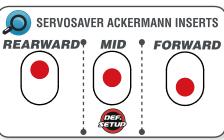



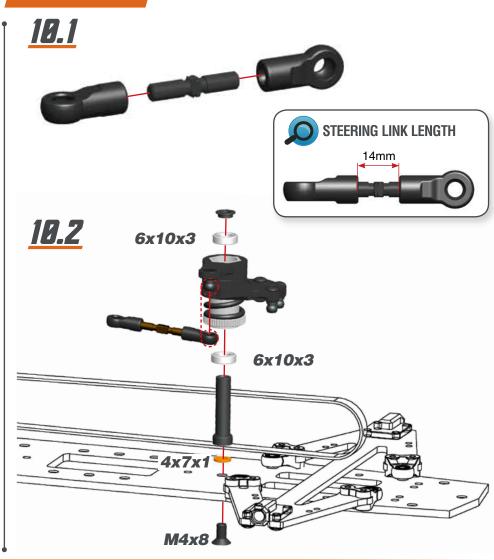














 








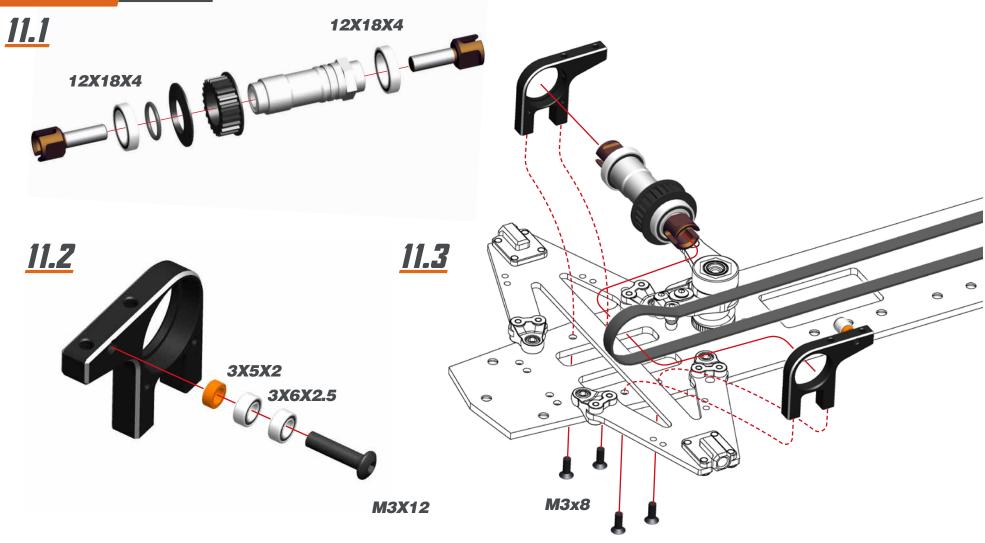














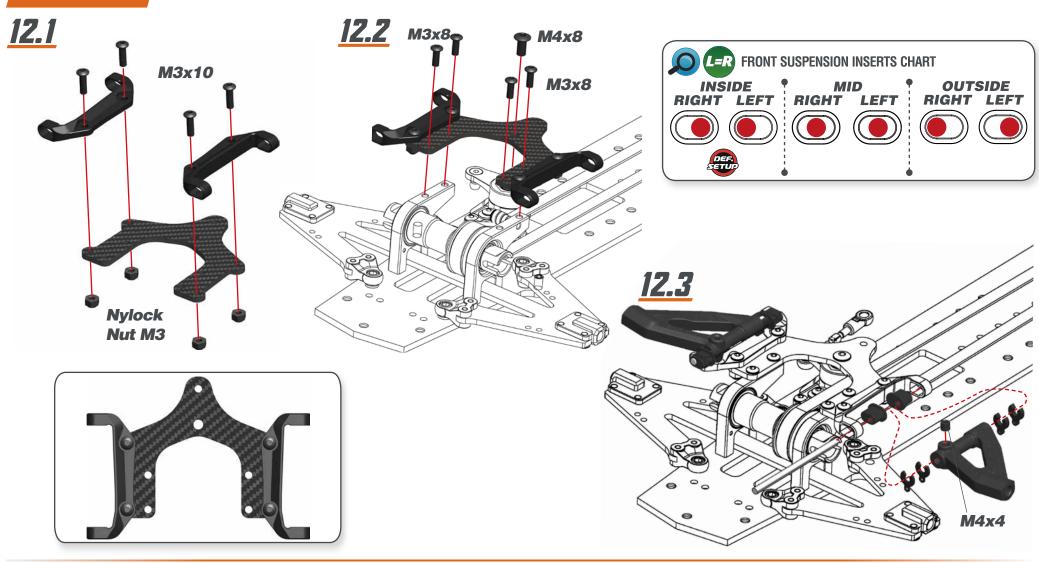
















STEP 13 BAG 5

 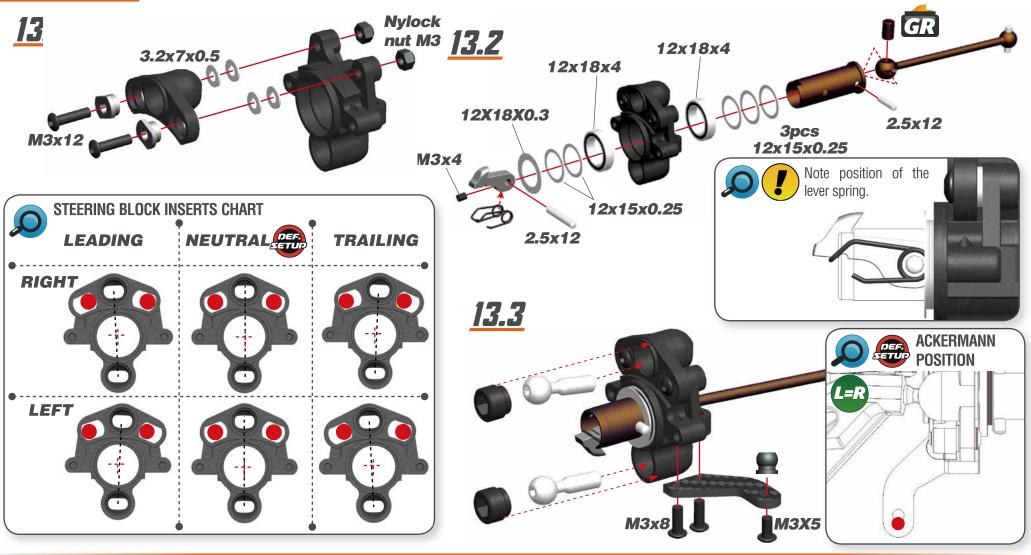


















2.5x12













→ I | ← 3.8 mm

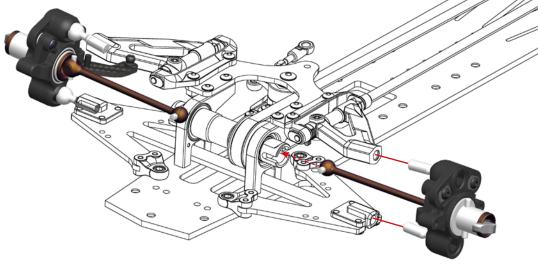



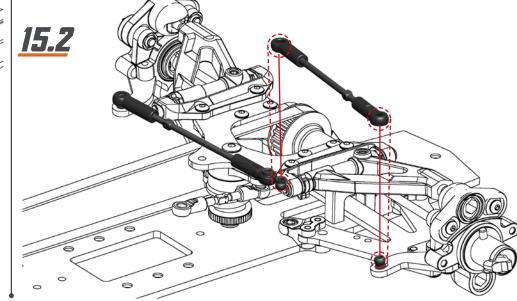









STEP 16 BAG 6

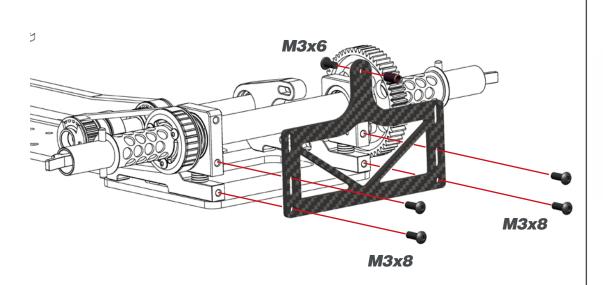

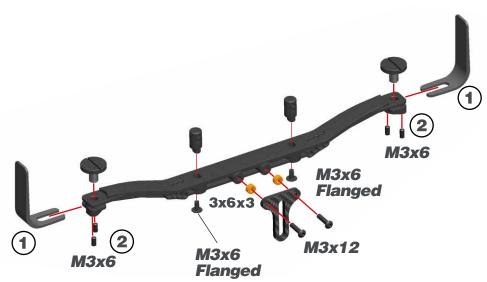



















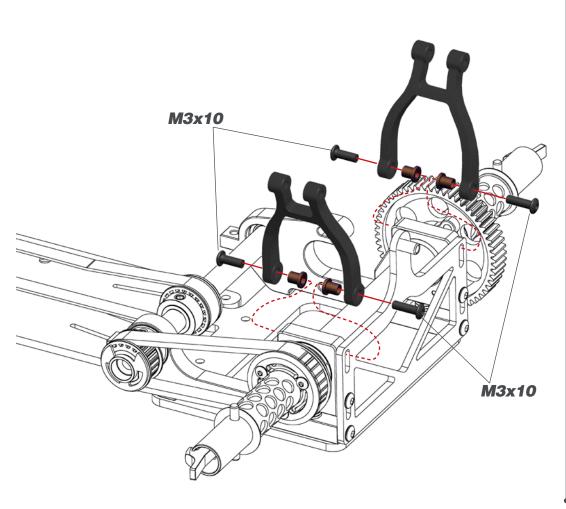

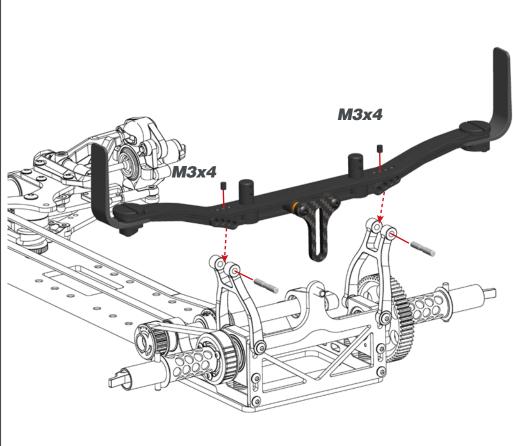











STEP 20 BAG 7

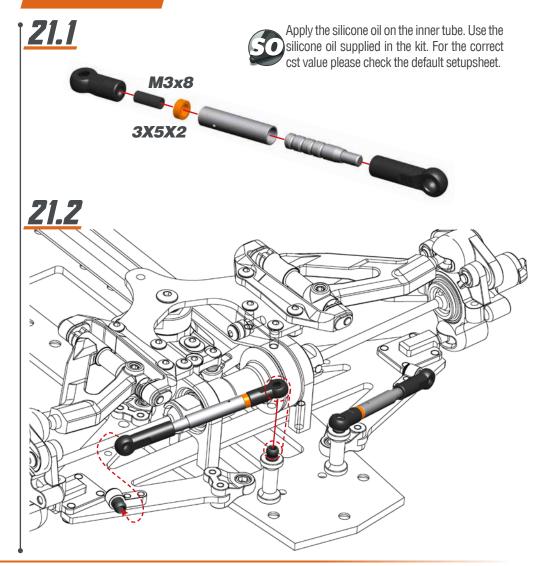

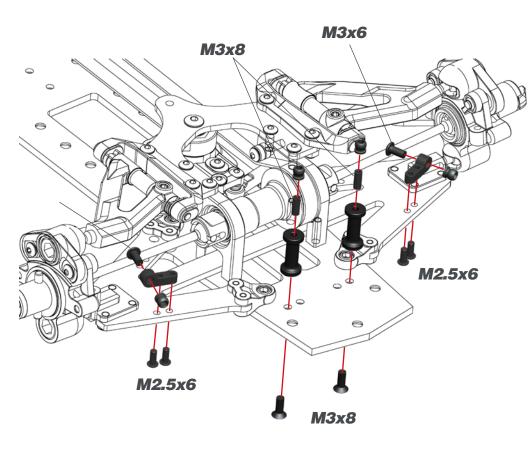














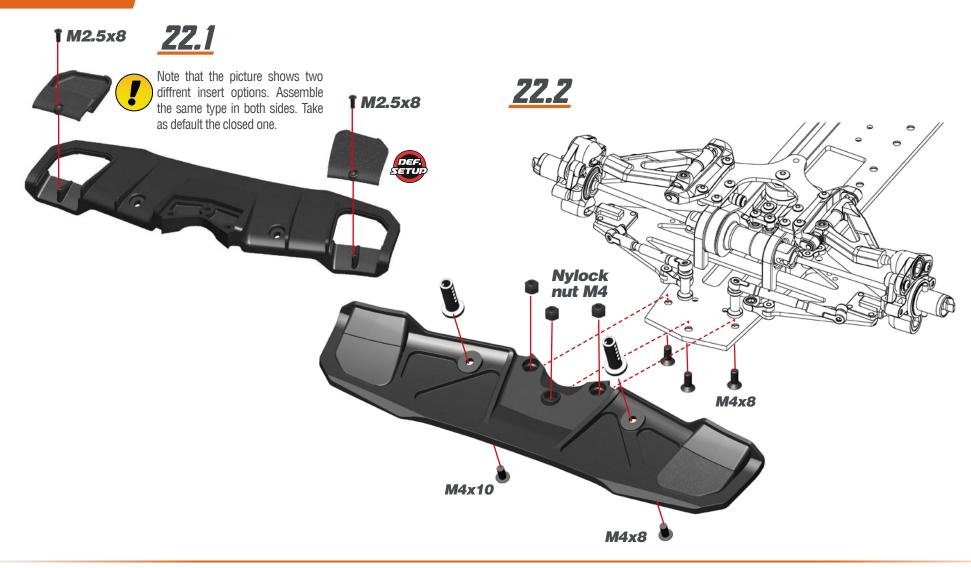
















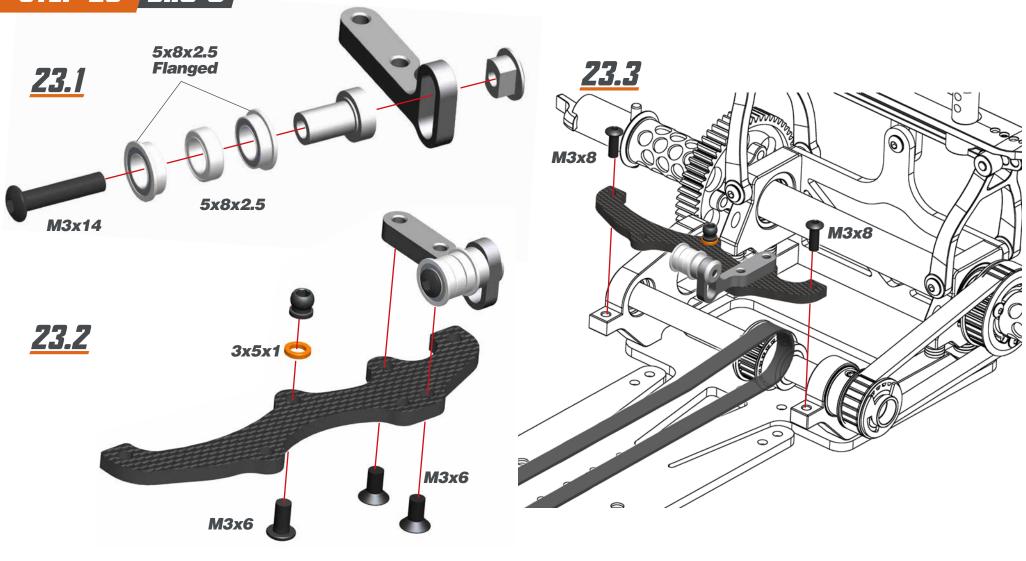




















 
STEP 24 BAG 9

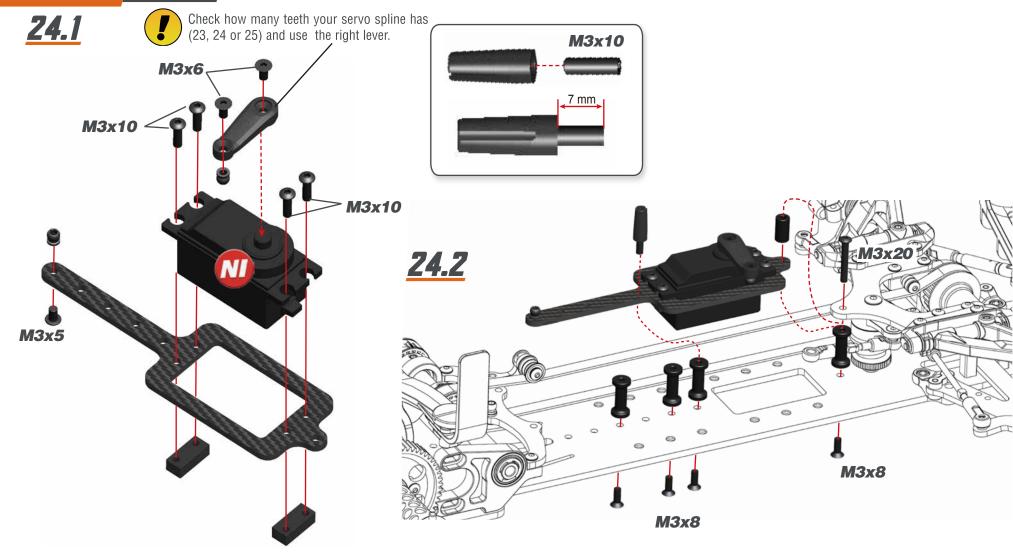




















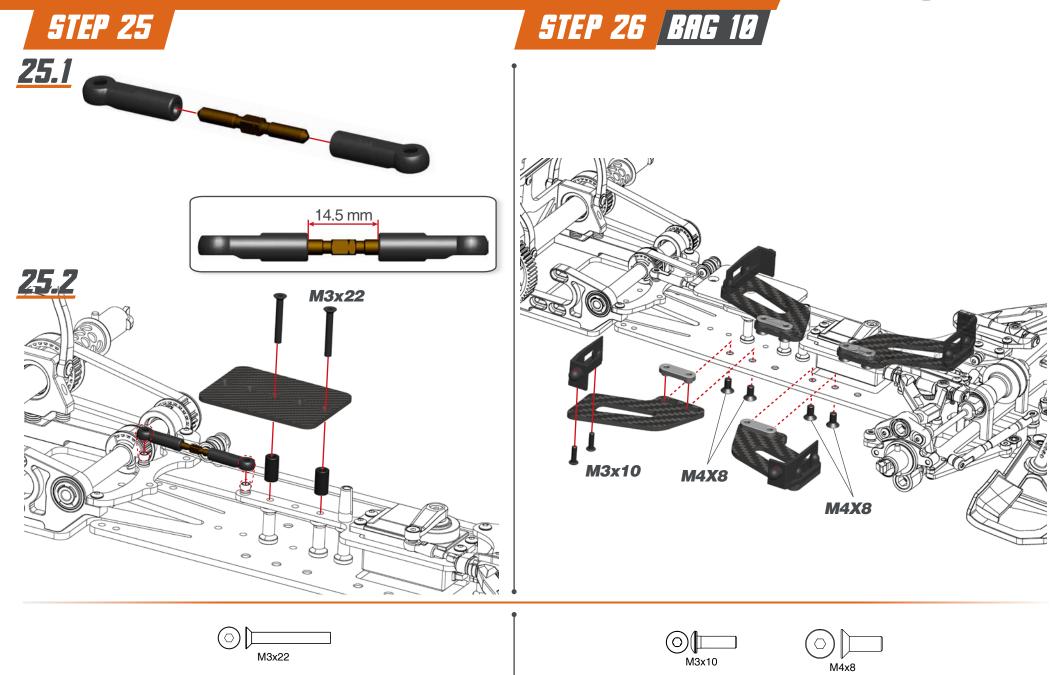





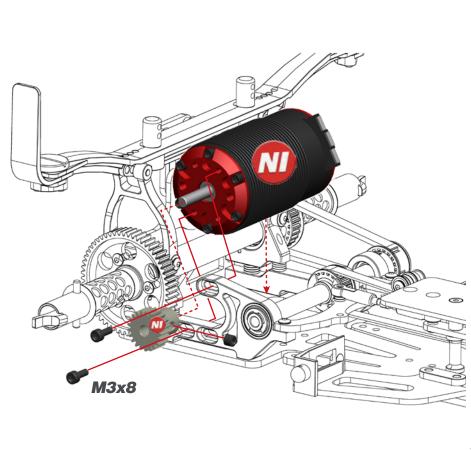

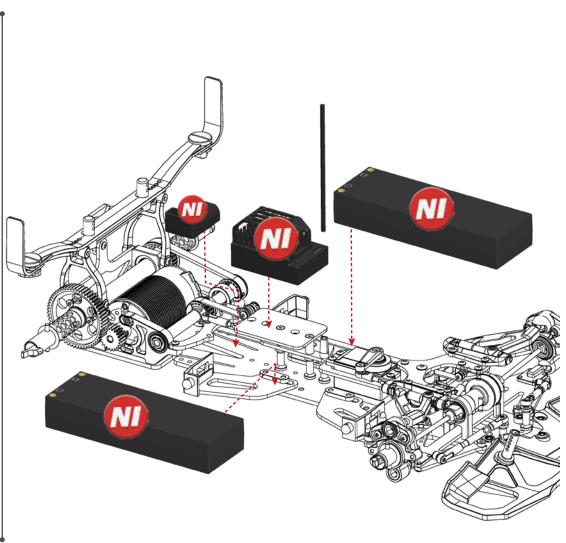











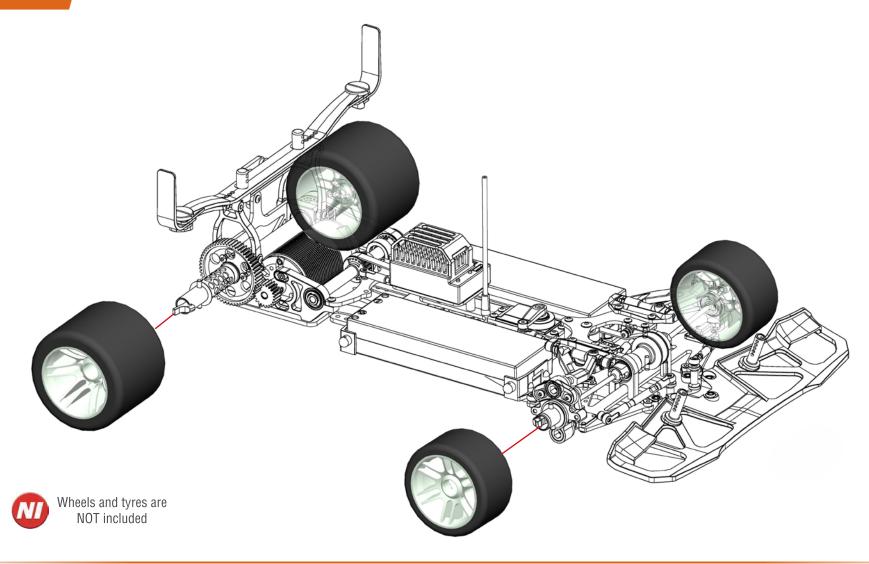





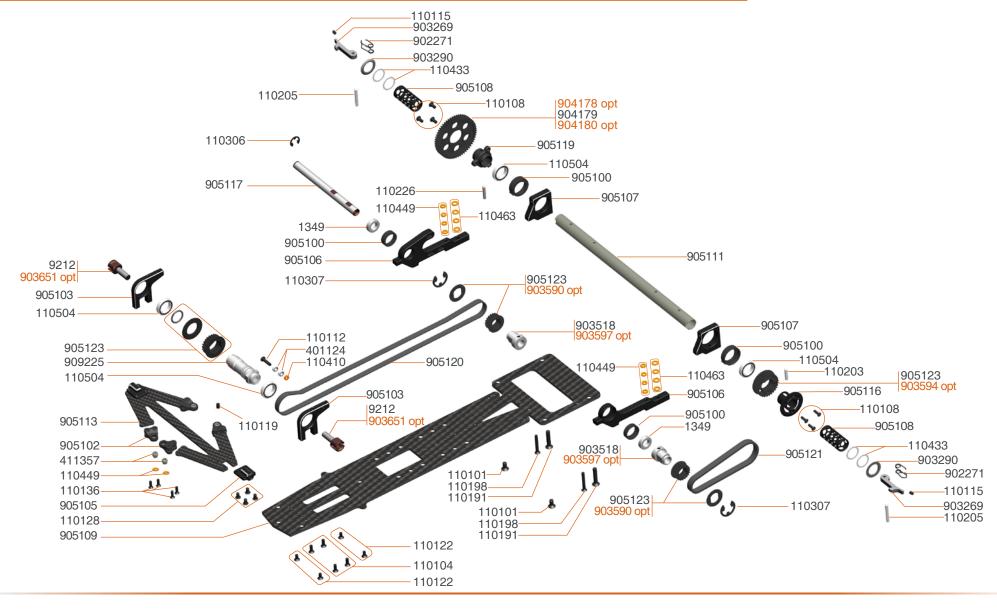



903651 Inner driveshaft adapter light903590 Pulley 2-sp axle 19T alu


903594 Pulley front axle 28T alu

903597 Pulley adaptor 19T light

904178 Spurgear 56T 988E904180 Spurgear 58T 988E





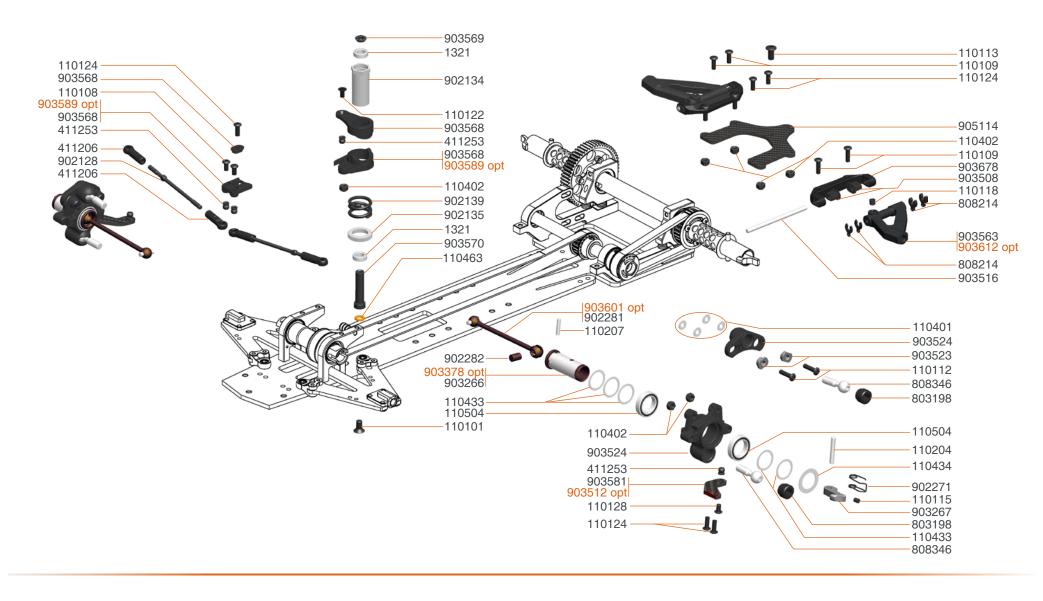




903512 Steeringblock lever alu (2) 903378 Wheelaxle front OS2 alu (2) 903589 Servosaver bottom alu (2) 903601 Driveshaft cvd FR alu (2) 903612 Wishbone FR up (2) hard








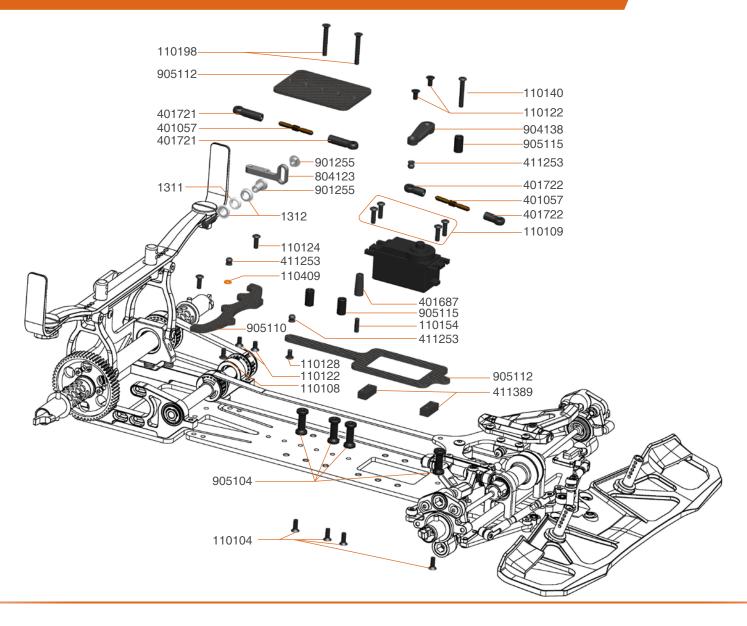








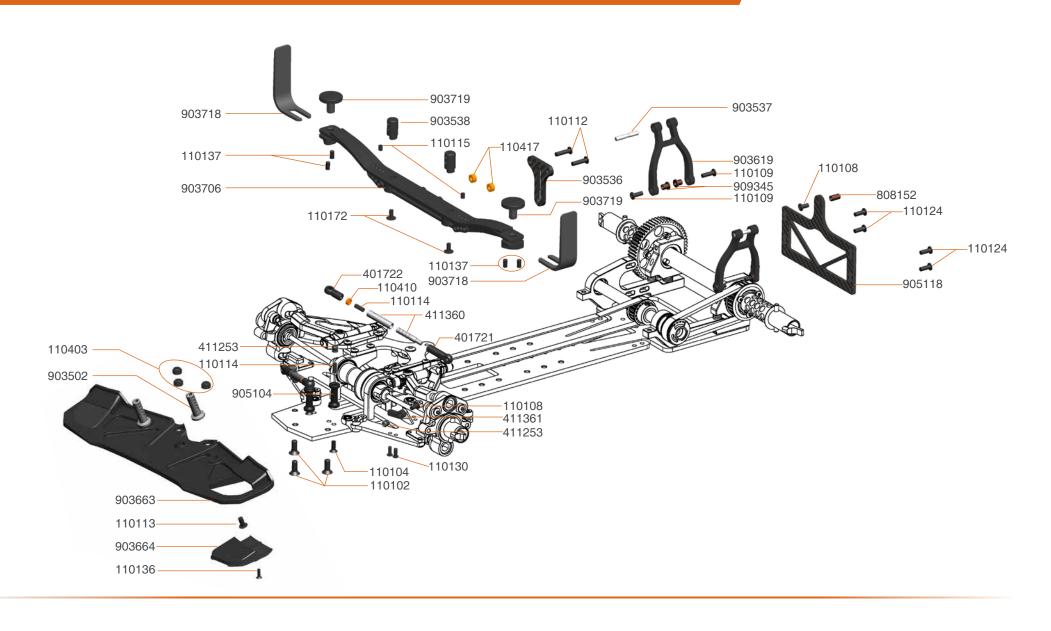







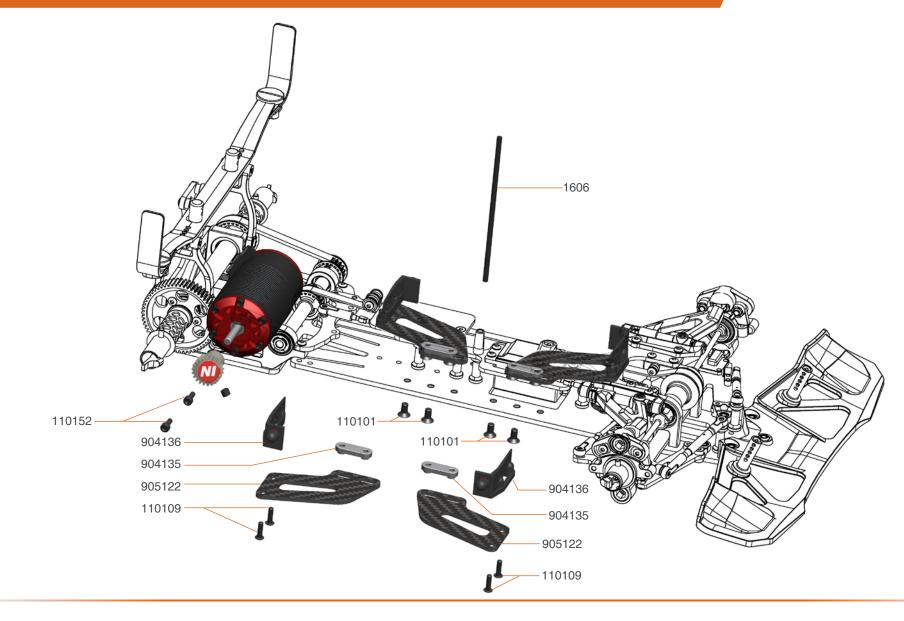







TE AM SER PENT NETWORK

SP ARE PARTS www .serpent.com/ 905001 /spares/

OPTIONALS PARTS www.serpent.com/905001 / Optionals/

SERPENT TOOLS www .serpent.com/product/T ools/



SERPENT MERCHANDISIN G www .serpent.com/product/Mer chandising/



SERPENT WEBSITE AND BLOG

www .serpent.com www .teamserpent.com www .dragon-r c.com

SERPENT PROMO PAGES http://promo.ser

 
SERPENT FACEBOOK GROUPS http://promo.serpent.com/indexfb.htm

SERPENT ADV ANCED MA NUAL S http:// promo.serpent.com/sam/

SERPENT SOCIAL MEDIA







S+ www .plus.google.com/+SerpentModelcars/posts

www .weibo.com/teamserpent

INSTRUCTION MANUAL





Manual Viper 988e Pan Car #966281

