

USAGE:

1. Before each operation, check if there are any articles on the surface of the heat plate, remove it if there is any. Ensure the surface of the heat plate clean and dry.
2. Place the pot levelly on the heating base, and slightly turn it right then left to ensure it is level and seated in the middle of the heater. Add soup (water) into the pot and cover the lid.
3. Turn the switch dial to the "OFF" position, and then insert the plug into the socket. Must fully insert it into the socket.
4. Turn the dial to the "HIGH" position, the light is on to indicate that the appliance is working with full power.

NOTE: After the water or soup is boil, turn the dial counter-clockwise to the position from " MEDIUM" to "LOW", the indicating light will be off once the water temperature reaches the setting degree; the light will be on again to indicate the resuming of heating process when the water temperature falls below the setting level.


5. Add the food to the pot as soon as the water or soup starts to boil.
6. After using, turn the dial counter-clockwise to the end position "OFF" to ensure the power is off.

CLEANING AND MAINTENANCE:

1. Before cleaning the appliance make sure you remove the plug from the main socket.
ATTENTION: Never immerse the appliance in water or any other liquid.
2. Clean the pot and glass lid with water and sponge.
3. Wipe clean the heating base with a damp cloth. Do not wash the heating base in water.
4. Dry well before storage.

HS-160B Reminder:

1. Please reference the product photo below for proper assembling. Please make sure the pot is secured on top of heating board.

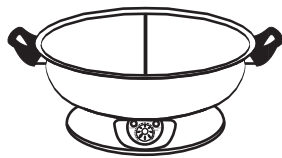

2. The pot will stick on the heating board tightly when heating. Do not remove the pot from heating board before cooling. Remove with force will damage pot and heating board.


INSTRUCTION MANUAL

MODEL:HS-160A(28)
HS-160A(30)
HS-160B(28)
HS-160B(30)



For correct operation, please read the instruction manual carefully before using.

COMPONENTS

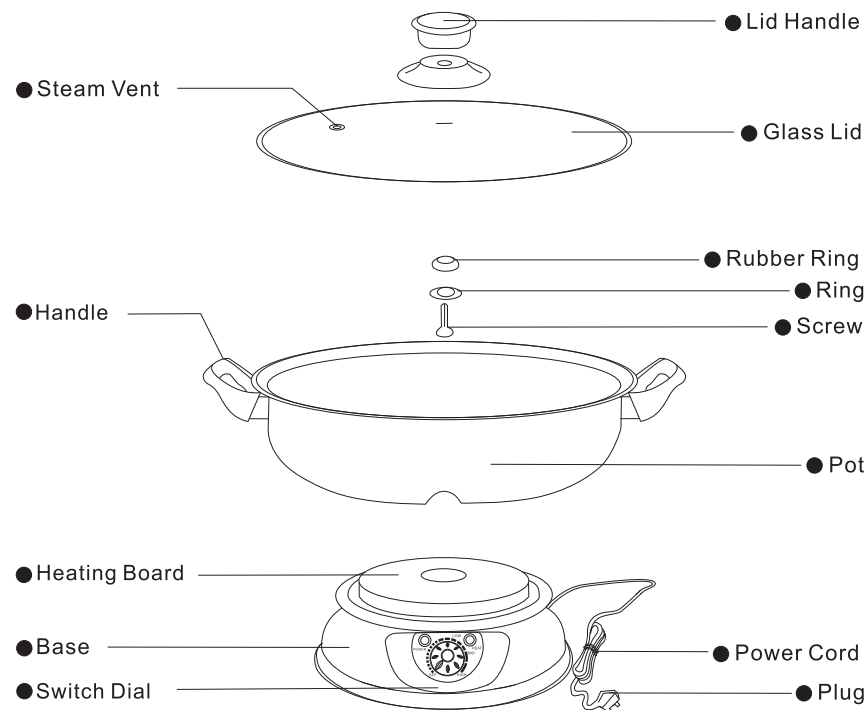

SAFETY INSTRUCTIONS

Dear Customer:

Please read these instructions carefully before connecting the appliance in order to prevent damage due to incorrect use. Read the below instructions in particular very carefully.

1. Ensure the local voltage fit to the appliance and the socket must be grounded.
2. Make sure the appliance and the plug do not come into contact with water or any other liquid. Should the appliance be dropped in water inadvertently, remove the plug from the electrical socket immediately and have the appliance checked by a certified professional. Non-compliance with this may result in peril to life.
3. To prevent electrical shock, do not immerse the appliance, plug or power cord into water or liquid.

4. Never switch on the appliance with an empty pan on top of it; this may result in serious damage to the appliance.
5. Do not remove pot from heating board before cooling. Remove with force will damage pot and heating board.
6. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
7. Operate the appliance on flat and dry place.
8. Make sure the outer surface of the pot and the heater is clean and dry before plug in.
9. Make sure the pot is place levelly, seated in the middle of the heater and touching the heating plate tightly, before cooking.
10. Do not place objects near, cover or touch the hot steam vent of the glass lid while cooking.
11. The appliance is only used for the purpose it was designed for.
12. Do not put the pot on any other stove to heat.
13. Do not touch any surfaces when hot.
14. Not for outdoor use. Household use only.
15. Do not place on or near a hot gas or electric burner, or in a heated oven.
16. Do not operate the appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
17. Do not let power cord hang over edge of table or counter where it can be pulled on by children or tripped over.
18. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
19. Children should be supervised to ensure that they do not play with the appliance

PREPARATION FOR FIRST USE:

1. Remove all packaging material.
2. Check to make sure the appliance is undamaged. In case of any damage, immediately contact your supplier and do not use the appliance.
3. Clean the pot and glass lid with warm water and mild washing liquid. Rinse thoroughly.
4. Position the appliance in such a way that the plug is accessible at all times.