



## User Manual

### H.264/265 Encoder/Decoder 1200p (60Hz 4:4:4) with Video wall

Model PT - IP-HD26X

Designed in Germany

## Preface

Read this user manual carefully before using this product. Pictures shown in this manual are for reference only. Different model layouts and specifications are subject to the physical product.

This manual is for operation instructions only, not for any maintenance usage.

In the constant effort to improve our product, we reserve the right to make changes in functions or parameters without prior notice or obligation.

## Trademarks

Product model and logo are trademarks. Any other trademarks mentioned in this manual are acknowledged as the properties of the trademark owner. No part of this publication may be copied or reproduced without the prior written consent.

## FCC Statement

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. It has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a commercial installation.

Operation of this equipment in a residential area is likely to cause interference, in which case the user at their own expense will be required to take whatever measures may be necessary to correct the interference.

Any changes or modifications not expressly approved by the manufacturer would void the user's authority to operate the equipment.

**REACH | 1907/2006/EU**

**ROHS | 2011/65/EU**

PureLink hereby declares that this product **PureTools PT-IP-HD26X** complies with Directives 1907/2006/EU und 2011/65/EU.

**EMC / LVD (Electro Magnetic Compatibility / Low Voltage Directive)**

PureLink GmbH hereby declares that this product **PureTools PT-IP-HD26X** complies with Directives 2014/30/EU and 2014/35/EU. The full text of the EU Declaration of Conformity is available at the following Internet address:

[http://www.purelink.de/ce/4251364736173\\_CE.pdf](http://www.purelink.de/ce/4251364736173_CE.pdf)

[http://www.purelink.de/ce/4251364736180\\_CE.pdf](http://www.purelink.de/ce/4251364736180_CE.pdf)



## SAFETY PRECAUTIONS

To ensure the best from the product, please read all instructions carefully before using the device. Save this manual for further reference.

- Unpack the equipment carefully and save the original box and packing material for possible future shipment
  - Follow basic safety precautions to reduce the risk of fire, electrical shock and injury to persons.
  - Do not dismantle the housing or modify the module. It may result in electrical shock or burn.
  - Using supplies or parts not meeting the products' specifications may cause damage, deterioration or malfunction.
  - Refer all servicing to qualified service personnel.
  - To prevent fire or shock hazard, do not expose the unit to rain, moisture or install this product near water.
  - Do not put any heavy items on the extension cable in case of extrusion.
  - Do not remove the housing of the device as opening or removing housing may expose you to dangerous voltage or other hazards.
  - Install the device in a place with fine ventilation to avoid damage caused by overheat.
  - Keep the module away from liquids.
  - Spillage into the housing may result in fire, electrical shock, or equipment damage. If an object or liquid falls or spills on to the housing, unplug the module immediately.
  - Do not twist or pull by force ends of the optical cable. It can cause malfunction.
  - Do not use liquid or aerosol cleaner to clean this unit. Always unplug the power to the device before cleaning.
  - Unplug the power cord when left unused for a long period of time.
  - Information on disposal for scrapped devices: do not burn or mix with general household waste, please treat them as normal electrical wastes.
-



---

## Content

1. Product Introduction.....	2
1.1 Introduction.....	2
1.2 Features.....	2
1.3 Package List.....	3
2. Panel Description.....	3
2.1 Encoder Panel.....	3
2.2 Decoder Panel.....	7
3. Specification.....	10
4. System Diagram.....	11
5. Switch Model.....	12
6. 1080P over IP System Control.....	12
7. Rack Mounting Instruction.....	13
7.1 4U Rack Mounting.....	13
7.2 1U Rack Mounting.....	14
8. Encoder and Decoder Matching Settings.....	15
9. Web GUI User Guide.....	15
10. RTSP-Stream Instruction.....	24
10.1 Stream Format.....	24
10.2 VLC Stream Play Process.....	24
11. After-Sales Service.....	27
Asking for Assistance.....	29

## 1. Product Introduction

### 1.1 Introduction

The AV over IP product distributes multiple HD sources to multiple HD display devices over a 100M/1G Network Switch. It offers configurable high quality, low-bandwidth H.265/H.264 configurable compression video and supports resolution up to 1920x1200@60Hz 4:4:4. Signal transmission distance can be extended up to 100m via CATE5E/6/6A/7 cable. The product supports analog audio embedding and extracting. It also supports RS-232 control (pass-through & Guest mode) and single-machine control (without a Controller Box, matrix switching can be realized with panel buttons or RS-232 control).

### 1.2 Features


- HDMI 1.3 and HDCP 1.4 compliant
- Video resolution up to 1920x1200@60Hz 4:4:4
- Supports 4.95Gbps video bandwidth
- Signal transmission distance can be extended up to 100m via CATE/6/6A/7 cable
- Supports point-to-point signal extension
- Supports signal distribution, multicast mode, distributed matrix and video wall (up to 9 x 9) functions over a 1G Network Switch
- Intelligent video wall management makes it achievable of novel layout of wall configurations
- Supports LPCM 2.0CH (32/44.1/48KHz) audio format
- Supports audio embedding and extracting
- Supports RS-232 control (pass-through & Guest mode)
- Supports main stream encoding modes
- Stream parameters can be configured via Web GUI or Controller Box
- Controlled via panel buttons, RS-232, TCP/IP, Web GUI and Controller Box
- Supports POE function (802.3af Class 3, PD mode)
- Smart networking design for easy and flexible installation

## 1.3 Package List

- 1 x 1GbE Encoder
  - 2 x 3-pin Phoenix Connectors (3.81mm, male)
  - 4 x Machine Screws (4mm M3)
  - 2 x Mounting Ears
  - 1 x 12V/1A Locking Power Adapter
  - 1 x User Manual
- or
- 1 x 1GbE Decoder
  - 2 x 3-pin Phoenix Connectors (3.81mm, male)
  - 4 x Machine Screws (4mm M3)
  - 2 x Mounting Ears
  - 1 x 12V/1A Locking Power Adapter
  - 1 x User Manual

## 2. Panel Description

### 2.1 Encoder Panel

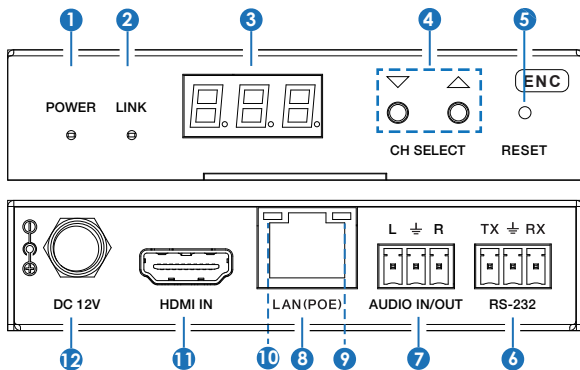

No.	Name	Description
1	POWER LED (Red)	The LED flashes at 1 Hz during the system startup, and the LED is always on after the startup is complete.
2	LINK LED (Green)	<p>Network connection status LED.</p> <ul style="list-style-type: none"> <li>▪ Light on: Network is connected, and there is compatible signal (with a resolution of less than 1920*1200, and the frame rate is less than or equal to 60) .</li> <li>▪ Light flashes at 1Hz: Network is connected, but there is no video input.</li> <li>▪ Light flashes at 10Hz: Network is connected, but the signal is incompatible (resolution is greater than 1920*1200, or the frame rate is greater than 60).</li> <li>▪ Light off: Network is not connected.</li> </ul>
3	LED screen	<p>Displays IP address, ID etc information.</p> <p>Note: When clicking the SHOW ME option of the corresponding machine on the Controller, the LED screen of the corresponding machine will flash "SHO", so that you can find the corresponding machine in the system.</p>
4	CH SELECT	Used to set Encoder ID and other settings.
5	RESET	System reset button. Press and hold this button for 5 seconds, the system will restart and restore factory Settings.
6	RS-232	RS-232 serial port, supporting signal pass-through and local serial port control.
7	AUDIO IN/OUT	<p>AUDIO IN: Analog stereo audio input port. Connect to an audio input source device.</p> <p>AUDIO OUT: Analog stereo audio output port. Connect to an audio output device.</p>
8	LAN (POE)	100M/1G Network port. Connect to a Switch/Router/Hub for data transmission or POE function.
9	Link Signal Indicator (Green)	<ul style="list-style-type: none"> <li>▪ Illuminated: The network cable is connected normally.</li> <li>▪ Dark: The network cable is not connected well.</li> </ul>

No.	Name	Description
10	Data Signal Indicator (Yellow)	<ul style="list-style-type: none"> <li>Flashing: There is data transmission.</li> <li>Dark: There is no data transmission.</li> </ul>
11	HDMI IN	HDMI input port, connect to an HDMI signal source device such as DVD or Set-top box with an HDMI cable.
12	DC 12V	<p>The device can be powered via two methods:</p> <ul style="list-style-type: none"> <li>Local DC 12V/1A power supply;</li> <li>POE from Network Switch. Device acts as PD mode.</li> </ul> <p>When the Switch supports POE function, DC power supply is not needed.</p>

**Note:**

Encoder can choose HDMI audio input or external audio embedding. It can be set through the CH SELECT buttons on the front panel of the Encoder. (The default setting is HDMI audio input.)

If it is set to HDMI audio input, the L/R OUT output of Encoder is HDMI audio loop out.

If it is set to external audio embedding, the L/R IN input of Encoder is the input of external audio embedding, and the L/R OUT output is the external audio embedding loop out.

**Description of the LED screen and CH SELECT buttons (For the Encoder).**

- 1, After the system is powered on, the Encoder's LED screen will show the ENC ID (000 by default if not set).
- 2, Press and hold the UP button for 5 seconds, the Encoder's LED screen will show in sequence "IP:", "xxx", "xxx", "xxx", "xxx", which is the IP address of the Encoder.
- 3, Press and hold UP + DOWN buttons at the same time for 5 seconds, then release to enter the "Configuration" mode with "CFN" displaying on the LED screen.
- 4, For Channel ID settings, press the UP or DOWN button to display the current ID number (e.g. 001) on the LED screen. Press and hold UP + DOWN buttons for 5 seconds, then release to enter the "ID Settings" mode. The ID number (e.g. 001) on the LED screen will flash at 1Hz, then press the UP or DOWN button to select the Channel ID you desired, then press and hold UP + DOWN buttons for 5 seconds to confirm the setting and stop flashing.

- 5, For EDID ID settings, press the UP or DOWN button until the LED screen shows "E00" (in which "E" refers to EDID, "00" to EDID ID). Press and hold UP + DOWN buttons for 5 seconds, then release to enter the "EDID Settings" mode. The EDID ID number (e.g. E01) on the LED screen will flash at 1Hz, then press the UP or DOWN button to select the EDID ID you desired, then press and hold UP + DOWN buttons for 5 seconds to confirm the setting and stop flashing.

The corresponding EDID ID is as follows:

EDID ID	EDID Description
00	H1080P60_2CH
01	H720P60_2CH
02	D1024P60
03	D1080P60
04	D1200P60
05	H1200P60_2CH
06	COPY
07	USER1
08	USER2

Notes:

(1) H refers to HDMI; D refers to DVI. (The default EDID of 1080p60 will be used if you have not previously copied the EDID to ID 06 or downloaded EDID to ID 07/08 on the controller box web page.)

(2) EDID ID 06/07/08 is not available without Controller Box.


- 6, For audio options settings, press the UP or DOWN button until the LED screen shows "AHE" (in which "A" refers to Audio and "HE" to HDMI EMB). Press and hold UP + DOWN buttons for 5 seconds, then release to enter the "AUDIO Settings" mode. The audio option (AHE or AEI) on the LED screen will flash at 1Hz, then press the UP or DOWN button to select the AUDIO option, then press and hold UP + DOWN buttons for 5 seconds to confirm the setting and stop flashing.

The corresponding audio options are as follows:

AHE: Use HDMI Audio

AEI: Use external Audio In

## 2.2 Decoder Panel

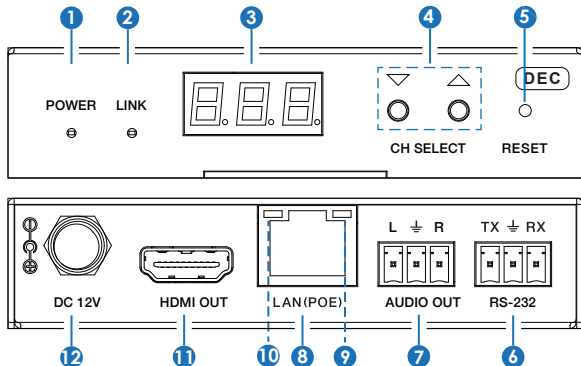

No.	Name	Description
1	POWER LED (Red)	The LED flashes at 1 Hz during the system startup, and the LED is always on after the startup is complete.
2	LINK LED (Green)	Network connection status LED. <ul style="list-style-type: none"> <li>Light on: Network is connected, and there is video data.</li> <li>Light flashes: Network is connected, but there is no video data.</li> <li>Light off: Network is not connected.</li> </ul>
3	LED screen	Displays IP address, ID etc information. Note: When clicking the SHOW ME option of the corresponding machine on the Controller, the LED screen of the corresponding machine will flash "SHO", so that you can find the corresponding machine in the system.
4	CH SELECT	Used to set Decoder ID and other settings.
5	RESET	System reset button. Press and hold this button for 5 seconds, the system will restart and restore factory Settings.
6	RS-232	RS-232 serial port, supporting signal pass-through and local serial port control.

7	AUDIO OUT	Analog stereo audio output port. Connect to an amplifier or loudspeaker through a 3-pin phoenix connector. It follows the audio output of the Encoder.
8	LAN (POE)	100M/1G Network port. Connect to a Switch/Router/Hub for data transmission or POE function.
9	Link Signal Indicator (Green)	<ul style="list-style-type: none"> <li>▪ Illuminated: The network cable is connected normally.</li> <li>▪ Dark: The network cable is not connected.</li> </ul>
10	Data Signal Indicator (Yellow)	<ul style="list-style-type: none"> <li>▪ Flashing: There is data transmission.</li> <li>▪ Dark: There is no data transmission.</li> </ul>
11	HDMI OUT	HDMI output port, connect to an HDMI display device such as TV or monitor.
12	DC 12V	<p>The device can be powered via two methods:</p> <ul style="list-style-type: none"> <li>▪ Local DC 12V/1A power supply;</li> <li>▪ POE from Network Switch. Device acts as PD mode.</li> </ul> <p>When the Switch supports POE function, DC power supply is not needed.</p>

#### Description of the LED screen and CH SELECT buttons (For the Decoder).

- 1, After the system is powered on, the Decoder's LED screen will show the ID of the connected Encoder (000 by default if not set).
- 2, Press and hold the UP button for 5 seconds, the Decoder's LED screen will show in sequence "IP:", "xxx", "xxx", "xxx", "xxx", which is the IP address of the Decoder.
- 3, Press and hold UP + DOWN buttons at the same time for 5 seconds, then release to enter the "Configuration" mode with "CFN" displaying on the LED screen.
- 4, For Channel ID settings, press the UP or DOWN button to display the current ID number (e.g. 001) on the LED screen. Press and hold UP + DOWN buttons for 5 seconds, then release to enter the "ID Settings" mode. The ID number (e.g. 001) on the LED screen will flash at 1Hz, then press the UP or DOWN button to select the Channel ID you desired, then press and hold UP + DOWN buttons for 5 seconds to confirm the setting and stop flashing.
- 5, For output resolution settings, press the UP or DOWN button until the LED screen shows "S00" (in which "S" refers to Scaler and "00" to resolution ID), then press and hold UP + DOWN buttons for 5 seconds, then release to enter the "Output Resolution Settings" mode. The Resolution ID number (e.g. S01) on the LED screen will flash at 1Hz, then press the UP or DOWN button to select the Resolution ID you desired, then press and hold UP + DOWN buttons for 5 seconds to confirm the setting and stop flashing.



The corresponding output resolution ID is as follows:

Resolution ID	Resolution Description
00	Pass Through (default)
01	1080P60
02	1080P50
03	1080P30
04	1080P25
05	1080P24
06	720P60
07	720P50
08	576P50
09	480P60
10	640X480P60
11	800X600P60
12	1024X768P60
13	1280X800P60
14	1280X1024P60
15	1366X768P60
16	1440X900P60
17	1600X1200P60
18	1680X1050P60
19	1920X1200P60

### 3. Specification

Technical	
HDMI Compliance	HDMI 1.3
HDCP Compliance	HDCP 1.4
Video Bandwidth	4.95Gbps
Video Compression Standard	H.265/H.264
Transmission Distance	100m (CAT5E/6/6A/7)
Video Resolution	Up to 1920x1200@60Hz 4:4:4
Color Space	RGB4:4:4, YCbCr 4:4:4, YCbCr 4:2:2
Color Depth	Input: 8-bit, 10-bit, 12-bit (1080p@60Hz); Output: 8-bit
Audio Formats	LPCM 2.0CH (32/44.1/48KHz)
Connection	
Encoder	1x HDMI IN [Type A, 19-pin female] 1x LAN [RJ45 connector, POE] 1x AUDIO IN/OUT [3-pin phoenix connector] 1x RS-232 [3-pin phoenix connector]
Decoder	1x HDMI OUT [Type A, 19-pin female] 1x LAN [RJ45 connector, POE] 1x AUDIO OUT [3-pin phoenix connector] 1x RS-232 [3-pin phoenix connector]
Mechanical	
Housing	Metal enclosure
Color	Black
Dimensions	Encoder / Decoder: 120mm [W] x 95mm [D] x 21.5mm [H]
Weight	Encoder: 74g, Decoder: 74g
Power Supply	Input: AC100 - 240V 50/60Hz, Output: DC 12V/1A
Power Consumption	Encoder: 2.88W, Decoder: 2.88W
Operating Temperature	14 - 113°F / -10 - 45°C
Storage Temperature	-4 - 140°F / -20 - 60°C
Relative Humidity	20 - 90% RH (no condensing)


## 4. System Diagram

### Usage Precaution

- Make sure all components and accessories included before installation.
- System should be installed in a clean environment with proper temperature and humidity.
- All of the power switches, plugs, sockets, and power cords should be insulated and safe.
- All devices should be connected before power on

The following diagrams illustrate typical input and output connections that can be utilized with these Encoder and Decoder:

The Encoder and Decoder are used in pairs:

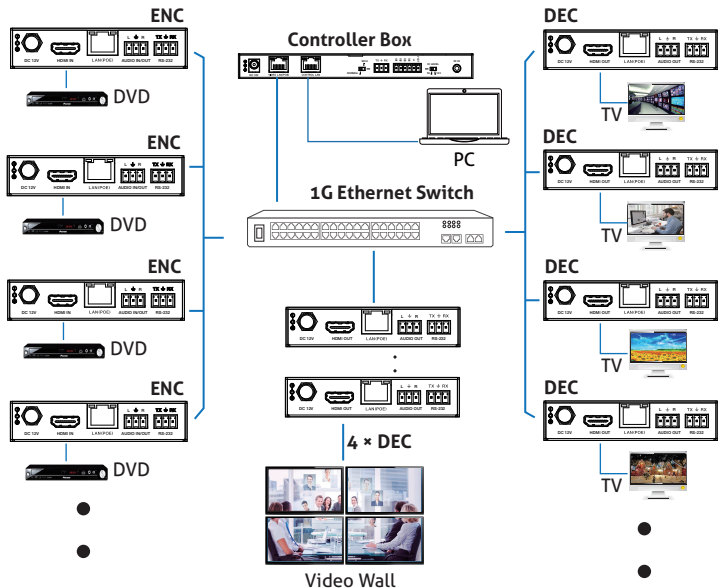

**Notes:**

- (1) For the default IP mode of Control LAN port of the Controller Box is DHCP, the PC also needs to be set to "Obtain an IP address automatically" mode, and a DHCP server (e.g. network router) is required in the system.
- (2) If there is no DHCP server in the system, 192.168.0.225 will be used as the IP address of Control LAN port. You need to set the IP address of the PC to be in the same network segment. For example, set PC's IP address as 192.168.0.88.
- (3) You can access the Web GUI by inputting Control LAN port IP address (192.168.0.225) or URL "http://controller.local" on your computer's browser.
- (4) No need to care about settings of Video LAN port of the Controller Box, they are managed by Controller automatically.
- (5) When the Network Switch does not support PoE, the Encoder, Decoder and Controller Box should be powered by DC power adapter.

## 5. Switch Model

A network Switch used to set up the system should support below features:

1. Type of layer 3/managed network Switch.
  2. Gigabit bandwidth.
  3. Support multicast, and need to enable the multicast function.
  4. Support IGMP snooping, and need to enable the IGMP snooping function.
  5. Support filter/drop unregistered Multicast traffic, and need to enable the function.
- The following Switch models are highly recommended.

Manufacturer	Model Number
HUAWEI	S5720S-28X-PWR-LI-AC
NETGEAR	S3300

## 6. IP System Control

This product can be controlled by Controller Box or third-party controller.

For details of IP system control, and to understand the more advanced features of the PT-IP-HD26X series, please refer PT-IP-CNTRL10 product information.

## 7. Rack Mounting Instruction


### 7.1 4U Rack Mounting

This product can be mounted in a standard 4U rack (Please contact your supplier for 4U rack sale). The mounting steps are as follows:


**Step 1:** Use included screws to fix two mounting ears on the product, as shown in the figure below:



**Step 2:** Insert the product with mounting ears into a 4U rack (up to 12 units can be installed vertically), as shown in the figure below:

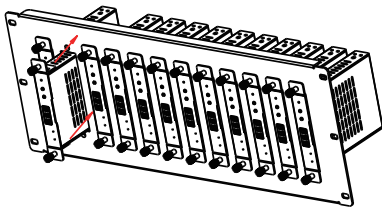


**Step 3:** Use screws to fix mounting ears on the rack to complete the mounting, as shown in the figure below:

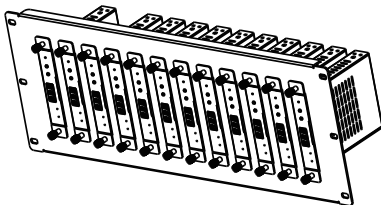


## 7.2 1U Rack Mounting

This product also can be mounted in a standard 1U rack (up to 8 units can be installed horizontally). The mounting steps are as follows:


**Step 1:** Stack two products on top of each other, then use included screws to fix two 1U rack panels on the products, as shown in the figure below:

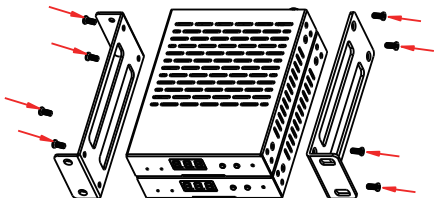

**Step 2:** Fix two 1U rack panels on another two stacked products in the same way, then use screws to fix two 1U rack panels together, as shown in the figure below:

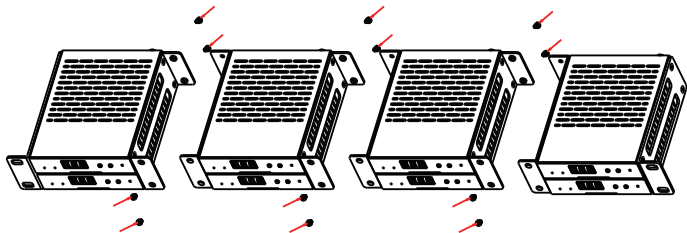

**Step 3:** Fasten screws between two 1U rack panels, so that eight products are mounted in a 1U rack, as shown in the figure below:

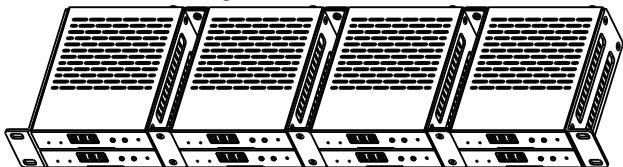

## 8. Encoder and Decoder Matching Settings

When multiple Encoders and Decoders are in the system without a Controller Box, it is necessary to match them well firstly. You can match all Encoders and Decoders in following two methods.

**Method 1:** Use the CH SELECT buttons on the front panel of the Encoder/Decoder. According to the methods mentioned in Chapter 5, set the ID of Encoder, then set the ID of Decoder, finally set the Encoder ID from which to subscribe the stream. Match all Encoders and Decoders in the same way.


**Method 2:** Use the RS-232 serial port command control. Connect the RS-232 port of Encoder/Decoder to a PC or control system, using the PureLink PTM-RS100 adjustable RS232 cable or any other suitable cable. Then use a Serial Command tool on PC to send the RS-232 command code: "!OUT xxx FR yyy\r\n". The function of this command is to connect the Decoder (ID:xxx) to the Encoder (ID:yyy). Match all Encoders and Decoders in the same way.

## 9. Web GUI User Guide

You can use the built-in Web GUI to configure all products through a Switch. The operation method is shown as below.

**Step 1:** Match all Encoders and Decoders as described in Chapter 7.



**Step 2:** Connect the PC and IP products you need to configure to a Switch. The connection diagram is shown as below.

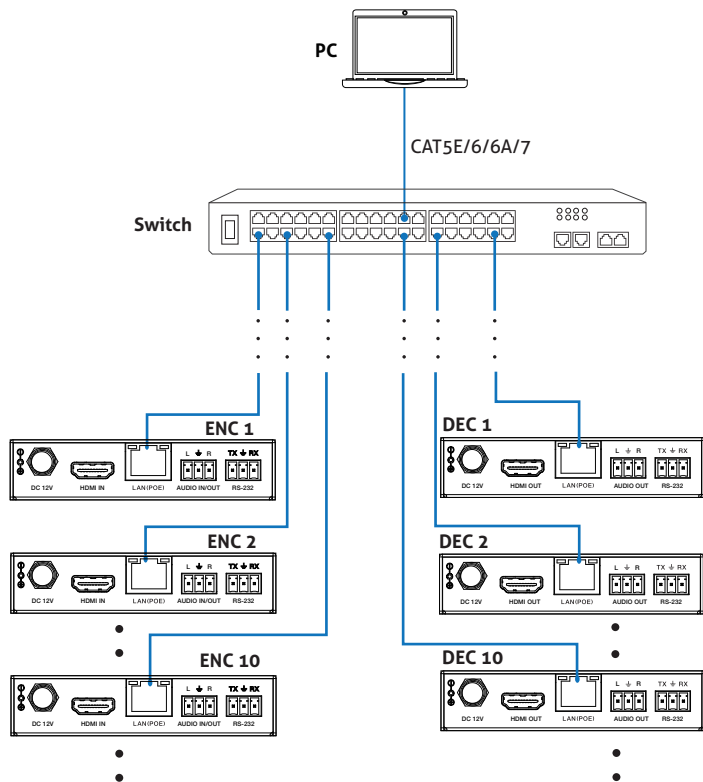



**Step 3:** Press and hold the (CH SELECT) UP button on the front panel of the Encoder/Decoder for 5 seconds to check the IP address. (Please refer to Chapter 5 for details.)

**Step 4:** Set the PC's IP address to be in the same network segment with the Encoder/Decoder, for instance, set the IP address to be 169.254.3.150 and Subnet mask to be 255.255.0.0.

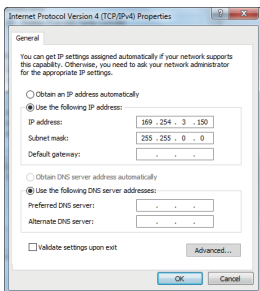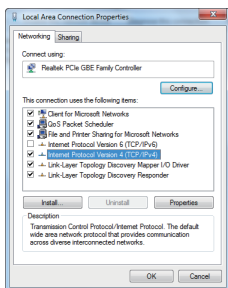

**Step 5:** Input the IP address of the Encoder/Decoder into the browser on PC to enter the Web GUI login interface.




**Step 6:** Input the default User "admin" and the default Password "admin", and then click "Log In" to enter the Web GUI interface.


The Web GUI function pages are shown as below:

### ■ Device Information Page

The Status page provides basic information about the Encoder/Decoder, such as Firmware Version, IP Address, Subnet Mask, Gateway and MAC Address.

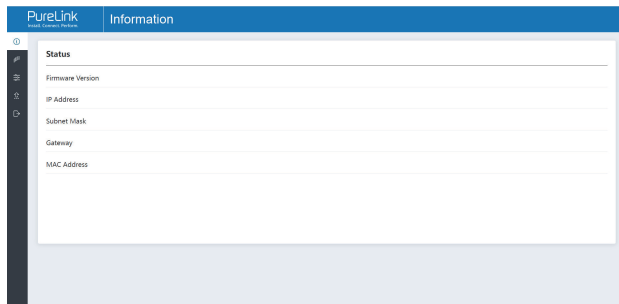

### ■ Video Configuration Page

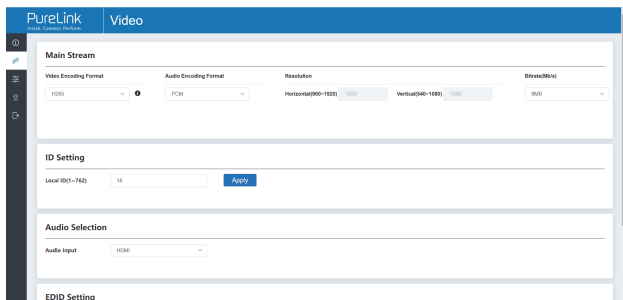

On this page, you can configure the video properties as required.

## Encoder Video Configuration

Encoder video configuration page includes Main Stream, ID Setting, Audio Selection and EDID Setting.

The screenshot shows the 'Video' configuration page in the PureLink web interface. The page is divided into four main sections:

- Main Stream:** Contains settings for Video Encoding Format (H.265), Audio Encoding Format (PCM), Resolution (Horizontal 1080i and Vertical 1080i), and Bitrate (8Mb).
- ID Setting:** Includes a 'Local ID(1-742)' field with the value '18' and an 'Apply' button.
- Audio Selection:** Features an 'Audio Input' dropdown menu set to 'HDMI'.
- EDID Setting:** Includes 'Select User EDID1 File' and 'Select User EDID2 File' buttons, and an 'EDID' dropdown menu set to 'HDMI 100Hz@60Hz, Audio 2CH1 PCM'.

**Main Stream:** You can configure Video Encoding Format, Audio Encoding Format and Bitrate. Video Encoding Format supports H.264 and H.265 (H.265 by default). Audio Encoding Format supports PCM and AAC (PCM by default). Encoding Resolution cannot be set, it follows the input resolution. The default Bitrate is 8Mb/s.

**ID Setting:** You can configure the ID of the Encoder. (After setting the ID, the IP will change. You need to press and hold the (CH SELECT) UP button on the front panel of the Encoder for 5 seconds to check the IP address, and then re-enter the new IP address on the web page to continue setting).

**Audio Selection:** You can configure the Audio Input (HDMI/Anologue).

**EDID Setting:** You can choose an EDID option from the drop-down list as shown in the below figure.

Audio Selection	
Audio Input	HDMI 1080p@60Hz, Audio 2CH PCM HDMI 720p@60Hz, Audio 2CH PCM DVI 1280x1024@60Hz, Audio None DVI 1920x1080@60Hz, Audio None HDMI 1920x1200p@60Hz, Audio 2CH PCM
EDID Setting	HDMI 1080p@60Hz, Audio 2CH PCM HDMI 1920x1200p@60Hz, Audio 2CH PCM
Select User EDID1 File	User EDID 1 <input type="button" value="Upload"/> <input type="button" value="Download"/>
Select User EDID2 File	File <input type="button" value="Upload"/> <input type="button" value="Download"/>
EDID	HDMI 1080p@60Hz, Audio 2CH PCM

User EDID 1 and User EDID 2 can be uploaded in Select User EDID1 File and Select User EDID2 File, and the content of the uploaded binary file is EDID. (This file can be downloaded from the Download EDID of the Decoder Video page.)

## Decoder Video Configuration

Decoder video configuration page includes Transmission Protocol, Scale Setting, Download EDID, Video Timeout Setting, ID Setting and Picture Setting.

PureLink  
Model Connect Platform
Video

⊙
☰
🔍
🏠
🔧

### Transmission

Protocol udp multicast

### Scaler Setting

Scaler Pass Through

### Download EDID

Download EDID to your PC

### NoSignal

VideoOut  OSD Information

### Video Timeout Setting

Timeout After Video Lost (0-60sec)

### ID Setting

Local ID(1-742)

Max Channel ID(0-742)

Source Selection ID(1-742)

### Picture Setting

Brightness  - 50 +

Contrast  - 50 +

Hue  - 50 +

Saturation  - 50 +

**Transmission Protocol:** You can select "udp unicast" or "udp multicast" (udp multicast by default).

**Scaler Setting:** You can set the output resolution (Pass Through by default).

**Download EDID:** You can download the EDID binary file of the display device connected to the Decoder. The EDID file can be used as the User EDID file to be uploaded to the Encoder.

**NoSignal:**

**VideoOut:**

**ON:** Turn on video out when there is no signal.

**OFF:** Turn off video out when there is no signal.

**OSD Information:**

**ON:** Display OSD information when there is no signal.

**OFF:** No display OSD information when there is no signal.

**Video Timeout Setting:** You can set the timeout to turn off the video output when no input video signal is detected. 0 means never close.

**ID Setting:**

**Local ID:** You can set the ID of the Decoder. (After setting the ID, the IP will change. You need to press and hold the (CH SELECT) UP button on the front panel of the Decoder for 5 seconds to check the IP address, and then re-enter the new IP address on the web page to continue setting).


**Max Channel ID:** You can set the maximum range of Source Selection ID that can be set. When it is set to 0, there is no limit to the setting range of Source Selection ID.

**Source Selection ID:** You can select the ID of the Encoder to be the input source.

**Picture Setting:** You can configure the picture parameters (Brightness, Contrast, Hue and Saturation).

## ■ Settings Page

On this page, you can set Network settings, modify username and Login Password as required.

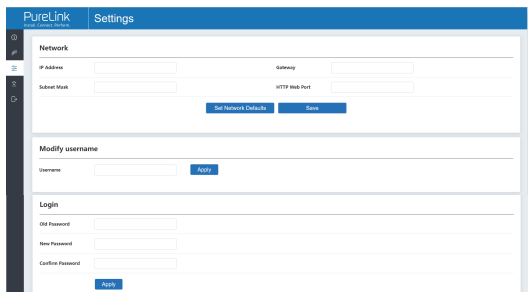


**Notes:**

- (1) The Network Settings can be set only when the Mode button is set to Static.
- (2) All changes will take effect by clicking "Save" below.
- (3) After any changes to the Network Settings, username or Login Password, it will redirect to the Web browser home page or the Web GUI login interface. You need to log in the Web GUI again with the new settings.

## ■ Update Page

### Encoder Update Page

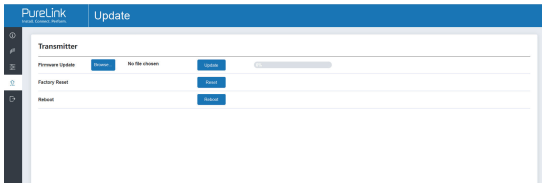


Click "Browse.." to import the upgrade file and click "Update" to start upgrade. There will be a progress bar prompt during the upgrade process. When the progress bar reaches 100%, it indicates the upgrade is successful, and the device will be restarted automatically.

Clicking "Reset" can reset the device to factory default settings.


Clicking "Reboot" can reboot the device.

## Decoder Update Page

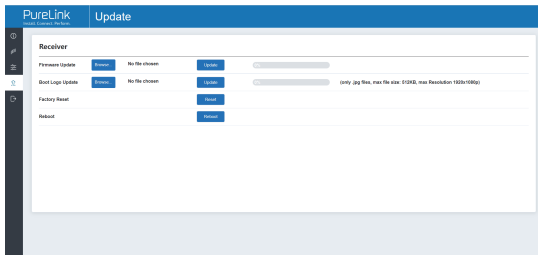

Click “Browse..” to import the Firmware or Boot Logo upgrade file and click “Update” to start upgrade. There will be a progress bar prompt during the upgrade process. When the progress bar reaches 100%, it indicates the upgrade is successful, and the device will be restarted automatically. Clicking “Factory Reset” can reset the device to factory default settings. Clicking “Reboot” can reboot the device.

## ■ Log Out Page

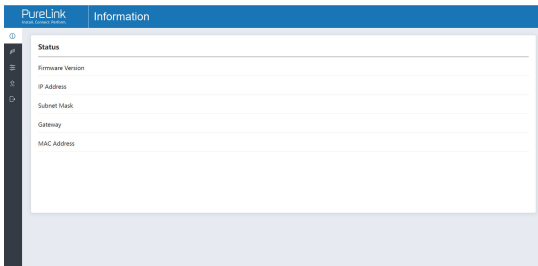

Click “Log Out” on the left, the Web GUI will exit and skip to the login interface automatically.

## 10. RTSP-Stream Instruction

### 10.1 Stream Format

(a) The MainStream format is as following:

`rtsp://IP:PORT/live/main/av_stream`

IP is the IP address of the device, PORT is the access port of rtsp (the default port is 554, and it is not necessary to write when the port is 554).


For example, if the IP address of the device is 169.254.3.1, then the RTSP stream address is "rtsp://169.254.3.1:554/live/main/av\_stream". For the port is 554, the RTSP stream address can be "rtsp://169.254.3.1/live/main/av\_stream".

### 10.2 VLC Stream Play Process

You can play Streams through VLC media player.


The operation method is shown as below.

**Step 1:** Open the VLC media player on PC, the following interface appears.

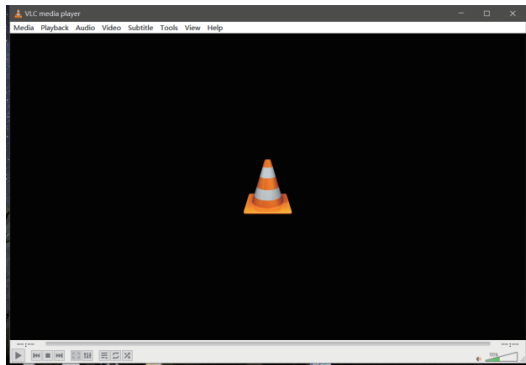




**Step 2:** Select the media type to play.

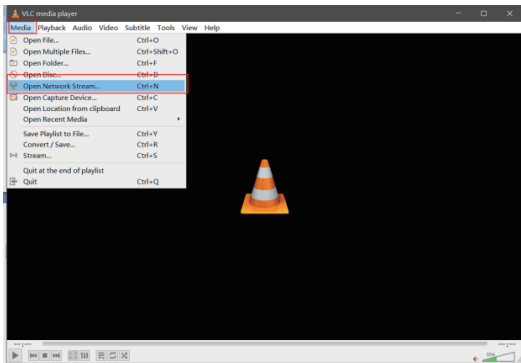


Click "Media", and select "Open Network Stream...".

**Step 3:** Enter a MainStream Network URL.

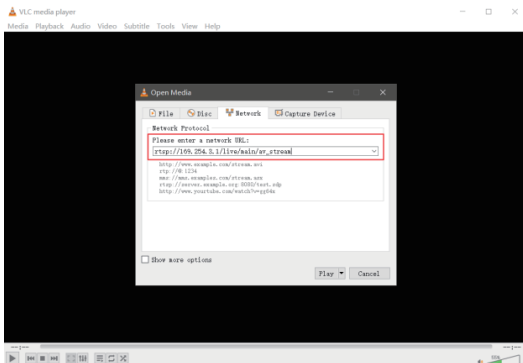

**Step 4:** Click “Play” to start playing the Stream.

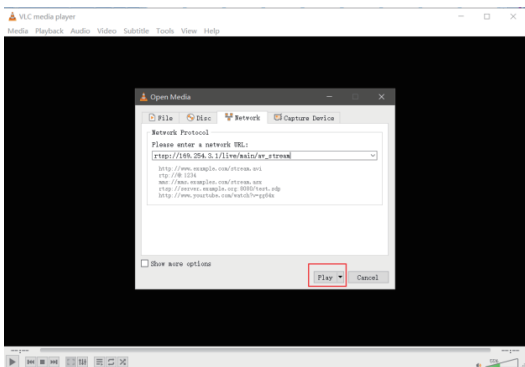

## 11. After-Sales Service

If there appear some problems when running the product, please check and deal with the problems referring to this user manual. Any transport costs are borne by the users during the warranty.

**1) Product Limited Warranty:** This product will be free from defects in materials and workmanship for **three years** (The purchase invoice shall prevail).

Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the unit is within the Warranty period must be presented to obtain warranty service.

**2) What the warranty does not cover (servicing available for a fee):**

- Warranty expiration.
- Factory applied serial number has been altered or removed from the product.
- Damage, deterioration or malfunction caused by:
  - Normal wear and tear.
  - Use of supplies or parts not meeting our specifications.
  - No certificate or invoice as the proof of warranty.
  - The product model showed on the warranty card does not match with the model of the product for repairing or had been altered.
  - Damage caused by force majeure.
  - Servicing not authorized by distributor.
  - Any other causes which does not relate to a product defect.
- Delivery, installation or labor charges for installation or setup of the product.

**3) Technical Support:** For any questions or problems, contact your distributor or reseller and tell them the respective product name and version, the detailed failure situation as well as the formation of the cases.



## Asking for Assistance

### Technical Support:

Phone: +49 5971 800299 - 0

Fax: +49 5971 800299 – 99

### Technical Support Hours:

8:30 AM to 5:00 PM Monday thru Thursday

8:30 AM to 4:00 PM Friday

### Write to:

PureLink GmbH

Von-Liebig-Straße 10

D - 48432 Rheine

[www.purelink.de](http://www.purelink.de)

[info@purelink.de](mailto:info@purelink.de)