 


# **UVC30** Content Camera




English | 简体中文

## Quick Start Guide (V1.1)

www.yealink.com

## **Package Contents**

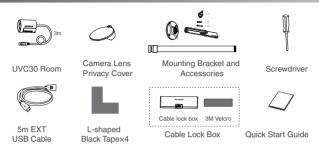

When the whole wall is a whiteboard, you can use the L-shaped tapes to mark the four corners of the whiteboard, so that the camera adapts according to the limited range.

## **Content Camera Installation**

### 1. Assemble the bracket




#### 1/4"-20 UNC screw

 
### 2. Assemble the metal telescopic rod

The length of the metal telescopic rod depends on the width of the whiteboard when you mount the content camera on a wall-

The width of the whiteboard	Select the scale of the metal telescopic rod
183cm (6ft)	64cm (2.10ft)
213cm (7ft)	75cm (2.45ft)
244cm (8ft)	85cm (2.80ft)
274cm (9ft)	96cm (3.15ft)




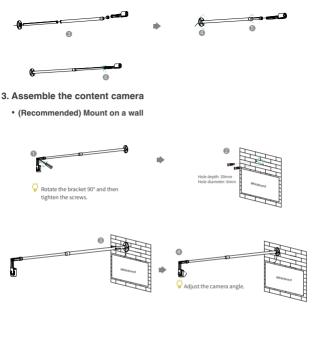



The camera can be routed down or towards the ceiling.

### Suspend on the ceiling

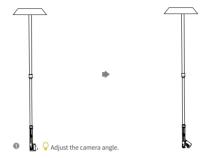

- The height of the camera installation must meet local building rules. If the USB cable that comes with the camera is not long enough, please choose the desired extension cable solution.
- You can use the camera preview in the Microsoft Teams Rooms app to determine the final placement of the camera. For more information on how to use the content camera with Microsoft Teams Room, please refer to https://docs.microsoft.com/en-us/MicrosoftTeams/rooms/content-camera.

### **LED Indicator Instructions**

LED indicators on the UVC30 Room:

LED Status	Description
Off	The UVC30 Room is not properly connected to the mini-PC or the UVC30 Room is inactive.
Solid green	The UVC30 Room is active.
Flashing orange	The UVC30 Room is upgrading firmware.
Flashing red	The UVC30 Room is in recovery mode and the firmware has not been upgraded.

### **Using Your Conent Camera**

For more information on how to use your content camera, please refer to Yealink RoomConnect User Guide.

## 包装清单



当整面墙是白板时,你可以使用L型胶带标定白板四个角,摄像机根据限定的范围进行自适应。

## 安装白板摄像机

1. 安装支架



### 2. 安装金属伸缩杆

挂墙安装时,请根据白板的宽度选择金属伸缩杆的长度:

白板宽度	选择金属伸缩杆的刻度
183cm (6ft)	64cm (2.10ft)
213cm (7ft)	75cm (2.45ft)
244cm (8ft)	85cm (2.80ft)
274cm (9ft)	96cm (3.15ft)

 


 


### 3. 固定白板Camera

(推荐)墙装







摄像机可以朝下或者朝天花板走线。

吊装



摄像机安装的高度需满足当地建筑规范。若摄像机自带的USB线不够长,请自行选择延长线方案。

在使用摄像机时可以先通过Teams Rooms app预览调整摄像机位置。更多关于白板摄像机如何搭配 微软Teams Room使用,请参阅

https://docs.microsoft.com/zh-cn/MicrosoftTeams/rooms/content-camera。

## 指示灯介绍

UVC30 Room指示灯介绍如下:

指示灯状态	说明
关闭	UVC30 Room 没有正确连接到mini-PC上或未处于正常工作状态。
绿灯常亮	UVC30 Room 处于正常工作状态。
橙灯闪烁	UVC30 Room 固件更新中。
红灯闪烁	UVC30 Room 进入恢复模式,还未固件更新。

## 使用白板摄像机

更多关于如何使用白板摄像机,请参阅Yealink RoomConnect用户指南。

#### Regulatory Notices

Operating Ambient Temperatures

- •Operating temperature: +32 to 104°E (0 to 40°C) Relative humidity: 5% to 90%, non
- Storage temperature: -22 to +160°E (-30 to +70°C)

#### Warranty

Our product warranty is limited only to the unit itself, when used normally in accordance with the operating instructions and the system environment. We are not liable for damage or loss resulting from the use of this product. or for any claim from a third party. We are not liable for problems will Yealink device arising from the use of this product; we are not liable for financial damages, lost profits, claims from third parties, etc., arising from the use of this product

Explanation of the symbols

DC symbol

is the DC voltage symbol.

· WEEE Warning symbol

To avoid the potential effects on the environment and human nealth as a result of the presence of hazardous substances in electrical and To avoid the potential effects on the environment and human health electronic equipment, end users of electrical and electronic

nent should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE senarateh

Bestriction of Hazardous Substances Directive (BoHS) This device complies with the requirements of the FLI RoHS Directive Statements of compliance can be obtained by contacting support@yealink.co Safety Instructions

Save these instructions. Read these safety instructions before use! General Requirements

- Before you install and use the device, read the safety instructions carefully and observe the situation during operation
- During the process of storage, transportation, and operation, please
- always keen the device dry and clean, avoid collision and crash Please attempt not to dismantle the device by yourself. In case of any •
- discrepancy, please contact the appointed maintenance center for repair. ٠ Please refer to the relevant laws and statutes while using the device.
- Legal rights of others should be respected as well. Environmental Requirements
- ٠ Place the device at a well-ventilated place. Do not expose the device under direct sunlight.
- Keep the device dry and free of dusts
- . Do not place the device on or near any inflammable or fire-vulnerable chiect euch se rubber-made materiale
- Keep the device away from any heat source or bare fire, such as a candle or an electric heater

Operating Requirements

- Do not let a child operate the device without guidance.
- . Do not let a child play with the device or any accessory in case of accidental swallowing
- Please use the accessories provided or authorized by the manufacturer onh
- The power supply of the device shall meet the requirements of the input voltage of the device. Please use the provided surge protection power encket only
- Before plugging or unplugging any cable, make sure that your hands are completely dry
- Do not spill liquid of any kind on the product or use the equipment near water, for example, near a bathtub, washbowl, kitchen sink, wel basement or near a swimming pool.
- During a thunderstorm, stop using the device and disconnect it from the power supply. Unplug the power plug and the Asymmetric Digital Subscriber Line (ADSL) twisted pair (the radio frequency cable) to avoid lightning strike

- If the device is left unused for a rather long time, disconnect it from the power supply and unplug the power plug
- When there is smoke emitted from the device, or some abore or smell, disconnect the device from the power supply, and unplug the nower plug immediately
- Contact the specified maintenance center for renair
- Do not insert any object into equipment slots that is not part of the product or auxiliary product
- Refore connection a cable, connect the arounding cable of the device first. Do not disconnect the grounding cable of the device cabi

Cleaning Requirements

- Before cleaning the device, disconnect it from the power supply. :
- Use a piece of soft, dry and anti-static cloth to clean the device.
- Keep the power plug clean and dry.

#### Troubleshooting

The unit cannot supply power to device other than Yealink device.

There is a bad connection with the plug

1. Clean the plug with a dry cloth

2 Connect it to another wall outled

The usage environment is out of operating temperature range Use in the operating temperature range

The cable between the unit and the Yealink device is connected incorrectly.

1. Connect the cable correctly

- You cannot connect the cable properly
- 1. You may have connected a wrong Yealink device.

2. Use the correct power supply. ome dust, etc., may be in the port

1. Clean the port.

Contact your dealer or authorized service facility for any further questions FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following

two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC Statement

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

(1) this device may not cause interference; and

(2) this device must accept any interference, including interference that may cause undesired operation of the device. CAN ICES-3(B)

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditione exitentae

(1) l'annerail na doit nas produire de brouillage

 (1) rupparen ne den pas procesire de prouinage,
(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi. même si le brouillage est susceptible d'en compromettre le

### fonctionnement.NMB-3(B)

Contact Information

YEALINK NETWORK TECHNOLOGY CO. LTD.

309. 3rd Floor. No.16. Yun Ding North Road, Huli District, Xiamen City, Fulian, P.R. C YEALINK (EUROPE) NETWORK TECHNOLOGY B.V. Strawinskolaan 3127. Atrium Building 8th floor. 10772X Amst

The Netherlands YEALINK (USA) NETWORK TECHNOLOGY CO., LTD

999 Peach ee Street Suite 2300, Fulton, Atlanta, GA, 303 000 110/ Maria in China

### About Yealink

Yealink is a global leading provider of enterprise communication and collaboration solutions, offering video conferencing service to worldwide enterprises. Focusing on research and development, Yealink also insists on innovation and creation. With the outstanding technical patents of cloud computing , audio, video and image processing technology, Yealink has built up a panoramic collaboration solution of audio and video conferencing by merging its cloud services with a series of endpoints products. As one of the best providers in more than 140 countries and regions including the US, the UK and Australia, Yealink ranks No.1 in the global market share of SIP phones shipments

#### Technical Support

Visit Yealink WIKI (http://support.yealink.com/) for the latest firmware, guides, FAQ, Product documents, and more. For better service, we sincerely recommend you to use Yealink Ticketing system (https://ticket.yealink.com) to submit all your technical issues.



YEALINK(XIAMEN) NETWORK TECHNOLOGY CO., LTD. Web: www.yealink.com Copyright@2020YEALINK(XIAMEN) NETWORK TECHNOLOGY CO., LTD. All rights reserved.