











CARL
Professional
Rotary Trimmer

INSTRUCTION MANUAL


ENGLISH
RT-200 / RT-218

Thank you for purchasing CARL Paper Trimmer RT-200/ RT-218. Please carefully read the enclosed manual prior to use. It is advisable to retain this manual for future reference.

CAUTION

Disregarding the following cautions can result in injury			
 Do not place your hand under the cutting rail.	 Do not attempt to modify, disassemble or repair.		
 When replacing the blade, do not touch the sharp edge of the blade.	 Do not use on an unstable surface.		
Risk of Blade Damage or Malfunction			
 A cutting mat must be installed when cutting.	 Do not attempt to modify, disassemble or repair.		
 Do not cut staples, paper clips or other metallic objects.	 Do not attempt to cut paper in excess of specification.		
 Do not cut metallic or glass impregnated surface film.	 Do not hold only the slider or the blade holder when moving the paper trimmer.		


PART DIAGRAM

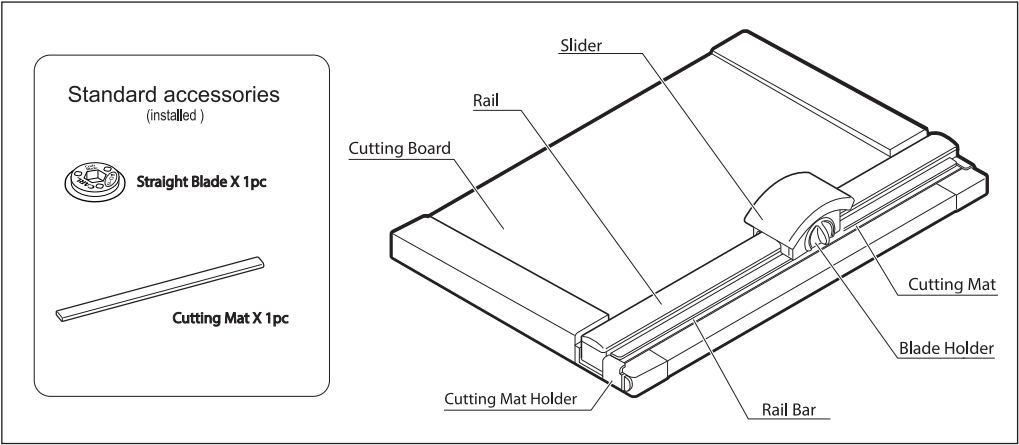

CUTTING

- Place paper(s) or material(s) under the rail bar.
- While pressing the slider, move the slider back and forth until all paper(s) or material(s) are cut.


※ Do not cut any metallic objects (e.g. staples and clips) to avoid blade damage.
※ When cutting with a straight blade, move the slider back and forth.
※ When cutting with a perforation blade, moving the slider back and forth will cut the paper away.

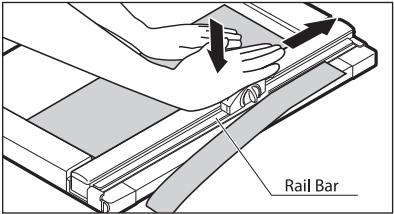

CUTTING MAT REPLACEMENT


The Cutting mat is a replaceable part. When the mat becomes deeply grooved and the cutting performance deteriorates, the mat should be replaced.

- Pull back the compartment door where the cutting mat is located and then pull the cutting mat out.
- Insert the new cutting mat into the cutting mat compartment and close compartment door.
- Replace a new cutting mat when all 4 surfaces are used.

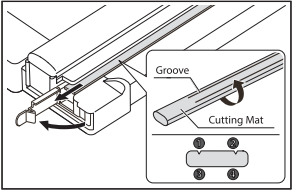

BLADE REPLACEMENT

The Blade is a replaceable part and increasingly poor cutting performance indicates that the blade needs replacement.

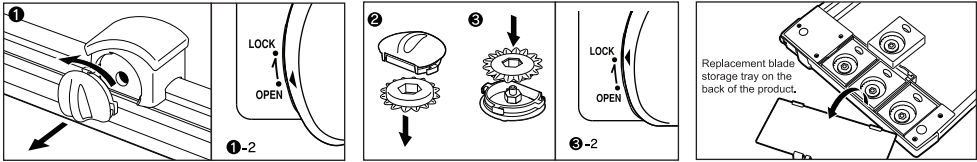

- Turn the holder counterclockwise, set ▲ to the "OPEN" position, and remove it from the slider.
- Remove the used cutting blade by shaking the blade holder gently and carefully.
- Replace the cutting blade, turn the holder to set ▲ to the "LOCK" position to install the holder to the slider.

Do not touch the point of the blade when replacing it.
Touching the sharp edge of the blade may result in injury.



SPECIFICATION

		RT-200	RT-218
Cutting Capacity	Straight Blade	10 Sheets of 20 lbs. paper (based on PPC paper, 64 g/m2 paper, slide back and forth once) ※1	
	Perforation Blade	3 sheets of 20 lbs. paper (based on PPC paper, 64 g/m2 paper) Cut in one direction ※1 ※2	
Cutting Length		310mm (A4 Size, long edge)	462mm (A3 Size, long edge)
Unit Size		W10.4"×L15"×H2.6"	W10.4"×L21"×H2.6"
Weight		2.8 lb	3.9 lb


Specifications and appearance are subject to change without notice.
※1 Cutting capacity is based on 20 lbs. paper
※2 When cutting with a perforation blade, the cut will be cleaner if you use an unused section of cutting mat or replace with a new cutting mat.
Perforation blade is not included. (Optional)

Replacement Parts

Continued use of damaged replacement parts (consumables) may cause malfunction. Please replace parts regularly.

Model	RT-200	RT-218
Cutting Mat	RM-12/2	RM-18/2
Cutting Blade	Straight Blade B-01 (1 pc) / Perforation Blade B-02 (1 pc) / Scoring Blade B-11 (1 pc) Decorative Blades (7 Decorative Blades available) B-03 ~ B-08, B-10 (1 pc)	

PATTERN BLADE (OPTIONAL)

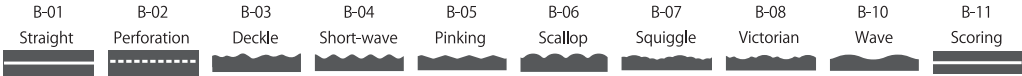

Replacement parts are available at local stationery stores, or stationery section of stores. For details about the replacement parts, please refer to CARL website.

CARL MFG USA INC
Email: carl@carlmfg.com
www.carlmfg.com

