

## **3Q**

- OC1020A (OC1020A/OC1020A)

## **7-11**

- IN265 (IN265/IN265)

## **7251**

- Coolpad 7251 (Coolpad7251/Coolpad 7251)

## **A.O.I. ELECTRONICS FACTORY**

- A.O.I. (TR10CS1\_11/TR10CS1)

## **Abocom**

- AboCom A08SM (A08/A08S)

## **Acer**

- A1-713 (acer\_aprilia/A1-713)
- A1-810 (mango/A1-810)
- A1-811 (mango/A1-811)
- A1-830 (ducati/A1-830)
- A100 (vangogh/A100)
- A101 (vangogh/A101)
- A110 (a110/A110)
- A200 (picasso\_e/A200)
- A210 (picasso\_e2/A210)
- A211 (picasso\_e2/A211)
- A3-A10 (zara/A3-A10)
- A3-A11 (zara/A3-A11)
- A3-A20 (acer\_harley/A3-A20)
- A3-A20FHD (acer\_harleyfhd/A3-A20FHD)
- A500 (picasso/A500)
- A501 (picasso/A501)
- A510 (picasso\_m/A510)
- A511 (picasso\_m/A511)
- A700 (picasso\_mf/A700)
- A700/A701 (picasso\_mf/A700)
- A701 (picasso\_mf/A701)
- Acer E320 (C6/Acer E320)
- Acer E320-orange (C6/Acer E320-orange)

- Acer Liquid Metal (a4/Acer Liquid Metal)
- AK330 (C8/AK330)
- AK330s (C8n/AK330S)
- Aspire A3 (aa3-600/AA3-600)
- AT390 (T2/AT390)
- B1-710 (B1-710/B1-710)
- B1-711 (B1-711/B1-711)
- B1-720 (b1-720/b1-720)
- B1-721 (b1-721/b1-721)
- B1-730 (vespatn/B1-730)
- B1-730HD (vespa/B1-730HD)
- B1-A71 (B1-A71/B1-A71)
- CloudMobile S500 (a9/S500)
- DA220HQL (DA220HQL/DA220HQL)
- DA221HQL (da1/DA221HQL)
- DA222HQL (da2/DA222HQL)
- DA222HQLA (da2/DA222HQLA)
- DA222HQLA (da222hqla/DA222HQLA)
- DA223HQL (da3/DA223HQL)
- DA241HL (DA241HL/DA241HL)
- DA245HQL (da245hql/DA245HQL)
- E130 (K3/E130)
- E140 (k4/E140)
- E210 (k5/E210)
- E310 (c4/E310)
- E310 (C4R/E310)
- E330 (C7/E330)
- E350 (C8/E350)
- E350 (C8n/E350)
- E380 (acer\_e3n/E380)
- G1-715 (G1-715/G1-715)
- G100W (maya/G100W)
- I110 (I1/I110)
- Icona One 7 (vespa/B1-730HD)
- Iconia One 7 (G1-725/G1-725)
- Iconia One 7 (vespa/B1-730HD)
- Iconia One 7 (vespa2/B1-750)
- Iconia One 7 (vespatn/B1-730)
- Iconia One 8 (vespa8/B1-810)
- Iconia Tab 7 (acer\_aprilia/A1-713)
- Iconia Tab 7 (acer\_apriliahd/A1-713HD)
- Iconia Tab 8 (ducati2fhd/A1-840FHD)
- Iconia Tab 8 (ducati2hd/A1-840)
- Iconia Tab 8 (ducati2hd3g/A1-841)
- Iconia Tab A100 (VanGogh) (vangogh/A100)
- Iconia Tab A100 (VanGogh) (vangogh/A101)
- Iconia TalkTab 7 (acer\_a1\_724/A1-724)
- Liquid (a1/Acer Liquid)
- Liquid (a1/Acer S100)
- Liquid (a1/Liquid)
- Liquid C1 (I1/I110)

- Liquid E2 (C11/V370)
- Liquid E3 (acer\_e3/E380)
- Liquid E3 (acer\_e3n/E380)
- Liquid E3S (acer\_ZXR/Z130)
- Liquid E600 (e600/E600)
- Liquid E700 (acer\_e39/E39)
- Liquid Jade (acer\_S55/S55)
- Liquid Metal (a4/Liquid Metal)
- Liquid MT (a4/Liquid MT)
- Liquid S1 (a10/S510)
- Liquid S2 (a12/S520)
- Liquid S3 (s3/S53)
- Liquid X1 (s3/S53)
- Liquid Z200 (acer\_z200/Z200)
- Liquid Z205 (acer\_z205/Z205)
- Liquid Z205 (acer\_z205p/Z205)
- Liquid Z3 (acer\_ZXR/Z130)
- Liquid Z3 (ZX/Z130)
- Liquid Z4 (acer\_Z6/Z160)
- Liquid Z410 (acer\_z410/Z410)
- Liquid Z5 (acer\_ZXL/Z150)
- Liquid Z500 (acer\_Z500/Z500)
- M3-2200 (da2/M3-2200)
- N3-2200 (da2/N3-2200)
- Picasso (picasso/A500)
- Picasso (picasso/A501)
- Picasso (ventana/A500)
- Picasso (ventana/G100W)
- Picasso (ventana/TPA60W)
- S300 (a5/S300)
- S500 (a9/S500)
- Stream (a3/Stream)
- TA2 (ta2/TA272HUL)
- TA272HUL (ta2/TA272HUL)
- Tab 7 (td070va1/TD070VA1)
- TD600 (T603T/TD600)
- TPA60W (maya/TPA60W)
- Z110 (Z1/Z110)
- Z120 (Z2/Z120)

## **Allfine**

- Allfine M721 (86S/M721)
- Allfine PC1038Q (fine10\_Joy/PC1038Q)

## **Alphascan**

- SAT2242 WorkTab (ADP\_WW/G2SMNT)

## **Amplify**

- TR10CD3 (TR10CD3\_1/TR10CD3)
- TR10CD3 (TR10CD3\_2/TR10CD3)

## **AMTC**

- AMTC MD1001 Tablet (MD1001/MD1001)
- AMTC MD7008 (MD7008A/MD7008)
- AMTC MD7081 (MD7081A/MD7081)

## **Anydata**

- Aquaris I8 (bq\_Aquaris/bq Aquaris)
- ASP320Q\_ANDi (ASP320Q\_GSM/ASP320Q\_ANDi)
- Auchan MID7317CP Tablet (MID7317CP/MID7317CP)
- Carrefour CT710 (M755ND/CT710)
- Carrefour CT720 / Emdoor EM63 Tablet (EM63/EM63)
- Coby MID1065 (MID1065/MID1065)
- COBY MID7055 (MID7055/MID7055)
- Coby MID7065 (MID7065/MID7065)
- Coby MID8065 (MID8065/MID8065)
- D2-721G (D2-721G/D2-721G)
- D2-727G (D2-727/D2-727)
- Digix TAB-840\_G (TAB-840\_G/TAB-840\_G)
- DOPO GMS-718 Tablet / Discovery (DT088/GS-718)
- DOTPAD DP3D8 / Gadmei (E8-3D/DP3D8)
- ematic EGP008 (EGP008/EGP008)
- ematic EGP010 (EGP010/EGP010)
- ematic EGS004 (EGS004/EGS004)
- ematic EGS102 (EGS102/EGS102)
- essentielb ST8003/FT8001 Tablet (M805ND/Smart'TAB 8003)
- Eviant MT8000 (PDM829MD/MT8000)
- Garmin nuvi3590 (scorpio/nuvi 3590)
- Garmin nuvi3595 (scorpio/nuvi 3595)
- Grundig GR-TB10S Tablet (GR-TB10S/GR-TB10S)
- HCL ME TABLET PC U2 (M712MC/U2)
- HKC P771A (P771A\_WIFI/P771A)
- HKC P774A (P774A/P774A)
- HKC P776A (P776A/P776A)
- HKC P778A (HKCP778A/P778A)
- HKC P886A (P886A/P886A)
- HS\_7DTB14 (HS\_7DTB14/HS\_7DTB14)
- iCraig CMP748 (CMP748/CMP748)
- iCraig CMP749 (CMP749/CMP749)
- Insignia NS-13T001 Tablet (oracle/NS-13T001)
- Jiateng JT1241 (JT1241/JT1241)
- Lazer MD7305 Tablet / AMTC (MD7305/MD7305)

- Le Pan S (oracle/Le Pan S)
- Leader I10A-LE (I10A-LE/I10A-LE)
- LePanII (LePanII\_wifi/LePanII)
- Mach\_Speed Trio G2 Tablet (Trio\_Stealth\_G2/G2)
- Marquis Tablet (marquis\_tablet/Marquis\_MP977)
- Matsunichi M97 (oracle/M97)
- Monster M7 Tablet (MONSTERM7/M7)
- Nextbook Next7D12 Tablet (M757ND/Next7D12)
- Nextbook Next7P12 (M727MC/Next7P12)
- Nextbook NX007HD Tablet (M7000ND/NX007HD)
- Nextbook NX008HD8G Tablet (M8000ND/NX008HD8G)
- Nextbook NX008HI Tablet / Carrefour CT810 (M909NP/NX008HI)
- Pendo PNDPP48GP (PNDPP48GP/PNDPP48GP)
- Philips W336 (Crane/Philips W336)
- Philips W536 (Philips\_WG-MANTO-RU\_B/Philips W536)
- Philips W626 (sangfei73\_gb/W626)
- Philips W632 (robot/Philips W632)
- Philips W832 (Philips\_WG-ROVER-RU\_A/Philips W832)
- Proscan PLT7223G (PLT7223G/PLT7223G)
- Proscan PLT7777 (AMLMID710K/PLT7777)
- Proscan PLT8223G (PLT8223G/PLT8223G)
- RCA RCT6078W2 (AMLEM62/RCT6078W2)
- RCA RCT6078W2 (EM62/RCT6078W2)
- TecToy TT-2500 (AML757ND/TECTOYTT2500)
- Visual Land Prestige 7D (PRO7D/PRO7D)
- Vivitar Camelio Tablet (PI070H04CA/Camelio Family tablet)
- Vivitar XO Tablet (PI070H08XO/XO Learning tablet)
- Zeki TBDG773 (TBDG773/TBDG773)

## **AOC**

- A2272PWHT (AOC\_WW/G2SMNT)
- AOC-A2272PW4T (AOC\_WW/G3SMNTA22)
- AOC-A2272PW4T (AOC\_WW/G3SMNTA24)
- AOC-A2472PW4T (G3SMNTA24/G3SMNTA24)

## **APEX**

- TM785CH (tm785ch/TM785CH)

## **Archos**

- 101 Childpad (A101CHP/ARCHOS 101 CHILDPAD)
- 101 Cobalt (AC101CO/Archos 101 Cobalt)
- 101 G9 (A101/ARCHOS 101G9)
- 101 Neon (A101NE/Archos 101 Neon)
- 101 Platinum (A101PL/ARCHOS 101 PLATINUM)
- 101 Titanium (A101TI/ARCHOS 101 Titanium)

- 101 Xenon (a101xe/Archos 101 Xenon)
- 101 XS (A101XS/ARCHOS 101G10)
- 101XS2 (AC101XS2/ARCHOS 101 XS 2)
- 40 Titanium (a40ti/Archos 40 Titanium)
- 45 Platinum (msm8625/Archos 45 Platinum)
- 45 Titanium (a45ti/Archos 45 Titanium)
- 50 Oxygen (a50ox/Archos 50 Oxygen)
- 50 Platinum (msm8625/Archos 50 Platinum)
- 50 Titanium (a50ti/Archos 50 Titanium)
- 53 Platinum (msm8625/Archos 53 Platinum)
- 53 Titanium (a53ti/Archos 53 Titanium)
- 70 Cobalt (AC70CO/ARCHOS 70 Cobalt)
- 70 Neon (ac70ne/Archos 70 Neon)
- 70 Titanium (A70TI/ARCHOS 70 Titanium)
- 70 Xenon (a70xe/Archos 70 Xenon)
- 70b Titanium (A70BTI/ARCHOS 70b TITANIUM)
- 79 Platinum (AC79PL/ARCHOS 79 Platinum)
- 79 Xenon (a79xe/Archos 79 Xenon)
- 80 Carbon (AC80CA/ARCHOS 80 Carbon)
- 80 Childpad (A80CHP/ARCHOS 80 CHILDPAD)
- 80 Cobalt (A80CO/ARCHOS 80 COBALT)
- 80 G9 (A80/ARCHOS 80G9)
- 80 Platinum (A80PL/ARCHOS 80 Platinum)
- 80 Titanium (A80TI/ARCHOS 80 TITANIUM)
- 80 Xenon (A80XE/Archos 80 Xenon)
- 80 XS (A80XSK/ARCHOS 80XSK)
- 80b Platinum (A80BPL/ARCHOS 80b PLATINUM)
- 90 Neon (a90ne/Archos 90 Neon)
- 90b Neon (ac90bne/Archos 90b Neon)
- 97 Carbon (A97C/ARCHOS 97 CARBON)
- 97 Cobalt (AC97CO/Archos 97 Cobalt)
- 97 Platinum (A97PL/ARCHOS 97 Platinum)
- 97 Titanium HD (A97TIHD/ARCHOS 97 TITANIUMHD)
- 97 Xenon (A97XE/ARCHOS 97 XENON)
- 97b Platinum (AC97BPL/ARCHOS 97b PLATINUM)
- 97b Titanium (A97BTI/ARCHOS 97B TITANIUM)
- Archos 101 Copper (ac101cv/Archos 101 Copper)
- Archos 101 Internet Tablet (A101S/Archos 101 Internet Tablet)
- Archos 101 Xenon (ac101cxe/Archos 101c Xenon)
- Archos 101b Neon (ac101bne/Archos 101b Neon)
- Archos 101b Platinum (ac101bpl/Archos 101b Platinum)
- ARCHOS 101G9 (A101S/ARCHOS 101G9)
- Archos 59 Titanium (ac59ti/Archos 59 Titanium)
- Archos 70 Copper (ac70cv/Archos 70 Copper)
- Archos 70b Cobalt (a70bco/Archos 70b Cobalt)
- Archos 70b Xenon (ac70bx/Archos 70b Xenon)
- Archos 70c Cobalt (ac70cco/Archos 70c Cobalt)
- Archos 70it 2 (A70it2/ARCHOS 70it2)
- Archos 70it 2 (A70it2/ARCHOS 70it2G8)
- Archos 79 Cobalt (ac79co/Archos 79 Cobalt)
- Archos 80 Helium (ac80he/Archos 80 Helium 4G)

- Archos 80 Internet Tablet (A80S/Archos 80 Internet Tablet)
- Archos 80b xenon (ac80bx/Archos 80b Xenon)
- ARCHOS 80G9 (A80S/ARCHOS 80G9)
- ARCHOS 90 Copper (ac90cv/Archos 90 Copper)
- Archos ArcBook (a101db/Archos 101 DB)
- Auchan Qilive 40 (ql40/Qilive 40)
- Auchan QiLive 45 (ql45/Qilive 45)
- Auchan QiLive 50 (ql50/Qilive 50)
- Auchan Qilive8 (QiLive8/QiLive 8)
- Auchan Qilive8QC (QiLive8QC/QiLive 8QC)
- Auchan Qilive97 (QiLive97/QiLive 97)
- Auchan Qilive97R (QiLive97R/QiLive 97R)
- Auchan Selecline 10 (SELECLINE10/Selecline 10)
- Bush Mytablet 2 (a80bu/Bush Mytablet 2)
- Bush MyTablet 7 (ac70bu/BUSH 7.0 TABLET)
- ChefPad (A97CFP/Archos Chefpad)
- FamilyPad 2 (A133FP2/ARCHOS FAMILYPAD 2)
- GamePad (A70GP/ARCHOS GAMEPAD)
- GamePad 2 (A70GP2/ARCHOS GAMEPAD2)
- HomeSmartphone d800 (d800/BT Home SmartPhone S II)
- Kuno (KUNO4/KUNO4)
- KUNO 4+ (kuno4p/KUNO 4+)
- My Tablet 101 (ac101bu/BUSH 10.1 TABLET)
- QiLive 101 (aqilive101/QILIVE 101)
- Qilive 53 (msm8625/Qilive 53)
- Qilive 7 (qilive7/Qilive 7)
- Qilive 97R2 (qilive97r2/Qilive 97R-2)
- Qilive79 (Qilive79/Qilive 79)
- Qilive7V2 (ql70v2/Qilive 70v2)
- Quechua Phone 5 (A50RG11/Quechua Phone 5)
- Quechua Tablet 8 (A80RG11/A80RG11)
- Smart Home Tablet (hometablet/Archos Smart Home Tablet)
- TV Connect (LUDO/ARCHOS LUDOG10)

## **ARCHOS**

- 101b XS2 (ac101bxs2/ARCHOS 101b XS2)
- 79 Neon (a79ne/Archos 79 Neon)
- Archos 64 Xenon (ac64xe/Archos 64 Xenon)

## **Astak**

- NEOS (Wenu/NEOS)

## **Astro Queo**

- A712 (A712/A712)

## AstroQueo

- polaris\_wifionly (polaris-wifionly/A912)

## Asus

- Asus A10 (a10/Asus A10)
- ASUS ETBW11AA (ETBW11AA/ETBW11AA)
- ASUS ETBW11AA (TF101G/ETBW11AA)
- ASUS Fonepad (K00G/K00G)
- ASUS Fonepad 7 (K01F/K01F)
- ASUS Fonepad 7 LTE (K00Y/K00Y)
- ASUS Fonepad 8 (K016\_2/K016)
- ASUS Fonepad 8 (K016\_3/K016)
- ASUS Fonepad 8 (K016\_4/K016)
- ASUS Fonepad 8(FE380CG) (K016\_1/K016)
- ASUS Fonepad ME371MG (ME371MG/ME371MG)
- Asus Fonepad Note 6 (K00G/K00G)
- Asus MeMo Pad 7 (K012\_2/K012\_2)
- ASUS MeMO Pad 7 (ME572CL) (K00R/K00R)
- ASUS MeMO Pad FHD 10 (ME302KL/ME302KL)
- ASUS MeMO Pad HD7 Dual SIM (ASUS-K00S/ASUS K00S)
- ASUS MeMo Pad ME302C (ME302C/ME302C)
- ASUS MeMo Pad ME302CASUS MeMo Pad ME302C (ME302C/ME302C)
- ASUS MeMO Pad Smart 10 (ME301T/ME301T)
- ASUS Pad (K010/K010)
- ASUS Pad TF300T (TF300T/ASUS Pad TF300T)
- Asus Pad TF303CL (K014/K014)
- ASUS Trans AiO P1801 (P1801-T/ASUS Tablet P1801-T)
- ASUS TransBook Trio (TX201LA/TX201LA)
- ASUS Transformer 300 (TF300T/ASUS Transformer 300)
- ASUS Transformer AiO P1801 (P1801-T/ASUS Tablet P1801-T)
- ASUS Transformer AiO P1802 (P1802-T/ASUS Tablet P1802-T)
- ASUS Transformer Book Trio (TX201LA/TX201LA)
- ASUS Transformer Pad (K010/K010)
- ASUS Transformer Pad (K010\_1/K010)
- Asus Transformer Pad (K018/K018)
- ASUS Transformer Pad Infinity (TF700KL/ASUS Transformer Pad TF700KL)
- ASUS Transformer Pad TF300T (TF300T/ASUS Transformer Pad TF300T)
- ASUS Transformer Pad TF300TG (TF300TG/ASUS Transformer Pad TF300TG)
- ASUS Transformer Pad TF300TL (TF300TL/ASUS Transformer Pad TF300TL)
- Asus Transformer Pad TF303CL (K014/K014)
- ASUS Transformer Pad TF502T (TF502T/ASUS Transformer Pad TF502T)
- ASUS Transformer Pad TF600T (TF600T/ASUS Transformer Pad TF600T)
- ASUS ZenWatch (anthias/ASUS ZenWatch)
- Cube (asus\_google\_cube/asus\_google\_cube)
- Eee Pad (EeePad/Transformer TF101)
- Eee Pad (EeePad/Transformer TF101G)
- Eee Pad Slider (SL101/Slider SL101)



- Eee Pad TF101 (TF101/TF101)
- Eee Pad TF101 (TF101/Transformer TF101)
- Eee Pad TF101-WiMAX (TF101-WiMAX/TF101-WiMAX)
- Eee Pad Transformer (TF101/Transformer TF101)
- Eee Pad Transformer Prime (TF201/TF201)
- Eee Pad Transformer Prime (TF201/Transformer Prime TF201)
- Eee Pad Transformer Prime (TF201/Transformer TF201)
- EeePad Slider SL101 (SL101/Slider SL101)
- Fonepad 7 (FE375CG) (K019\_1/K019)
- Fonepad 7 (FE375CXG) (K019\_3/K019)
- Fonepad 7 (FE375CXG) (K019\_4/K019)
- Fonepad 7 (K00Z/K00Z)
- Fonepad 7 (K012/K012)
- Fonepad 7 (K01N\_1/K01N)
- Fonepad 7 (K01N\_2/K01N)
- Fonepad 7(FE375CXG) (K019\_2/K019)
- Fonepad HD7 (K00E/K00E)
- Garmin-Asus A10 (a10/Garmin-Asus A10)
- K00F (K00F/K00F)
- K00L (K00L/K00L)
- ME171 (EP71/ME171)
- ME173X (ME173X/ME173X)
- ME302KL (ME302KL/ME302KL)
- MeMO PAD (me172v/ME172V)
- MeMO Pad 7 (K013/K013)
- MeMO Pad 7 (K013\_1/K013)
- MeMO Pad 7 (K017/K017)
- MeMO Pad 7 (K01A/K01A)
- MeMO Pad 7 ME572C (K007/K007)
- MeMO Pad 8 (K011/K011)
- MeMO Pad 8 (K011\_1/K011)
- MeMO pad 8 AST21 (K015/AST21)
- MeMO pad 8 ME581C (K01H/K01H)
- MeMO pad 8 ME581CL (K015/K015)
- MeMo Pad HD 7 (K00U/K00U)
- Memo Pad HD7 Dual SIM (ASUS-K00S/ASUS K00S)
- MeMO Pad ME103K (K01E\_1/K01E)
- MeMO Pad ME103K (K01E\_2/K01E)
- Nexus 7 (2012) (grouper/Nexus 7)
- Nexus 7 (2012) (tilapia/Nexus 7)
- Nexus 7 (2013) (deb/Nexus 7)
- Nexus 7 (2013) (flo/Nexus 7)
- Nexus Player (fugu/Nexus Player)
- Nuvifone (a50/Garmin-Asus A50)
- PadFone (PadFone/PadFone)
- PadFone 2 (A68/PadFone 2)
- PadFone E (ASUS-T008/PadFone T008)
- PadFone Infinity (A80/PadFone Infinity)
- PadFone Infinity (ASUS-A80/PadFone Infinity)
- PadFone Infinity Lite (ASUS-A80/PadFone Infinity)
- PadFone mini (ASUS-T00C/PadFone T00C)

- PadFone Mini (ASUS-T00C/PadFone T00C)
- Padfone mini (ASUS-T00S/ASUS\_T00T)
- PadFone mini (ASUS\_T00E/ASUS\_T00E)
- PadFone S (ASUS\_T00N/ASUS\_T00N)
- Padfone S (ASUS\_T00N/ASUS\_T00N)
- PadFone T004 (ASUS-A86/PadFone T004)
- Padfone X (ASUS-T00D/ASUS PadFone X)
- PadFone Xmini (ASUS-T00S/ASUS PadFone X mini)
- PadFone-T004 (ASUS-A86/PadFone T004)
- T101TA (T10xTA/T10xTA)
- TF700T (TF700T/ASUS Pad TF700T)
- TF700T (TF700T/ASUS Transformer Pad TF700T)
- Trans Pad Infinity (K00C/K00C)
- Transformer Pad (K00C/K00C)
- Transformer Pad Infinity (K00C/K00C)
- Transformer Pad TF303K (K01B/K01B)
- Transformer TF101 (ventana/Transformer TF101)
- Transformer TF101G (TF101G/Transformer TF101G)
- ZenFone 4 (ASUS\_T00I/ASUS\_T00I)
- ZenFone 4 (ASUS\_T00Q/ASUS\_T00Q)
- ZenFone 5 (ASUS\_T00F/ASUS\_T00F)
- ZenFone 5 (ASUS\_T00F1/ASUS\_T00F)
- ZenFone 5 (ASUS\_T00J/ASUS\_T00J)
- ZenFone 5 (ASUS\_T00J1/ASUS\_T00J)
- ZenFone 5 (ASUS\_T00K/ASUS\_T00K)
- ZenFone 5 LTE (ASUS\_T00P/ASUS\_T00P)
- ZenFone 6 (ASUS\_T00G/ASUS\_T00G)
- ZenFone 6 (ASUS\_Z002/ASUS\_Z002)

## **ASUS**

- MeMO Pad 7 (K013/K013)
- MeMO Pad 7 (K013\_1/K013)
- MeMO Pad 8 (K011\_1/K011)
- TX201LAF (TX201LAF/TX201LAF)

## **AtGames-zooti**

- ZOOTI PAD ZT-701 (ZT-701/ZT-701)

## **Auchan**

- Selecline X35T (X35T/X35T)

## **Audiovox**

- Audiovox T752 Tablet (AD7L/T752)
- Audiovox T852 Tablet (MID30801/T852)

## **AV**

- AV10 (RCT6203W46/AV10)
- AV7 (RCT6773W22/AV7)

## **AVOCA**

- STB7012 (STB7012/STB7012)
- STB7013 (AVOCA/STB7013)
- STB8098 (STB8098/STB8098)
- STB9097 (STB9097/STB9097)

## **AZBox**

- AZDroid (AZDroid/AZDroid)

## **AZPEN**

- AZPEN A720 (wing-inet/A720)
- AZPEN A920 (wing-ibt/A920)

## **Barnes and Noble**

- NOOK® HD (hummingbird/BNTV400)
- NOOK® HD+ (ovation/BNTV600)

## **Beeline**

- Beeline Tab (Beeline\_Tab/Beeline Tab)

## **BenQ**

- A3 (A3/A3)
- Agora 4G (Agora\_4G/Agora 4G)
- BenQ A3 (A3/A3)
- BenQ A3c (BenQ\_A3c/BenQ A3c)
- BenQ F3 (F3/F3)
- BenQ F4 (benq\_a3s/BenQ A3s)
- BenQ F5 (BENQ\_F5/BenQ F5)
- BenQ F5 (F5/BenQ F5)
- BenQ F5\_06 (F5/F5\_06)
- BenQ F5\_13 (F5/F5\_13)
- BenQ F5\_15 (F5/F5\_15)
- BenQ F5\_16 (F5/F5\_16)

- BenQ T3\_08 (T3\_17A/BenQ T3)
- JM-250 (JM-250/JM-250)
- PT2200 (PT2200/PT2200)
- T3 (T3/BenQ T3)

## **Best Buy**

- MG103 (K010/K010)

## **Bigben**

- BB8252 (Bigben-TAB/BB8252)
- GAMETAB-ONE (GAMETAB-ONE/GAMETAB-ONE)

## **Bitmore**

- Bitmore Tab870 (Tab870/Tab870)
- GTAB700 (GTAB700/NID\_7010)
- GTAB900 (GTAB900/S952)
- LUXYA MID704DC Tablet / Bitmore Tab770 (MY7317P/Tab770)

## **Blaupunkt**

- Endeavour101 (Blaupunkt/Endeavour101)

## **BLUEDOT**

- BLUEDOT BNT-700K (BNT-700K/BNT-700K)

## **Booken**

- Cybook Tablet (cybtt10\_bk/Cybook-Tablet)

## **Borqs**

- Falcon (falcon/falcon)

## **Bouygues Telecom**

- Bouygues Telecom Bs 451 (Bs\_451/Bs 451)

## **bq**

- Aquaris E10 3G (Aquaris\_E10\_3G/Aquaris E10 3G)

- Aquaris E4 (Aquaris\_E4/Aquaris E4)
- Aquaris E4.5 (Aquaris\_E45/Aquaris E4.5)
- Aquaris E5 (Aquaris\_E5/Aquaris E5)
- Aquaris E5 FHD (Aquaris\_E5\_FHD/Aquaris E5 FHD)
- Aquaris E5 HD (Aquaris\_E5\_HD/Aquaris E5 HD)
- Aquaris E6 (Aquaris\_E6/Aquaris E6)
- bq Edison 3 3G (Edison\_3\_3G/Edison 3 3G)
- Edison 3 (Edison\_3/Edison 3)
- Edison\_3\_mini (Edison\_3\_mini/Edison 3 mini)

## **Brightstar**

- M8046IU (M8047IU/M8047IU)

## **Bunbungame**

- MiSS (MiSS/MiSS)

## **Bunbungame**

- KALOS (FG6Q\_N/KALOS)

## **Bush**

- MyTablet 79 (ac79bu/BUSH 7.85 TABLET)

## **BYD**

- DynaVox T10 (T10/T10)
- FarEastone Smart 502 (Smart502/Smart 502)
- INHON G3 (G3/G3)
- K-Touch E815 (E815/E815)
- M601 (M601/M601)
- Moii E996+ (E996plus/moii E996+)
- Prestigio PAP5430 (PAP5430/PAP5430)
- PT452E (PT452E/Digma Linx 4.5 PT452E)
- SI4301 (SI4301/SI4301)
- Smart 401 (tianyu72\_wet\_jb3/Smart 401)
- Smart 402 (hawaii\_garnet\_c\_w68tk/Smart402)
- Solo S350 (S350/S350)
- SOLO S450 (S450/S450)
- SP355AWG (msm7627a\_sku3/SP355AWG)
- WISKY W032I (W032I/W032I)
- X910 (X910/XOLO X910)
- Zippers (Zippers/Vexia Zippers)

## **C&M**

- Smart TV II (stb\_catv\_cnm/SX930C-CC)

## **Camelus**

- Camelus L10 (TR-10HBT/L10)
- Camelus L7 (TR-7U/L7)

## **Carrefour**

- Carrefour CT1020W (M1010FP/CT1020W)
- Carrefour CT820 (M878LP/CT820)
- CT1000 (Carrefour/CT1000)

## **Casper**

- TA80CA2 (TA80CA2\_1/TA80CA2)
- VIA\_T41 (VIA\_T41/VIA\_T41)

## **CAT**

- CAT B15 (TOUGH/B15)
- CAT B15Q (B15Q/B15Q)
- S50 (CatS50/S50)

## **Cat**

- B15Q (CatB15Q/B15Q)

## **Cellon**

- A27 (C8680/A27)
- A5801 (C8680/A5801)
- Alpha Ice (M8047/Alpha Ice)
- C3668 (C3668/C3668)
- CI (Dream-C1/CI)
- CJ-1984 (C8690/C8690)
- CJ-1984 (C8690/CJ-1984)
- CJ-1984 (C8690/ELITE 4.7 HD)
- EI (Dream-E1/EI)
- EIII (Dream-E3/EIII)
- EK-8680 (C8680/EK-8680)
- Explosion (C8690/Explosion)
- Houston (C8680/Houston)
- HW-W900 (C8690/HW-W900)

- HWW820 (C8680/HW-W820)
- i-mobile IQ X (M8047SA/i-mobile IQ X)
- i-mobile IQ X (M8047SA/i-mobile IQ XA)
- i-mobile IQ X2A (M8050SA/i-mobile IQ X2)
- i-mobile IQ X2A (M8050SA/i-mobile IQ X2A)
- i-STYLE7 (c8669SA/i-mobile i-STYLE 7)
- i-STYLE7A (c8669SA/i-mobile i-STYLE 7A)
- ICON (ICON/ICON)
- IQ 1.1 (IQ1-1/i-mobile IQ1-1)
- iris pro 30 (pro30/iris pro 30)
- Linx PS474S (C8690/Linx PS474S)
- Mach (C8680/Mach)
- Newman N2 (C8690/Newman N2)
- Q (M8047XT/Q)
- S21 (S21/Q-Smart S21)
- SI (Dream-S1/SI)
- SM55 (C8660/C8660)
- SM55 (C8660/SM55)
- Starmobile KNIGHT (KNIGHT/Starmobile KNIGHT)
- starTIM1 (starTIM1/starTIM1)
- VEON\_C8680 (C8680/VEON\_C8680)

## **Cherry Mobile**

- Cherry W900 LTE (a17/W900 LTE)

## **China**

- CP8021 (Coolpad8021/Coolpad 8021)

## **CHN TELECOM**

- CHN-UCAN MJ (lefhd/CHN-UCAN MJ)

## **Cisco**

- Cisco Desktop Collaboration Experience DX70 (CP-DX70/CP-DX70)
- Cisco Desktop Collaboration Experience DX80 (CP-DX80/CP-DX80)

## **CJ HelloVision**

- Hello TV Smart (SX930C\_CJ/SX930C\_CJ)

## **Clementoni**

- Clempad 4.4 Basic Special (Clempad2\_special/Clempad2\_special)

- Clempad 4.4 Plus (Clempad2\_plus/Clempad2\_plus)
- Clempad 4.4 XL (Clempad2\_XL/Clempad2\_XL)
- My first Clempad 4.4 Basic Special (MFC2\_Special/MFC2\_Special)
- My first Clempad 4.4 Plus (MFC2\_Plus/MFC2\_Plus)

## **ClickN Kids**

- ClickN Kids (g04e/CK07T)

## **CMCC**

- M811 (m811/M811)
- M811 (m811hk/M811)

## **COMIO**

- AD7003 (AD7003/AD7003)

## **Compal**

- A300 (CAP7/A300)
- A600 (CAP5/A600)
- A600 (CAP6/A600)
- A8 (CAP7/A8)
- Andy (cap2/Andy)
- AX 8.6 (penguin/AX 8.6)
- COSMO DUO (CA22/COSMO DUO)
- TANK 4.5 (ka09/TANK 4.5)
- W12 (CAP7/W12)

## **Condor**

- C1+ (C1Plus/C1+)
- C\_5 (u970\_5/C-6)
- HS-U939 (u939e\_6/HS-U939)

## **CONDOR**

- PHS-601 (phs601/PHS-601)

## **Coolpad**

- 5110 (msm7627a\_sku3/5110)
- 5832 (CP5832/5832)
- 5860 (msm7627\_surf/5860)



- 5860A (msm7627a\_sku3/5860A)
- 5860E (CP5860E/5860E)
- 5860S (msm7627a\_5860S/5860S)
- 5870 (msm7627a\_5870/5870)
- 5880 (CP5880/5880)
- 5910 (msm7627a\_cp5910/5910)
- 7230 (msm7627a\_7230/7230)
- 7260 (msm7627\_surf/7260)
- 7260A (msm7627a\_sku3/7260A)
- 7266 (msm7627a\_7266/7266)
- 801E (801E/801E)
- 801EM (801EM/801EM)
- 8150 (dkb/8150)
- 8180 (dkb/8180)
- 8710 (8710/8710)
- 8810 (dkb/8810)
- 8870 (CP8870/8870)
- 8950 (msm8660\_CP8950/8950)
- 8970L (8970L/Coolpad 8970L)
- 9120 (msm7627a\_9120/9120)
- 9900 (msm8660\_9900/9900)
- Bs501 (cp8870u/Bs 501)
- CM001 (CoolpadCM001/Coolpad CM001)
- Coolmini (Coolmini/Coolmini)
- Coolpad 3700A (3700A/CP3700A)
- Coolpad 5010 (msm7627a\_ea58/Coolpad 5010)
- Coolpad 5200 (Coolpad5200/Coolpad 5200)
- Coolpad 5210 (msm7627a\_ea92/Coolpad 5210)
- Coolpad 5216D (5216D/Coolpad 5216D)
- Coolpad 5218S (msm8x25q\_a5y\_5218s/Coolpad 5218S)
- Coolpad 5219 (5219/Coolpad 5219)
- Coolpad 5820 (msm7627\_5820/Coolpad 5820)
- Coolpad 5891 (Coolpad5891/Coolpad 5891)
- Coolpad 5891S (Coolpad5891S/Coolpad 5891S)
- Coolpad 5951 (Coolpad5951/Coolpad 5951)
- Coolpad 7019 (7019\_msm7627a/Coolpad 7019)
- Coolpad 7061 (CP7061/Coolpad 7061)
- Coolpad 7230S (Coolpad7230S/Coolpad 7230S)
- Coolpad 7232 (CP7232/Coolpad 7232)
- Coolpad 7270 (Coolpad7270/Coolpad 7270)
- Coolpad 7270I (7270I/Idea ULTRA Pro)
- Coolpad 7275 (CP7275/Coolpad 7275)
- Coolpad 7290 (Coolpad7290/Coolpad 7290)
- Coolpad 7295A (Coolpad7295A/Coolpad 7295+)
- Coolpad 7295A (Coolpad7295A/Coolpad 7295A)
- Coolpad 7296 (Coolpad7296/Coolpad 7296)
- Coolpad 8079 (Coolpad8079/Coolpad 8079)
- Coolpad 8122 (Coolpad8122/Coolpad 8122)
- Coolpad 8198W (Coolpad8198W/Coolpad 8198W)
- Coolpad 8297D (Coolpad8297D/Coolpad 8297D)
- Coolpad 8670 (Coolpad8670/Coolpad 8670)

- Coolpad 8730L (Coolpad8730L/Coolpad 8730L)
- Coolpad 8732 (Coolpad8732/Coolpad 8732)
- Coolpad 8736 (8736/Coolpad 8736)
- Coolpad 9080W (Coolpad9080W/Coolpad 9080W)
- Coolpad 9150W (Coolpad9150W/Coolpad 9150W)
- Coolpad 9190\_T00 (Coolpad9190\_T00/Coolpad 9190\_T00)
- Coolpad 9976A (Coolpad9976A/Coolpad 9976A)
- Coolpad Flo (7560T/Coolpad Flo)
- Coolpad W706+ (msm7627\_w706/Coolpad W706+)
- Coolpad W706+ (msm7627\_w706T/Coolpad W706+)
- Coolpad W708 (msm7627\_w708/Coolpad W708)
- Coolpad5218D (msm7627a\_a5y\_5218d/Coolpad\_5218D)
- Coolpad5315 (msm8610\_s10\_cp5315/Coolpad 5315)
- Coolpad5872 (Coolpad5872/Coolpad 5872)
- Coolpad5879T (Coolpad5879T/Coolpad 5879T)
- Coolpad5891Q (Coolpad5891Q/Coolpad 5891Q)
- Coolpad5892 (Coolpad5892/Coolpad 5892)
- Coolpad5950 (Coolpad5950/Coolpad 5950)
- Coolpad5950T (Coolpad5950T/Coolpad 5950T)
- Coolpad7270\_W00 (Coolpad7270\_W00/Coolpad 7270\_W00)
- Coolpad7295C (Coolpad7295C/Coolpad 7295C)
- Coolpad7295C\_C00 (Coolpad7295C\_C00/Coolpad 7295C\_C00)
- Coolpad7295I (Coolpad7295I/Spice Mi-515)
- Coolpad7295T (Coolpad7295T/Coolpad 7295T)
- Coolpad7298A (Coolpad7298A/Coolpad 7298A)
- Coolpad7320 (Coolpad7320/Coolpad 7320)
- Coolpad7728 (CP7728/Coolpad7728)
- Coolpad7920 (7920/Coolpad7920)
- Coolpad801ES (801ES/801ES)
- Coolpad8085Q (Coolpad8085Q/Coolpad8085Q)
- Coolpad8198T (8198T/Coolpad8198T)
- Coolpad8297 (Coolpad8297/Coolpad 8297)
- Coolpad8297W (Coolpad8297W/Coolpad 8297W)
- Coolpad8705 (Coolpad8705/Coolpad 8705)
- Coolpad8720L (Coolpad8720L/Coolpad 8720L)
- Coolpad8908 (8908/Coolpad8908)
- CP5108 (msm7627a\_a8\_5108\_new/Coolpad 5108)
- CP5210A (msm7627a\_d7\_5210a/Coolpad 5210A)
- CP5310 (cp5310/Coolpad 5310)
- CP5660S (5560S/5560S)
- cp7236 (msm8610\_w7\_cp7236/Coolpad 7236)
- CP8089 (CP8089/Coolpad 8089)
- CP8089Q (CP8089Q/Coolpad 8089Q)
- CP8295M (8295M/Coolpad8295M)
- CP8735 (8735/Coolpad 8735)
- CP8750 (8750/Coolpad8750)
- CP9190L (Coolpad9190L/Coolpad 9190L)
- CP9250L (Coolpad9250L/Coolpad 9250L)
- CP9970 (9970/Coolpad 9970)
- CPA520 (CoolpadA520/Coolpad A520)
- CPT1 (CoolpadT1/Coolpad T1)

- Forward\_EVOLVE (Forward\_EVOLVE/Forward\_EVOLVE)
- Idea ULTRA (Coolpad7295S/Idea ULTRA)
- Karbonn Titanium S5 Plus (Karbonn/Karbonn Titanium S5 Plus)
- MEDION P5001 (MEDION/MEDION P5001)
- MEDION P5001 (P5001/MEDION P5001)
- Mtag 353 (msm7627a\_ea92\_mts/Mtag 353)
- MTS-SP150 (msm7627\_SP150/MTS-SP150)
- N930 (CP9130/N930)
- Nivo (7560U/Nivo)
- PAP4000 (msm7627a\_PAP4000/PAP4000)
- Spice Mi-496 (Coolpad7268I/Spice Mi-496)
- STARADDICT III (cp8861u/STARADDICT III)
- Vodafone Smart 4G (cp8860u/Vodafone Smart 4G)
- VodafoneSmart4 (VodafoneSmart4/Vodafone Smart 4)
- VodafoneSmart4turbo (VodafoneSmart4turbo/Vodafone Smart 4 turbo)
- YL-Coolpad 9960 (9960/YL-Coolpad 9960)

### **Coolpad 5109**

- Coolpad 5109 (Coolpad5109/Coolpad 5109)

### **Coolpad 5217**

- Coolpad 5217 (msm8610/Coolpad 5217)

### **Coolpad 5219\_C00**

- Coolpad 5219\_C00 (5219\_C00/Coolpad 5219\_C00)

### **Coolpad 7620L**

- Coolpad 7620L (Coolpad7620L/Coolpad 7620L)

### **Coolpad 8702**

- Coolpad 8702 (Coolpad8702/Coolpad 8702)

### **Coolpad 8729**

- Coolpad 8729 (Coolpad8729/Coolpad 8729)

### **Coolpad 8971**

- Coolpad 8971 (8971/Coolpad 8971)

## **Coolpad 9970L**

- Coolpad 9970L (9970L/Coolpad 9970L)

## **Coolpad 9976T**

- Coolpad 9976T (Coolpad9976T/Coolpad 9976T)

## **Coolpad7296S**

- Coolpad7296S (Coolpad7296S/Coolpad 7296S)

## **Coolpad7298D**

- Coolpad7298D (Coolpad7298D/Coolpad 7298D)

## **CP5952**

- CP5952 (Coolpad5952/Coolpad 5952)

## **Crosscall**

- ODYSSEY (ODYSSEY3G/ODYSSEY)

## **Danew**

- Danew Dslide 1013 (Dslide1013/Dslide 1013)
- Danew Dslide 750 (Danew\_Dslide750/Dslide750)
- Dslide 710 (Dslide710/Dslide710)

## **DANEW**

- DANEW Dslide971DC (Dslide971DC/Dslide971DC)

## **DEA Factory**

- KTAB (KTAB/KTAB)

## **Dell**

- 101DL (streakpro/101DL)
- BizSmartPhone (venue/BizSmartPhone)
- Cloud Connect (capri\_wyse/CS-1A13)

- Dell Aero (Dell\_Grappa/Dell Aero)
- Dell Mini 5 (qsd8250\_surf/Dell Mini 5)
- Dell Streak (qsd8250\_surf/Dell Streak)
- Dell Streak 10 Pro (Streak10Pro/Dell Streak 10 Pro)
- Dell Streak 7 (streak7/Dell Streak 7)
- Dell V04B (streakpro/Dell V04B)
- Dell Venue (venue/Dell Venue)
- GS01 (streakpro/GS01)
- Mini\_3iG (Dell\_Grappa/Mini\_3iG)
- Streak (streak/001DL)
- Streak (streak/Dell M01M)
- Streak (streak/Dell Streak)
- streak7 (streak7/streak7)
- Venue 7 (LW/Venue 7 3741)
- Venue 7 (thunderbird/Venue 7 3730)
- Venue 7 (thunderbird/Venue 7 HSPA+)
- Venue 8 (BB/Venue 8 7840)
- Venue 8 (yellowtail/Venue 8 3830)
- Venue 8 (yellowtail/Venue 8 HSPA+)

### **Dell Venue 7**

- Venue 7 (Venue7/Venue 7 3740)
- Venue 7 (Venue7/Venue7 3740 LTE)
- Venue 7 (Venue7/Venue7 3740)

### **Dell Venue 8**

- Venue 8 (Venue8/Venue 8 3840)
- Venue 8 (Venue8/Venue8 3840 LTE)
- Venue 8 (Venue8/Venue8 3840)

### **DIFRNCE**

- DIT702201 (DIT702201/NID\_7010)

### **DigiLand**

- DL700D (DL700D/DL700D)
- DL785D (DL785D/PLT7803G)

### **Digilite**

- TA70CA1 (TA70CA1/TA70CA1)
- TA70CA2 (TA70CA2\_1/TA70CA2)
- TA70CA3 (TA70CA3\_1/TA70CA3)
- TR10CD1 (TR10CD1\_5/TR10CD1)

- TR10CS1 (TR10CS1\_3/TR10CS1)

## **Diginnos**

- Diginnos DG-D07S/GP (DG-D07SGP/DG-D07SGP)

## **Digital2**

- Digital2 Deluxe (nuclear-D2\_Deluxe/Digital2-Deluxe)
- Digital2 Platinum (D2-963G/Digital2 Platinum)
- Digital2 Plus (Digital2Plus/Digital2 Plus)

## **DigitalStream**

- DigitalStream DWA1015D Tablet (DWA1015D/DWA1015D)

## **Digitron**

- i-Buddie (TR10CD1\_10/TR10CD1)
- i\_Buddie (TR10CS1\_12/TR10CS1)

## **Digix**

- TAB-740\_G (TAB-740\_G/TAB-740\_G)

## **Ditigron**

- i-Buddie (TR10CD1\_11/TR10CD1)

## **DL**

- TA71CA1 (TA71CA1/TA71CA1)

## **DOPO**

- DOPO EM63 Tablet (EM63/EM63)
- DOPO GS-918 (GS\_918/GS-918)
- DP7856K (DP7856K/DP7856K)
- DPA23D (polaris-wifionly/DPA23D)
- DPM1081 (RCT6203W46/DPM1081)
- DPM7827 (RCT6773W22/DPM7827)

## **Doro**

- Liberto 820 (Liberto820/Doro Liberto 820)

## **Doro Liberto 810**

- Liberto 810 (Liberto810/Doro Liberto 810)
- Liberto 810 (Liberto810/Doro Liberto 810-orange)
- Liberto 810 (Liberto810\_S12/Doro Liberto 810)

## **Dreamax**

- DMX-ST7A (DMX-ST7A/DMX-ST7A)

## **EBN**

- NEBUPOS3 (UY3A/NEBUPOS3)

## **Edcon**

- Platiumm vp.1 (VerssedVP1/Verssed VP1)
- Platiumm vp.2 (VerssedVP2/Verssed VP2)

## **EG936D**

- Hisense (EG936D/HS-EG936D)

## **Ematic**

- EGD078 (EGD078/EGD078)
- EGD170 (EGD170/Ematic EGD170)
- EGD172 (EGD172/EGD172)
- EGD213 (EGD213/EGD213)
- EGQ337 (EGQ337/EGQ337)
- EGQ780 (EGQ780/EGQ780)
- Ematic EGD103 (EGD103/EGD103)
- Ematic EGQ307 (EGQ307/EGQ307)
- Ematic EGQ327M (EGQ327M/EGQ327M)
- Ematic EGS017 (EGS017/EGS017)
- Ematic ETH102 (ETH102/ETH102)
- EMATICEGS109 (EGS109/EGS109)
- FunTab 2 (FunTab2/FunTab2)
- Sprout Channel Cubby (Cubby/SproutChannelCubby)

## **EMDOOR**

- EM\_I8180 (em\_i8180/em\_i8180)

## **Emerson**

- Emerson EM749/748 (EM749\_748/EM749\_748)

## **EMTEC**

- EMTEC F400 (f400/f400)

## **Enspert**

- Carrefour CT1010 (Carrefour/CT1010)
- CINK KING (s9081/CINK KING)
- CINK KING (s9081/Cynus T2)
- CINK KING (s9081/freebit PandA)
- CINK KING (s9081/IMD501)
- CINK SLIM (s8073/CINK SLIM)
- CINK SLIM (s8073/Fly\_IQ442)
- CINK SLIM (s8073/WIKO-CINK SLIM)
- Cynus F3 (s7511/Cynus F3)
- DARKSIDE (s9301/Cinema)
- DARKSIDE (s9301/DARKSIDE)
- E-TAB (E-TAB/E-TAB)
- enspert\_e201 (e201/enspert\_e201)
- ESP\_E201V7 (e201/ESP\_E201V7)
- ESP\_E301BK (ESP\_E301/ESP\_E301BK)
- ESP\_E301V (ESP\_E301/ESP\_E301V)
- ESP\_E301VD (ESP\_E301/ESP\_E301VD)
- ESP\_E301VE (ESP\_E301/ESP\_E301VE)
- ITP-S100WD (illuminus/ITP-S100WD)
- Lazer X40E (X40E/X40E)
- MG (MGA930/A930)
- orion (orion/NGM Orion)
- STAIRWAY (s9111/STAIRWAY)
- vanitysmart (vanitysmart/NGM Vanity Smart)
- Wiko CINK FIVE (s9201/CINK FIVE)
- Wiko CINK FIVE (s9201/Cynus T5)
- WIKO CINK PEAX (s9091/CINK PEAX)
- WIKO CINK PEAX (s9091/EverClassic)
- WIKO CINK+ (s7505/CINKPLUS)
- WIKO SUBLIM (s9070/SUBLIM)

## **ENTITY**

- GDENTMY7317 (GDENTMY7317/GDENTMY7317)

## **ENVIZEN DIGITAL**



- ENVIZEN DIGITAL V917G (GK-MID9022/V917G)
- V100MD (V100MD/V100MD)

## **essentiellb**

- essentiellb ST7001 Tablet (ST7001/ST7001)
- Essentiellb- Black Diamond (bird77\_a\_cu\_ics2/Essentiellb-Black Diamond)
- Pyxis (pyxis\_boulangier/Essentiellb-Pixis)

## **EssentielB**

- EssentielB Smart'TAB 7800 (fiber-785q6/Smart'Tab\_7800)
- EssentielB Smart'TAB 9001 (fiber-smart/Smart'TAB 9001)

## **Etuline**

- ETL-S4521 (u939e\_2/ETL-S4521)
- ETL-S5042 (u970\_4/ETL-S5042)

## **EveryPad2**

- Lenovo (A3500F/EveryPad2)

## **Explay**

- 4Game (4Game/4Game)
- Air (Air/Air)
- Atom (Atom/Atom)
- ATV (ATV/ATV)
- Bit (Bit/Bit)
- Cosmic (Cosmic/Cosmic)
- Craft (Craft/Craft)
- Easy (Easy/Easy)
- Favorite (Favorite/Favorite)
- Fog (Fog/Fog)
- Fresh (Fresh/Fresh)
- Gravity (T4728/Gravity)
- Hit (Hit/Hit)
- Indigo (Indigo/Indigo)
- Joy TV (Joy\_TV/Joy\_TV)
- Light (Light/Light)
- M1 Plus (Fog/M1\_Plus)
- Onyx (Onyx/Onyx)
- Phantom (Phantom/Phantom)
- Prime (Prime/Prime)
- Pulsar (Pulsar/Pulsar)
- Rio Play (RioPlay/RioPlay)

- Shine (T5246/Shine)
- Tornado (Tornado/Tornado)
- Tornado 3G (Tornado3G/Tornado3G)
- Vega (Vega/Vega)

## **FaceVSION**

- FaceVSION OC1020A (OC1020A/FV-FG6)

## **Far Eastone**

- Smart503 (MC2/Smart503)

## **FarEastone**

- Smart501 (Smart501/Smart501)

## **Fareastone**

- Smart 403 (msm8226/Smart 403)

## **FBC**

- M24IS810 (MX24/TDA02)
- M24IS820 (fst01ms/M24IS820)

## **Fly**

- Fly Ego Art 2 (Fly\_Ego\_Art\_2/Fly Ego Art 2)
- Fly Era Energy 1 (IQ4502\_Quad/IQ4502 Quad)
- Fly Era Life 2 (IQ456/IQ456)
- Fly Era Nano 6 (Era\_Nano\_6/IQ4406)
- Fly ERA Nano 7 (Fly\_IQ4407/IQ4407)
- Fly Era Nano 8 (IQ4400/IQ4400)
- Fly Era Nano 9 (IQ436i/IQ436i)
- Fly Era Style 3 (IQ4415\_Quad/IQ4415 Quad)
- Fly EVO Chic 1 (IQ4405\_Quad/Fly IQ4405\_Quad)
- Fly Evo Chic 2 (IQ459/IQ459 Quad)
- Fly Evo Chic 2 (IQ459/IQ459)
- Fly Evo Energy4 (IQ4501/Evo Energy4)
- Fly Evo Tech 3 (IQ4414\_Quad/IQ4414 Quad)
- Fly IQ434 (IQ434/IQ434)
- Fly IQ4490i (IQ4490i/IQ4490i)
- Fly IQ4503 (IQ4503/FLY IQ4503)
- Fly IQ4503 Quad (IQ4503\_Quad/IQ4503 Quad)
- Fly IQ4504 Quad (IQ4504\_Quad/IQ4504 Quad)

- Fly IQ4505 (IQ4505/Fly IQ4505)
- Fly IQ4505 Quad (IQ4505\_Quad/IQ4505 Quad)
- Fly IQ4512 Quad (IQ4512\_Quad/IQ4512 Quad)
- Fly IQ4513 (IQ4513/IQ4513)
- Fly IQ4513 Octa (IQ4513\_Octa/IQ4513 Octa)
- Fly IQ4514 Quad (IQ4514\_Quad/Fly IQ4514 AF)
- Fly IQ4514 Quad (IQ4514\_Quad/Fly IQ4514)
- Fly IQ4514 Quad (IQ4514\_Quad/IQ4514 Quad)
- Fly IQ4515 Quad (IQ4515\_Quad/IQ4515 Quad)
- Fly IQ4516 Octa (IQ4516\_Octa/IQ4516 Octa)
- Fly IQ4516 Octa (IQ4516\_Octa/IQ4516)
- Fly IQ458 Quad Evo Tech 2 (IQ458/IQ458 Quad)
- Fly Iris (FLY\_IQ4400/FLY\_IQ4400\_AF)
- Fly Phoenix 2 (IQ4410i/Phoenix 2)
- Flylife Connect 10.1 (Flylife\_Connect\_101\_3G\_2/Flylife Connect 10.1 3G 2)
- Flylife Connect 7 3G 2 (Flylife7/Flylife Connect 7 3G 2)
- Flylife Connect 7.85 3G 2 (Flylife/Flylife Connect 7.85 3G 2)
- IQ4401 (IQ4401/IQ4401)
- IQ4409 Quad (IQ4409\_Quad/IQ4409 Quad)
- IQ4413 Quad (IQ4413\_Quad/IQ4413\_Quad)
- IQ4415 (IQ4415/IQ4415)
- IQ4416 (IQ4416/IQ4416)
- IQ4417 Quad (IQ4417\_Quad/IQ4417 Quad)
- IQ4418 (IQ4418/Fly IQ4418 AF)
- IQ4418 (IQ4418/IQ4418)
- IQ4601 (IQ4601/IQ4601)
- Tornado One (IQ4511\_Octa/IQ4511 Octa)

## **Foxconn International Holdings Limited**

- A5 (A5/A5)
- Axioo-VIGO410 (vigo410/Axioo-VIGO410)
- Boston (Boston/Boston)
- Camangi-FM600 (fm600/Camangi-FM600)
- Camangi-Mangrove7 (mangrove7/Camangi-Mangrove7)
- Casper\_VIA\_A6108 (SI1/Casper\_VIA\_A6108)
- cherry mobile-SUPERION (superion/cherry mobile-SUPERION)
- cherry-MagnumHD (magnumhd/cherry-MagnumHD)
- Cherry-MUSN-T800 (musn-t800/Cherry-MUSN-T800)
- Commtiva N700 (n700/Commtiva-N700)
- Commtiva-HD710 (hd710/Commtiva-HD710)
- CSL Spice MI700 (mi700/CSL\_Spice\_MI700)
- CSL Spice MI700 (mi700/Spice\_MI700)
- CSL-MI410 (mi410/CSL-MI410)
- Dolphin 70e Black (dblack/Dolphin 70e Black)
- E120 (K2/E120)
- E130 (K3/E130)
- EV-S110 (msm7627\_surf/EV-S110)
- FE6 (FE6/FE6)
- FIH-F0X (msm7627\_surf/FIH-F0X)

- FIH-FB0 (fb0/FIH-FB0)
- FIH-FM6 (msm7627\_surf/FIH-FM6)
- GSmart-G1305 (G1305/GSmart-G1305)
- InFocus IN260 (IN260/IN260)
- KT-F100 (msm7627\_surf/KT-F100)
- KT-S110 (msm7627\_surf/KT-S110)
- MUCHTEL A1 (A1/MUCHTEL A1)
- MUCHTEL-A2 (muchtela2/MUCHTEL-A2)
- MUSN COUPLE (couple/COUPLE)
- MUSN-M500 (m500/MUSN-M500)
- MUSN-T800 (t800/MUSN-T800)
- Orange\_Boston (Boston/Orange\_Boston)
- PICOpad-QGN (axioo/PICOpad-QGN)
- Rstream-A1 (a1/Rstream-A1)
- SF4Y6 (SF4Y6/SF4Y6)
- SH530U (sh530u/SH530U)
- SH930W (FCN/SH930W)
- SHARP SH837W (S1U/SH837W)
- SHARP SH630E (SAE/SHP-SH630E)
- SHARP SH631W (S2U/SH631W)
- SHARP SH837W (S1U/SH837W)
- V-T100 (vt100/V-T100)
- ViewPad7 (viewpad7/ViewPad7)
- ViewPad7X (viewpad7x/ViewPad7X)
- ViewPad7x (viewpad7x/ViewPad7x)
- ViewPhone3 (viewphone3/ViewPhone3)
- ViewSonic-V350 (v350/ViewSonic-V350)
- ViewSonic-ViewPad4 (viewpad4/ViewSonic-ViewPad4)
- vizio VP700 (S1U/VP700)
- vizio VP800 (FCN/VP800)
- WellcoM-A800 (a800/WellcoM-A800)
- WellcoM-A800 (A800/WellcoM-A800)
- WellcoM-A89 (a89/WellcoM-A89)
- WellcoM-A99 (a99/WellcoM-A99)
- XOLO (AZ510/X900)
- XOLO\_X1000 (SI1/XOLO\_X1000)

## **Fujitsu**

- ARROWS A SoftBank 201F (SBM201F/201F)
- ARROWS A SoftBank 202F (SBM202F/202F)
- ARROWS A SoftBank 301F (SBM301F/301F)
- ARROWS Kiss F-03D (f11sky/F-03D)
- ARROWS Kiss F-03E (F03E/F-03E)
- ARROWS Me F-11D (F11D/F-11D)
- ARROWS mu F-07D (f11apo/F-074)
- ARROWS mu F-07D (f11apo/F-07D)
- ARROWS mu F-07D (f11apo/FJJB091)
- ARROWS NX F-06E (F06E/F-06E)
- ARROWS S EM01F (EM01F/EM01F)

- ARROWS Tab F-05E (F05E/F-05E)
- ARROWS Tab FJT21 (FJT21\_jp\_kdi/FJT21)
- ARROWS Tab LTE F-01D (blaze\_tablet/F-01D)
- ARROWS Tab Wi-Fi FAR70B (FAR70B/FAR70B)
- ARROWS Tab Wi-Fi FAR75A/70A (blaze\_tablet/FAR7)
- ARROWS V F-04E (F04E/F-04E)
- ARROWS X F-02E (F02E/F-02E)
- ARROWS X F-10D (F10D/F-10D)
- ARROWS X LTE F-05D (blaze/F-05D)
- ARROWS Z FJL22 (FJL22\_jp\_kdi/FJL22)
- Disney Mobile on docomo F-07E (F07E/F-07E)
- Disney Mobile on docomo F-08D (blaze/F-08D)
- F-01F (F01F/F-01F)
- F-02F (F02F/F-02F)
- F-02G (F02G/F-02G)
- F-03F (F03F/F-03F)
- F-03G (F03G/F-03G)
- F-04F (F04F/F-04F)
- F-05F (F05F/F-05F)
- F-06F (F06F/F-06F)
- F-09D ANTEPRIMA (F09D/F-09D)
- F-09E (F09E/F-09E)
- F-12C (f11eif/F-12C)
- FARTM9334P1 (FARTM9334/FARTM9334P1)
- FARTM933KZ (FARTM933KZ/FARTM933KZ)
- M01 (M01/M01)
- M305 (M305/M305)
- M363/P (UY1/M363/P)
- Raku-Raku SMART PHONE F-12D (F12D/F-12D)
- Raku-Raku SMART PHONE2 F-08E (F08E/F-08E)
- REGZA Phone T-01D (blaze/T-01D)
- REGZA Phone T-02D (T02D/T-02D)
- STYLISTIC M350/CA2 (M350/M350)
- STYLISTIC M532 (mx532/M532)
- STYLISTIC M702 (M702/M702)
- STYLISTIC MH350 (MH350/MH350)
- STYLISTIC S01 (S01/S01-orange)
- SZJ-JS101 (SZJ101/SZJ-JS101)

### **Fujitsu Toshiba Mobile Communications Limited**

- ARROWS A SoftBank 101F (SBM101F/101F)
- ARROWS ef FJL21 (FJL21/FJL21)
- ARROWS ES IS12F (FJI12/IS12F)
- ARROWS Z ISW11F (FJI11/ISW11F)
- ARROWS Z ISW13F (FJI13/ISW13F)
- REGZA Phone IS11T (TSI11/IS11T)
- REGZA Phone T-01C (tg03/IS04)
- REGZA Phone T-01C (tg03/T-01C)

## **Funai Electric**

- ALM-001J (smdkv210/ALM-001J)

## **G53**

- TA71CA3 (TA71CA3\_1/TA71CA3)

## **Galapad**

- Galapad S6 (GALAPAD\_S6/GALAPAD\_S6)

## **Garmin**

- Garmin-Asus A10 (a10/Garmin-Asus A10)
- Monterra (monterra/Monterra)
- nuvi 3590 (scorpio/nuvi 3590)
- nuvi 3592 (scorpio/nuvi 3592)
- nuvi 3595 (scorpio/nuvi 3595)
- Nuvi 3595 (scorpio/nuvi 3595)
- Nuvifone (a50/Garmin-Asus A50)
- Nuvifone (a50/Garminfone)
- Nuvifone (a50/nuvifone A50)
- Nuvifone (a50/nüvifone A50)

## **GD Classbook**

- TA80CA1 (TA80CA1\_2/TA80CA1)

## **geanee**

- FXC-5A (FXC-5A/FXC-5A)

## **GENERAL MOBILE**

- General Mobile E-tab 4 (mehmet/e-tab4)

## **GeneralMobile**

- E-Tab10 (blue\_eye/E-Tab10)

## **Geniatech**

- Enjoy TV Quad-Core Box (ATV581/Enjoy TV Quad-Core Box)

## Getac

- Getac Z710 (z710/Getac Z710)

## Gigabyte

- 9788 (9788/9788)
- Boston 4G (boston\_4g/Boston 4G)
- E9771 (E9771/E9771)
- Gigabyte SB506 (SB506/SB506)
- Gigabyte SB510 / IBT-102 (SB510/SB510)
- GSmart G1310 (G1310/GSmart G1310)
- GSmart G1315 (G1315/GSmart G1315)
- GSmart G1317 (G1317D/GSmart G1317D)
- GSmart G1317S (G1317S/GSmart G1317S)
- GSmart G1342 (msm7627a/GSmart G1342)
- GSmart G1345 (msm7627\_sku2/GSmart G1345)
- GSmart G1355 (G1355/GSmart G1355)
- GSmart G1362 (G1362/GSmart G1362)
- GSmart GS202 (GS202/GSmart GS202)
- Hipstreet 9DTB7 / Lazer MY9308P (AMLMY9308P/9DTB7)
- Hipstreet 9DTB7 / Lazer MY9308P (AMLMY9308P/MY9308P)
- mexico (Lanix/iliumPAD)
- P102g (P102g/P102G)
- PAPILIO G1 (inhon77\_cidals/INHON PAPILIO G1)
- PROSCAN PLT1066 / MAG MAGPAD / TEAC TEACTAB / DOPO GS-1008 (MID1005\_K/GS-1008)
- PROSCAN PLT1066 / MAG MAGPAD / TEAC TEACTAB / DOPO GS-1008 (MID1005\_K/MAGPAD)
- PROSCAN PLT1066 / MAG MAGPAD / TEAC TEACTAB / DOPO GS-1008 (MID1005\_K/PLT1066)
- PROSCAN PLT1066 / MAG MAGPAD / TEAC TEACTAB / DOPO GS-1008 (MID1005\_K/TEACTAB)
- SAF3011 (SAF3011/SAF3011)
- TB100 (TB100/Gigabyte TB100)
- TB100 (TB100/TB100)
- TECNO P3S (P3S/TECNO P3S)
- TM105 (TM105/TM105)
- TM105A (TM105A/Aero1021/P1021HCBA4C1VXX)
- TM105A (TM105A/Glacier)
- TM105A (TM105A/Qrypton1010)
- TM105A (TM105A/TM105A)
- TM75A (TM75A/GSmart7Tab)
- TM75A (TM75A/Qrypton7)
- TM75A (TM75A/TM75A)
- TM75A (TM75A/Voyager)
- TM75A-V (TM75A-V/TM75A-V)
- W5510 (W5510/W5510)

- W6360 (W6360/W6360)

## **Gigaset**

- Gigaset QV1030 (FG6Q/Gigaset QV1030)
- Gigaset QV830 (UY8/Gigaset QV830)
- Gigaset QV831 (UY8/Gigaset QV831)
- Maxwell 10 (maxwell\_10/80-1)
- SL930 (lion\_s/SL930)

## **Gionee**

- S5.1 (S5\_1/S5.1)
- S5.5 (S5\_5/S5.5)
- V4S (V4S/V4S)
- V5 (V5/V5)

## **GOCLEVER**

- QUANTUM\_700S/QUANTUM 700S (QUANTUM\_700S/QUANTUM\_700S)
- TQ700/QUANTUM 700/TAB (TQ700/TQ700)

## **Google**

- Project Tango Tablet Development Kit (yellowstone/Yellowstone)

## **Gradiente**

- iphone C600 (bravo/iphone C600)
- iphone C600 (GBC\_bravo/iphone C600)

## **Grundig**

- GTB1030 (TA10CA2/TA10CA2)

## **GSmart**

- Arty A3 (Arty\_A3/GSmart Arty A3)
- GSmart Aku A1 (Aku\_A1/GSmart Aku A1)
- GSmart Alto A2 (Alto\_A2/GSmart Alto A2)
- GSmart GS202+ (GSmart\_GS202/GSmart GS202+)
- GSmart GSmart SX1 (GBC\_bravo/GSmart SX1)
- GSmart Guru G1 (Guru\_G1/GSmart Guru G1)
- GSmart Maya M1 (MayaM1/GSmart Maya M1)
- GSmart Maya M1 v2 (Maya\_M1\_v2/GSmart Maya M1 v2)



- GSmart Rey R3 (Rey\_R3/GSmart Rey R3)
- GSmart Rio R1 (Rio\_R1/GSmart Rio R1)
- GSmart Roma R2 (Roma\_R2/GSmart Roma R2)
- GSmart Sierra S1 (GSmart\_Sierra\_S1/GSmart Sierra S1)
- GSmart SX1 (bravo/GSmart SX1)
- GSmart T4 (GSmart\_T4/GSmart T4)
- GSmart Tuku T2 (Tuku\_T2/GSmart Tuku T2)
- GX2 (GBC\_ares/GX2)
- Mika M2 (Mika\_M2/GSmart Mika M2)
- Saga\_S3 (Saga\_S3/GSmart Saga S3)
- Simba SX1 (bravo/Simba SX1)
- Simba SX1 (GBC\_bravo/Simba SX1)

## Haier

- A-TT00 (A-TT00/A-TT00)
- AD6B1H (AD6B1H/Smartfren Andromax AD6B1H)
- AT7003 (AT7003/AT7003)
- CDP7TAB4C8 (CDP7TAB4C8/CDP7TAB4C8)
- CETAB10KML9 (CETAB10KML9/CETAB10KML9)
- CETAB7ML9 (CETAB7ML9/CETAB7ML9)
- CETAB9ML9 (CETAB9ML9/CETAB9ML9)
- CMP\_765 (CMP\_765/CMP\_765)
- CT301\_W818 (msm7627a/CT301\_W818)
- CT825 (fiber-a31stm/CT825)
- CYCLONE\_ODYSSEY (CYCLONE\_ODYSSEY/CYCLONE\_ODYSSEY)
- D2-721 (D2-721G/D2-721G)
- D2-751G (d2PAD/D2-751G)
- D2-927G (D2-927G/D2-927G)
- D2-961G (D2-961G/D2-961G)
- GF88 (I7A-LE/I7A-LE)
- Haier (Homesurf744/Binatone Homesurf744 / Hubble Smart7 (Homesurf744))
- Haier (PAD69H/PAD69H)
- Haier (PAD\_D85/pad\_d85)
- HG-9041 (HG-9041/HG-9041)
- HomeSurf742\_AT7003 (HomeSurf742\_AT7003/HomeSurf742\_AT7003)
- Homesurf844 (Homesurf844/Binatone Homesurf844 / Hubble Smart8 (Homesurf844))
- HS-10DTB4 (HS-10DTB4/HS-10DTB4)
- HS-7DTB25 (HS-7DTB25/HS-7DTB25)
- HS-7DTB29-8GB (HS-7DTB29-8GB/HS-7DTB29-8GB)
- HS-9DTB37 (HS\_9DTB37/HS\_9DTB37)
- HT-I860 (HT-I860/HT-I860)
- INGO-TAB (INGO-TAB/INGO-TAB)
- Konnect\_350 (Konnect\_350/Konnect\_350)
- LE39M7000CF (LE39M7000CF/LE39M7000CF)
- LE48M7000CF (LE48M7000CF/LE48M7000CF)
- LE55M7000CF (LE55M7000CF/LE55M7000CF)
- Logicom S9782 (Logicom-S9782/Logicom-S9782)
- MD210 (MD210/MD210)
- MEGAFON MS3A (Megafon/MS3A)

- MT-700 (MT-700/MT-700)
- NEO10-1 (NEO10-1/NEO10-1)
- NEO7-1 (NEO7-1/NEO7-1)
- NEO7-2 (NEO7-2/NEO7-2)
- NEO8-1 (NEO8-1/NEO8-1)
- P2 (P2/P2)
- PAD1021 (PAD1021/PAD1021)
- PAD1042 (PAD1042/PAD1042)
- PAD712 (PAD712/PAD712)
- PAD722 (PAD722/PAD722)
- PAD841 (PAD841/PAD841)
- PAD\_1042 (PAD\_1042/PAD\_1042)
- PADCT1010W (PADCT1010W/PADCT1010W)
- PNDPP410GP (PNDPP410GP/PNDPP410GP)
- PNDPP44Q7GPBLK (PNDPP44Q7GPBLK/PNDPP44Q7GPBLK)
- PNDPP47GP (PNDPP47GP/PNDPP47GP)
- Skill (Skill/Skill)
- Smartfren Andromax AD681H (AD681H/Smartfren Andromax AD681H)
- Smartfren Andromax AD9A1H (AD9A1H/Smartfren Andromax AD9A1H)
- SP-5100 (SP-5100/SP-5100)
- StarQ\_Q5002 (StarQ\_Q5002/Q5002)
- T785B (T785B/T785B)
- TAB-700 (TAB\_700/TAB-700)
- TAB-700 (TAB\_700/TAB700MPG)
- W757 (W757/W757)
- W860 (W860/W860)

## **HANNSpree**

- HANNSpree HSG1279 (HANNSpad/HSG1279)

## **harris**

- RF-3590-RT (msm8660\_cougar/Harris 12131-1000)

## **Harris**

- Harris 12131-1000 (msm8660\_cougar/Harris 12131-1000)

## **Hipstreet**

- 7DTB25 (7DTB25/7DTB25)
- Hipstreet HS-10DTB8 (HS-10DTB8/HS-10DTB8)
- HS-10DTB12 (Hipstreet/HS-10DTB12)
- HS-10DTB12A (RCT6203W46/HS\_10DTB12A)
- HS-7DTB27 (HS-7DTB27/HS-7DTB27)
- HS-7DTB35 (RCT6773W22/HS\_7DTB35)
- HS-7DTB39 (HS-7DTB39/HS-7DTB39)

- HS-9DTB7A (HS-9DTB7A/HS-9DTB7A)

## Hisense

- 55H6SG (Vision/Vision)
- AD683G (AD683G/AD683G)
- Andromax-c (AD686G/Andromax-c)
- C-4 (C\_4/C-4)
- CMB405 (L690AE/CMB405)
- CMB501 (u970\_carrefour/CMB501)
- CMB510 (L696/CMB510)
- E100T (E100T/Hisense E100T)
- E200T (E200T/HS-E200T)
- E2070 (mt8312/E2070)
- E2371CH (rk3026/E2371CH)
- E260T (E260T/HS-E260T)
- E260U (E260U/Hisense E260U)
- E270BSA (E270BSA/E270BSA)
- E601M (E601M/E601M)
- E860 (E860/E860)
- E910 (E910/E910)
- E926 (E926/E926)
- EG680 (eg980ae/EG680)
- EG68AE (EG668AE/LT668)
- EG929 (EG929\_TW/EG929)
- EG950 (EG950TW/EG950)
- EG970 (EG970TW/EG970)
- EG978 (EG978/HS-EG978)
- EG98 (EG98/EG98)
- EG98 (EG98TW/EG98)
- EG981 (EG981/HS-EG981)
- F270BW (F270BW/F270BW)
- F5070 (mt8389/F5070)
- F5180 (f5180/F5180)
- F5281CH (rk3288/F5281CH)
- G1 (G1/G1)
- G2-3GP (G2-3GP/G2-3GP)
- H800T (H800T/HS-H800T)
- Hisense E360M (e360m/Hisense E360M)
- Hisense E621T (E621T/Hisense E621T)
- Hisense EG606 (EG606\_TW/EG606)
- Hisense I631M (i631m/Hisense I631M)
- Hisense I639T (I639T/Hisense I639T)
- Hisense TV (hisense\_gx1200v/hisense\_gx1200v)
- HS-E600M (E600M/HS-E600M)
- HS-E620M (E620M/HS-E620M)
- HS-E820 (E820/HS-E820)
- HS-E910 (E910/HS-E910)
- HS-E912 (E912/HS-E912)
- HS-E912S (E912S/HS-E912S)

- HS-E917 (E917/HS-E917)
- HS-E920 (E920/HS-E920)
- HS-E930 (E930/HS-E930)
- HS-E936 (E936/HS-E936)
- HS-E956 (E956/HS-E956)
- HS-E956Q (E956Q/HS-E956Q)
- HS-E968 (E968/HS-E968)
- HS-EG870 (EG870/HS-EG870)
- HS-EG876 (EG876/HS-EG876)
- HS-EG901 (EG901/HS-EG901)
- HS-EG909 (EG909/HS-EG909)
- HS-EG929 (EG929/msm8625)
- HS-EG939 (EG939/HS-EG939)
- HS-EG950 (EG950/HS-EG950)
- HS-EG958 (EG958/HS-EG958)
- HS-EG966 (EG966/HS-EG966)
- HS-EG970 (EG970/HS-EG970)
- HS-EG971 (EG971/HS-EG971)
- HS-EG980 (eg980/HS-EG980)
- HS-EG98C (EG98C/HS-EG98C)
- HS-I630M (msm8226/HS-I630M)
- HS-I630T (msm8226/HS-I630T)
- HS-M170AT (TP9101/HS-M170AT)
- HS-T818 (T818/HS-T818)
- HS-T9 (T9/HS-T9)
- HS-T909 (t909/HS-T909)
- HS-T926 (t926/HS-T926)
- HS-T928 (t928/HS-T928)
- HS-T939 (HS-T939/HS-T939)
- HS-T950 (t950/HS-T950)
- HS-T958 (t958/HS-T958)
- HS-T959 (t959/HS-T959)
- HS-T959S (t959s/HS-T959S)
- HS-T960 (t960/HS-T960)
- HS-T966 (HS-T966/HS-T966)
- HS-T967 (HS-T967/HS-T967)
- HS-T968 (t968/HS-T968)
- HS-T968S (t968s/HS-T968S)
- HS-T970 (t970/HS-T970)
- HS-T978 (t978/HS-T978)
- HS-T980 (t980/HS-T980)
- HS-U8 (U8/HS-U8)
- HS-U820 (U820/HS-U820)
- HS-U820 (U820A/HS-U820)
- HS-U820 (U820AVN/HS-U820)
- HS-U820 (U820B/HS-U820)
- HS-U860 (U860/HS-U860)
- HS-U9 (U9/HS-U9)
- HS-U909 (U909/HS-U909)
- HS-U909 (U909B\_6/HS-U909)
- HS-U909B (U909B/HS-U909B)

- HS-U912 (U912/HS-U912)
- HS-U912 (U912A\_1/HS-U912)
- HS-U912 (U912B/HS-U912)
- HS-U912 (U912C/HS-U912)
- HS-U929 (u929de/HS-U929)
- HS-U929 (u929de\_3/HS-U929)
- HS-U936 (U936/HS-U936)
- HS-U939 (u939/HS-U939)
- HS-U939 (u939e\_1/HS-U939)
- HS-U939 (u939e\_3/HS-U939)
- HS-U939 (u939e\_4/HS-U939)
- HS-U939 (u939e\_5/HS-U939)
- HS-U950 (U950/HS-U950)
- HS-U950 (U950\_5/HS-U950)
- HS-U950 (U950\_6/HS-U950)
- HS-U950 (U950\_ae/HS-U950)
- HS-U958 (U958/HS-U958)
- HS-U960Q (U960Q/HS-U960Q)
- HS-U966 (u966/HS-U966)
- HS-U966 (u966ae/HS-U966)
- HS-U970 (u970e\_6/HS-U970)
- HS-U970 (u970s\_export/HS-U970)
- HS-U971 (U971AE/HS-U971)
- HS-U978 (u978/HS-U978)
- HS-U98 (U98/U98)
- HS-U98 (U98\_FR/HS-U98)
- HS-U980 (u980/HS-U980)
- HS-U980 (u980be/HS-U980)
- HS-U980 (u980be\_1/HS-U980)
- HS-U980 (u980be\_2/HS-U980)
- HS-U980 (u980ce\_1/HS-U980)
- HS-U980 (u980ce\_3/HS-U980)
- HS-U980 (u980ce\_4/HS-U980)
- HS-U980 (u980ce\_5/HS-U980)
- HS-X5T (X5T/HS-X5T)
- HS-X68T (x68t/HS-X68T)
- HS-X6T (X6T/HS-X6T)
- HS-X8C (x8c/HS-X8C)
- HS-X8T (X8T/HS-X8T)
- HS-X8U (x8u/HS-X8U)
- I300T (I300T/Hisense I300T)
- I630U (I630U/Hisense I630U)
- K220\_FHD (mst628/K220\_FHD)
- L691 (l691/HS-L691)
- L691 (l691e\_2/HS-L691)
- l691 (msm8226/HS-L691)
- LED32G180 (hisenseLED32G180/LED32G180)
- LED32K220 (mst628/LED32K220)
- LED32K280J3D (mt5880/LED32K280J3D)
- LED32K360 (mt5880/LED32K360)
- LED32K360J (mt5880/LED32K360J)

- LED32K360J3D (mt5880/LED32K360J3D)
- LED32K360X3D (mt5880/LED32K360X3D)
- LED32K370 (mt5880/LED32K370)
- LED32K600J (mt5880/LED32K600J)
- LED32K600X3D (mt5880/LED32K600X3D)
- LED32K610X3D (mt5880/LED32K610X3D)
- LED32L288 (mt5880/LED32L288)
- LED39K280J3D (mt5880/LED39K280J3D)
- LED39K360J (mt5880/LED39K360J)
- LED39K360X3D (mt5880/LED39K360X3D)
- LED39K600X3D (mt5880/LED39K600X3D)
- LED39K600X3DU (mst901/LED39K600X3DU)
- LED39K610X3D (mt5880/LED39K610X3D)
- LED39K680X3DU (mt5327/LED39K680X3DU)
- LED40K260X3D (mt5880/LED40K260X3D)
- LED40K360J (mt5880/LED40K360J)
- LED40K360X3D (mt5880/LED40K360X3D)
- LED40K370 (mt5880/LED40K370)
- LED40K681X3DU (msd6a918/LED40K681X3DU)
- LED40L288 (mt5880/LED40L288)
- LED42G200 (hisenseLED42G200/LED42G200)
- LED42K280J3D (mt5880/LED42K280J3D)
- LED42K330X3D (mt5880/LED42K330X3D)
- LED42K360J (mt5880/LED42K360J)
- LED42K360X3D (mt5880/LED42K360X3D)
- LED42K370 (mt5880/LED42K370)
- LED42K380U (msd6a918/LED42K380U)
- LED42K560X3D (hisenseLED42K560X3D/LED42K560X3D)
- LED42K600A3D (mt5880/LED42K600A3D)
- LED42K600X3D (mt5880/LED42K600X3D)
- LED42K610J3DP (mt5880/LED42K610J3DP)
- LED42K610X3D (mt5880/LED42K610X3D)
- LED42K660X3D (hisenseLED42K660X3D/LED42K660X3D)
- LED42K680X3DU (mt5327/LED42K680X3DU)
- LED42L288 (mt5880/LED42L288)
- LED46K260X3D (mt5880/LED46K260X3D)
- LED46K280J3D (mt5880/LED46K280J3D)
- LED46K330X3D (mt5880/LED46K330X3D)
- LED46K360J (mt5880/LED46K360J)
- LED46K360X3D (mt5880/LED46K360X3D)
- LED46K660X3D (hisense6a801/LED46K660X3D)
- LED47K560J3D (hisenseLED47K560J3D/LED47K560J3D)
- LED47K600X3D (mt5880/LED47K600X3D)
- LED47K610J3DP (mt5880/LED47K610J3DP)
- LED48K360X3D (mt5880/LED48K360X3D)
- LED48K370 (mt5880/LED48K370)
- LED48K380U (msd6a918/LED48K380U)
- LED48K681X3DU (msd6a918/LED48K681X3DU)
- LED48L288 (mt5880/LED48L288)
- LED50G05 (hisenseLED50G05/LED50G05)
- LED50K260X3D (mt5880/LED50K260X3D)

- LED50K360J (mt5880/LED50K360J)
- LED50K360X3D (mt5880/LED50K360X3D)
- LED50K370 (mt5880/LED50K370)
- LED50K380U (msd6a918/LED50K380U)
- LED50K610X3D (mt5880/LED50K610X3D)
- LED50K660X3D (hisenseLED50K660X3D/LED50K660X3D)
- LED50K680X3DU (mt5327/LED50K680X3DU)
- LED50L288 (mt5880/LED50L288)
- LED50XT880G3D (hisenseLED50XT880G3D/LED50XT880G3D)
- LED50XT880G3DU (mst901/LED50XT880G3DU)
- LED50XT900X3DU (mt5327/LED50XT900X3DU)
- LED55K260X3D (mt5880/LED55K260X3D)
- LED55K360X3D (mt5880/Hisense LED55K360X3D)
- LED55K370 (mt5880/LED55K370)
- LED55K380U (msd6a918/LED55K380U)
- LED55K600A3D (mt5880/LED55K600A3D)
- LED55K600X3D (mt5880/LED55K600X3D)
- LED55K610X3D (mt5880/LED55K610X3D)
- LED55K680X3DU (mt5327/LED55K680X3DU)
- LED55L288 (mt5880/LED55L288)
- LED55XT780G3D (hisenseLED55XT780G3D/LED55XT780G3D)
- LED55XT810X3DU (msd6a918/LED55XT810X3DU)
- LED55XT880G3DU (mst901/LED55XT880G3DU)
- LED55XT900X3DU (mt5327/LED55XT900X3DU)
- LED58K280J (mt5880/LED58K280J)
- LED58K280U (mt5327/LED58K280U)
- LED58K610X3D (mt5880/LED58K610X3D)
- LED58K680X3DU (mt5327/LED58K680X3DU)
- LED58XT880G3D (hisenseLED58XT880G3D/LED58XT880G3D)
- LED58XT880J3DU (mst901/LED58XT880J3DU)
- LED60K380 (mt5327/LED60K380)
- LED65K560J3DTB (hisenseLED65K560J3DTB/LED65K560J3DTB)
- LED65K560J3DTR (hisenseLED65K560J3DTR/LED65K560J3DTR)
- LED65K600X3D (mt5880/LED65K600X3D)
- LED65K680X3DU (mt5327/LED65K680X3DU)
- LED65XT780G3D (hisenseLED65XT780G3D/LED65XT780G3D)
- LED65XT800X3DU (mt5327/LED65XT800X3DU)
- LED65XT810X3DU (msd6a918/LED65XT810X3DU)
- LED65XT880G3D (hisenseLED65XT880G3D/LED65XT880G3D)
- LED65XT880G3DF (hisenseLED65XT880G3DF/LED65XT880G3DF)
- LED65XT880G3DU (mst901/LED65XT880G3DU)
- LED65XT890G3D (hisenseLED65XT890G3D/LED65XT890G3D)
- LED65XT900G3DU (mst901/LED65XT900G3DU)
- LED65XT900X3DU (mt5327/LED65XT900X3DU)
- LED75XT890G3D (mst901/LED75XT890G3D)
- LED75XT910G3DU (mt5327/LED75XT910G3DU)
- LED84XT900G3D (hisenseLED84XT900G3D/LED84XT900G3D)
- LED85XT910G3DU (mt5327/Vision20)
- LT100K6900A (mt5327/LT100K6900A)
- M1101AT (TP9102/M1101AT)
- M3101BCD (m3101bcd/M3101BCD)

- M3101BW (m3101/M3101BW)
- M370BW (m370/M370BW)
- M470BSA (m470/M470BSA)
- M470BSD (m470bsd/M470BSD)
- M470BSE (m470bse/M470BSE)
- M470BSG (m470bsg/M470BSG)
- M470BSS (m470bss/M470BSS)
- M701 (M701/M701)
- MEDION E4001 (E4001/MEDION E4001)
- MEDION X4701 (x4701/MEDION X4701)
- MEDION-P4013 (P4013/MEDION-P4013)
- MegaFon SIM+ (SIMPlus/MegaFon SIM+)
- New Andromax-i (AD685G/New Andromax-i)
- Oysters Pacific 800 (x4701ae/Oysters Pacific 800)
- PX1900 (atm7039c/PX1900)
- PX2000 (hisensepx2000/PX2000)
- PX2700 (g18ref/PX2700)
- PX2800 (hisensepx2800/PX2800)
- PX3000 (mt5880/Hisense PX3000)
- PX3000 (mt5880/PX3000)
- PX3100 (mt5880/PX3100)
- Sero 7 (rk3168/E2171CA)
- Sero 7 (rk3168/E2171MX)
- Sero 7 (rk3168/E2171TK)
- Sero 8 (rk3188/E2281)
- Sero 8 (rk3188/E2281CA)
- Sero 8 (rk3188/E2281TK)
- Sero 8 (rk3188/E2281UK)
- Sero 8 pro (rk3288/F5281)
- Sero7 (rk3168/E2171SS)
- Sero7 LE (rk3026/E2371)
- Sero8 (rk3188/E2281SS)
- SKi630t (msm8226/SKi630t)
- SoundTab MA-317 (rk3028a/Hisense SoundTab MA-317)
- U1+ (U820A/U1+)
- U2 (U2/U2)
- U2S (U909B\_MN/U2S)
- U3 (U950\_MN/U3)
- U606AE (U606AE/HS-U606)
- U606AE (U606AE/PHS-402)
- U607 (U607/Bouygues Telecom Bs 403)
- U609 (U609/HS-U609)
- U966 (u966e\_1/U966)
- U970 (u970e\_8/U970)
- U988 (U988/HS-U988)
- U988E-1 (U988E\_1/HS-U988)
- Vidaa (helium3/H7)
- Vision (Vision/Vision)
- Vision 2.5 (vision2\_5/vision2\_5)
- vision2\_1 (vision2\_1/vision2\_1)
- W2400 (W2400/W2400)



- W270BD (W270BD/W270BD)
- WA912 (U912ATW/WA912)
- WA960 (U960Q\_1/WA960)
- WM8 (wm8980s/WM8)
- XOLO (us9230e1/XOLO T1000)

## **hisense**

- lt971 (LT971/LT971)

## **Hisense**

- HS-EG916 (EG916/HS-EG916)

## **HKC**

- HKC A79 Tablet (EM62/A79)

## **HKT**

- eye3 (UY3-PCW/eye3)

## **Hon Hai Precision Industry Co., Ltd.**

- Cisco CP-DX650 (CP-DX650/CP-DX650)
- Germany (S9714/LIFETAB\_S9714)
- nabi\_XD (XD/NABIXD-NV10C)
- PocketBook A10 (EP10\_wifi/PocketBook A10)
- PocketBook A7 (EP5A\_wifi/PocketBook A7)

## **Honeywell**

- Honeywell Dolphin 70e Black (dblack\_gn/Dolphin 70e Black)
- Honeywell Dolphin 70e Black (dblack\_go/Dolphin 70e Black)
- Honeywell Dolphin 70e Black (dblack\_wn/Dolphin 70e Black)
- Honeywell Dolphin 70e Black (dblack\_wo/Dolphin 70e Black)

## **HP**

- 10 (spruce/HP 10)
- 10 Plus (torsa/HP 10 Plus)
- 7 G2 (redwood/HP 7 G2)
- 7 Plus (Ilex/HP 7 Plus)
- 7 Plus G2 (deschutes/HP 7 Plus G2)
- 7 Tablet (Mesquite/HP 7)

- 7 Voice Tab (klondike/HP 7 VoiceTab)
- 7 VoiceTab (yukon/HP 7 VoiceTab)
- 7.1 (Holly/HP 7.1)
- 8 (Fir/HP 8)
- 8 G2 (maple/HP 8 G2)
- Bonsai 10 HD (bonsai10/HP Slate 10 HD)
- HP Slate 7 (pine/HP Slate 7)
- HP SlateBook 10 x2 PC (3645/HP SlateBook 10 x2 PC)
- Slate 10 HD (bonsai10/HP Slate 10 HD)
- Slate 10 Plus (linkplus/HP Slate 10 Plus)
- Slate 17 (franky/HP Slate 17)
- Slate 21 Pro (ranger/Slate 21 Pro)
- Slate 6 Voice Tab (pomegranate/HP Slate 6 Voice Tab)
- Slate 6 Voice Tab II (avocado/HP Slate 6 Voice Tab II)
- Slate 6 VoiceTab Plus (mekong/HP Slate 6 VoiceTab Plus)
- Slate 7 Beats Special Edition (fairfax/HP Slate 7 Beats Special Edition)
- Slate 7 Beats Special Edition (fairfax/HP Slate7 Beats Special Edition)
- Slate 7 Extreme (olive/HP Slate7 Extreme)
- Slate 7 HD (bonsai10/HP Slate 10 HD)
- Slate 7 HD (bonsai7/HP Slate 7 HD)
- Slate 7 Voice Tab (almond/HP Slate 7 Voice Tab)
- Slate 7 VoiceTab Ultra (charm/HP Slate 7 VoiceTab Ultra)
- Slate 8 Plus (vogue/HP Slate 8 Plus)
- Slate 8 Pro (dogwood/HP Slate 8 Pro)
- Slate21 (phobos/Slate 21)
- Slate7 Plus (birch/HP Slate 7 Plus)
- Slate8 Pro (fig/HP Slate 8 Pro)
- SlateBook 14 (200a/HP SlateBook 14 PC)
- Tablet 10 (balsa/HP\_10\_Tablet)
- Voice Tab 7 (almond/HP Slate 7 Voice Tab)

## HTC

- \tADR6325 (lexikon/ADR6325)
- ADR6330VW (blissc/ADR6330VW)
- ADR6425LVW (vigor/ADR6425LVW)
- Aria (liberty/HTC Aria A6380)
- Aria (liberty/HTC Aria)
- Aria (liberty/HTC Gratia A6380)
- Aria (liberty/HTC Liberty)
- AT&T HTC One X+ (evitareul/HTC EVARE\_UL)
- AT&T HTC One X+ (evitareul/HTC One X+)
- Butterfly S (dlxpul/HTC Butterfly s)
- Butterfly S (dlxpul/HTC\_Butterfly\_s\_901s)
- Chacha (chacha/HTC ChaCha A810b)
- Chacha (chacha/HTC ChaCha A810e)
- Chacha (chacha/HTC ChaChaCha A810e)
- Chacha (chacha/HTC Status)
- Desire (bravo/HTC Desire)
- Desire (bravo/X06HT)

- Desire (bravoc/PB99400)
- Desire 320 (htc\_v01\_u/HTC Desire 320)
- Desire 510 (htc\_a11ul8x26/HTC Desire 510)
- Desire 516 dual sim (htc\_v2\_dcg/HTC Desire 516 dual sim)
- Desire 516 dual sim (htc\_v2\_dug/HTC Desire 516 dual sim)
- Desire 516 dual sim (htc\_v2\_dug/HTC V2)
- Desire D820mini (htc\_a31dtul/HTC D820mt)
- Desire D820mini (htc\_a31dtul/HTC D820mu)
- Desire HD (ace/001HT)
- Desire HD (ace/Desire HD)
- Desire HD (ace/HTC Desire HD A9191)
- Desire HD (ace/Inspire HD)
- Desire L by HTC (cp2u/Desire L by HTC)
- Desire S (saga/HTC Desire S)
- Desire VC (primodd/HTC Desire VC T328d)
- Desire VC (primodd/HTC Desire VC)
- Desire VC (primodd/HTC PRO\_DD)
- Droid DNA (dlx/HTC6435LRA)
- Droid DNA (dlx/HTC6435LVW)
- Droid Eris (desirec/Eris)
- Droid Eris (desirec/Pulse)
- Droid Incredible (inc/ADR6300)
- EVO 3D (shooter/HTCEVOV4G)
- EVO 3D (shooter/PG86100)
- Evo 4G (supersonic/PC36100)
- EVO LTE 4G (jewel/EVO)
- EVO Shift 4G (speedy/PG06100)
- Flyer (flyer/HTC Flyer P510e)
- Flyer (flyer/HTC Flyer P511e)
- Flyer (flyer/HTC Flyer P512)
- Flyer (flyer/HTC Flyer)
- Flyer (flyer/HTC\_Flyer\_P512\_NA)
- G1 (dream/HTC Dream)
- G2 (vision/HTC Vision)
- G2 (vision/T-Mobile G2)
- Hero (heroc/HERO200)
- HTC 5060 dual sim (z4dug/HTC Desire 500 dual sim)
- HTC 601e (m4/HTC 601e)
- HTC 606w (cp3dug/HTC 606w)
- HTC 606w (cp3dug/HTC Desire 600 dual sim)
- HTC 606w (cp3dug/HTC Desire 600)
- HTC 606w (cp3dug/HTC PO49120)
- HTC 608t (cp3dtg/HTC 608t)
- HTC 609d (cp3dcg/HTC 609d)
- HTC 6160 (zaradug/HTC 6160)
- HTC 619d (zarawl/HTC 619d)
- HTC 7060 (cp5dug/HTC\_7060)
- HTC 710C (htc\_a5chl/710C)
- HTC 802d (m7cdwg/HTC 802d)
- HTC 803e (t6ul/HTC 803e)
- HTC 8060 (t6dug/HTC 8060)

- HTC 8088 (t6tl/HTC 8088)
- HTC 809d (t6dwg/HTC 809d)
- HTC 8160 (t6uhl/HTC 8160)
- HTC 9060 (dlxpul/HTC 901e)
- HTC 9060 (m7/HTC 801e)
- HTC 9060 (m7cdug/HTC 802w)
- HTC 9088 (dlpdtu/HTC 9088)
- HTC 919d (dlpdwg/HTC 919d)
- HTC Butterfly (dlxu/HTC Butterfly)
- HTC Butterfly (dlxu/HTC DLX\_U)
- HTC Butterfly (dlxu/HTC X920e)
- HTC Butterfly (dlxub1/HTC Butterfly)
- HTC Butterfly (dlxub1/HTC DLXUB1)
- HTC Butterfly 2 (htc\_b2ul/HTC Butterfly 2)
- HTC Butterfly 2 (htc\_b2ul/HTC\_B810x)
- HTC Butterfly s 9060 (dlpdug/HTC 9060)
- HTC D316d (htc\_v2\_c/HTC D316d)
- HTC D610t (htc\_a3tl/HTC D610t)
- HTC D816d (htc\_a5dwg/HTC D816d)
- HTC D816d (htc\_a5dwg/HTC\_D816d)
- HTC D816e (htc\_a5dugl/HTC D816e)
- HTC D816h (htc\_a5mgp\_dug/HTC D816h)
- HTC D816t (htc\_a5tl/HTC D816t)
- HTC D816v (htc\_a5dwgl/HTC D816v)
- HTC D816w (htc\_a5dug/HTC D816w)
- HTC D820t (htc\_a51dtul/HTC D820t)
- HTC D820u (htc\_a51dtul/HTC D820u)
- HTC Desire 200 (gtou/HTC Desire 200)
- HTC Desire 200 (gtou/HTC\_Desire\_200)
- HTC Desire 210 dual sim (htc\_v0\_dug/HTC Desire 210 dual sim)
- HTC Desire 300 (g3u/HTC 301e)
- HTC Desire 300 (g3u/HTC Desire 300)
- HTC Desire 300 (g3u/HTC\_OP6A1)
- HTC Desire 300 (g3u/HTC\_Desire\_300)
- HTC Desire 310 (htc\_v1\_dug/HTC D310w)
- HTC Desire 310 (htc\_v1\_dug/HTC Desire 310 dual sim)
- HTC Desire 310 (htc\_v1\_u/HTC Desire 310)
- HTC Desire 310 (htc\_v1\_u/HTC\_D310n)
- HTC Desire 310 (htc\_v1\_u/HTC\_V1)
- htc desire 400 dual sim (cp2dug/HTC Desire 400 dual sim)
- HTC Desire 500 (z4u/HTC Desire 500)
- HTC Desire 500 (z4u/HTC\_Desire\_500)
- HTC Desire 500 dual sim (z4dug/HTC 5060)
- HTC Desire 500 dual sim (z4dug/HTC Desire 500 dual sim)
- HTC Desire 501 (htc\_csnu/HTC Desire 501)
- HTC Desire 501 (htc\_csnu/HTC\_603h)
- HTC Desire 501 dual sim (csndug/HTC Desire 501 dual sim)
- HTC Desire 5088 (z4td/HTC 5088)
- HTC Desire 510 (htc\_a11chl/OPCV1)
- HTC Desire 510 (htc\_a11ul/HTC OPCV20)
- HTC Desire 510 (htc\_a11ul/HTC Desire 510)

- HTC Desire 510 (htc\_a11ul/HTC\_0PCV2)
- HTC Desire 516 (htc\_v2\_dcg/HTC D516d)
- HTC Desire 516 (htc\_v2\_dtg/HTC D516t)
- HTC Desire 516 (htc\_v2\_dug/HTC C2)
- HTC Desire 516 (htc\_v2\_dug/HTC D516w)
- HTC Desire 516 (htc\_v2\_dug/HTC V2)
- HTC Desire 516 dual sim (htc\_v2\_dug/HTC Desire 516 dual sim)
- HTC Desire 600 (cp3dug/HTC Desire 600)
- HTC Desire 600 Dual SIM (cp3dug/HTC Desire 600 dual sim)
- HTC Desire 600c Dual SIM (cp3dcg/HTC 609d)
- HTC Desire 600c Dual SIM (cp3dcg/HTC Desire 600c dual sim)
- HTC Desire 601 (zara/HTC Desire 601)
- hTC Desire 601 (zara/HTC Desire 601)
- HTC Desire 601 (zara/HTC\_0P4E2)
- HTC Desire 601 (zaracl/HTC Desire 601)
- HTC Desire 601 (zaracl/HTC0P4E1)
- HTC Desire 601 dual sim (zaradug/HTC Desire 601 dual sim)
- HTC Desire 606w (cp3dug/HTC 606w)
- HTC desire 608t (cp3dtg/HTC 608t)
- HTC Desire 609d (cp3dcg/HTC 609d)
- htc desire 610 (htc\_a3qhdul/HTC Desire 610)
- HTC Desire 610 (htc\_a3qhdul/HTC Desire 610)
- HTC Desire 610 (htc\_a3qhdul/HTC\_0P9O2)
- HTC Desire 610 (htc\_a3qhdul/HTC\_D610x)
- HTC Desire 610 (htc\_a3ul/HTC Desire 610)
- HTC Desire 616 dual sim (htc\_v3\_dug/HTC D616w)
- HTC Desire 616 dual sim (htc\_v3\_dug/HTC Desire 616 dual sim)
- HTC Desire 616 dual sim (htc\_v3\_dug/HTC V3)
- HTC Desire 620G dual sim (htc\_a31mg\_dug/HTC 0PE65)
- HTC Desire 620G dual sim (htc\_a31mg\_dug/HTC\_D620h)
- HTC Desire 700 dual sim (cp5dug/HTC Desire 700 dual sim)
- HTC Desire 700 dual sim (cp5dwg/HTC Desire 700 dual sim)
- HTC Desire 700 dual sim (cp5dwg/HTC\_709d)
- HTC Desire 7060 (cp5dug/HTC\_7060)
- HTC Desire 7088 (cp5dtu/HTC 7088)
- HTC Desire 709d (cp5dwg/HTC 709d)
- HTC Desire 816 (htc\_a5chl/HTC Desire 816)
- HTC Desire 816 (htc\_a5ul/HTC Desire 816)
- HTC Desire 816 (htc\_a5ul/HTC\_0P9C2)
- HTC Desire 816 (htc\_a5ul/HTC\_D816x)
- HTC Desire 816 dual sim (htc\_a5dug/HTC Desire 816 dual sim)
- HTC Desire 816 dual sim (htc\_a5dwg/HTC Desire 816 dual sim)
- HTC Desire 816G dual sim (htc\_a5mg\_dug/HTC Desire 816G dual sim)
- HTC Desire 816G dual sim (htc\_a5mgp\_dug/HTC Desire 816G dual sim)
- HTC Desire C (golfc/HTC Desire C)
- HTC Desire C (golfu/HTC Desire C)
- HTC Desire EYE (htc\_eyetuhl/HTC 0PFH2)
- HTC Desire EYE (htc\_eyetuhl/HTC Desire EYE)
- HTC Desire EYE (htc\_eyetuhl/HTC\_M910x)
- HTC Desire EYE (htc\_eyeul/HTC 0PFH11)
- HTC Desire EYE (htc\_eyeul/HTC Desire EYE)

- HTC Desire Eye (htc\_eyeu\_att/HTC Desire Eye)
- HTC Desire L dual sim (cp2dug/HTC Desire L dual sim)
- HTC Desire P (magniu/HTC Desire P)
- HTC Desire SV (magnids/HTC Desire SV)
- HTC Desire V (primods/HTC Desire Q)
- HTC Desire V (primods/HTC Desire U dual sim)
- HTC Desire V (primods/HTC Desire U)
- HTC Desire V (primods/HTC Desire V)
- HTC Desire V (primods/HTC PRO\_DS)
- HTC Desire V (primods/HTC PROMIN\_U)
- HTC Desire V (primods/HTC T327w)
- htc desire x (protou/HTC Desire X)
- HTC Desire X (protou/HTC Desire X)
- HTC Desire X (protou/HTC POO\_U)
- HTC Desire X dual sim (protodug/HTC Desire X dual sim)
- HTC Desire XC dual sim (protodcg/HTC Desire XC dual sim)
- HTC DROID DNA (dlx/HTC6435LRA)
- HTC DROID Incredible 4G LTE (fireball/ADR6410LRA)
- HTC DROID Incredible 4G LTE (fireball/ADR6410LVW)
- HTC DROID Incredible 4G LTE (fireball/ADR6410OM)
- HTC EVO 3D ISW12HT (shooterk/ISW12HT)
- HTC EVO 3D X515m (shooteru/HTC EVO 3D X515a)
- HTC EVO 3D X515m (shooteru/HTC EVO 3D X515m)
- HTC EVO 3D X515m (shooteru/HTC Inspire 3D)
- HTC EVO 4G LTE (jewel/EVO)
- HTC Explorer A310e (pico/HTC Explorer A310b)
- HTC Explorer A310e (pico/HTC Explorer A310e)
- HTC Explorer A310e (pico/HTC Explorer)
- HTC first (mystul/HTC first)
- HTC Flyer (express/HTC Flyer)
- HTC Hero (hero/dopod A6288)
- HTC Hero (hero/ERA G2 Touch)
- HTC Hero (hero/HTC Hero)
- HTC Hero (hero/T-Mobile G2 Touch)
- HTC Hero (hero/T-Mobile\_G2\_Touch)
- HTC Incredible E S715e (tagh/HTC Incredible E S715e)
- HTC J Butterfly (dlxj/HTL21)
- HTC J One (m7wlj/HTL22)
- HTC J Z321e (valentewxc9/HTC J Z321e)
- HTC M8t (htc\_m8tl/HTC M8t)
- HTC One (E8) (htc\_mecdwg/HTC M8Sd)
- HTC One (E8) (htc\_mectl/HTC M8St)
- HTC One (E8) (htc\_mectl/HTC One\_E8)
- HTC One (E8) (htc\_mecul/HTC One\_E8)
- HTC One (E8) (htc\_mecul/HTC\_M8Sx)
- HTC One (E8) (htc\_mecwhl/0PAJ5)
- HTC One (E8) dual sim (htc\_mecdug/HTC One\_E8 dual sim)
- HTC One (E8) dual sim (htc\_mecdwg/HTC 0PAJ4)
- HTC One (E8) dual sim (htc\_mecdwg/HTC One\_E8 dual sim)
- HTC One (E8) 时尚版 4G LTE双卡双待联通版 (htc\_mecdug/HTC M8Sw)

- HTC One (E8) 时尚版 (htc\_mectl/HTC M8St)
- HTC One (E8) 时尚版4G LTE 移动版 (htc\_mectl/HTC M8Ss)
- HTC One (m7/HTC 801e)
- HTC One (m7/HTC One 801e)
- HTC One (m7/HTC One)
- HTC One (m7/HTC\_PN071)
- HTC One (m7cdtu/HTC 802t 16GB)
- HTC One (m7cdtu/HTC 802t)
- HTC One (m7cdug/HTC 802w)
- HTC One (m7cdug/HTC One dual sim)
- HTC One (m7cdwg/HTC 802d)
- HTC One (m7cdwg/HTC One dual 802d)
- HTC One (m7cdwg/HTC One dual sim)
- HTC One (m7wls/HTC One)
- HTC One (m7wls/HTCONE)
- HTC One (m7wlv/HTC One)
- HTC One (m7wlv/HTC6500LVW)
- HTC One (M8) (4G LTE 双卡双待 联通版) (htc\_m8dug/HTC M8e)
- HTC One (M8) (htc\_m8/HTC M8w)
- HTC One (M8) (htc\_m8/HTC One\_M8)
- HTC One (M8) (htc\_m8/HTC\_0P6B)
- HTC One (M8) (htc\_m8/HTC\_0P6B6)
- HTC One (M8) (htc\_m8/HTC\_M8x)
- HTC One (M8) (htc\_m8dug/HTC One\_M8 dual sim)
- HTC One (M8) (htc\_m8dwg/HTC M8d)
- HTC One (M8) (htc\_m8whl/831C)
- HTC One (M8) (htc\_m8wl/HTC One\_M8)
- HTC One (M8) (htc\_m8wl/HTC6525LVW)
- HTC One 801e (m7/HTC One 801e)
- HTC One 801e (m7/HTC One 801s)
- HTC One Dual 802d (m7cdwg/HTC One dual 802d)
- HTC One Dual Sim (m7cdwg/HTC One dual sim)
- HTC One E8 dual (htc\_mecdug/HTC\_M8Sd)
- HTC One Google Play edition (m7/HTC One)
- HTC One M8 eye 4G LTE 移动定制版 (htc\_melstuhl/HTC M8Et)
- HTC One M8 eye 4G LTE联通版 (htc\_melsuhl/HTC M8Ew)
- HTC One max (t6ul/HTC One max)
- HTC One max (t6ul/HTC\_One\_max)
- HTC One max (t6whl/HTC0P3P7)
- HTC One mini (htc\_m4/HTC One mini)
- HTC One mini (m4/HTC One mini)
- HTC One mini (m4/HTC\_One\_mini\_601e)
- HTC One mini (m4/HTC\_PO582)
- HTC One mini 2 (htc\_memul/HTC One mini 2)
- HTC One mini 2 (htc\_memul/HTC\_M8MINx)
- HTC One mini 2 (htc\_memul/HTC\_One\_mini\_2)
- HTC One mini 601E (m4/HTC\_One\_mini\_601e)
- HTC One mini2 (htc\_memul/HTC One mini 2)
- HTC One remix (htc\_memwl/HTC6515LVW)
- HTC One S (ville/HTC One S)

- HTC ONE S (ville/HTC One S)
- HTC One S (ville/HTC VLE\_U)
- HTC One S (villec2/HTC One S)
- HTC One S Special Edition (villeplus/HTC One S Special Edition)
- HTC One SC (cp2dcg/HTC One SC T528d)
- HTC One SC (cp2dcg/HTC One SC)
- HTC One SV (k2cl/C525c)
- HTC One SV (k2plccl/HTC One SV)
- HTC ONE SV (k2u/HTC K2\_U)
- HTC ONE SV (k2u/HTC One SV)
- HTC One SV (k2ul/HTC K2\_UL)
- HTC One SV (k2ul/HTC One SV)
- HTC ONE SV (k2ul/HTC One SV)
- HTC One SV BLK (k2plccl/HTC One SV BLK)
- HTC One SV BLK (k2plccl/HTC One SV)
- HTC One V (primoc/HTC One V)
- HTC One V (primou/HTC ONE V)
- HTC One V (primou/HTC One V)
- HTC One VX (totemc2/HTC One VX)
- HTC One X (endeavoru/HTC One X)
- HTC One X (evita/HTC One X)
- HTC One X+ (enrc2b/HTC One X+)
- HTC One X+ (evitareul/HTC One X+)
- HTC One XL (evita/HTC One X)
- HTC One XL (evita/HTC One XL)
- HTC One XL (evita/HTC\_One\_XL)
- HTC One XL (evिताutl/HTC EVA\_UTL)
- HTC One\_E8 (htc\_mecul\_emea/HTC One\_E8)
- HTC Onex X (endeavoru/HTC One X)
- HTC PO091 (csndug/HTC PO091)
- HTC Rhyme S510b (bliss/HTC Rhyme S510b)
- HTC S720e (endeavoru/HTC S720e)
- HTC Salsa C510e (icong/HTC Salsa C510b)
- HTC Salsa C510e (icong/HTC Salsa C510e)
- HTC Sensation XL with Beats Audio X315e (runnymede/HTC Sensation XL with Beats Audio X315b)
- HTC Sensation XL with Beats Audio X315e (runnymede/HTC Sensation XL with Beats Audio X315e)
- HTC Sensation XL with Beats Audio X315e (runnymede/HTC-X315E)
- HTC Sensation XL with Beats Audio X315e (runnymede/Sensation XL with Beats Audio)
- HTC T329d (protodecg/HTC T329d)
- HTC T528w (cp2dug/HTC Desire L dual sim)
- HTC Velocity 4G (holiday/HTC PH39100)
- HTC Velocity 4G (holiday/HTC Raider X710e)
- HTC Velocity 4G (holiday/HTC Velocity 4G X710s)
- HTC Velocity 4G (holiday/HTC Velocity 4G)
- HTC Velocity 4G (holiday/HTC-X710a)
- HTC Wildfire S A515c (marvelc/HTC Wildfire S A515c)
- HTC Wildfire S A515c (marvelc/HTC-PG762)
- HTC Wildfire S A515c (marvelc/USCCADR6230US)
- HTC6435LVW (dlx/HTC6435LVW)



- HTC909d (dlpdwg/HTC 919d)
- HTC\_0P3P5 (t6ul/HTC\_0P3P5)
- HTC\_0P4E2 (zara/HTC\_0P4E2)
- HTC\_A510c (marvelc/HTC\_A510c)
- HTC\_Amaze\_4G (ruby/HTC Amaze 4G)
- HTC\_Amaze\_4G (ruby/HTC Ruby)
- HTC\_Amaze\_4G (ruby/HTC\_Amaze\_4G)
- HTC\_P515E (expresskt/HTC\_P515E)
- HTC\_X515E (rider/HTC\_X515E)
- HTCDesire612VZW (htc\_a3qhdcl/HTC331ZLVW)
- HTCDesire612VZW (htc\_a3qhdcl/HTC331ZLVWPP)
- HTCEVODesign4G (kingdom/HTC Acquire)
- HTCEVODesign4G (kingdom/HTC EVO Design C715e)
- HTCEVODesign4G (kingdom/HTC Hero S)
- HTCEVODesign4G (kingdom/HTC Kingdom)
- HTCEVODesign4G (kingdom/HTCEVODesign4G)
- HTCEVODesign4G (kingdom/PH44100)
- HTCOneMaxVZW (t6wl/HTC6600LVW)
- HTL23 (htc\_b2wlj/HTL23)
- Incredible 2 (vivow/ADR6350)
- Incredible 2 (vivow/HTC IncredibleS S710d)
- Incredible S (vivo/HTC Incredible S)
- Incredible S (vivo/HTC\_S710E)
- ISW13HT (valentewx/ISW13HT)
- KDDI Infobar A02 (imnj/HTX21)
- Legend (legend/HTC Legend)
- myTouch 3G (sapphire/HTC Magic)
- myTouch 3G (sapphire/T-Mobile myTouch 3G)
- myTouch 3G Slide (espresso/T-Mobile myTouch 3G Slide)
- myTouch 4G (glacier/HTC Glacier)
- myTouch 4G (glacier/HTC Panache)
- myTouch 4G Slide (doubleshot/myTouch\_4G\_Slide)
- Nexus 9 (flounder/Nexus 9)
- Nexus One (passion/Nexus One)
- One XL (evita/HTC One XL)
- PG41200 (express/PG41200)
- Puccini (puccinilte/HTC PG09410)
- Puccini (puccinilte/HTC-P715a)
- Sensation 4G (pyramid/HTC Sensation 4G)
- Sensation 4G (pyramid/HTC Sensation XE with Beats Audio Z715a)
- Sensation 4G (pyramid/HTC Sensation XE with Beats Audio Z715e)
- Sensation 4G (pyramid/HTC Sensation XE with Beats Audio)
- Sensation 4G (pyramid/HTC Sensation Z710a)
- Sensation 4G (pyramid/HTC Sensation Z710e)
- Sensation 4G (pyramid/HTC Sensation)
- Sensation 4G (pyramid/HTC-Z710a)
- Thunderbolt (mecha/ADR6400L)
- Thunderbolt (mecha/HTC Mecha)
- Wildfire (buzz/HTC Wildfire)
- Wildfire CDMA (bee/HTC Bee)
- Wildfire CDMA (bee/HTC Wildfire)

- Wildfire S (marvel/HTC Wildfire S A510b)
- Wildfire S (marvel/HTC Wildfire S A510e)
- Wildfire S (marvel/HTC Wildfire S)
- Wildfire S (marvel/HTC-A510a)

## Huawei

- 004HW (msm7227/004HW)
- 007HW (hwu8850/007HW)
- 201HW (hwu9201L/201HW)
- A01HW (hwS7-901w/A01HW)
- A199 (hwa199/HUAWEI A199)
- Ascend D (hwu9500/U9500)
- Astro (hwu8651/Astro)
- B199 (hwB199/HUAWEI B199)
- Barcelona (hwu8350/Barcelona)
- Beeline\_E300 (msm7225/Beeline\_E300)
- Beeline\_E500 (hwu8510/Beeline\_E500)
- C8500 (hwc8500/C8500)
- C8511 (hwc8511/C8511)
- C8512 (hwc8512/C8512)
- C8600 (C8600/C8600)
- C8600 (hwc8600/C8600)
- C8600 (msm7625/C8600)
- C8650 (hwc8650/C8650)
- C8800 (hwc8800/C8800)
- C8812 (hwc8812/HUAWEI C8812)
- C8813DQ (hwC8813DQ/HUAWEI C8813DQ)
- C8815 (hwC8815/HUAWEI C8815)
- C8816 (hwC8816/HUAWEI C8816)
- C8816D (hwC8816D/HUAWEI C8816D)
- C8817D (hwC8817D/C8817D)
- C8817E (hwC8817E/HUAWEI C8817E)
- C8817L (hwC8817L/HUAWEI C8817L)
- Che1-CL10 (Che1/Che1-CL10)
- Che1-CL20 (Che1/Che1-CL20)
- Che2-TL00 (hwChe2/Che2-TL00)
- Che2-UL00 (hwChe2/Che2-UL00)
- CHT8000 (CHT8000/CHT8000)
- CM980 (hwcm980/CM980)
- CM990 (hwCM990/CM990)
- D2 (hwD2-6070/HUAWEI D2-6070)
- dtab01 (dtab01/dtab01)
- eH811 (hweH811/eH811)
- EQ U8110 (U8110/EQ U8110)
- ES8100 (hwes8100/ES8100)
- Etisalat (hwu8655/Etisalat)
- Express (hwm650/Express)
- G350 (hwg350/HUAWEI G350)
- G350 (hwg350/HUAWEI G350-U00)

- G350 (HWG350/HUAWEI G350-U20)
- G506 (hwG506-U151/HUAWEI G506-U151)
- G510 (hwG510-0010/HUAWEI G510-0010)
- G510 (hwG510-0100/HUAWEI G510-0100)
- G510 (hwG510-0100/HuaweiG510-0100)
- G510 (hwG510-0100/HuaweiG510-0100-orange)
- G520 (hwG520-5000/HUAWEI G520-5000)
- G521-L076 (HWG521-L/HUAWEI G521-L076)
- G521-L176 (HWG521-L/HUAWEI G521-L176)
- G526 (hwG526-L11/G526-L11)
- G526 (hwG526-L22/G526-L22)
- G526 (hwG526-L33/G526-L33)
- G527 (hwG527-U081/G527-U081)
- G535-L11 (hwG535-L11/HUAWEI G535-L11)
- G535-L11 (hwG535-L11/Kestrel)
- G535-L11 (hwG535-L11/Orange Gova)
- G535-L11 (hwG535-L11/Speedsurfer)
- G535-L11 (hwG535-L11/Ulym5)
- G6 (hwG6-T00/HUAWEI G6-T00)
- G6-C00 (hwG6-C00/HUAWEI G6-C00)
- G6-L11 (hwG6-L11/HUAWEI G6-L11)
- G6-L22 (hwG6-L22/HUAWEI G6-L22)
- G6-L33 (hwG6-L33/HUAWEI G6-L33)
- G6-U00 (hwG6-U00/HUAWEI G6-U00)
- G6-U10 (hwG6-U10/HUAWEI G6-U10)
- G6-U251 (hwG6-U251/HUAWEI G6-U251)
- G6-U34 (hwG6-U34/HUAWEI G6-U34)
- G606 (HWG606/HUAWEI G606-T00)
- G610 (hwG610-T00/HUAWEI G610-T00)
- G610 (hwG610-U00/G610-U00)
- G610 (hwG610-U00/HUAWEI G610-U00)
- G610 (hwG610-U30/HUAWEI G610-U30)
- G610-T01 (hwG610-T01/HUAWEI G610-T01)
- G610-T11 (hwG610-T11/HUAWEI G610-T11)
- G610-U15 (hwG610-U15/HUAWEI G610-U15)
- G610-U20 (hwG610-U20/HUAWEI G610-U20)
- G610C (hwG610-C00/HUAWEI G610-C00)
- G615-U10 (hwG615-U10/G615-U10)
- G615-U10 (hwG615-U10/HUAWEI G615-U10)
- G616-L076 (HWG616-L/HUAWEI G616-L076)
- G620-L72 (hwG620-L72/HUAWEI G620-L72)
- G620-L75 (hwG620-L75/G620-L75)
- G620S-L01 (hwG620S-L01/G620S-L01)
- G620S-L02 (hwG620S-L02/G620S-L02)
- G620S-L03 (hwG620S-L03/G620S-L03)
- G620S-L03 (hwG620S-L03/HUAWEI G620)
- G620S-L03 (hwG620S-L03/Personal Huawei G620S)
- G620S-UL00 (hwG620S-UL00/G620S-UL00)
- G621-TL00 (hwG621-TL00/G621-TL00)
- G621-TL00M (hwG621-TL00/G621-TL00M)
- G630-U00 (hwG630-U00/HUAWEI G630-U00)

- G630-U10 (hwG630-U10/G630-U10)
- G630-U20 (hwG630-U20/G630-U20)
- G630-U251 (hwG630-U251/G630-U251)
- G630-U251 (hwG630-U251/HUAWEI G630-U251)
- G660-L075 (hwG660-L075/HUAWEI G660-L075)
- G7-TL00 (hwG7-TL00/G7-TL00)
- G7-TL00 (hwG7-TL00/HUAWEI G7-TL00)
- G700 (hwG700-T00/HUAWEI G700-T00)
- G700 (hwG700-U00/HUAWEI G700-U00)
- G700-T01 (hwG700-T01/HUAWEI G700-T01)
- G700-U10 (hwG700-U10/HUAWEI G700-U10)
- G700-U20 (hwG700-U20/HUAWEI G700-U20)
- G716 (hwG716-L070/HUAWEI G716-L070)
- G718 (hwg718/HUAWEI G718)
- G730 (hwG730-C00/HUAWEI G730-C00)
- G730 (hwG730-T00/HUAWEI G730-T00)
- G730 (hwG730-U00/HUAWEI G730-U00)
- G730-L075 (hwG730-L075/HUAWEI G730-L075)
- G730-U10 (hwG730-U10/HUAWEI G730-U10)
- G730-U251 (hwG730-U251/HUAWEI G730-U251)
- G730-U27 (hwG730-U27/HUAWEI G730-U27)
- G730-U30 (hwG730-U30/HUAWEI G730-U30)
- G740 (hwG740-L00/G740-L00)
- G740 (hwG740-L00/Orange Yumo)
- G750-T00 (hwG750-T00/HUAWEI G750-T00)
- G750-T01 (hwG750-T01/HUAWEI G750-T01)
- G750-T01M (hwG750-T01M/HUAWEI G750-T01M)
- G750-T20 (hwG750-T20/HUAWEI G750-T20)
- G750-U10 (hwG750-U10/HUAWEI G750-U10)
- G7500 (HWG7500/HUAWEI G7500)
- GM FOX (hwu8350/GM FOX)
- GM Ultimate Slim (hwu8510/GM Ultimate Slim)
- Grameenphone Crystal (hwu8500/Grameenphone Crystal)
- Grameenphone Crystal (msm7225/Grameenphone Crystal)
- GS02 (hwu8860/GS02)
- GS03 (hwu9200-92/GS03)
- GT01 (hws10101w/GT01)
- H30-C00 (hwH30-C00/H30-C00)
- H30-L01 (hwH30/HONOR H30-L01)
- H30-L01M (hwH30/HONOR H30-L01M)
- H30-L02 (hwH30/H30-L02)
- H30-L02 (hwH30/HONOR H30-L02)
- H30-T00 (hwH30-T00/H30-T00)
- H60 (hwH60/H60-L01)
- H60-J1 (hwH60/HW-H60-J1)
- H60-L01 (hwH60/H60-L01)
- H60-L02 (hwH60/H60-L02)
- H60-L03 (hwH60/H60-L03)
- H60-L04 (hwH60/H60-L04)
- H60-L11 (hwH60/H60-L11)
- H60-L12 (hwH60/H60-L12)

- H60-L21 (hwH60-L21/H60-L21)
- H60-L21 (hwH60/H60-L21)
- H866C (hwh866c/H866C)
- H882L (hwh882l/H882L)
- Hol-T00 (HWHol-T/Hol-T00)
- Hol-U10 (HWHol-U/Hol-U10)
- Hol-U19 (HWHol-U/Hol-U19)
- Honor3 (hwH30-T10/H30-T10)
- Honor3 (hwH30-U10/H30-U10)
- Honor3 (hwhn3-u00/HUAWEI HN3-U00)
- Honor3 (hwhn3-u01/HUAWEI HN3-U01)
- Huawei (msm7225/Huawei)
- Huawei (U8110/Huawei)
- HUAWEI Ascend G 300 (hwu8815/HUAWEI Ascend G 300)
- HUAWEI Ascend G 330 (hwu8825-1/HUAWEI Ascend G 330)
- HUAWEI C199 (hwC199/HUAWEI C199)
- HUAWEI C8650+ (hwc8650e/HUAWEI C8650+)
- HUAWEI C8655 (hwc8655/HUAWEI C8655)
- HUAWEI C8810 (hwc8810/HUAWEI C8810)
- HUAWEI C8812E (hwc8812E/HUAWEI C8812E)
- HUAWEI C8825D (hwc8825D/HUAWEI C8825D)
- HUAWEI C8826D (hwc8826D/HUAWEI C8826D)
- HUAWEI C8860E (hwc8860E/HUAWEI C8860E)
- HUAWEI C8860E (hwC8860E/HUAWEI C8860E)
- HUAWEI C8950D (hwc8950D/HUAWEI C8950D)
- HUAWEI G520-T10 (hwG520-T10/HUAWEI G520-T10)
- HUAWEI G630 (hwG630-T00/HUAWEI G630-T00)
- HUAWEI G7-L01 (hwG7-L01/G7-L01)
- HUAWEI H866C (hwh866c/HUAWEI H866C)
- HUAWEI H871G (hwh871g/HUAWEI H871G)
- HUAWEI IDEOS U8500 (msm7225/HUAWEI IDEOS U8500)
- HUAWEI IDEOS U8500 (U8500/HUAWEI IDEOS U8500)
- Huawei Ideos X1 (HuaweiU8180/Huawei Ideos X1)
- Huawei IDEOS X3 (hwu8510/Huawei IDEOS X3)
- HUAWEI IDEOS Y 200 (hwu8655/HUAWEI IDEOS Y 200)
- HUAWEI M866 (hwm866/HUAWEI M866)
- HUAWEI MediaPad (hws7300c/HUAWEI MediaPad)
- HUAWEI MediaPad (hws7300u/HUAWEI MediaPad)
- HUAWEI MediaPad (hws7300w/HUAWEI MediaPad)
- HUAWEI MediaPad 10 Link+ (hws10231l/402HW)
- HUAWEI MediaPad 10 Link+ (hws10231l/MediaPad 10 Link+)
- HUAWEI MediaPad 10 Link+ (hws10231l/S10-232L)
- HUAWEI MediaPad 10 Link+ (hws10231l/SpeedTAB)
- HUAWEI MediaPad 7 Youth2 (hws7721u/MediaPad 7 Youth 2)
- HUAWEI MediaPad 7 Youth2 (hws7721u/S7-721u)
- HUAWEI MediaPad M1 8.0 (hws8301l/403HW)
- HUAWEI MediaPad M1 8.0 (hws8301l/MediaPad M1 8.0 (LTE))
- HUAWEI MediaPad M1 8.0 (hws8301l/MediaPad M1 8.0 (WIFI))
- HUAWEI MediaPad M1 8.0 (hws8301l/MediaPad M1 8.0)
- HUAWEI MediaPad M1 8.0 (hws8301l/S8-303L)
- HUAWEI MediaPad M1 8.0 (hws8301l/S8-306L)

- HUAWEI MediaPad X1 7.0 (hw7d5011/7D-501u)
- HUAWEI MediaPad X1 7.0 (hw7d5011/MediaPad X1 7.0)
- HUAWEI MediaPad X1 7.0 (hw7d5011/MediaPad X1)
- HUAWEI MediaPad X1 7.0 (hw7d5011/X1 7.0)
- HUAWEI MT7-L09 (hwmt7/HUAWEI MT7-L09)
- HUAWEI P2-0000 (hwp2-0000/HUAWEI P2-0000)
- HUAWEI P2-6011 (hwp2-6011/HUAWEI P2-6011)
- HUAWEI P2-6011-orange (hwp2-6011/HUAWEI P2-6011-orange)
- HUAWEI P6 (hwp6-u06/HUAWEI Ascend P6)
- HUAWEI P6 (hwp6-u06/HUAWEI P6-U06)
- HUAWEI P6 (hwp6-u06/HUAWEI P6-U06-orange)
- HUAWEI P7-L11 (hwp7/HUAWEI P7-L11)
- Huawei S7-312u (hws7300u/Huawei S7-312u)
- HUAWEI SONIC (hws8650/HUAWEI SONIC)
- HUAWEI T8300 (T8300/HUAWEI T8300)
- HUAWEI T8600 (T8600/HUAWEI T8600)
- HUAWEI T8808D (hwT8808D/HUAWEI T8808D)
- HUAWEI T8828 (T8828/HUAWEI T8828)
- HUAWEI T8833 (hwt8833/HUAWEI T8833)
- HUAWEI T8950 (hwt8950/HUAWEI T8950)
- HUAWEI T8950N (hwt8950N/HUAWEI T8950N)
- HUAWEI T8951 (hwt8951/HUAWEI T8951)
- Huawei U8110 (U8110/Huawei U8110)
- HUAWEI U8661 (hws8661/HUAWEI U8661)
- HUAWEI U8666E (hws8666e-51/HUAWEI U8666E)
- HUAWEI U8666E (hws8666e/HUAWEI U8666E)
- HUAWEI U8666E-51 (hws8666e-51/HUAWEI U8666E-51)
- HUAWEI U8666N (hws8666n/HUAWEI U8666N)
- HUAWEI U8681 (hws8681/HUAWEI U8681)
- Huawei U8800-51 (hws8800-51/Huawei U8800-51)
- HUAWEI U8815 (hws8815/HUAWEI U8815)
- HUAWEI U8815N (hws8815n/HUAWEI U8815N)
- HUAWEI U8818 (hws8818/HUAWEI U8818)
- HUAWEI U8825-1 (hws8825-1/HUAWEI U8825-1)
- HUAWEI U8825D (hws8825D/HUAWEI U8825D)
- HUAWEI U8950-1 (hws8950-1/HUAWEI U8950-1)
- HUAWEI U8950D (hws8950D/HUAWEI U8950D)
- HUAWEI U8950N-1 (hws8950N-1/HUAWEI U8950N-1)
- HUAWEI U8950N-51 (hws8950N-51/HUAWEI U8950N-51)
- HUAWEI U9508 (hws9508/HUAWEI U9508)
- HUAWEI U9510 (hws9510/HUAWEI U9510)
- HUAWEI U9510E (hws9510e/HUAWEI U9510E)
- HUAWEI Y 220T (hwy220t/HUAWEI Y 220T)
- HUAWEI Y210-0010 (hwy210-0010/HUAWEI Y210-0010)
- HUAWEI Y210-2010 (hwy210-2010/HUAWEI Y210-2010)
- HUAWEI Y536-A1 (hwY536A1/HUAWEI Y536A1)
- HUAWEI Y610 (HWY610-U/HUAWEI Y610-U00)
- HUAWEI Y618 (HWY618-T/HUAWEI Y618-T00)
- HUAWEI-C8850 (hwc8850/HUAWEI-C8850)
- HUAWEI-M860 (hwm860/HUAWEI-M860)
- HUAWEI-M860 (msm7625/HUAWEI-M860)

- HUAWEI-M920 (hwm920/HUAWEI-M920)
- HUAWEI-S7 (qsd8k\_s7/HUAWEI-S7)
- Huawei-U8652 (hwu8652/Huawei-U8652)
- Huawei-U8665 (hwu8665/Huawei-U8665)
- HUAWEI-U8850 (hwu8850/HUAWEI-U8850)
- HUAWEI-U9000 (hwu9000/HUAWEI-U9000)
- HUAWEI\_Ascend G 300 (hwu8815/HUAWEI\_Ascend G 300)
- HUAWEI\_IDEOS\_U8500 (hwu8500/HUAWEI\_IDEOS\_U8500)
- HUAWEI\_IDEOS\_U8500 (msm7225/HUAWEI\_IDEOS\_U8500)
- HUAWEI\_IDEOS\_U8650 (hwu8650/HUAWEI\_IDEOS\_U8650)
- HUAWEI\_IDEOS\_X5 (hwu8800Pro/HUAWEI\_IDEOS\_X5)
- HUAWEI\_U8860 (hwu8860/HUAWEI\_U8860)
- HuaweiES8500 (hwes8500/HuaweiES8500)
- HuaweiU8180 (HuaweiU8180/HuaweiU8180)
- HuaweiU8300 (msm7225/HuaweiU8300)
- HuaweiU8350 (hwu8350/HuaweiU8350)
- HuaweiU8500 (hwu8500/HuaweiU8500)
- HuaweiU8510 (hwu8510/HuaweiU8510)
- HuaweiU8650 (hwu8650/HuaweiU8650)
- HuaweiU8800Pro (hwu8800Pro/HuaweiU8800Pro)
- HW-01E (hwu9501L/HW-01E)
- HW-03E (HW-03E/HW-03E)
- hw204HW (hw204HW/204HW)
- ICE (hwu8500/ICE)
- Ice-Twist (Ice-Twist/Ice-Twist)
- Ideos (msm7225/Ideos)
- Ideos (msm7625/Ideos)
- IDEOS (U8150/Comet)
- IDEOS (u8150/Ideos)
- IDEOS (U8150/Ideos)
- Ideos S7 (qsd8k\_s7/Ideos S7)
- IDEOS S7 (qsd8k\_s7/IDEOS S7)
- IDEOS S7 Slim (qsd8k\_slim/IDEOS S7 Slim)
- IDEOS X1 (HuaweiU8180/IDEOS X1)
- IDEOS X5 (hwu8800-51/IDEOS X5)
- IDEOS X5 (hwu8800/IDEOS X5)
- IDEOS X5 (hwu8800Pro/IDEOS X5)
- IDEOS X5 (msm7230/IDEOS X5)
- Kyivstar Aqua (hwu8650/Kyivstar Aqua)
- Kyivstar Terra (HuaweiU8180/Kyivstar Terra)
- life:) Android (U8110/life:) Android)
- M220 (hwmediaqm220/M220)
- M310 (hwsingleboxm310w/M310)
- M620 (M620/M620)
- M620 (M620/TB01)
- M650 (hwm650/M650)
- M660 (hwm660/M660)
- M835 (hwm835/HUAWEI-M835)
- M860 (M860/M860)
- M860 (msm7625/M860)
- M865 (hwm865/M865)

- M865 (hwm865/USCCADR3305)
- M865C (hwm865c/M865C)
- M866 (hwm866/M866)
- M868 (hwm868/HUAWEI M868)
- m881 (hwm881/HUAWEI M881)
- M886 (hwm886/M886)
- Mate (hwmt1-t00/HUAWEI MT1-T00)
- Mate2 (hwmt2-c00/HUAWEI MT2-C00)
- MediaPad (hws7300u/MediaPad)
- MediaPad 10 FHD (hws10101u/MediaPad 10 FHD)
- MediaPad 10 FHD (hws10101w/MediaPad 10 FHD)
- MediaPad 7 Lite (hws7930u/MediaPad 7 Lite)
- MediaPad 7 Lite (hws7930w/MediaPad 7 Lite)
- MediaPad Vogue (hws7601u/MediaPad 7 Lite II)
- MediaPad Vogue (hws7601u/MediaPad 7 Vogue)
- MediaPad Youth (hws7701w/MediaPad 7 Youth)
- MediaPad7 (hws7601us/MediaPad 7 Vogue)
- MediaPad7 (hws7601w/MediaPad 7 Vogue)
- MegaFon SP-A3 (hwu8666e/MegaFon SP-A3)
- MegaFon U8500 (hwu8500/MegaFon U8500)
- MF8503 (hwu8500/MF8503)
- MS4C (hwMS4C/MS4C)
- MT2-L01 (hwmt2-l01/HUAWEI MT2-L01)
- MT2-L02 (hwmt2-l02/HUAWEI MT2-L02)
- MT2-L03 (hwMT2L03/MT2L03)
- MT2-L05 (hwmt2-l05/HUAWEI MT2-L05)
- MT2L03LITE (hwMT2L03LITE/MT2L03)
- MT7-CL00 (hwmt7/HUAWEI MT7-CL00)
- MT7-TL00 (hwmt7/HUAWEI MT7-TL00)
- MT7-TL10 (hwmt7/HUAWEI MT7-TL10)
- MT7-UL00 (hwmt7/HUAWEI MT7-UL00)
- MTC 955 (hwu8650/MTC 955)
- MTC Bravo (hwu8510/MTC Bravo)
- MTC Evo (hwu8500/MTC Evo)
- MTC Evo (msm7225/MTC Evo)
- MTC Fit (hwu8666/MTC Fit)
- MTC Neo (hwu8800/MTC Neo)
- MTC Neo (hwu8800Pro/MTC Neo)
- MTC Pro (hwu8350/MTC Pro)
- MTC Viva (hwu8816/MTC Viva)
- MTC\_A (U8110/MTC\_A)
- MTC\_EVO (U8500/MTC\_EVO)
- MTS-SP101 (hwc8511/MTS-SP101)
- MTS-SP140 (hwc8800/MTS-SP140)
- Netphone 501 (hwu8180/Netphone 501)
- ORINOQUIA C8688V (orinoquiac8688V/ORINOQUIA C8688V)
- Oysters SmaKit S7 (qsd8k\_s7/Oysters SmaKit S7)
- P2 (hwp2-6070/HUAWEI P2-6070)
- P6 (hwp6-c00/HUAWEI P6-C00)
- P6 (hwp6-t00/HUAWEI P6-T00)
- P6 (hwp6-t00/HUAWEI P6-T00V)



- P6S (hwP6s-104/P6 S-L04)
- P6S-L04 (hwp6s-104/302HW)
- P6S-U06 (hwp6s-u06/HUAWEI P6 S-U06)
- P7 mini (hwp7Mini/HUAWEI P7 mini)
- P7-L00 (hwp7/HUAWEI P7-L00)
- P7-L05 (hwp7/HUAWEI P7-L05)
- P7-L07 (hwp7/HUAWEI P7-L07)
- P7-L09 (hwp7/HUAWEI P7-L09)
- P7-L10 (hwp7/HUAWEI P7-L10)
- P7-L12 (hwp7/HUAWEI P7-L12)
- Personal U8350 (hwu8350/Personal U8350)
- Personal U8655-51 (hwu8655/Personal U8655-51)
- Personal U8815-51 (hwu8815/Personal U8815-51)
- Prism (hwu8651/Prism)
- Prism II (hwu8686/Prism II)
- Pulse (msm7201a/Pulse)
- Pulse (Pulse/Pulse)
- Pulse Mini (msm7225/Pulse Mini)
- Pulse Mini (U8110/Pulse Mini)
- RBM C (msm7225/RBM C)
- RBM\_HD (hwu8800Pro/RBM\_HD)
- S10 (hws101031/MediaPad 10 FHD)
- S10 (hws102011/MediaPad 10 LINK)
- S31HW (msm7225/S31HW)
- S41HW (hwu8510/S41HW)
- S42HW (hwS42HW/S42HW)
- S7 (hws7601c/MediaPad 7 Vogue)
- S7 (hws7601w/MediaPad 7 Vogue)
- S7 (hws7701u/MediaPad 7 Youth)
- S7 (hws7930u/Orinoquia Roraima S7-932u)
- S7 (hws7951w/MediaPad 7 Lite+)
- S7 (hws7951w/Telpad Dual S)
- S7 (hws7961w/Telpad QS)
- S7 (hws7961w/Telpad Quad S)
- S7 (qsd8k\_s7/S7)
- SC-CL00 (HWSC-CL00/HUAWEI SC-CL00)
- Smile (msm7225/Smile)
- SONIC (hwu8650/SONIC)
- SONIC (hwu8660/SONIC)
- SpringBoard (hws7300u/SpringBoard)
- Starshine (HuaweiU8180/Starshine)
- STARTRAIL II (hwu8655/STARTRAIL II)
- Stockholm (HuaweiU8180/Stockholm)
- T-Mobile myTouch (hwu8680/T-Mobile myTouch)
- T-Mobile myTouch Q (hwu8730/T-Mobile myTouch Q)
- T-Mobile Pulse (U8100/Huawei\_8100-9)
- T-Mobile Pulse (U8100/Tactile internet)
- T-Mobile Pulse (U8100/U8100)
- T-Mobile Pulse (U8100/Videocon\_V7400)
- T101 (hwt101/T-101)
- T101 (hwt101/T101 PAD)

- T102 (hwt102/QH-10)
- T102 (hwt102/T102 PAD)
- t1\_8p0 (hws8701/MediaPad T1 8.0)
- t1\_8p0 (hws8701/S8-701u)
- t1\_8p0 (hws8701/S8-701w)
- T801 (hwt801/T801 PAD)
- T802 (hwt802/MT-803G)
- T802 (hwt802/T802 PAD)
- T8620 (hwt8620/T8620)
- T8830 (hwt8830/T8830)
- T8830Pro (hwT8830Pro/T8830Pro)
- T9200 (hwt9200/T9200)
- T9510E (hwt9510e/T9510E)
- Tactile internet (msm7225/Tactile internet)
- Temptation (hwu8350/Temptation)
- TSP21 (U8110/TSP21)
- TURKCELL MaxiPRO5 (hwu8860/TURKCELL MaxiPRO5)
- Turkcell T10 (msm7225/Turkcell T10)
- Turkcell T10 (U8110/Turkcell T10)
- Turkcell T20 (hwu8650/Turkcell T20)
- U8110 (msm7225/U8110)
- U8110 (U8110/U8110)
- U8120 (U8120/Vodafone 845)
- U8180 (HuaweiU8180/U8180)
- U8180 (hwu8180/U8180)
- U8180 (msm7625/U8180)
- U8185 (hwu8185/U8185)
- U8186 (hwu8186/U8186)
- U8220 (U8220/Pulse)
- U8220 (U8220/U8220)
- U8220 (U8220/U8220PLUS)
- U8230 (hwu8230/U8230)
- U8230 (msm7201a/U8230)
- U8230 (U8230/U8230)
- U8300 (msm7225/U8300)
- U8300 (U8300/U8300)
- U8350 (hwu8350/U8350)
- U8350-51 (hwu8350/U8350-51)
- U8500 (hwu8500/U8500)
- U8500 (msm7225/U8500)
- U8510 (hwu8510/U8510)
- U8520 (hwu8520/U8520)
- U8600 (hwu8600/U8600)
- U8650 (hwu8650/U8650)
- U8650-1 (hwu8650/U8650-1)
- U8651 (hwu8651/U8651)
- U8651T (hwu8651/U8651T)
- U8652 (hwu8652/U8652)
- U8652-51 (hwu8652-51/U8652-51)
- U8655 (hwu8655/U8655)
- U8655-1 (hwu8655/U8655-1)

- U8655-51 (hwu8655/U8655-51)
- U8666-1 (hwu8666/U8666-1)
- U8666-51 (hwu8666-51/U8666-51)
- U8666-51 (hwu8666/U8666-51)
- U8667 (hwu8667/U8667)
- U8687 (hwu8687/Huawei-U8687)
- U8800 (hwu8800-51/U8800)
- u8800 (hwu8800/u8800)
- U8800 (hwu8800/U8800)
- u8800 (msm7230/u8800)
- u8800 (u8800/u8800)
- U8800 Pro (hwu8800Pro/U8800 Pro)
- U8800-51 (hwu8800-51/U8800-51)
- U8800Pro (hwu8800Pro/U8800Pro)
- U8812D (hwu8812D/U8812D)
- U8815 (hwu8815/U8815)
- U8815-51 (hwu8815/U8815-51)
- U8815N (hwu8815n/U8815N)
- U8816 (hwu8816/U8816)
- U8818 (hwu8818/U8818)
- U8820 (hwu8820/U8820)
- U8832D (hwu8832D/U8832D)
- U8836D (hwu8836D/U8836D)
- U8860 (hwu8860/U8860)
- U8860-51 (hwu8860/U8860-51)
- U8867Z (hwu8867Z/U8867Z)
- U9200 (hwu9200-92/U9200)
- U9200 (hwu9200/U9200)
- U9200E (hwu9200/U9200E)
- U9200E (hwu9200E/U9200E)
- U9202L-1 (hwU9202L/U9202L-1)
- U9202L-3 (hwU9202L/U9202L-3)
- U9500E (hwu9500/U9500E)
- U9510 (hwu9510/U9510)
- Ucell (hwu8800/Ucell)
- UM840 (hwum840/UM840)
- USCCADR3310 (hwm866/USCCADR3310)
- V858 (hwu8160/Huawei 858)
- V858 (hwu8160/MTC 950)
- V858 (hwu8160/MTC Mini)
- V858 (hwu8160/Vodafone 858)
- Vodafone 845 (msm7225/Vodafone 845)
- Vogue7 (hws7601u/MediaPad 7 Classic)
- Vogue7 (hws7601u/MediaPad 7 Lite II)
- Vogue7 (hws7601u/MediaPad 7 Vogue)
- Y210 (oay210/Orinoquia Auyantepui Y210)
- Y220 (HWY220-U/Y220-U00)
- Y220 (HWY220-U/Y220-U05)
- Y220 (HWY220-U/Y220-U17)
- Y220-T10 (hwy220-t10/HUAWEI Y220-T10)
- Y220-U10 (HWY220-U/Y220-U10)

- Y221-U03 (HWY221-U/HUAWEI Y221-U03)
- Y221-U12 (HWY221-U/HUAWEI Y221-U12)
- Y221-U22 (HWY221-U/HUAWEI Y221-U22)
- Y221-U33 (HWY221-U/HUAWEI Y221-U33)
- Y221-U43 (HWY221-U/HUAWEI Y221-U43)
- Y300 (hwY300-0100/HUAWEI Ascend Y300)
- Y300 (hwY300-0100/HUAWEI Y300-0100)
- Y300 (hwY300-0151/HUAWEI Y300-0151)
- Y300 (hwY300-0151/Pelephone-Y300-)
- Y300-0000 (hwY300-0000/HUAWEI Y300-0000)
- Y301A1 (hwY301A1/Huawei Y301A1)
- Y301A2 (hwY301A2/Huawei Y301A2)
- Y320 (hwy320-c00/HUAWEI Y320-C00)
- Y320-T00 (HWY320-T00/HUAWEI Y320-T00)
- Y320-U01 (HWY320/HUAWEI Y320-U01)
- Y320-U01 (HWY320/Y320-U01)
- Y320-U10 (HWY320-U/HUAWEI Y320-U10)
- Y320-U151 (HWY320-U/HUAWEI Y320-U151)
- Y320-U30 (HWY320-U/HUAWEI Y320-U30)
- Y320-U351 (HWY320-U/HUAWEI Y320-U351)
- Y321 (hwy321-c00/HUAWEI Y321-C00)
- Y321 (HWY321-U/HUAWEI Y321-U051)
- Y325-T00 (HWY325-T/HUAWEI Y325-T00)
- Y330 (hwY330-U05/Bucare Y330-U05)
- Y330 (hwY330-U05/HUAWEI Y330-U05)
- Y330 (hwY330-U21/HUAWEI Y330-U21)
- Y330-C00 (hwY330-C00/HUAWEI Y330-C00)
- Y330-U01 (hwY330-U01/HUAWEI Y330-U01)
- Y330-U01 (hwY330-U01/Luno)
- Y330-U07 (hwY330-U07/HUAWEI Y330-U07)
- Y330-U08 (hwY330-U08/HUAWEI Y330-U08)
- Y330-U11 (hwY330-U11/HUAWEI Y330-U11)
- Y330-U11 (hwY330-U11/V8510)
- Y330-U15 (hwY330-U15/HUAWEI Y330-U15)
- Y330-U17 (hwY330-U17/HUAWEI Y330-U17)
- Y336-A1 (hwY336-A1/HUAWEI Y336-A1)
- Y340-U081 (hwY340-U081/Y340-U081)
- Y511-T00 (HWY511-T/HUAWEI Y511-T00)
- Y511-T00 (HWY511-T/Y511-T00)
- Y511-U00 (HWY511-U/Y511-U00)
- Y511-U10 (HWY511-U/HUAWEI Y511-U10)
- Y511-U251 (HWY511-U/HUAWEI Y511-U251)
- Y511-U30 (HWY511-U/HUAWEI Y511-U30)
- Y511-U30 (HWY511-U/VIETTEL V8506)
- Y516- (HWY516-T/HUAWEI Y516-T00)
- Y518-T00 (HWY518-T/HUAWEI Y518-T00)
- Y520-U03 (HWY520-U/HUAWEI Y520-U03)
- Y520-U12 (HWY520-U/HUAWEI Y520-U12)
- Y520-U22 (HWY520-U/HUAWEI Y520-U22)
- Y520-U33 (HWY520-U/HUAWEI Y520-U33)
- Y523-L076 (HWY523/HUAWEI Y523-L076)

- Y523-L176 (HWY523/HUAWEI Y523-L176)
- Y530 (hwY530-U00/HUAWEI Y530-U00)
- Y530-U051 (hwY530-U051/HUAWEI Y530)
- Y530-U051 (hwY530-U051/HUAWEI Y530-U051)
- Y535 (HWY535-C00/HUAWEI Y535-C00)
- Y535D-C00 (HWY535D-C00/HUAWEI Y535D-C00)
- Y550-L01 (hwY550-L01/HUAWEI Y550-L01)
- Y550-L02 (hwY550-L02/HUAWEI Y550-L02)
- Y550-L02 (hwY550-L02/Y550-L02)
- Y550-L03 (hwY550-L03/HUAWEI Y550)
- Y550-L03 (hwY550-L03/HUAWEI Y550-L03)
- Y550-L03 (hwY550-L03/Personal Huawei Y550)
- Y550-L03 (hwY550-L03/Y550-L03)
- Y600 (HWY600-U/HUAWEI Y600-U00)
- Y600 (HWY600-U/HUAWEI Y600-U151)
- Y600 (HWY600-U/HUAWEI Y600-U20)
- Y600-U351 (HWY600-U/HUAWEI Y600-U351)
- Y600-U40 (HWY600-U/HUAWEI Y600-U40)
- Y600D-C00 (HWY600D-C00/HUAWEI Y600D-C00)
- Y625-U03 (KVY625-U/Kavak Y625-U03)
- Y625-U43 (HWY625-U/HUAWEI Y625-U43)

## **HUAWEI**

- Youth (hws7701u/Orinoquia Gran Roraima S7-702u)

## **i-Buddie**

- TA10CA1 (TA10CA1/TA10CA1)
- TA10CA2 (TA10CA2/TA10CA2)
- TA10CA3 (TA10CA3/TA10CA3)
- TA10CA4 (TA10CA4/TA10CA4)
- TA71CA5 (TA71CA5/TA71CA5)
- TA80CA1 (TA80CA1/TA80CA1)
- TM75A-V2 (TM75A-V2/TM75A-V2)
- TR10CD1 (TR10CD1\_2/TR10CD1)
- TR10CD1 (TR10CD1\_4/TR10CD1)
- TR10CD1\_P (TR10CD1/TR10CD1)
- TR10CS1 (TR10CS1\_12/TR10CS1)
- TR10CS1 (TR10CS1\_2/TR10CS1)
- TR10CS1\_P (TR10CS1/TR10CS1)

## **i-mobile**

- i-mobile i-note WiFi 1.1 (M1703/i-mobile M1703)
- IQX KEN (IQX\_KEN/IQX KEN)

## **Ice Phone**

- Ice Phone Mini (ice\_phone\_mini/Ice-Phone Mini)

## **ICL-KME CS OJSC**

- TR10CD1 (TR10CD1\_7/TR10CD1)

## **ICRAIG**

- ICRAIG CMP 756 (Omega9/CMP 756)
- ICRAIG CMP 759 (Omega7/CMP 759)

## **IDEA**

- i4901 (i4901/i4901)

## **iDea USA**

- CT8 (CT8/CT8)

## **iDeaUSA**

- iDeaUSA CT10 (CT10/CT10)
- iDeaUSA CT7 (CT7/CT7)

## **Impecca**

- ET7050D (ET7050D/ET7050D)

## **Inet-Tablet**

- D711HC\_PG (D711HC\_PG/D711HC\_PG)
- D7911L3BC\_OGS (D7911L3BC\_OGS/D7911L3BC\_OGS)

## **Infinix**

- Infinix X505 (X505/Infinix X505)
- X405 (up09\_infinix\_x405\_gms/Infinix X405)

## **Infocus**

- Amazing A8 (D78/Amazing A8)
- InFocus M320 (M320/InFocus M320)

- InFocus M810 (VNA/InFocus M810)
- M510t (TID/InFocus M510t)
- M511 (TID\_CHT/M510)
- M511 (TID\_TWN/M511)
- M512 (MC2\_CN/InFocus M512)
- M512 (MC2\_CN/M512)
- Smart503 (MC2/Smart503)

## **InFocus**

- IN610 (MG2/IN610)
- IN810 (VKY/IN810)
- IN815 (VK3/IN815)
- InFocus FP-U320-INF-WLTW (U320-WF/FP-U320-INF-WLTW)
- InFocus IN260 (IN260/IN260)
- InFocus IN335 (IVM/IN335)
- InFocus M2 (LSO/InFocus M2)
- InFocus M2+ (LSC/InFocus M2PLUS)
- InFocus M210 (M210/M210)
- InFocus M310 (H1W/InFocus M310)
- InFocus M510t (TID/InFocus M510t)
- InFocus M810 (VNA/InFocus M810)
- InFocus M810t (VNA/InFocus M810t)
- InFocus NewTab F1 (f1/NewTab F1)
- M210 (M210/M210)
- M2\_3G (G10/InFocus M2\_3G)
- M310 (H1W/InFocus M310)
- M320 (M320/InFocus M320)
- M320e (M320e/InFocus M320e)
- M320m (M320m/InFocus M320m)
- M320u (M320/InFocus M320u)
- M330 (D77/InFocus M330)
- M510 (TID\_CHT/M510)
- M511 (TID\_TWN/M511)
- M512 (MC2\_CN/M512)
- T3000 (P7M/T3000)

## **infocus**

- Infocus M320e (M320e/InFocus M320e)

## **INQ Mobile**

- Camden (camden/Camden)
- INQ Cloud Touch (camden/INQ Cloud Touch)
- INQ Cloud Touch -parrot (camden/INQ Cloud Touch -parrot)
- INQ Mayfair (EU) (msm7627\_surf/INQ Mayfair (EU))

## **INSIGNIA**

- Insignia Flex 10.1 (ns\_14t004/NS-14T004)
- Insignia Flex 8" (ns\_15at08/NS-15AT08)
- INSIGNIA FLEX 8'' LTE Android Tablet (ns\_15t8lte/NS-15T8LTE)
- INSIGNIA NS-14T002 (ns\_14t002/NS-14T002)

## **Insignia**

- NS-15AT07 (NS-15AT07/NS-15AT07)
- NS-15AT10 (TA120/NS-15AT10)

## **Intel**

- AQ710A (Salitpa/AQ710A)
- AZ210A (noonhill/AZ210A)
- AZ210B (noonhill/AZ210B)
- Etisalat E-20 (zeeyabeach/BT230)
- Orange avec Intel Inside (AZ210B/AZ210B)
- Orange San Diego (AZ210A/AZ210A)
- SP-A20i (noonhill/SP-A20i)
- SP-A20i (SP-A20i/SP-A20i)
- TR10CD1(PVT2) (TR10CD1\_4/TR10CD1)
- TR10CD1(PVT2) (TR10CD1\_6/TR10CD1)
- TR10CS1 (PVT2) (TR10CS1\_4/TR10CS1)
- Xolo X500 (zeeyabeach/Xolo\_X500)
- Xolo\_X900 (blackbay/Xolo\_X900)
- Yolo (zeeyabeach/BT210)

## **Intenso**

- Intenso Tab814S (Tab814S/Tab814S)
- Tab734 (Tab734/Tab734)

## **Intermec**

- CN51 (CN51\_NC0/CN51 NC0)
- CN51 (CN51\_NCF/CN51 NCF)
- CN51 (CN51\_NCU/CN51 NCU)
- CN51 (CN51\_NN0/CN51 NN0)
- CN51 (CN51\_QC0/CN51 QC0)
- CN51 (CN51\_QCF/CN51 QCF)
- CN51 (CN51\_QCU/CN51 QCU)
- CN51 (CN51\_QN0/CN51 QN0)

## **IPRODA**



- T1144 (T1144/T1144)

## **iRiver**

- DMT580D (m805\_892x/DDA800R)
- DMT580D (m805\_892x/DMT580D)
- DMT580D (m805\_892x/MIT700)
- ILT-MX100 (smdkc110/ILT-MX100)
- MM3202 (mm3201/MM-3201)
- MM3202 (mm3201/MM-3202)
- ULALA (msm7627a\_sku3/I-K1)
- Wow TAB + (itq701/ITQ701)
- WOW Tab+(ITQ1000) (itq1000/ITQ1000)
- Wow(Window of the world) (itq700/ITQ700)
- Wow(Window of the world) (itq700/YBMK01)
- WPT005 (wikipad/WPT005)

## **Itworks**

- TM705 (TM705/NID\_7010)

## **iView**

- 776TPCIII (776TPCIII/776TPCIII)
- iView 778TPC (778TPC/778TPC)
- iView 788TPCII (iView\_788TPCII/788TPCII)
- iView 920TPC (920TPC/920TPC)
- iView SupraPad i700 (g01i/i700)
- iView SupraPad i785Q (anchor/i785Q)

## **JLab**

- JLab\_PRO-7 (polaris-p1gms/JLab PRO-7)

## **JVC**

- DM65UXR\DM65USR\DM85UXR (mstarnapoli\_atsc/DM65UXR)

## **JVC KENWOOD Holdings, Inc.**

- RY-AP1 (gener/RY-AP1)

## **K-Touch**

- W808 (whistler/W808)

## **Karbons**

- Sparkle V (Sparkle\_V\_sprout/Sparkle V)

## **KAZAM**

- KAZAM Thunder 345 (Thunder\_345/KAZAM Thunder 345)
- KAZAM Thunder 345 LTE (Thunder\_345\_LTE/KAZAM Thunder 345 LTE)
- KAZAM Thunder 345 LTE (Thunder\_345\_LTE/Thunder3 45 LTE)
- KAZAM Thunder 345L (Thunder\_345L/KAZAM Thunder 345L)
- KAZAM Thunder 347 (Thunder\_347/Thunder 347)
- KAZAM Thunder 350L (Thunder\_350L/KAZAM Thunder 350L)
- KAZAM Thunder2 45L (Thunder2\_45/KAZAM THUNDER2 45L)
- KAZAM Thunder2 50 (Thunder2\_50/KAZAM Thunder2 50)
- KAZAM Tornado 348 (Tornado\_348/Tornado 348)
- KAZAM Tornado 350 (KAZAM\_Tornado\_350/KAZAM Tornado 350)
- KAZAM Tornado2 50 (Tornado2\_50/KAZAM Tornado2 50)
- KAZAM Trooper 450 (KAZAM\_Trooper\_450/KAZAM Trooper 450)
- KAZAM Trooper2 40 (Trooper2\_40/KAZAM Trooper2 40)
- KAZAM Trooper2 45 (Trooper2\_45/Trooper2 45)
- KAZAM Trooper2 50 (Trooper2\_50/KAZAM Trooper2 50)
- KAZAM Trooper2 60 (Trooper2\_60/Kazam Trooper2 60)
- KAZAM TV 4.5 (KOT49H/KAZAM TV 45)
- KAZAM TV 4.5 (TV\_45/KAZAM TV 45)
- TROOPER X3.5 (KAZAM/Trooper\_X35)
- TROOPER X4.0 (KAZAM/Trooper\_X40)
- TROOPER X5.5 (KAZAM/Trooper\_X55)

## **KD Interactive**

- KD Interactive Kurio10S (C13300A/Kurio10S)
- KD Interactive Kurio4S (C13200A/Kurio4S)
- KD Interactive Kurio7S (C13000A/Kurio7S)
- Kurio Phone (C14500/KurioPhone)
- Kurio Tab - Extrem (g03k/C14100)

## **Kennex**

- MD7053G (MD7053G/MD7053G)

## **Ketablet**

- Ketablet (TR10CS1\_6/TR10CS1)

## **Kiano**

- Slim\_Tab\_8 (Slim\_Tab\_8/Slim\_Tab\_8)

## **KLIPAD**

- KLIPAD\_SMART\_D71 (KLIPAD\_SMART\_D71/KLIPAD\_SMART\_D71)
- KLIPAD\_SMART\_D791 (KLIPAD\_SMART\_D791/KLIPAD\_SMART\_D791)

## **Kobo**

- Arc 10HD (macallan/arc 10HD)
- Arc 7 (lbp8/arc 7)
- Arc 7HD (cardhu/arc 7HD)
- Kobo Arc (zeus/Arc)
- Kobo Vox (pegasus/Vox)

## **KOOOK**

- C600 (GBC\_bravo/C600)

## **KT Tech**

- EV-S100 (s100/EV-S100)
- KM-S120 (s120/KM-S120)
- KM-S200 (s200/KM-S200)
- KM-S220 (s220/KM-S220)
- KM-S220H (s220H/KM-S220H)
- KM-S300 (s300/KM-S300)

## **Kyocera**

- DIGNO (KYI11/ISW11K)
- DIGNO Dual (WX04K/WX04K)
- DIGNO S (KYL21/KYL21)
- DuraForce (E6560/KYOCERA-E6560)
- DuraForce (E6560C/E6560C)
- DuraForce (E6762/USCC-E6762)
- Echo (KSP8000/KSP8000)
- Echo (M9300/M9300)
- HONEY BEE (101K/101K)
- Hydro (C5170/C5170)
- Hydro (C5171/Hydro)
- Hydro Vibe (KC-01/KC-01)
- Milano (C5120/C5120)
- Milano (C5121/C5121)
- Rise (C5155/C5155)
- Rise (C5156/Rise)
- URBANO L02 (KYY22/KYY22)

- URBANO L04 (KYV31/KYV31)

## **Kyocera Corporation**

- Brigadier (E6782/E6782)
- DIGNO (KYL22/KYL22)
- DIGNO R (202K/202K)
- DIGNO T (302KC/302KC)
- DM015K (DM015K/DM015K)
- Event (C5133/Event)
- Honeybee Touch (201K/201K)
- Hydro EDGE (C5215/C5215)
- Hydro Elite (C6750/C6750)
- Hydro ICON (C6730/C6730)
- Hydro LIFE (C6530/C6530)
- Hydro LIFE (C6530N/C6530N)
- Hydro PLUS (C5171R/Hydro)
- Hydro PLUS (C5171R/Hydro\_PLUS)
- Hydro VIBE (C6725/C6725)
- Hydro XTRM (C6522/C6522)
- Hydro XTRM (C6522N/C6522N)
- Hydro XTRM (C6721/USCC-C6721)
- Torque (E6710/Torque)
- TORQUE (SKT01/SKT01)
- TORQUE G01 (KYY24/KYY24)
- TorqueXT (E6715/E6715)
- URBANO L01 (KYY21/KYY21)
- URBANO L03 (KYY23/KYY23)
- URBANO PROGRESSO (KYY04/URBANO PROGRESSO)
- WX06K (WX06K/WX06K)
- WX10K (WX10K/WX10K)
- zio (msm7627\_kb60/Zio)
- zio (msm7627\_surf/Zio)
- zio (pls8600/Zio)
- Zio (SCP-8600/Zio)

## **Kyowon**

- All&G PAD (mypad2/KA-E410W)

## **LANIX**

- ILIUM PAD E10Si (iLium\_Pad\_E10Si\_1/ILIUM PAD E10Si)

## **LAVA International**

- XOLO LT900 (LT900/LT900)

## **LAZER**

- MW6617 (MW6617/MW6617)

## **Lazer**

- Lazer MD1005 Tablet (MD1005/MD1005)
- Lazer MY1306P (MY1306P/MY1306P)
- Lazer X4508 (X4508/X4508)
- MID9526CM (MID9526CM/S952)
- MW-7615P (MW-7615P/MW-7615P)

## **Le Pan**

- Le Pan TC1010 (FG6A-LP/Le Pan TC1010)
- Le Pan TC1020 (FG6Q/Le Pan TC1020)
- Le Pan TC802A (UY8/Le Pan TC802A)

## **Lenovo**

- A390t (A390t/Lenovo A390t)
- ideatv S52 (ideatv\_S52/ideatv S52)
- ideatvK82 60LX750A 52LX750A 46LX750A 60LX850A 70LX850A 80LX850A (ideatv\_K82/ideatv K82)
- Lenovo X2 (X2-AP/Lenovo X2-AP)
- Lenovo A228t (A228t/Lenovo A228t)
- Lenovo A238t (A238t/Lenovo A238t)
- Lenovo A316 (A316/Lenovo A316)
- Lenovo A316i (A316i/Lenovo A316i)
- Lenovo A319 (A319/Lenovo A319)
- Lenovo A320t (A320t/Lenovo A320t)
- Lenovo A328 (A328/Lenovo A328)
- Lenovo A328t (A328t/Lenovo A328t)
- Lenovo A3300 (A3300-GV/LenovoA3300-GV)
- Lenovo A3300 (A3300-H/LenovoA3300-H)
- Lenovo A3300 (A3300-HV/LenovoA3300-HV)
- Lenovo A3300 (A3300-T/Lenovo A3300-T)
- Lenovo A3300-GV (A3300-GV/LenovoA3300-GV)
- Lenovo A3300-HV (A3300-HV/Lenovo A3300-HV)
- Lenovo A330e (A330e/Lenovo A330e)
- Lenovo A338t (A338t/Lenovo A338t)
- Lenovo A3500 (A3500HV/Lenovo A3500-HV)
- Lenovo A3500-F (A3500F/EveryPad2)
- Lenovo A3500-F (A3500F/Lenovo A3500-F)
- Lenovo A3500-FL (A3500FL/Lenovo A3500-FL)
- Lenovo A3500-H (A3500H/Lenovo A3500-H)
- Lenovo A355e (A355e/Lenovo A355e)

- Lenovo A358t (A358t/Lenovo A358t)
- Lenovo A360t (A360t/Lenovo A360t)
- Lenovo A368t (A368t/Lenovo A368t)
- Lenovo A380e (A380e/LNV-Lenovo A380e)
- Lenovo A380t (A380t/Lenovo A380t)
- Lenovo A395e (A395e/LNV-Lenovo A395e)
- Lenovo A396 (A396/Lenovo A396)
- Lenovo A396 (A396\_TY/Lenovo A396\_TY)
- Lenovo A399 (Aiken/Lenovo A399)
- Lenovo A505e (A505e/LNV-Lenovo A505e)
- Lenovo A516 (A516\_ROW/Lenovo A516)
- Lenovo A526 (A526/Lenovo A526)
- Lenovo A536 (A536/Lenovo A536)
- Lenovo A5500-F (A5500-F/Lenovo A5500-F)
- Lenovo A5500-H (A5500-H/Lenovo A5500-H)
- Lenovo A5500-HV (A5500-HV/Lenovo A5500-HV)
- Lenovo A560 (A560\_msm8212/Lenovo A560)
- Lenovo A5800-D (A5800-D/Lenovo A5800-D)
- Lenovo A606 (A606/Lenovo A606)
- Lenovo A616 (A616/Lenovo A616)
- Lenovo A688t (A688t/Lenovo A688t)
- Lenovo A690e (A690e/LNV-Lenovo A690e)
- Lenovo A7-60HC (A760HC/Lenovo A7-60HC)
- Lenovo A7600-F (A7600-F/Lenovo A7600-F)
- Lenovo A7600-H (A7600-H/Lenovo A7600-H)
- Lenovo A7600-HV (A7600-HV/Lenovo A7600-HV)
- Lenovo A768t (airplayt/Lenovo A768t)
- Lenovo A780e (A780e/LNV-Lenovo A780e)
- Lenovo A785e (A785e/LNV-Lenovo A785e)
- Lenovo A788t (A788t/Lenovo A788t)
- Lenovo A805e (airplayep/Lenovo A805e)
- Lenovo A806 (A806/Lenovo A806)
- Lenovo A808t (A808t/Lenovo A808t)
- Lenovo A808t-i (A808t-i/Lenovo A808t-i)
- Lenovo A816 (airplayw/Lenovo A816)
- Lenovo A828t (A828t/Lenovo A828t)
- Lenovo A850 (A850/Lenovo A850)
- Lenovo A858t (A858t/Lenovo A858t)
- Lenovo A859 (A859\_ROW/Lenovo A859)
- Lenovo A890e (airbuse/Lenovo A890e)
- Lenovo A916 (A916/Lenovo A916)
- Lenovo A936 (A936/Lenovo A936)
- Lenovo B8080 (B8080/Lenovo B8080-F)
- Lenovo B8080-H (B8080/Lenovo B8080-H)
- Lenovo B8080-HV (B8080/Lenovo B8080-HV)
- Lenovo K30-T (Kraft-T/Lenovo K30-T)
- Lenovo K910 (kiton/Lenovo K910)
- Lenovo K920/VIBE Z2 (kingdom\_row/Lenovo K920)
- Lenovo K920/VIBE Z2 Pro (kingdomt/Lenovo K920)
- Lenovo N300 (Lindos2/Lenovo N300)
- Lenovo N308 (SmartAIO/Lenovo N308)

- Lenovo P780 (P780/Lenovo P780)
- Lenovo S580 (S580/Lenovo S580)
- Lenovo S660 (S660/Lenovo S660)
- Lenovo S668t (S668t/Lenovo S668t)
- Lenovo S810t (shellt/Lenovo S810t)
- Lenovo S820 (S820/Lenovo S820)
- Lenovo S850 (S850/Lenovo S850)
- Lenovo S856 (shellamx/Lenovo S856)
- Lenovo S856 (shellr/Lenovo S856)
- Lenovo S856 (shellr\_s/Lenovo S856)
- Lenovo S856 (shellw/Lenovo S856)
- Lenovo S858t (Selected/Lenovo S858t)
- Lenovo S860e (shelle/Lenovo S860e)
- Lenovo S90-T (sisleyt/Lenovo S90-t)
- Lenovo S90-U (sisleyw/Lenovo S90-u)
- Lenovo S920 (S920/Lenovo S920)
- Lenovo S930 (S930/Lenovo S930)
- Lenovo S960 (S960/Lenovo S960)
- Lenovo TAB 2 A7-30HC (A7-30HC/Lenovo 2 A7-30HC)
- Lenovo TAB A10-80HC (A10\_80HC/TAB A10-80HC)
- Lenovo TAB S8-50F (S8-50F/Lenovo TAB S8-50F)
- Lenovo TAB S8-50L (S8-50L/Lenovo TAB S8-50L)
- Lenovo TAB S8-50LC (S8-50LC/Lenovo S8-50LC)
- Lenovo TAB S8-50LC (S8-50LC/Lenovo TAB S8-50LC)
- Lenovo X2 (X2-EU/Lenovo X2-EU)
- Lenovo X2-CU/VIBE X2 (X2-CU/Lenovo X2-CU)
- Lenovo X2-TO/VIBE X2 (X2-TO/Lenovo X2-TO)
- Lenovo X2-TR/VIBE X2 (X2-TR/Lenovo X2-TR)
- Lenovo YOGA Tablet Pro-1050L/Yoga Tablet 2 (YT2/YOGA Tablet 2-1050L)
- Lenovo YOGA Tablet Pro-1050LC/Yoga Tablet 2 (YT2/YOGA Tablet 2-1050LC)
- Lenovo YOGA Tablet Pro-1380F/Yoga Tablet 2 Pro (YT2/YOGA Tablet 2 Pro-1380F)
- Lenovo YOGA Tablet Pro-1380L/Yoga Tablet 2 Pro (YT2/YOGA Tablet 2 Pro-1380L)
- Lenovo YOGA Tablet Pro-830L/Yoga Tablet 2 (YT2/YOGA Tablet 2-830L)
- Lenovo YOGA Tablet Pro-830LC/Yoga Tablet 2 (YT2/YOGA Tablet 2-830LC)
- Lenovo YogaTablet2 -1050F (YT2/YOGA Tablet 2-1050F)
- Lenovo YogaTbalet2-830F (YT2/YOGA Tablet 2-830F)
- LenovoTV 40S9;LenovoTV 50S9;AQUOS 40U1;AQUOS 50U1; AQUOS 58U1; AQUOS 60LX765A (jazz/AQUOS 58U1)
- LenovoTV 40S9;LenovoTV 50S9;AQUOS 40U1;AQUOS 50U1; AQUOS 58U1; AQUOS 60LX765A (jazz/AQUOS 60LX765A)
- LenovoTV 40S9;LenovoTV 50S9;AQUOS 40U1;AQUOS 50U1; AQUOS 58U1; AQUOS 60LX765A (jazz/AQUOS 60UE20A)
- LenovoTV 40S9;LenovoTV 50S9;AQUOS 40U1;AQUOS 50U1; AQUOS 58U1; AQUOS 60LX765A (jazz/LenovoTV 40S9)
- LenovoTV 40S9;LenovoTV 50S9;AQUOS 40U1;AQUOS 50U1; AQUOS 58U1; AQUOS 60LX765A (jazz/LenovoTV 58S9)
- LenovoTV 50S52;AQUOS LCD-50S1A (bumblebee/AQUOS 50S1)
- LenovoTV 50S52;AQUOS LCD-50S1A (bumblebee/LenovoTV 50S52)
- ThinkVision28 (ThinkVision28/ThinkVision28)

## Lenovo A808t

- Lenovo A808t (A808t/Lenovo A808t)

## Lenovo Mobile

- 60K72 (ideatv\_K72/ideatv K72)
- A10 (A10/IdeaPadA10)
- A1000 (A1000F/IdeaTabA1000-F)
- A1000-G (A1000G/IdeaTabA1000-G)
- A1000L (A1000LF/IdeaTabA1000L-F)
- A1\_07 (A1\_07/A1\_07)
- A208t (A208t/Lenovo A208t)
- A2107A (A2107A-H/A2107A-H)
- A2107A-H (lenovo75\_a2\_att\_ics/A2107A-H)
- A218t (A218t/Lenovo A218t)
- A269 (A269/Lenovo A269)
- A269i (A269i/Lenovo A269i)
- A278t (A278t/Lenovo A278t)
- A3000 (A3000/Lenovo A3000-H)
- A305E (A305e/Lenovo A305e)
- A305E (A305e/LNV-Lenovo A305e)
- A308t (A308t/Lenovo A308t)
- A30t (A30t/A30t)
- A318t (A318t/Lenovo A318t)
- A369 (A369/Lenovo A369)
- A369i (A369i/Lenovo A369i)
- A370e (A370e/LNV-Lenovo A370e)
- A375e (A375e/LNV-Lenovo A375e)
- A376 (A376/Lenovo A376)
- A378t (A378t/Lenovo A378t)
- A390 (A390/Lenovo A390\_ROW)
- A398t (A398t/Lenovo A398t)
- A516 (A516/Lenovo A516)
- A516 (A516\_ROW/Lenovo A516)
- A630 (A630e/LNV-Lenovo A630e)
- A656 (A656/Lenovo A656)
- A658T (A658t/Lenovo A658t)
- A66t (T702T/A66t)
- A670t (A670t/Lenovo A670t)
- A678t (A678t/Lenovo A678t)
- A68e (msm7627\_surf/A68e)
- A706 (armani/Lenovo A706)
- A706\_ROW (armani\_row/Lenovo A706\_ROW)
- A720e (andorrap/Lenovo A720e)
- A750e (athenae/Lenovo A750e)
- A760 (audi/Lenovo A760)
- A766 (A766/Lenovo A766)
- A770e (athenaep/Lenovo A770e)



- A820 (A820/Lenovo A820)
- A820e (andorra/Lenovo A820e)
- A830 (A830/Lenovo A830)
- A850 (A850/Lenovo A850)
- A850 (A850\_ROW/Lenovo A850)
- A860e (artini/Lenovo A860e)
- B6000-F (B6000/Lenovo B6000-F)
- B6000-H (B6000/Lenovo B6000-H)
- B6000-HV (B6000/Lenovo B6000-HV)
- B8000-F (B8000/Lenovo B8000-F)
- B8000-H (B8000/Lenovo B8000-H)
- E4002 (E4002/MEDION E4002)
- EveryPad (A3000/EveryPad)
- EveryPad (A3000/IdeaTab A3000-F)
- IdeaTab A1000 (A1000LF/LenovoA1000L-F)
- IdeaTab A1010 (A1010T/IdeaTabA1010-T)
- IdeaTab A1020 (A1020T/IdeaTabA1020-T)
- IdeaTab A2107A-F (a2\_wifi/IdeaTab A2107A-F)
- IdeaTab A2107A-F (a2\_wifi\_row/IdeaTab A2107A-F)
- IdeaTab A2107A-H (a2\_3g\_data/IdeaTab A2107A-H)
- IdeaTab A2107A-H (lenovo75\_a2\_ics/IdeaTab A2107A-H)
- IdeaTab A3000 (A3000/IdeaTab A3000-H)
- IdeaTab A3000 (A3000/Vodafone Smart Tab III 7)
- IdeaTab A5000 (A5000E/IdeaTabA5000-E)
- IdeaTab K2110A-F (K2110A-F/IdeaTab K2110A-F)
- IdeaTab S2007A-F (msm8660\_surf/IdeaTab S2007A-F)
- IdeaTab S2007A-H (msm8660\_surf/IdeaTab S2007A-H)
- IdeaTab S2010A-D (msm8660\_surf/IdeaTab S2010A-D)
- IdeaTab S2010A-F (msm8660\_surf/IdeaTab S2010A-F)
- IdeaTab S2010A-H (msm8660\_surf/IdeaTab S2010A-H)
- IdeaTab S6000 (S6000/IdeaTab S6000-F)
- IdeaTab S6000 (S6000/IdeaTab S6000-H)
- IdeaTab S6000 (S6000/Vodafone Smart Tab III 10)
- IdeaTabA2109A (A2109A/IdeaTabA2109A)
- IdeaTabA2207A-H (A2207A-H/IdeaTabA2207A-H)
- IdeaTabS2109A-F (S2109A/IdeaTabS2109A-F)
- IdeaTabS2110AF (msm8960/IdeaTabS2110AF)
- IdeaTabS2110AH (msm8960/IdeaTabS2110AH)
- IdeaTabV2007A (sanpaolo/IdeaTabV2007A)
- IdeaTabV2010A (santiago/IdeaTabV2010A)
- IdeaTabV2010A-W (santiago/IdeaTabV2010A-W)
- IdeaTV (msm8660\_surf/ideatv K91)
- ideatv S31 (ideatv\_S31/ideatv S31)
- Indigo (Indigo/ThinkPad Tablet)
- K1 (K1/K1)
- K1 (ventana/K1)
- K800 (K800/Lenovo K800)
- K900 (K900/Lenovo K900)
- K900 (K900\_ROW/Lenovo K900\_ROW)
- Lenovo (A708t/Lenovo A708t)
- Lenovo (A880/Lenovo A880)

- Lenovo A1-32AB0 (amazon\_w/Lenovo A1-32AB0)
- Lenovo A2105 (Lenovo\_A2105/Lenovo\_A2105)
- Lenovo A278t (A278t/Lenovo A278t)
- Lenovo A288t (A288t/Lenovo A288t)
- Lenovo A298t (A298t/Lenovo A298t)
- Lenovo A300 (austin/Lenovo A300)
- Lenovo A300t (A300t/Lenovo A300t)
- Lenovo A326 (a326/Lenovo A326)
- Lenovo A360 (a360/Lenovo A360)
- Lenovo A360e (A360e/Lenovo A360e)
- Lenovo A366t (lenovo13\_td/Lenovo A366t)
- Lenovo A370 (a370/Lenovo A370)
- Lenovo A385e (A385e/LNV-Lenovo A385e)
- Lenovo A388t (A388t/Lenovo A388t)
- Lenovo A390 (A390/Lenovo A390)
- Lenovo A390e (msm7627\_ea95/Lenovo A390e)
- Lenovo A398t+ (A398tp/Lenovo A398t+)
- Lenovo A500 (a59wg/Lenovo A500)
- Lenovo A500+ (a500plus/Lenovo A500+)
- Lenovo A500+ (a59wg/Lenovo A500+)
- Lenovo A520 (lenovo73\_gb/Lenovo A520)
- Lenovo A520GRAY (a520\_gray/Lenovo A520GRAY)
- Lenovo A529 (A529/Lenovo A529)
- Lenovo A530 (A530\_msm7627a\_alps/Lenovo A530)
- Lenovo A560 (A560\_msm8610/LNV-Lenovo A560)
- Lenovo A580 (A580/Lenovo A580)
- Lenovo A60 (a60\_campus/Lenovo A60)
- Lenovo A60 (a60id\_tel/Lenovo A60)
- Lenovo A60 (a60os/Lenovo A60)
- Lenovo A60 (a60tw/Lenovo A60)
- Lenovo A60 (lenovo73\_cu/Lenovo A60)
- Lenovo A60+ (A60plus/Lenovo A60+)
- Lenovo A60+ (Android/Lenovo A60+)
- Lenovo A628t (A628t/Lenovo A628t)
- Lenovo A65 (a65/Lenovo A65)
- Lenovo A65 (a65\_ph\_id\_vn/Lenovo A65)
- Lenovo A65 (a65cu/Lenovo A65)
- Lenovo A660 (A660/Lenovo A660)
- Lenovo A668t (A668t/Lenovo A668t)
- Lenovo A680 (A680/Lenovo A680)
- Lenovo A680 (A680/Lenovo A680\_ROW)
- Lenovo A68e (msm7627\_surf/Lenovo A68e)
- Lenovo A690 (A690/Lenovo A690)
- Lenovo A698t (lenovo15\_td\_ics/Lenovo A698t)
- Lenovo A700e (A700e/Lenovo A700e)
- Lenovo A710e (A710e\_msm7627a/Lenovo A710e)
- Lenovo A750 (lenovo75\_cu\_gb/Lenovo A750)
- Lenovo A750 (lenovo75\_cu\_ics/Lenovo A750)
- Lenovo A765e (aruba/Lenovo A765e)
- Lenovo A780 (A780\_msm7627a/Lenovo A780)
- Lenovo A780 (msm7627a\_ha99/Lenovo A780)

- Lenovo A789 (A789/Lenovo A789)
- Lenovo A798t (A798t/Lenovo A798t)
- Lenovo A800 (A800/Lenovo A800)
- Lenovo A820t (A820t/Lenovo A820t)
- Lenovo A850+ (A850p/Lenovo A850+)
- Lenovo A889 (A889/Lenovo A889)
- Lenovo K2 (apollohd\_w/Lenovo K2)
- Lenovo K800 (mfld\_pr2/Lenovo K800)
- Lenovo K860 (stuttgart/Lenovo K860)
- Lenovo K860 (stuttgart\_row/Lenovo K860)
- Lenovo K860i (K860i/Lenovo K860i)
- Lenovo K910e (kitone/Lenovo K910e)
- Lenovo K910e (kitone/LNV-Lenovo K910e)
- Lenovo K910L (K910L/Lenovo K910L)
- Lenovo N308 (SmartAIO/Lenovo N308)
- Lenovo P70 (lenovo73\_gb/Lenovo P70)
- Lenovo P700 (p700/Lenovo P700)
- Lenovo P700 (p700\_ph/Lenovo P700)
- Lenovo P700i (P700i/Lenovo P700i)
- Lenovo P770 (P770/Lenovo P770)
- Lenovo S2-38AH0 (apollo\_wg/Lenovo S2-38AH0)
- Lenovo S2-38AH0 (Lenovo\_S2/Lenovo S2-38AH0)
- Lenovo S2-38AT0 (apollo\_td/Lenovo S2-38AT0)
- Lenovo S560 (S560/Lenovo S560)
- Lenovo S650 (S650/Lenovo S650)
- Lenovo S650\_ROW (S650\_ROW/Lenovo S650)
- Lenovo S658t (S658t/Lenovo S658t)
- Lenovo S696 (sicily/Lenovo S696)
- Lenovo S760 (apollozero\_w/Lenovo S760)
- Lenovo S820 (S820\_AMX\_ROW/Lenovo S820)
- Lenovo S850t (S850t/Lenovo S850t)
- Lenovo S860 (S860/Lenovo S860)
- Lenovo S880 (s880/Lenovo S880)
- Lenovo S880 (s880\_row/Lenovo S880)
- Lenovo S880i (S880i/Lenovo S880i)
- Lenovo S890 (S890/Lenovo S890)
- Lenovo S898t+ (S898tp/Lenovo S898t+)
- Lenovo S899t (S899t/Lenovo S899t)
- Lenovo S920 (S920\_ROW/Lenovo S920)
- Lenovo S920\_ROW (S920\_ROW/Lenovo S920\_ROW)
- Lenovo S930 (S930/Lenovo S930)
- Lenovo S930\_ROW (S930\_ROW/Lenovo S930)
- Lenovo S938t (S938t/Lenovo S938t)
- Lenovo S939 (S939/Lenovo S939)
- Lenovo S960 (S960\_AMX\_ROW/Lenovo S960)
- Lenovo S968t (S968t/Lenovo S968t)
- Lenovo S960 (S960\_ROW/Lenovo S960)
- LIFETAB E10310 (LIFETAB\_E10310/LIFETAB\_E10310)
- LIFETAB E7310 (LIFETAB\_E7310/LIFETAB\_E7310)
- LIFETAB E7310 (LIFETAB\_E7310/LIFETAB\_E7312)
- LIFETAB\_S9512 (LIFETAB\_S9512/LIFETAB\_S9512)

- LNV-Lenovo A600e (A600e\_msm8625/LNV-Lenovo A600e)
- LNV-Lenovo A790e (msm7627a/LNV-Lenovo A790e)
- LNV-Lenovo\_A560e (A560e\_msm7627a/LNV-Lenovo\_A560e)
- MD\_LIFETAB\_P9516 (MD\_LIFETAB\_P9516/MD\_LIFETAB\_P9516)
- P780 (P780/Lenovo P780)
- P780 (P780\_ROW/Lenovo P780)
- P780 (P780\_ROW/Lenovo P780\_ROW)
- S2005A-H (S2005A-H/S2005A-H)
- S5000 (S5000/Lenovo S5000-F)
- S5000 (S5000/Lenovo S5000-H)
- S6000L (S6000L/Lenovo S6000L-F)
- S61 (ideatv\_S61/ideatv S61)
- S680 (seoul/Lenovo S680)
- S686 (Alaska/Lenovo S686)
- S720 (S720/Lenovo S720)
- S750 (S750/Lenovo S750)
- S820 (S820/Lenovo S820)
- S820 (S820\_ROW/Lenovo S820)
- S820 (S820\_ROW/Lenovo S820\_ROW)
- S820e (applee/Lenovo S820e)
- S850e (sichuan/Lenovo S850e)
- S868 (S868t/Lenovo S868t)
- S870e (S870e/Lenovo S870e)
- S870e (S870e/LNV-Lenovo S870e)
- S898t (S898t/Lenovo S898t)
- S920 (S920/Lenovo S920)
- S960 (S960/Lenovo S960)
- SmartTabII10 (msm8960/SmartTabII10)
- SmartTabII7 (SmartTabII7/SmartTabII7)
- Spice Mi-350 (mi\_350/Spice Mi-350)
- ThinkPad Tablet (18382AU/ThinkPad Tablet)

## **Lexibook**

- MFC191 (MFC191/S952)

## **LGE**

- 070 touch (w3voip/LG-FL40L)
- Ally (aloha/Ally)
- Ally (aloha/Aloha)
- Ally (aloha/AS740)
- Ally (aloha/US740)
- Android TV (cosmo/LG Google TV)
- Android TV (eden/LG Android TV V4)
- Android TV (eden/LG Google TV G3 KR)
- Android TV G3 (eden/LG Google TV G3)
- Enact (fx3q/VS890 4G)
- enV Pro (envt2/enV Pro)

- enV Touch2 (envt2/enV Touch2)
- Escape (11a/LG-P870)
- Eve (EVE/GW620)
- Eve (EVE/LG GW620)
- Eve (EVE/LG GW620F)
- Eve (EVE/LG GW620g)
- Eve (EVE/LG GW620R)
- Eve (EVE/LG KH5200)
- Eve (EVE/LG-GW620)
- Eve (EVE/LG-KH5200)
- F60 (e2/LG-D390)
- F60 (e2/LG-D390AR)
- F60 (e2ds/LG-D392)
- F60 (e2n/LG-D390n)
- F60 (e2nac/LG-D393)
- F60 (e2nam/LGMS395)
- F60 (e2nas/LGLS660)
- F60 (e2nav/VS810PP)
- G Pad 10.1 (e9wifi/LG-V700)
- G Pad 10.1 (e9wifin/LG-V700n)
- G Pad 10.1 LTE (e9lte/LG-VK700)
- G Pad 10.1 LTE (e9lte/VK700)
- G Pad 7.0 (e7wifi/LG-V400)
- G Pad 7.0 (e7wifi/LG-V400Y1)
- G Pad 7.0 LTE (e7lte/LG-V410)
- G Pad 7.0 LTE (e7lte/LGUK410)
- G Pad 8.0 (e8wifi/LG-V480)
- G pad 8.0 (e8wifi/LG-V480)
- G pad 8.0 LTE (e8lte/LG-V490)
- G Pro Lite (luv90ds/LG-D686)
- G Pro Lite (luv90nfc/LG-D683)
- G Pro Lite (luv90nfc/LG-D684)
- G Pro Lite (luv90ss/LG-D680)
- G Pro Lite (luv90ss/LG-D681)
- G Pro Lite (luv90ss/LG-D682)
- G Pro Lite (luv90ss/LG-D682TR)
- G Pro2 (b1/LG-F350K)
- G Pro2 (b1/LG-F350L)
- G Pro2 (b1/LG-F350S)
- G Pro2 (b1w/LG-D838)
- G Vista (b2l/LG-D631)
- G Vista (b2lds/LG-D690)
- G Vista (x10/VS880)
- G Watch (dory/G Watch)
- G2 MINI (g2m/LG-D620)
- G2 MINI (g2mds/LG-D618)
- G2 MINI (g2mss/LG-D610)
- G2 MINI (g2mss/LG-D610AR)
- G2 MINI (g2mss/LG-D610TR)
- G2 mini 4G LTE (g2mv/LG-D625)
- G3 Beat (jagdsnm/LG-D726)

- G3 Beat (jagdsnm/LG-D728)
- G3 Beat (jagdsnm/LG-D729)
- G3 Beat (jagn/LG-F470K)
- G3 Beat (jagn/LG-F470L)
- G3 Beat (jagn/LG-F470S)
- G3 Beat (jagnm/LG-D722J)
- G3 S (jag3gds/LG-D724)
- G3 S (jag3gss/LG-D723)
- G3 S (jagnm/LG-D722)
- G3 S (jagnm/LG-D722AR)
- G3 S (jagnm/LG-D725PR)
- G3 Screen (liger/LG-F490L)
- G3 Stylus (b2ldsn/LG-D690n)
- G3 Stylus (b2lss/LG-D693)
- G3 Stylus (b2lss/LG-D693TR)
- G3 Stylus (b2lssn/LG-D693n)
- G3 Vigor (jagc/LGLS885)
- G3 Vigor (jagnm/LG-D725)
- GA7800 (eden/LG Android TV V4)
- Gpad 7.0 (e7wifi/LG-V400)
- GPAD 7.0 LTE (e7lte/VK410)
- Gx2 (b2ln/LG-F430L)
- Intuition (batman\_vzw/VS950 4G)
- KU9500 (ku9500/KU9500)
- L Bello (luv80ds/LG-D335)
- L Bello (luv80ds/LG-D337)
- L Fino (l70p/LG-D290)
- L Fino (l70p/LG-D290AR)
- L Fino (l70pds/LG-D295)
- L Fino (l70pn/LG-D290)
- L-01F (g2/L-01F)
- L20 (luv20ds/LG-D105)
- L20 (luv20ss/LG-D100)
- L20 (luv20ss/LG-D100AR)
- L20 (luv20ts/LG-D107)
- L30 Sporty (luv30ds/LG-D125)
- L30 Sporty (luv30ss/LG-D120)
- L30 Sporty (luv30ss/LG-D120AR)
- L45 (lo\_2/LG-X130g)
- L45 (lo\_2\_ds/LG-X132)
- L50 Sporty (luv50ds/LG-D221)
- L50 Sporty (luv50ds/LG-D227)
- L50 Sporty (luv50ss/LG-D213)
- L50 Sporty (luv50ss/LG-D213AR)
- L50 Sporty (luv50ssn/LG-D213)
- L60 (lo\_1/LG-X135)
- L60 (lo\_1/LG-X137)
- L60 (lo\_1/LG-X145)
- L60 (lo\_1/LG-X147)
- L65 (w55/LG-D280)
- L65 (w55ds/LG-D285)

- L65 (w55n/LG-D280)
- L70 (w5/LG-D320)
- L70 (w5/LG-D320AR)
- L70 (w5/LGAS323)
- L70 (w5c/LGLS620)
- L70 (w5ds/LG-D325)
- L70 (w5n/LG-D320)
- L70 (w5n/LG-D329)
- L70 (w5ts/LG-D340f8)
- L70 CDMA (w5c/LGL41C)
- L90 (w7/LG-D400)
- L90 (w7/LG-D405)
- L90 (w7/LG-D415)
- L90 (w7ds/LG-D410)
- L90 (w7n/LG-D400)
- L90 (w7n/LG-D405)
- L90 Dual (w7dsn/LG-D410)
- LBello (luv80ss/LG-D331)
- LBello (luv80ss/LG-D331AR)
- LG Connect 4G (cayman/LG-MS840)
- LG DOUBLEPLAY (lgc729/LG-C729)
- LG Enlighten (VS700/LG-VS700)
- LG Enlighten (VS700/LG-VS700PP)
- LG Esteem (MS910/LG-MS910)
- LG F70 (f70/LGL31L)
- LG F70 (f70n/LG-D315)
- LG F70 (f70n/LG-D315l)
- LG F70 (f70n/LG-F370K)
- LG F70 (f70n/LG-F370L)
- LG F70 (f70n/LG-F370S)
- LG G Flex (zee/LG-D950)
- LG G Flex (zee/LG-D950G)
- LG G Flex (zee/LG-D951)
- LG G Flex (zee/LG-D955)
- LG G Flex (zee/LG-D956)
- LG G Flex (zee/LG-D958)
- LG G Flex (zee/LG-D959)
- LG G Flex (zee/LG-F340K)
- LG G Flex (zee/LG-F340L)
- LG G Flex (zee/LG-F340S)
- LG G Flex (zee/LG-LS995)
- LG G Flex (zee/LGL23)
- LG G Pad 8.0 LTE (e8lte/LG-P490L)
- LG G Pad 8.3 (awifi/LG-V500)
- LG G Pad 8.3 Google Play Edition (palman/LG-V510)
- LG G Pad 8.3 homeBoy (awifi070u/LG-V507L)
- LG G Pad 8.3 LTE (altev/VK810 4G)
- LG G2 (g2/LG-D800)
- LG G2 (g2/LG-D801)
- LG G2 (g2/LG-D802)
- LG G2 (g2/LG-D802T)

- LG G2 (g2/LG-D802TR)
- LG G2 (g2/LG-D803)
- LG G2 (g2/LG-D805)
- LG G2 (g2/LG-D806)
- LG G2 (g2/LG-F320K)
- LG G2 (g2/LG-F320L)
- LG G2 (g2/LG-F320S)
- LG G2 (g2/LG-LS980)
- LG G2 (g2/VS980 4G)
- LG G3 (g3/AS985)
- LG G3 (g3/LG-AS990)
- LG G3 (g3/LG-D850)
- LG G3 (g3/LG-D851)
- LG G3 (g3/LG-D852)
- LG G3 (g3/LG-D852G)
- LG G3 (g3/LG-D855)
- LG G3 (g3/LG-D856)
- LG G3 (g3/LG-D857)
- LG G3 (g3/LG-D858)
- LG G3 (g3/LG-D858HK)
- LG G3 (g3/LG-D859)
- LG G3 (g3/LG-F400K)
- LG G3 (g3/LG-F400L)
- LG G3 (g3/LG-F400S)
- LG G3 (g3/LGL24)
- LG G3 (g3/LGLS990)
- LG G3 (g3/LGUS990)
- LG G3 (g3/LGV31)
- LG G3 (g3/VS985 4G)
- LG G3 A (tigers/LG-F410S)
- LG G3 Cat.6 (tiger6/LG-F460K)
- LG G3 Cat.6 (tiger6/LG-F460L)
- LG G3 Cat.6 (tiger6/LG-F460S)
- LG Gx (omega/LG-F310L)
- LG Gx (omegar/LG-F310LR)
- LG L39C (14ii\_cdma/LGL39C)
- LG L80 Dual (w6ds/LG-D380)
- LG L80 Dual (w6ds/LG-D385)
- LG L80 Single (w6/LG-D370)
- LG L80 Single (w6/LG-D373)
- LG L80 Single (w6/LG-D375)
- LG L80 Single (w6/LG-D375AR)
- LG Lucid (cayman/VS840 4G)
- LG Lucid (cayman/VS840PP)
- LG Lucid 2 (11v/VS870 4G)
- LG Lucid 3 (x5/VS876)
- LG Mach™ (12s/LG-LS860)
- LG Motion 4G (10/LG-MS770)
- LG Optimus 3D (cosmopolitan/LG-P920)
- LG Optimus 3D (cosmopolitan/LG-P925g)
- LG Optimus 3D (cosmopolitan/LG-SU760)



- LG Optimus Elite (m3s/LG Optimus Elite)
- LG Optimus Elite (m3s/LG-LS696)
- LG Optimus ELITE™ (m3s/LG-VM696)
- LG Optimus F3Q (fx3q/LG-D520)
- LG Optimus F7 (fx1/LG-AS780)
- LG Optimus F7 (fx1/LG-LG870)
- LG Optimus F7 (fx1/LG-US780)
- LG Optimus G (geeb/LG-E970)
- LG Optimus G (geeb/LG-E971)
- LG Optimus G (geeb/LG-E973)
- LG Optimus G (geehdc/L-01E)
- LG Optimus G (geehdc/LGL21)
- LG Optimus G (geehrc/LG-E975)
- LG Optimus G (geehrc/LG-E975K)
- LG Optimus G (geehrc/LG-E975T)
- LG Optimus G (geehrc/LG-E976)
- LG Optimus G (geehrc/LG-E977)
- LG Optimus G (geehrc/LG-E987)
- LG Optimus G (geehrc/LG-F180K)
- LG Optimus G (geehrc/LG-F180S)
- LG Optimus G (geehrc4g/LG-F180L)
- LG Optimus G (geehrc4g/LG-LS970)
- LG Optimus G Pro (geefhd/LG-E980)
- LG Optimus G Pro (geefhd/LG-E980h)
- LG Optimus G Pro (geefhd/LG-E981h)
- LG Optimus G Pro (geefhd/LG-E986)
- LG Optimus G Pro (geefhd/LG-E988)
- LG Optimus G Pro (geefhd/LG-E989)
- LG Optimus G Pro (geefhd/LG-F240K)
- LG Optimus G Pro (geefhd/LG-F240S)
- LG Optimus G Pro (geefhd4g/LG-F240L)
- LG Optimus HUB (univa\_222-01/LG-E510)
- LG Optimus HUB (univa\_arb-xx/LG-E510)
- LG Optimus HUB (univa\_cis-xxx/LG-E510)
- LG Optimus HUB (univa\_esa-xx/LG-E510)
- LG Optimus HUB (univa\_eur-xx/LG-E510)
- LG Optimus HUB (univa\_open-eu/LG-E510)
- LG Optimus HUB (univa\_tur-xx/LG-E510)
- LG optimus it L-05D (l\_dcm/L-05D)
- LG optimus it L-05E (L05E/L-05E)
- LG Optimus L1II (v1/LG-E410)
- LG Optimus L1II (v1/LG-E410B)
- LG Optimus L1II (v1/LG-E410c)
- LG Optimus L1II (v1/LG-E410f)
- LG Optimus L1II (v1/LG-E410g)
- LG Optimus L1II (v1/LG-E410i)
- LG Optimus L1II (v1/LG-E411f)
- LG Optimus L1II (v1/LG-E411g)
- LG Optimus L1II (v1ds/LG-E415f)
- LG Optimus L1II (v1ds/LG-E415g)
- LG Optimus L1II (v1ds/LG-E420)

- LG Optimus L1II (v1ds/LG-E420f)
- LG Optimus L1II (v1ts/LG-E475f)
- LG Optimus L3 (e0/LG-E400)
- LG Optimus L3 (e0/LG-E400b)
- LG Optimus L3 (e0/LG-E400f)
- LG Optimus L3 (e0/LG-E400g)
- LG Optimus L3 (e0/LG-E400R)
- LG Optimus L3 (e0/LG-L38C)
- LG Optimus L3 (e0/LGL35G)
- LG Optimus L3 (e0\_open\_eur/LG-E400)
- LG Optimus L3 Dual (e1/LG-E405)
- LG Optimus L3 Dual (e1/LG-E405f)
- LG Optimus L3 II (vee3ds/LG-E435)
- LG Optimus L3 II (vee3ds/LG-E435f)
- LG Optimus L3 II (vee3ds/LG-E435g)
- LG Optimus L3 II (vee3ds/LG-E435k)
- LG Optimus L3 II (vee3e/LG-E425)
- LG Optimus L3 II (vee3e/LG-E425c)
- LG Optimus L3 II (vee3e/LG-E425f)
- LG Optimus L3 II (vee3e/LG-E425g)
- LG Optimus L3 II (vee3e/LG-E425j)
- LG Optimus L3 II (vee3e/LG-E430)
- LG Optimus L3 II (vee3e/LG-E431g)
- LG Optimus L4 II (vee4ss/LG-E440)
- LG Optimus L4 II (vee4ss/LG-E440f)
- LG Optimus L4 II (vee4ss/LG-E440g)
- LG Optimus L4 II (vee4ss/LG-E465f)
- LG Optimus L4 II (vee4ss/LG-E465g)
- LG Optimus L4 II Dual (vee4ds/LG-E445)
- LG Optimus L4 II Dual (vee4ds/LG-E467f)
- LG Optimus L4 II Tri (vee4ts/LG-E470f)
- LG Optimus L5 Dual (m4ds/LG-E615)
- LG Optimus L5 Dual (m4ds/LG-E615f)
- LG Optimus L5 II (vee5ds/LG-E455)
- LG Optimus L5 II (vee5ds/LG-E455f)
- LG Optimus L5 II (vee5ds/LG-E455g)
- LG Optimus L5 II (vee5nfc/LG-E460)
- LG Optimus L5 II (vee5nfc/LG-E460f)
- LG Optimus L5 II (vee5ss/LG-E450)
- LG Optimus L5 II (vee5ss/LG-E450B)
- LG Optimus L5 II (vee5ss/LG-E450f)
- LG Optimus L5 II (vee5ss/LG-E450g)
- LG Optimus L5 II (vee5ss/LG-E450j)
- LG Optimus L5 II (vee5ss/LG-E451g)
- LG Optimus L5 II (vee5ss/LG-E460)
- LG Optimus L7 (u0/LG-P700)
- LG Optimus L7 (u0/LG-P705)
- LG Optimus L7 (u0/LG-P705f)
- LG Optimus L7 (u0/LG-P705g)
- LG Optimus L7 (u0/LG-P708g)
- LG Optimus L7 (u0/LG-T280)

- LG Optimus L7 (u0/LGL96G)
- LG Optimus L7 (vee7ds/LG-P715)
- LG Optimus L7 II (vee7e/LG-P710)
- LG Optimus L7 II (vee7e/LG-P713)
- LG Optimus L7 II (vee7e/LG-P713GO)
- LG Optimus L7 II (vee7e/LG-P713TR)
- LG Optimus L7 II (vee7e/LG-P714)
- LG Optimus L70 (w5/LG-D321)
- LG Optimus L70 (w5/LGMS323)
- LG Optimus L7II (vee7ds/LG-P715)
- LG Optimus L7II (vee7ds/LG-P716)
- LG Optimus L9 (NFC) (u2/LG-P760)
- LG Optimus L9 (u2/LG-D700)
- LG Optimus L9 (u2/LG-P760)
- LG Optimus L9 (u2/LG-P765)
- LG Optimus L9 (u2/LG-P768)
- LG Optimus L9 (u2/LG-P769)
- LG Optimus L9 (u2/LG-P778)
- LG Optimus L9 (u2/LGMS769)
- LG Optimus L9 II (19ii/LG-D605)
- LG Optimus LTE Tag (cayman/LG-AS840)
- LG Optimus LTE Tag (cayman/LG-F120K)
- LG Optimus LTE Tag (cayman/LG-F120L)
- LG Optimus LTE Tag (cayman/LG-F120S)
- LG Optimus LTE Tag (lge\_120\_kt/LG-F120K)
- LG Optimus LTE Tag (lge\_120\_skt/LG-F120S)
- LG optimus LTE2 (d1lkt/LG-F160K)
- LG optimus LTE2 (d1lks/LG-F160S)
- LG optimus LTE2 (d1lu/LG-F160L)
- LG optimus LTE2 (d1lu/LG-F160LV)
- LG Optimus LTE3 (fx1sk/LG-F260S)
- LG OPTIMUS M+ (m3\_mpcs\_us/LG-MS695)
- LG Optimus One (thunderg/LG-P500)
- LG Optimus One (thunderg/LG-P500h)
- LG Optimus One (thunderg/LG-P503)
- LG Optimus One (thunderg/LG-P504)
- LG Optimus One (thunderg/LG-P505)
- LG Optimus One (thunderg/LG-P505CH)
- LG Optimus One (thunderg/LG-P505R)
- LG Optimus One (thunderg/LG-P506)
- LG Optimus One (thunderg/LG-P509)
- LG Optimus Regard (10/LG-LW770)
- LG Optimus Select (u0\_cdma/LG-AS730)
- LG OPTIMUS ZIP (lg175c/LGL75C)
- LG Optimus Zone 2 (w3c/Vs415PP)
- LG Pecan (pecan/LG-P350)
- LG Pecan (pecan/LG-P350f)
- LG Pecan (pecan/LG-P350g)
- LG Revolution (bryce/Vs910 4G)
- LG Spectrum (Vs920/Vs920 4G)
- LG Thrill 4G (cosmopolitan/LG-P925)

- LG Venice (u0\_cdma/LG-LG730)
- LG Viper 4G LTE (cayman/LG-LS840)
- LG Volt (x5/LGLS740)
- LG-AS855 (AS855/LG-AS855)
- LG-AS876 (x5/AS876)
- LG-C710h (alohag\_302-220/LG-C710h)
- LG-D150 (w35/LG-D150)
- LG-D157f (w35ds/LG-D157f)
- LG-E510 (univa\_228-01/LG-E510)
- LG-E510 (univa\_454-xx/LG-E510)
- LG-E510 (univa\_525-01/LG-E510)
- LG-E510 (univa\_525-05/LG-E510)
- LG-E510 (univa\_bal-xxx/LG-E510)
- LG-E510 (univa\_neu-xx/LG-E510)
- LG-E510 (univa\_open\_cn/LG-E510)
- LG-E510 (univa\_tmo-gr/LG-E510)
- LG-E510 (univa\_vdf-es/LG-E510)
- LG-E510f (e510\_724-XX/LG-E510f)
- LG-E510f (univa\_tha-xx/LG-E510f)
- LG-E510g (univa\_722-34/LG-E510g)
- LG-E720 (alessi/LG-E720)
- LG-E720b (alessi/LG-E720b)
- LG-E985T (gvarfhd/LG-E985)
- LG-E985T (gvarfhd/LG-E985T)
- LG-KU5900 (black/LG-KU5900)
- LG-KU8800 (x2\_450-08/LG-KU8800)
- LG-L95G (195g/LG-L95G)
- LG-LS700 (ls700/LG-LS700)
- LG-LU3000 (hub/LG-LU3000)
- LG-LU3100 (lu3100/LG-LU3100)
- LG-LU6200 (msm8660\_surf/LG-LU6200)
- LG-P690 (gelato\_262-xx/LG-P690)
- LG-P690 (gelato\_460-xx/LG-P690)
- LG-P690 (gelato\_are-xx/LG-P690)
- LG-P690 (gelato\_bal-xx/LG-P690)
- LG-P690 (gelato\_hkg-xx/LG-P690)
- LG-P690 (gelato\_mor-xx/LG-P690)
- LG-P690 (gelato\_ngr-xx/LG-P690)
- LG-P690 (gelato\_sgp-xx/LG-P690)
- LG-P690 (gelato\_tmb-sk/LG-P690)
- LG-P690 (gelato\_tur-xx/LG-P690)
- LG-P690 (gelato\_win-it/LG-P690)
- LG-P690f (gelato\_425-02/LG-P690f)
- LG-P692 (gelato\_nfc\_234-10/LG-P692)
- LG-P692 (gelato\_nfc\_530-24/LG-P692)
- LG-P692 (gelato\_nfc\_tim-it/LG-P692)
- LG-P693 (gelato\_460-xx/LG-P693)
- LG-P698 (gelatods\_bal-xxx/LG-P698)
- LG-P698 (gelatods\_ngr-xxx/LG-P698)
- LG-P698 (gelatods\_open-xx/LG-P698)
- LG-P698f (gelatods\_tha-xxx/LG-P698f)

- LG-P720 (cx2/LG-P720)
- LG-P720h (cx2/LG-P720h)
- LG-P725 (cx2/LG-P725)
- LG-P875 (11e/LG-P875)
- LG-P880 (x3/LG-P880)
- LG-P920 (cosmo\_268-06/LG-P920)
- LG-P920 (cosmo\_454-XXX/LG-P920)
- LG-P920 (cosmo\_466-92/LG-P920)
- LG-P920 (cosmo\_505-XXX/LG-P920)
- LG-P920 (cosmo\_515-XXX/LG-P920)
- LG-P920 (cosmo\_525-01/LG-P920)
- LG-P920 (cosmo\_525-05/LG-P920)
- LG-P920 (cosmo\_BAL-XXX/LG-P920)
- LG-P920 (cosmo\_CIS-XXX/LG-P920)
- LG-P920 (cosmo\_ESA-XXX/LG-P920)
- LG-P920 (cosmo\_H3G-XXX/LG-P920)
- LG-P920 (cosmo\_MOR-XXX/LG-P920)
- LG-P920 (cosmo\_OPEN-CN/LG-P920)
- LG-P920 (cosmo\_OPT-XXX/LG-P920)
- LG-P920 (cosmo\_TMO-XXX/LG-P920)
- LG-P920 (cosmo\_VDF-XXX/LG-P920)
- LG-P920h (cosmo\_724-02/LG-P920h)
- LG-P920h (cosmo\_724-05/LG-P920h)
- LG-P920h (cosmo\_724-xxx/LG-P920h)
- LG-P920h (cosmo\_tcl-mx/LG-P920h)
- LG-P920h (cosmo\_viv-br/LG-P920h)
- LG-P925g (cosmo\_302-720/LG-P925g)
- LG-P925g (p925g/LG-P925g)
- LG-P940 (p940/LG-P940)
- LG-P940h (p2/LG-P940h)
- LG-P970 (bproj\_214-07/LG-P970)
- LG-P970 (bproj\_222-88/LG-P970)
- LG-P970 (bproj\_226-10/LG-P970)
- LG-P970 (bproj\_228-03/LG-P970)
- LG-P970 (bproj\_231-01/LG-P970)
- LG-P970 (bproj\_232-05/LG-P970)
- LG-P970 (bproj\_234-33/LG-P970)
- LG-P970 (bproj\_260-03/LG-P970)
- LG-P970 (bproj\_454-xxx/LG-P970)
- LG-P970 (bproj\_530-XXX/LG-P970)
- LG-P970 (bproj\_BAL-xxx/LG-P970)
- LG-P970 (bproj\_OPEN-CN/LG-P970)
- LG-P970 (bproj\_VDF-XXX/LG-P970)
- LG-P970 (LGP970/LG-P970)
- LG-P990 (p990\_208-10/LG-P990)
- LG-P990 (p990\_214-01/LG-P990)
- LG-P990 (p990\_219-10/LG-P990)
- LG-P990 (p990\_226-01/LG-P990)
- LG-P990 (p990\_228-01/LG-P990)
- LG-P990 (p990\_234-xx/LG-P990)
- LG-P990 (p990\_262-02/LG-P990)

- LG-P990 (p990\_454-xxx/LG-P990)
- LG-P990 (p990\_466-92/LG-P990)
- LG-P990 (p990\_466-xxx/LG-P990)
- LG-P990 (p990\_505-xxx/LG-P990)
- LG-P990 (p990\_525-01/LG-P990)
- LG-P990 (p990\_525-05/LG-P990)
- LG-P990 (p990\_BAL-xxx/LG-P990)
- LG-P990 (p990\_esa-xxx/LG-P990)
- LG-P990h (p990h/LG-P990h)
- LG-P990h (p990h\_334-020/LG-P990h)
- LG-P990h (p990h\_716-10/LG-P990h)
- LG-P990h (p990h\_722-34/LG-P990h)
- LG-P990h (p990h\_724-05/LG-P990h)
- LG-P990h (p990h\_730-01/LG-P990h)
- LG-P990h (p990h\_730-03/LG-P990h)
- LG-P990h (p990h\_CTM-xxx/LG-P990h)
- LG-P990h (p990h\_SSV-xxx/LG-P990h)
- LG-P990hN (star/LG-P990hN)
- LG-P993 (p993/LG-P993)
- LG-V900 (v900aus/LG-V900)
- LG-V901 (v901twN/LG-V901)
- LGL22 (g2/LGL22)
- LU2300 (lu2300/LU2300)
- Marquee (bproj\_CIS-xxx/LG-P970)
- Marquee (L-07C/L-07C)
- Marquee (LG855/LG-LG855)
- Marquee (LS855/LG-LS855)
- My touch 4G (e739/LG-E739)
- Nexus 4 (mako/Nexus 4)
- Nexus 5 (hammerhead/Nexus 5)
- Optiimus Black (bproj\_208-01/LG-P970)
- Optimus EX (x2/LG-SU880)
- Optimus LTE (11a/LG-P870)
- Optimus 2 (as680/LG-AS680)
- Optimus 2X (p990/LG-P990)
- Optimus 2X (p990/LG-P990H)
- Optimus 2X (p990/LG-P990h)
- Optimus 2X (p990\_262-xx/LG-P990)
- Optimus 2X (p990\_CIS-xxx/LG-P990)
- Optimus 2X (p990\_EUR-xx/LG-P990)
- Optimus 2X (p990hN/LG-P990hN)
- Optimus 2X (p999/LG-P999)
- Optimus 2X (star/LG-P990)
- Optimus 2X (star/LG-SU660)
- Optimus 2X (star\_450-05/LG-SU660)
- Optimus 2X (su660/LG-SU660)
- Optimus 3D (cosmo\_450-05/LG-SU760)
- Optimus 3D (cosmo\_EUR-XXX/LG-P920)
- Optimus 3D (cosmo\_MEA-XXX/LG-P920)
- Optimus 3D (p920/LG-P920)
- Optimus 3D (p920/LG-P920h)

- Optimus 3D (su760/LG-SU760)
- Optimus 3D Cube (cx2/LG-SU870)
- Optimus 3D MAX (cx2/LG-P720h)
- Optimus 3D MAX (cx2/LG-P725)
- Optimus 3D MAX (cx2/LG-SU870)
- Optimus 4X HD (x3/LG-P880)
- Optimus 4X HD (x3/LG-P880g)
- Optimus Big (justin/LG-LU6800)
- Optimus Big (lu6800/LG-LU6800)
- Optimus Black (black/LG-KU5900)
- Optimus Black (blackg/LG-P970)
- Optimus Black (blackg/LG-P970h)
- Optimus Black (bproj\_214-03/LG-P970)
- Optimus Black (bproj\_262-XXX/LG-P970)
- Optimus Black (bproj\_302-220/LG-P970g)
- Optimus Black (bproj\_334-020/LG-P970h)
- Optimus Black (bproj\_724-xxx/LG-P970h)
- Optimus Black (bproj\_ARE-XXX/LG-P970)
- Optimus Black (bproj\_EUR-XXX/LG-P970)
- Optimus Black (bproj\_sea-xxx/LG-P970)
- Optimus Black (ku5900/LG-KU5900)
- Optimus Black (LGL85C/LGL85C)
- Optimus Black (lgp970/LG-P970)
- Optimus Black (lgp970/LG-P970g)
- Optimus Black (lgp970/LG-P970h)
- Optimus chat (elini/L-04C)
- Optimus Chat (hazel/LG-C550)
- Optimus Chat (hazel/LG-C555)
- Optimus Core (u0\_cdma/LGL86C)
- Optimus EX (x2/IS11LG)
- Optimus EX (x2\_450-05/LG-SU880)
- Optimus Exceed 2 (w5c/LG-VS450PP)
- Optimus F3 (fx3/LG-LS720)
- Optimus F3 (fx3/LG-P655H)
- Optimus F3 (fx3/LG-P655K)
- Optimus F3 (fx3/LG-P659)
- Optimus F3 (fx3/LG-P659H)
- Optimus F3 (fx3/LGL25L)
- Optimus F3 (fx3/LGMS659)
- Optimus F5 (11e/LG-P870h)
- Optimus F5 (11e/LG-P875)
- Optimus F5 (11e/LG-P875h)
- Optimus F5 (11v/AS870 4G)
- Optimus F6 (f6/LG-D500)
- Optimus F6 (f6/LG-D505)
- Optimus F6 (f6/LGMS500)
- Optimus Fuel (w3c/LGL34C)
- Optimus G Pro (geevl04e/L-04E)
- Optimus GJ (geehdc/LG-E975w)
- Optimus GK (gvfhd/LG-F220K)
- Optimus Hub (lgc800/LG-C800)

- Optimus Hub (lgc800g/LG-C800G)
- Optimus Hub (univa\_214-04/LG-E510)
- Optimus Hub (univa\_724-05/LG-E510f)
- Optimus Hub (univa\_730-01/LG-E510g)
- Optimus Hub (univa\_730-03/LG-E510g)
- Optimus Hub (univa\_740-01/LG-E510g)
- Optimus Hub (univa\_clr-br/LG-E510f)
- Optimus Hub (univa\_ctm-xxx/LG-E510g)
- Optimus Hub (univa\_ent-cl/LG-E510g)
- Optimus Hub (univa\_open-br/LG-E510f)
- Optimus Hub (univa\_open-de/LG-E510)
- Optimus Hub (univa\_ssv-xxx/LG-E510g)
- Optimus Hub (univa\_tcl-mx/LG-E510f)
- Optimus Hub (univa\_tlf-es/LG-E510)
- Optimus Hub (univa\_ufn-mx/LG-E510g)
- Optimus Hub (univa\_usc-mx/LG-E510g)
- Optimus Hub (univa\_viv-br/LG-E510f)
- Optimus L40 (w3/LG-D160)
- Optimus L40 (w3/LG-D165)
- Optimus L40 (w3/LG-D165AR)
- Optimus L40 (w3ds/LG-D170)
- Optimus L40 (w3ds/LG-D175f)
- Optimus L40 (w3ts/LG-D180f)
- Optimus L5 (m4/LG-E610)
- Optimus L5 (m4/LG-E610v)
- Optimus L5 (m4/LG-E612)
- Optimus L5 (m4/LG-E612f)
- Optimus L5 (m4/LG-E612g)
- Optimus L5 (m4/LG-E617G)
- Optimus L5 (m4/LG-L40G)
- Optimus L7II (vee7ds/LG-P716)
- Optimus LIFE (11\_dcm/L-02E)
- Optimus LTE (i\_dcm/L-01D)
- Optimus LTE (i\_skt/LG-SU640)
- Optimus LTE (i\_u/LG-LU6200)
- Optimus LTE (iproj/LG-P936)
- Optimus LTE (lgp930/LG-P930)
- Optimus LTE (lgp935/LG-P935)
- Optimus Mach (hub/LG-LU3000)
- Optimus Mach (LU3000/LG-LU3000)
- Optimus Mach (lu3000/LG-LU3000)
- Optimus Net (gelato\_302-610/LG-P690b)
- Optimus Net (gelato\_cis-xx/LG-P690)
- Optimus Net (gelato\_sea-xx/LG-P690)
- Optimus Net (lgl45c/LGL45C)
- Optimus Net Dual (gelatods\_are-xxx/LG-P698)
- Optimus Net Dual (gelatods\_cis-xxx/LG-P698)
- Optimus Net Dual (gelatods\_ind-xxx/LG-P698)
- Optimus Net Dual (gelatods\_open-br/LG-P698f)
- Optimus Net Dual (gelatods\_sea-xxx/LG-P698)
- Optimus One (ku3700/LG-KU3700)



- Optimus One (lu3700/LG-LU3700)
- Optimus One (su370/LG-SU370)
- Optimus One (thunder\_kor-05/LG-SU370)
- Optimus One (thunder\_kor-08/LG-KU3700)
- Optimus One (thunder\_kor-08/LG-LU3700)
- Optimus One (thunderc/LG-CX670)
- Optimus One (thunderc/LG-LW690)
- Optimus One (thunderc/LG-MS690)
- Optimus One (thunderc/LG-US670)
- Optimus One (thunderc/LS670)
- Optimus One (thunderc/thunderc)
- Optimus One (thunderc/VM670)
- Optimus One (thunderc/Vortex)
- Optimus Pad (106c/L-06C)
- Optimus Pad (v900/LG-V900)
- Optimus Pad (v900asia/LG-V900)
- Optimus Pad (v901ar/LG-V901)
- Optimus Pad (v901kr/LG-V901)
- Optimus Pad (v901tr/LG-V901)
- Optimus Pad (v905r/LG-V905R)
- Optimus Pad (v909/LG-V909)
- Optimus Pad (v909mkt/LG-V909)
- Optimus PAD LTE (express/LG-LU8300)
- Optimus Plus (m3\_acg\_us/LG-AS695)
- Optimus Pro (muscat/LG-C660)
- Optimus Pro (muscat/LG-C660h)
- Optimus Pro (muscat/LG-C660R)
- Optimus Q (lg155c/LGL55C)
- Optimus Q2 (bssq/LG-LU6500)
- Optimus Q2 (bssq\_450-06/LG-LU6500)
- Optimus Slider (VM701/LG-VM701)
- Optimus Sol (victor/LG-E730)
- Optimus Sol (victor/LG-E730f)
- Optimus Spirit (gelato\_505-01/LG-P690f)
- Optimus Spirit (gelato\_eur-xx/LG-P690)
- Optimus Vu (325/LG-F100L)
- Optimus Vu (batman/LG-F100L)
- Optimus Vu (batman\_dcm/L-06DJOJO)
- Optimus Vu (batman\_lgu/LG-F100L)
- Optimus Vu (batman\_skt/LG-F100S)
- Optimus Vu (lge\_325\_skt/LG-F100S)
- Optimus Vu (vu10/LG-P895)
- Optimus Vu (vu10/LG-P895qb)
- Optimus Vu2 (vu2kt/LG-F200K)
- Optimus Vu2 (vu2sk/LG-F200S)
- Optimus Vu2 (vu2u/LG-F200L)
- Optimus Vu2 (vu2u/LG-F200LS)
- Optimus Vu: (batman\_dcm/L-06D)
- Optimus Z (su950/SU950)
- Optimus Zone (e0v/LG-VS410PP)
- PecanV (pecanV/LG-P355)

- PRADA 3.0 (p2/L-02D)
- PRADA 3.0 (p2/LG-KU5400)
- PRADA 3.0 (p2/LG-LU5400)
- PRADA 3.0 (p2/LG-P940)
- PRADA 3.0 (p2/LG-P940h)
- PRADA 3.0 (p2/LG-SU540)
- Shine Plus with Google (alohag/LG-C710h)
- Smart Dios V8700 (SE\_TF/ref\_SCTF)
- Spectrum (i\_vzw/VS920 4G)
- Spectrum 2 (d11v/VS930 4G)
- Spirit 4G (11m/LG-MS870)
- Splendor (u0\_cdma/LG-US730)
- Swift (swift/GT540)
- Swift (swift/GT540f)
- Swift (swift/GT540GO)
- Swift (swift/GT540R)
- Thrill 4G (cosmo\_310-410/LG-P925)
- Thrill 4G (p925/LG-P925)
- USCC-US760 (envt2/USCC-US760)
- USCC-US855 (US855/USCC-US855)
- VS761 (envt2/VS761)
- VU3 (vu3/LG-F300K)
- VU3 (vu3/LG-F300L)
- VU3 (vu3/LG-F300S)
- Wine Smart (vfp/LG-D486)
- Wine Smart (vfp/LG-F480K)
- Wine Smart (vfp/LG-F480L)
- Wine Smart (vfp/LG-F480S)

## **LGE`**

- LG Optimus L7II (vee7ds/LG-P715)

## **LGU+**

- ST940I-UP (tv92/ST940I-UP)

## **LGUplus**

- TV G (smartbox/TI320-DU)

## **LIAONING YIYATONG**

- DISNEY\_Tablet\_PC (DISNEY\_Tablet\_PC/DS2310-70LP)
- IRULU\_MID (IRULU\_MID/X10)

## **LifeWatch**

- LifeWatch V , FGL-00004 (hp6577\_cts/LifeWatch V)

## **LinkNet**

- Smart Box HD (SH940C-LN/SH940C-LN)

## **LINSAY**

- LINSAY F-7HD2CORE / F-7HD4CORE / F-10HD2CORE /F-10XHD4CORE (F-7HD2CORE/LINSAY F-7HD2CORE/F-7HD4CORE/F-10HD2CORE/F-10XHD4CORE)

## **Listo**

- WEBPAD1002 (Listo/WEBPAD1002)

## **Logic Instrument**

- FieldBook E1 (FieldBook\_E1/FieldBook\_E1)

## **LOGICOM**

- E400 (E400/E400)
- LOGICOM E1052GP (E1052GP/E1052GP)
- LOGICOM E852GP (E852GP/E852GP)
- S732 (rk3026/S732)
- S952 (S952/S952)

## **Logicom**

- E350 (E350/E350)
- Logicom S450 (S450/S450)
- Logicom S504 (S504/Connect 5)
- Logicom S504 (S504/S504)
- S1052 (S1052/S1052)
- S7842 (S7842/S7842)

## **Logitech**

- Revue (ka/Revue)

## **LT**

- LT610 (LT610/LT610)
- W2 (EG606\_YE/W2)

## **Lumigon**

- T2 (msm7630\_fw8911/T2)
- T2 HD (T2HD/T2HD)

## **LUVO**

- LUVO 001 (luvo\_001/Luvo 001)
- LUVO-001L (LUVO-001L/LUVO 001L)

## **LUXYA**

- LUXYA MID704DC Tablet / Bitmore Tab770 (MY7317P/MID704DC)

## **MachSpeed**

- MachSpeed Trio Stealth\_10 Tablet (D\_10AL/Trio Stealth\_10)
- MachSpeed Trio Stealth\_8 Tablet (D\_8AL/Trio Stealth\_8)
- MachSpeed Trio Stealth\_9 Tablet (D\_9AL/Trio Stealth\_9)
- MachSpeed TrioStealth-7 (TrioStealth-7/TrioStealth-7)

## **Mad Catz**

- Mad Catz M.O.J.O. (mojo/Mad Catz M.O.J.O.)

## **MAD CATZ**

- Mad Catz M.O.J.O. (mojo/Mad Catz M.O.J.O.)

## **MEDION**

- LIFETAB E10316 (LIFETAB\_E10316/BOSCH\_E10316)
- LIFETAB E10316 (LIFETAB\_E10316/LIFETAB\_E10316)
- LIFETAB E10320 (LIFETAB\_E10320/LIFETAB\_E10320)
- LIFETAB E10320 (LIFETAB\_E10320/MICROSTAR\_E10319)
- LIFETAB E7313 (LIFETAB\_E7313/LIFETAB\_E7313)
- LIFETAB E7316 (LIFETAB\_E7316/LIFETAB\_E7316)
- LIFETAB E7316 (LIFETAB\_E7316/LIFETAB\_S7316)
- LIFETAB E732X (LIFETAB\_E732X/LIFETAB\_E732X)
- LIFETAB S1033X (LIFETAB\_S1033X/LIFETAB\_S1033X)
- LIFETAB S785X (LIFETAB\_S785X/LIFETAB\_S785X)
- MEDION E4502 (E4502/MEDION E4502)
- P4501 (P4501/P4501)

## **Medion**

- Lifetab P9514 (LIFETAB\_P9514/LIFETAB\_P9514)
- microstar E10319 (E10319/E10319)

## **MegaFon**

- MegaFon MT3A (MT3A/MT3A)
- MFLogin3T (MFLogin3T/MFLogin3T)
- MS4B (Viper\_LTE/ALCATEL ONE TOUCH 7030R)
- MS4B (Viper\_LTE/ALCATEL ONE TOUCH 7030Y)
- MS4B (Viper\_LTE/MS4B)

## **Megahouse**

- CP-D403 (CP-D403/CP-D403)

## **Mexico SEP tender**

- TR10CS1 (TR10CS1\_7/TR10CS1)
- TR10CS1 (TR10CS1\_8/TR10CS1)

## **MG Series**

- Any 302 (TR10CS1\_15/TR10CS1)
- Any 302 (TR10CS2\_3/TR10CS2)

## **MG series**

- Any 302 (TR10CS2\_2/TR10CS2)
- Any 303 (TR10CD2\_2/TR10CD2)
- Any 303 (TR10CD2\_3/TR10CD2)

## **Micromax**

- A110 (s9081/Micromax A110)
- A111 (A111/A111)
- A116 (A116/A116)
- A240 (A240/A240)
- A27 (A27/A27)
- A44 (tinnoes13\_s7050/A44)
- A45 (tinnoes73\_s8030\_2g/A45)
- A50 (kpt73\_gb/Micromax A50)
- A54 (A54/A54)
- A56 (A56/Micromax A56)
- A57 (A57/A57)

- A57 (A57/Micromax A57)
- A72 (A72/Micromax A72)
- A73 (A73/A73)
- A73 (A73/Micromax A73)
- A75 (A75/A75)
- A78 (Micromax/A78)
- A84 (A84/A84)
- A87 (A87/A87)
- A87 (A87/Micromax A87)
- A88 (A88/A88)
- A89 (A89/A89)
- A91 (A91/A91)
- A91 (A91/Micromax A91)
- Canvas A1 (AQ4501\_sprout/Micromax AQ4501)
- P275 (P275/P275)
- P300 (crane-M701C\_mmx/P300)

### **Micromax Informatics Ltd.**

- BOLT (A068/A068)
- BOLT (A069/Micromax A069)
- BOLT (A24/Micromax A24)
- BOLT (A34/Micromax A34)
- BOLT (A67/Micromax A67)
- BOLT (A69/Micromax A69)
- BOLT (A69\_IN/Micromax A69)
- CANVAS 2 COLOURS (A120/Micromax A120)
- CANVAS 2 PLUS (A110Q/A110Q)
- CANVAS 2 PLUS (s9086b/Micromax A110Q)
- CANVAS 4 (A210/A210)
- CANVAS 4 (s9111b/A210)
- CANVAS BEAT (A114R/Micromax A114R)
- CANVAS BLAZE (MT500/MT500)
- CANVAS DOODLE 3 (MicromaxA102/Micromax A102)
- CANVAS DUET (AE90/Micromax AE90)
- CANVAS DUET 2 (EG111/Micromax EG111)
- CANVAS ELANZA 2 (A121/Micromax A121)
- CANVAS ENGAGE (A091/Micromax A091)
- CANVAS ENTICE (A105/Micromax A105)
- Canvas Fire (A093/Micromax A093)
- Canvas Fire (A104/Micromax A104)
- CANVAS GOLD (A300/Micromax A300)
- Canvas HD Plus (A190/Micromax A190)
- CANVAS KNIGHT (A350/Micromax A350)
- CANVAS KNIGHT (s9320ae/Micromax A350)
- Canvas Knight Cameo (A290/Micromax A290)
- Canvas L (A108/Micromax A108)
- CANVAS MAGNUS (s9203/Micromax A117)
- Canvas Nitro (A310/Micromax A310)
- CANVAS POWER (A96/Micromax A96)

- CANVAS TUBE (A118R/Micromax A118R)
- CANVAS TURBO (A250/A250)
- CANVAS TURBO (s9311/A250)
- CANVAS TURBO MINI (s8513a/Micromax A200)
- CANVAS UNITE 2 (A106/Micromax A106)
- Canvas XL2 (A109/Micromax A109)
- Micromax Bolt (A064/Micromax A064)
- Micromax Bolt (A065/Micromax A065)
- Micromax Bolt (A082/Micromax A082)
- MICROMAX MAD (A94/Micromax A94)
- MICROMAX UNITE (A092/Micromax A092)

## **MiiA**

- MiiA (TA10CA1\_2/TA10CA1)
- MiiA MT-733G (MT-733G/MT-733G)

## **mobicel**

- Retro (Retro/Retro)

## **Mobily**

- MDB342X (qnbml/MDB342X)

## **mobistel**

- Cynus T6 (Cynus\_T6/Cynus T6)

## **Mobiwire**

- Ahiga (Ahiga/Ahiga)
- Cygnus mini (Cygnus\_mini/Cygnus mini)
- Cygnus mini (Cygnus\_mini/Cygnus\_mini)
- Pegasus (Pegasus/Pegasus)
- VSN V.45 (up06\_h26\_v45/V.45)

## **MobiWire**

- Cygnus (Cygnus45/Cygnus)
- Cygnus (Cygnus45/Cygnus45)

## **Mohu**

- MH-CHANNELS (MH-CHANNELS/MH-CHANNELS)

## Monster

- Monster M10 (M10/M10)

## Motorola

- A1680 (umts\_lucky/A1680)
- Atrix (olympus/MB860)
- Atrix (olympus/MB861)
- Atrix (olympus/ME860)
- Atrix HD (qinara/MB886)
- Backflip (motus/MB300)
- Backflip (motus/ME600)
- Charm (umts\_basil/MB502)
- Citrus (cdma\_ciena/WX442)
- Citrus (cdma\_ciena/WX445)
- Citrus (cdma\_ciena/XT301)
- CLIQ (morrison/MB200)
- CLIQ (morrison/morrison)
- Cliq-XT (zeppelin/MB501)
- Cliq-XT (zeppelin/ME501)
- Defy (umts\_jordan/MB525)
- Defy (umts\_jordan/MB526)
- Defy (umts\_jordan/ME525)
- Defy (umts\_jordan/ME525+)
- Defy (umts\_jordan/unknown)
- Defy Mini (TinBoost/XT320)
- Defy Mini (TinBoost/XT321)
- Defy Mini (tinboost\_umts/XT320)
- Defy Mini (tinboost\_umts/XT321)
- Defy Pro (XT560/XT560)
- Devour (calgary/calgary)
- Devour (calgary/Devour)
- Droid (miler/A854)
- Droid (sholes/Droid)
- Droid (umts\_sholes/A853)
- Droid (umts\_sholes/Milestone)
- Droid (umts\_sholes/umts)
- Droid (umts\_sholes/XT701)
- Droid (umts\_sholes/XT702)
- Droid (umts\_sholes/XT720)
- Droid 3 (cdma\_solana/DROID3)
- Droid 4 (cdma\_maserati/DROID4)
- DROID BIONIC (cdma\_targa/DROID BIONIC)
- Droid Bionic (cdma\_targa/DROID BIONIC)
- Droid II (cdma\_droid2/A955)
- Droid II (cdma\_droid2/DROID2)
- Droid II (cdma\_droid2we/DROID2 GLOBAL)
- Droid MAXX (obake-maxx/XT1080)



- Droid Mini (obakem/XT1030)
- Droid Pro (cdma\_venus2/DROID PRO)
- Droid Pro (cdma\_venus2/DROID Pro)
- Droid Pro (cdma\_venus2/Milestone PLUS)
- Droid Pro (cdma\_venus2/XT610)
- DROID RAZR (cdma\_spyder/DROID RAZR)
- Droid RAZR (umts\_spyder/XT910)
- DROID RAZR HD (vanquish/DROID RAZR HD)
- DROID RAZR HD (vanquish\_u/RAZR HD)
- DROID RAZR HD (vanquish\_u/XT925)
- DROID RAZR i (smi/XT890)
- DROID RAZR M (scorpion\_mini/XT907)
- Droid Razr M (scorpion\_mini\_t/201M)
- DROID Turbo (quark/XT1254)
- Droid Ultra (obake/XT1080)
- Droid X (cdma\_shadow/DROIDX)
- Droid X (cdma\_shadow/MB810)
- Droid X (cdma\_shadow/ME811)
- Droid X (cdma\_shadow/Milestone X)
- Droid X (cdma\_shadow/MotoroiX)
- Droid X2 (daytona/DROID X2)
- Droid X2 (daytona/Milestone X2)
- DROID4 (cdma\_maserati/DROID4)
- Electrify M (solstice/XT901)
- Flipout (umts\_ruth/MB511)
- Flipout (umts\_ruth/ME511)
- Flipout (umts\_ruth/MotoMB511)
- Glam XT800 (titanium/XT800)
- i867 (destino/i867)
- i940 (fawnridge/i940)
- Iron Rock (umts\_irock/XT627)
- IS12M (cdma\_spyder/IS12M)
- Master Touch (umts\_primus/XT621)
- MB200 (morr/MB200)
- MB501 (zepp/MB501)
- MB508 (umts\_sage/MB508)
- MB520 (umts\_kobe/MB520)
- MB610 (umts\_begonia/MB610)
- MB611 (umts\_begonia/MB611)
- MB612 (cdma\_kronos/MB612)
- MB632 (umts\_elway/MB632)
- MB865 (edison/MB865)
- ME632 (umts\_elway/ME632)
- ME863 (umts\_solana/ME863)
- ME865 (edison/ME865)
- Milestone (A853/Milestone)
- Milestone2 (umts\_milestone2/A953)
- Milestone2 (umts\_milestone2/ME722)
- Milestone2 (umts\_milestone2/MotoA953)
- MILESTONE3 (cdma\_solana/MILESTONE3)
- Moto 360 (minnow/Moto 360)

- Moto Defy XT (tinboostplus\_cdma/XT555C)
- Moto Defy XT (tinboostplus\_cdma/XT556)
- Moto Defy XT (tinboostplus\_cdma/XT557)
- Moto Defy XT (tinboostplus\_umts/XT535)
- Moto Defy XT (XT535/XT535)
- Moto E (condor\_cdma/XT1019)
- MOTO E (condor\_cdma/XT1019)
- MOTO E (condor\_cdma/XT830C)
- Moto E (condor\_udstv/XT1025)
- Moto E (condor\_umts/XT1021)
- MOTO E (condor\_umts/XT1021)
- MOTO E (condor\_umts/XT1023)
- Moto E (condor\_umts/XT1023)
- Moto E (condor\_umtsds/XT1022)
- MOTO E (condor\_umtsds/XT1022)
- Moto G (falcon\_cdma/XT1028)
- Moto G (falcon\_cdma/XT1031)
- Moto G (falcon\_cdma/XT937C)
- MOTO G (falcon\_umts/XT1002)
- MOTO G (falcon\_umts/XT1003)
- Moto G (falcon\_umts/XT1008)
- MOTO G (falcon\_umts/XT1032)
- Moto G (falcon\_umts/XT1032)
- Moto G (falcon\_umts/XT1034)
- Moto G (falcon\_umts/XT939G)
- Moto G (falcon\_umtsds/XT1033)
- MOTO G (peregrine/XT1039)
- MOTO G (peregrine/XT1042)
- MOTO G (peregrine/XT1045)
- Moto G (titan\_udstv/titan\_retbr\_dstv)
- Moto G (titan\_udstv/XT1069)
- Moto G (titan\_umts/XT1063)
- MOTO G (titan\_umts/XT1063)
- Moto G (titan\_umts/XT1064)
- MOTO G (titan\_umts/XT1064)
- MOTO G (titan\_umtsds/titan\_niibr\_ds)
- Moto G (titan\_umtsds/XT1068)
- MOTO G (titan\_umtsds/XT1068)
- Moto G Google Play edition (falcon\_umts/XT1032)
- MOTO G LTE (peregrine/XT1039)
- MOTO G LTE (peregrine/XT1040)
- MOTO G LTE (peregrine/XT1045)
- Moto G w/ 4G LTE (peregrine/XT1045)
- MOTO G w/4G LTE (peregrine/XT1039)
- MOTO G w/4G LTE (peregrine/XT1040)
- Moto G w/4G LTE (peregrine/XT1040)
- Moto MAXX (quark\_umts/XT1225)
- Moto X (ghost/XT1049)
- Moto X (ghost/XT1050)
- Moto X (ghost/XT1052)
- MOTO X (ghost/XT1053)

- Moto X (ghost/XT1053)
- Moto X (ghost/XT1055)
- Moto X (ghost/XT1056)
- MOTO X (ghost/XT1058)
- Moto X (ghost/XT1058)
- Moto X (ghost/XT1060)
- MOTO X (victara/XT1092)
- MOTO X (victara/XT1093)
- MOTO X (victara/XT1094)
- MOTO X (victara/XT1095)
- MOTO X (victara/XT1096)
- MOTO X (victara/XT1097)
- Moto X (victara/XT1097)
- Moto X (victara/XT1098)
- Motoluxe (ironmax\_umts/XT615)
- Motoluxe (ironmax\_umts/XT685)
- Motoluxe (ironmaxct\_cdma/Motorola MOT-XT681)
- Motoluxe (ironmaxtv\_umts/XT687)
- Motoluxe (umts\_irock/XT626)
- Motoluxe (umts\_irock/XT627)
- Motoluxe (XT611/XT611)
- Motoluxe (XT615/XT615)
- Motoluxe (XT682/XT682)
- Motoroi (sholest/Milestone XT720)
- Motoroi (sholest/Motorola XT720)
- Motoroi (sholest/XT720)
- Motorola Atrix HD (qinara/MB886)
- MOTOROLA ELECTRIFY 2 (cdma\_yangtze/XT881)
- Motorola Master Touch (umts\_primus/XT621)
- Motorola Master Touch XT621 (umts\_primus/XT621)
- Motorola Photon (asanti\_c/XT897)
- Motorola Photon (asanti\_c/XT897S)
- Motorola RAZR HD (vanquish/DROID RAZR HD)
- MOTOROLA RAZR HD (vanquish\_u/RAZR HD)
- Motorola RAZR M (smq/XT907)
- MOTOROLA RAZR M (smq\_t/201M)
- Motorola RAZR MAXX (cdma\_spyder/Motorola RAZR MAXX)
- Motorola Razr V (umts\_yangtze/XT885)
- Motorola Razr V (umts\_yangtze/XT886)
- Motorola XOOM 2 (fleming/MZ609)
- Motorola XOOM 2 (pasteur/MZ617)
- Motorola\_i1 (iDEN/Motorola\_i1)
- Motosmart (argonmini\_umts/XT389)
- Motosmart (argonmini\_umts/XT390)
- Motosmart (silversmart\_umts/XT303)
- Motosmart (silversmart\_umts/XT305)
- Motosmart (XT389/XT389)
- Motosmart (XT390/XT390)
- MOTWX435KT (Triumph/MOTWX435KT)
- MT620 (TAHITI/MT620)
- MZ505 (Graham/MZ505)

- MZ505 (graham\_wifi/MZ505)
- MZ604 (wifi\_hubble/MZ604)
- MZ605 (umts\_hubble/MZ605)
- MZ607 (fleming/MZ607)
- MZ608 (fleming/MZ608)
- MZ609 (fleming/MZ609)
- MZ616 (pasteur/MZ616)
- MZ617 (pasteur/MZ617)
- Nexus 6 (shamu/Nexus 6)
- Opus One (rubicon/Motorola Titanium)
- Opus One (rubicon/Titanium)
- Photon 4G (sunfire/ISW11M)
- Photon 4G (sunfire/MB855)
- Photon 4G (sunfire/Motorola Electrify)
- Quench XT3 (XT502/Motorola-XT502)
- RAZR D1 (hawk35\_umts/XT914)
- RAZR D1 (hawk35\_umts/XT915)
- RAZR D1 (hawk35\_umts/XT916)
- RAZR D1 (hawk35\_umts/XT918)
- RAZR D3 (hawk40\_umts/XT919)
- RAZR D3 (hawk40\_umts/XT920)
- Spice (sesame/XT300)
- XOOM (stingray/Xoom)
- XOOM (umts\_everest/MZ601)
- XOOM (umts\_hubble/MZ601)
- XOOM (umts\_hubble/MZ605)
- XOOM (wifi\_hubble/MZ604)
- XOOM (wifi\_hubble/MZ606)
- XOOM (wingray/Xoom)
- XOOM 2 (pasteur/XOOM 2)
- XOOM 2 ME (fleming/XOOM 2 ME)
- XT311 (XT311/XT311)
- XT316 (dominoq\_umts/XT316)
- XT316 (XT316/XT316)
- XT317 (XT317/XT317)
- XT319 (XT319/XT319)
- XT530 (XT530/XT530)
- XT531 (XT531/XT531)
- XT532 (XT532/XT532)
- XT550 (ArgonSpin/XT550)
- XT550 (argonspin\_umts/XT550)
- XT560 (tinq\_umts/XT560)
- XT603 (cdma\_pax/XT603)
- XT605 (umts\_jorian/XT605)
- XT610 (umts\_venus2/XT610)
- XT627 (umts\_irock/XT627)
- XT701 (choles/XT701)
- XT711 (choi/XT711)
- XT800+ (cg\_tita2/XT800+)
- XT800W (ttu\_skt/XT800W)
- XT806 (qilin/XT806)

- XT860 (umts\_solana/XT860)
- XT882 (swordfish/XT882)
- XT905 (scorpion\_mini\_u/XT905)
- XT910 (umts\_spyder/XT910)
- XT910K (umts\_spyder/XT910K)
- XT910S (umts\_spyder/XT910S)

### **MotorolaSolutionsInc.**

- TC55 (TC55/TC55)
- TC55CH (TC55CH/TC55CH)

### **MPman**

- MPDC1006 (MPDC1006/MPDC1006)
- MPDC706 (MPDC706/MPDC706)

### **MSI**

- Primo73 (N71J/Primo73)
- Primo76 (N728/Primo76)
- Primo81 (N821/Primo 81)
- Primo81 (N821/Primo81)
- Primo81 (Primo81/Primo81)

### **MTC**

- MTC 982 (MTC\_982/MTC 982)
- Vodafone Smart mini (Vodafone\_875/MTC 970H)

### **MTN**

- MTN-5982C3 (MTN-TBW5982C3/MTN-TBW5982C3)
- MTN-8978P (MTN-8978P/MTN-8978P)
- MTN-S620 (MTN-S620/MTN-S620)

### **MTN-E70**

- MTN-E70 (MTN-E70/MTN-E70)

### **MTT**

- Master (Master/M.T.T. Master)
- Smart Fun (SmartFun/M.T.T. Smart Fun)

## **Multilaser**

- M7s Dual Core (NB116\_NB117\_NB118/M7s Dual ML03)

## **My Go**

- GoTab GBT10 (GBT10/GoTab\_GBT10)

## **myPhone**

- CUBE (myphone\_cube/myPhone Cube)

## **nabi**

- nabi 2 Tablet (mt799/NABI2-NV7A)
- nabi 2S Tablet (nabi2S/SNB02-NV7A)
- nabi Big Tab HD™ 20" (DMTAB-NV20A/DMTAB-NV20A)
- nabi Big Tab HD™ 24" (DMTAB-NV24A/DMTAB-NV24A)
- nabi DreamTab HD8 Tablet (DMTAB/DMTAB-IN08A)
- nabi DreamTab HD8 Tablet (t8400n/DMTAB-NV08B)

## **NanoTech**

- Nuvola NP-1 (nuvola/Nuvola NP-1)

## **NAXA**

- NAXA NID-7011 (NID-7011/NID-7011)
- NID\_7010 (NID\_7010/NID\_7010)

## **NCREDIBLE**

- NV8-HD (NV8-HD/NV8)

## **Ncredible**

- Ncredible NV8 (NV8/NV8)

## **NEC**

- 101T MEDIAS (NEC-101/NEC-101T)
- AGT10 (AGT10/N8730-411)
- AGT10 (AGT10/N8730-41101)

- AGT10 (AGT10/N8730-41102)
- Casio G'zOne Commando (C771/C771)
- CASIO G'zOne Commando 4G LTE (C811/C811 4G)
- Disney Mobile on docomoN-03E (N-03E/N-03E)
- G'z One IS11CA (IS11CA/IS11CA)
- G'zOne TYPE-L CAL21 (CAL21/CAL21)
- G'zOne CA-201L (CA201L/CA-201L)
- LaVieTab PC-TE508S1W/LaVieTab PC-TE508S1L (PC-TE508S1\_nec/LaVieTab PC-TE508S1)
- LaVieTab PC-TE510S1L (PC-TE510S1\_nec/LaVieTab PC-TE510S1)
- LifeTouch B (LTB013/D000-000013-101)
- LifeTouch B (LTB018/D000-000018-001)
- LifeTouch B (LTB018/D000-000018-002)
- LifeTouch B (LTB018/D000-000018-003)
- LifeTouch B (LTB018/D000-000018-004)
- LifeTouch B (LTB018/D000-000018-101)
- LifeTouch B (LTB018/D000-000018-102)
- LifeTouch B (LTB018/D000-000018-104)
- LifeTouch B (LTB019G/D000-000019-002)
- LifeTouch B (LTB019W/D000-000019-001)
- LifeTouch B (LTB028/LTB-HS)
- LifeTouch L (D000000023/LT-TLA)
- LifeTouch L (D000000035/NEC-STR)
- LifeTouch L (D000000039/NEC-STR)
- LifeTouch L (LTTLA16/LT-TLA)
- LifeTouch L (LTTLA32/LT-TLA)
- LifeTouch Note (D000000010N/D000-000010-N)
- LifeTouch Note (D000000011N/D000-000011-N)
- LifeTouch Note (LTNA7/LT-NA7)
- LifeTouch Note (LTNA7F/LT-NA7F)
- LifeTouch S (LifeTouch\_D1/D000-000001-B01)
- LifeTouch S (LifeTouch\_D1/D000-000001-B02)
- LifeTouch S (LifeTouch\_D1/D000-000001-C01)
- LifeTouch S (LifeTouch\_D1/D000-000001-K01)
- LifeTouch S (LifeTouch\_D1/D000-000001-R01)
- LifeTouch S (LifeTouch\_D1/D000-000001-R02)
- LifeTouch S (LifeTouch\_D1/D000-000001-R03)
- LifeTouch S (LifeTouch\_D1/D000-000001-R04)
- LifeTouch S (LifeTouch\_D1/D000-000001-S00)
- LifeTouch S (LifeTouch\_D1/D000-000001-S01)
- LifeTouch S (LifeTouch\_D1/D000-000001-S05)
- LifeTouch S (LifeTouch\_D1/D000-000001-S25)
- LifeTouch S (LifeTouch\_D1/D000-000001-S85)
- LifeTouch S (LifeTouch\_D7/D000-000007-D01)
- LifeTouch W (LifeTouch\_W1/D000-000002-001)
- LifeTouch W (LT-W1\_1/D000-000002-W01)
- LifeTouch W (LT-W1\_2/D000-000002-W02)
- MEDIAS X N-06E (N-06E/N-06E)
- MEDIAS BR IS11N (IS11N/IS11N)
- MEDIAS CH 101N (101N/101N)
- MEDIAS ES N-05D (N-05D/N-05D)
- MEDIAS LTE N-04D (N-04D/N-04D)

- MEDIAS N-04C (N-04C/N-04C)
- MEDIAS NE-202 (NE-202/NE-202)
- MEDIAS NEC-101S (MAGNUM/NEC-101S)
- MEDIAS NEC-101S (NEC-101/NEC-101S)
- MEDIAS NEC-102 (NEC-102/NEC-102)
- MEDIAS PP N-01D (N-01D/N-01D)
- MEDIAS TAB N-06D (N-06D/N-06D)
- MEDIAS TAB UL N-08D (N-08D/N-08D)
- MEDIAS U N-02E (N-02E/N-02E)
- MEDIAS U NE-103T (NE-103/NE-103T)
- MEDIAS W N-05E (N-05E/N-05E)
- MEDIAS WP N-06C (N-06C/N-06C)
- MEDIAS X N-04E (N-04E/N-04E)
- MEDIAS X N-07D (N-07D/N-07D)
- NE-201 (NE-201/NEC-NE-201A1A)
- NEC909e (NEC909e/NEC909e)
- PC- TS507N1S (PC-TS507N1S/LaVieTab PC-TS507N1S)
- PC-508T1W (508T1W/PC-TS508T1W)
- PC-708T1W (708T1W/PC-TS708T1W)
- PC-TE307N1W (PC-TE307N1W/PC-TE307N1W)
- PC-TE510N1B (LaVieTab/LaVieTab PC-TE510N1B)

## **NESO**

- NESO N810 i7 (N810\_i7\_1/N810 i7)

## **Netgear**

- NeoTVPrime (NeoTV/GTV100)

## **Next Learning**

- Nexttab N3 (N3/N3)

## **Nextbook**

- NX700QC (nxm7100lvd\_wm/NX700QC)
- NX785QC (nxm865lvd\_wm/NX785QC)
- NX785QC8G (NXM865FD/NX785QC8G)

## **Nextel**

- V.35 (up11\_vsn\_h1\_single/Nextel V.35)
- V.45 (H26-VSN/NII Nextel)
- V.45 (H26-VSN/V.45)



## **NGM**

- Dynamic Racing 3 (NGM\_Dynamic\_Racing\_3/Dynamic Racing 3)
- Forward\_Prime (Forward\_Prime/Forward\_Prime)
- Infinity (Infinity/Infinity)
- NGM\_Dynamic\_Stylo (NGM\_Dynamic\_Stylo/NGM\_Dynamic\_Stylo)

## **Nikon**

- COOLPIX (S800c/COOLPIX S800c)
- COOLPIX S810c (s810c/COOLPIX S810c)

## **Nobis**

- NB07 (NB07/NB07)
- NB7022S (NB7022S/NB7022S)
- NB7850S (NB7850S/NB7850S)
- Nobis NB09 (M9025/NB09)

## **NOBIS**

- NB1022 (RCT6203W46/NB1022)

## **NOBLEX**

- NBX-T1014N (TA10CA2/TA10CA2)

## **Noblex**

- NBX-T7014 (E270BSA/NBX-T7014)

## **Nubia**

- NX401 (NX40X/NX401)
- NX501 (NX501/NX501)
- NX503A (NX503A/NX503A)

## **NUVISION**

- TM1088 (fiber-wifibt/CT1000)
- TM1088 (fiber-wifibt/Endeavour101)
- TM1088 (fiber-wifibt/TM1088)
- TM1088 (fiber-wifibt/WEBPAD1002)

## **NVidia**

- Shield (roth/SHIELD)
- SHIELD Tablet (shieldtablet/SHIELD Tablet)
- TegraNote (tegranote/Tegra Note 7)
- TegraNote (tegranote/TegraNote-P1640)
- TegraNote (tegranote/TegraNote-Premium)
- TegraNote (tegranote7c/Tegra Note 7)

## **Nyx mobile**

- NOBA (NOBA/NOBA)

## **ODYS**

- ODYS UNO X10 (UNO\_X10/UNO X10)
- ODYS UNO X8 (UNO\_X8/UNO\_X8)

## **oioo**

- oioo Model 2 (wecct/Model 2)

## **oioo Model 3**

- oioo Model 3 (wecct3/Model 3)

## **Olivetti**

- OP110 (OP110/OP110)

## **OnePlus**

- OnePlus One (A0001/A0001)
- OnePlus One (A0001/One)

## **OpenPeak**

- cius (cius/cius)
- CIUS-7 (CIUS-7/CIUS-7)
- CIUS-7-AT (CIUS-7-AT/CIUS-7-AT)

## **Oppo**

- 1100 (1100/1100)
- 1105 (1105/1105)

- 1107 (1107/1107)
- 3007 (3007/3007)
- N1 (N1/N1)
- N1 mimi (N1mini/N5111)
- N1 mimi (N1mini/N5116)
- N3 (N3/N5206)
- N3 (N3/N5207)
- N5110 (N5110/N5110)
- N5117 (N5117/N5117)
- OPPO Find5 (FIND5/X909)
- OPPO Find5 (FIND5/X909T)
- OPPO Ulike2 (Ulike2/U705T)
- R1001 (R1001/R1001)
- R5 (R5/R8106)
- R5 (R5/R8107)
- R6006 (R3/R6006)
- R7005 (R3/R7005)
- R8000 (R1S/R8000)
- R809T (R809T/R809T)
- R815T (R815T/R815T)
- R815W (R815W/R815W)
- R819T (R819T/R819T)
- R820 (R820/R820)
- R8201 (R1x/R8201)
- R8206 (R1x/R8206)
- R8207 (R1C/R8207)
- R821T (R821T/R821T)
- R823T (R823T/R823T)
- R831K (R831K/R831K)
- R833T (OPPO82\_13067/R833T)
- U707T (U707T/U707T)
- Ulike2 (U705W/U705W)
- X9000 (X9000/X9000)
- X9077 (FIND7/X9077)

## **OPPO**

- N1 (N1/N1)
- N1T (N1T/N1T)
- N1W (N1W/N1W)
- R1001 (R1001/R1001)
- R2001 (R2001/R2001)
- R2010 (R2010/R2010)
- R2017 (R2017/R2017)
- R6007 (R6007/R6007)
- R7007 (R7007/R7007)
- R8001 (R8001/R8001)
- R8006 (R8006/R8006)
- R8007 (R8007/R8007)
- R815 (R815/R815)

- R819 (R819/R819)
- R821 (R821/R821)
- R827 (R827/R827)
- R827T (R827T/R827T)
- R829 (R829/R829)
- R829T (R829T/R829T)
- R830 (R830/R830)
- R830S (R830S/R830S)
- R831 (R831/R831)
- R831L (R831L/R831L)
- R831S (R831S/R831S)
- R831T (R831T/R831T)
- R850 (R850/R850)
- U707 (U707/U707)
- U708 (U708/U708)
- X9006 (X9006/X9006)
- X9007 (X9007/X9007)
- X9070 (X9070/X9070)
- X9076 (X9076/X9076)
- X9077 (X9077/X9077)
- X909 (FIND5/X909)

## **Opticon**

- H-27 (H-27/H-27)

## **Orange**

- idol S (Diablo\_LTE/Orange Niva)
- Luno (Luno/Luno)
- NOS Royá (Alto45/NOS Royá)
- Orange Royá (Alto45/Orange Royá)
- Orange Zilo (Orange\_Zilo/Zilo)

## **orange**

- Orange Nura (M812/Orange Nura)

## **Orbic**

- R370H (R370H/R370L)

## **Orinoquia**

- Gran\_Roraima (hws7721u/Orinoquia Gran Roraima + S7-722u)

## **Panasonic**

- 48AX600C (mst918\_4G/48AX600C)
- 55AX600C (mst918\_4k2k/55AX600C)
- AS650C (AS650C/AS650C)
- Eco9 v2 (Eco9 v2/Eco9 v2)
- Elite 11 (Elite11/Elite)
- Elite 16 (Elite16/Elite)
- ELUGA U (ELUGA\_U/Panasonic ELUGA U)
- FZ-A1 (toughpad/FZ-A1B)
- FZ-B2 (fz\_b2bb/FZ-B2B)
- FZ-X1 (FZ-X1/FZ-X1)
- FZ-X1 (FZ-X1VU/FZ-X1)
- FZ-X1 (FZ-X1VUC/FZ-X1)
- JT-B1 (B1/JT-B1)
- KX-PRXA10 (KX-PRXA10/Panasonic KX-PRXA10)
- KX-PRXA15 (KX-PRXA15/Panasonic KX-PRXA15)
- LUMIX CM1 (DMC-CM1/DMC-CM1)
- Panasonic ELUGA A (ELUGA\_A/Panasonic ELUGA A)
- Panasonic ELUGA I (ELUGA\_I/Panasonic ELUGA I)
- Panasonic ELUGA S (ELUGA\_S/Panasonic ELUGA S)
- Panasonic P11 (P11/Panasonic P11)
- Panasonic P31 (P31/Panasonic P31)
- Panasonic P41 (P41/Panasonic P41)
- Panasonic P41 HD (P41HD/Panasonic P41HD)
- Panasonic P51 (P51/Panasonic P51)
- Panasonic P55 (P55/Panasonic P55)
- Panasonic P61 (P61/Panasonic P61)
- Panasonic P61 (P61/Panasonic\_P61)
- Panasonic P81 (P81/Panasonic P81)
- Panasonic T11 (T11/Panasonic T11)
- Panasonic T21 (T21/Panasonic T21)
- Panasonic T31 (T31/Panasonic T31)
- Panasonic T40 (T40/Panasonic T40)
- Panasonic T41 (T41/Panasonic T41)
- Panasonic T9 (T9/Panasonic T9)
- SmartTVBox (C01AS/SMARTTVBOX)

## **Panasonic Corporation**

- Altus 18 (Altus18/Altus 18)
- Altus 24 (Altus24/Altus 24)
- Boukenkun-reciever (VW\_RCBKK1/VW\_RCBKK1)
- Eco9 v1 (Eco/Eco9 v1)
- Elite 11 (Elite11/Elite 11)
- HDPSEB v2 (HDPSEBv2/HD PSEB v2)
- JT-H580VT (H580VT\_A/JT-H580VT)
- JT-H581VT (H581VT\_A/JT-H581VT)
- SM17 (SM17/Smart Monitor 17)
- SV-ME1000 (K1/Panasonic SV-ME1000)

- UN-MT300 (A1/Panasonic UN-MT300)
- UN-W700 (F1/Panasonic UN-W700)
- VTSH v1 (VTSHv1/VTSH v1)

## **Panasonic Mobile Communications**

- 003P (pana1/003P)
- 101P (pana2\_2s/101P)
- 102P (pana2\_4s/102P)
- EB-4063-X (EB-4063-X/EB-4063-X)
- ELUGA (pana2\_4o/dL1)
- ELUGA dL1 (pana2\_4v/Panasonic\_dL1)
- ELUGA P (P-03E/P-03E)
- ELUGA Power (P-07D/P-07D)
- ELUGA V (P-06D/P-06D)
- ELUGA X (P-02E/P-02E)
- P-01D (pana2\_1/P-01D)
- P-02D (pana2\_2/P-02D)
- P-04D (pana2\_4d/P-04D)
- P-05D (pana2\_4a/P-05D)
- P-07C (laputa/P-07C)
- P-07C (pana1/P-07C)
- P-08D (P-08D/P-08D)

## **Panasonic**

- Eco11 v2 (Eco11v2/Eco11 v2)

## **Pantech**

- ADR910L (ADR910L/ADR910L)
- ADR930L (ADR930L/ADR930L)
- Apache (ADR8995/ADR8995)
- AT1 (at1/IM-T100K)
- Burst (presto/PantechP9070)
- Crossover (moon/PantechP8000)
- ef141v (ef141v/IM-A725L)
- EF33S (ef33s/IM-A760S)
- EF34K (ef34k/IM-A770K)
- EF35L (ef35l/IM-A780L)
- Element (pororo/PantechP4100)
- Flex (oscar/PantechP8010)
- IM-810K (ef40k/IM-A810K)
- IM-840SP (IM-A840SP/IM-A840SP)
- IM-A730S (ef30s/IM-A730S)
- IM-A740S (ef31s/IM-A740S)
- IM-A760S (ef33s/IM-A760S)
- IM-A770K (ef34k/IM-A770K)

- IM-A775C (ef34c/IM-A775C)
- IM-A780L (ef351/IM-A780L)
- IM-A800S (ef39s/IM-A800S)
- IM-A810K (ef40k/IM-A810K)
- IM-A810S (ef40s/IM-A810S)
- IM-A830K (ef45k/IM-A830K)
- IM-A830KE (ef45kv/IM-A830KE)
- IM-A830L (ef46l/IM-A830L)
- IM-A830S (ef47s/IM-A830S)
- IM-A840S (IM-A840S/IM-A840S)
- IM-A850K (ef49k/IM-A850K)
- IM-A850L (ef50l/IM-A850L)
- IM-A850S (ef48s/IM-A850S)
- IM-A860K (ef51k/IM-A860K)
- IM-A860L (ef51l/IM-A860L)
- IM-A860S (ef51s/IM-A860S)
- IM-A870K (ef52k/IM-A870K)
- IM-A870L (ef52l/IM-A870L)
- IM-A870S (ef52s/IM-A870S)
- IM-A880S (EF56S/IM-A880S)
- IM-A910K (ef63k/IM-A910K)
- IM-A910L (ef63l/IM-A910L)
- IM-A910S (ef63s/IM-A910S)
- IM-A920S (ef65s/IM-A920S)
- Izar (sp33k/SKY IM-A630K)
- Mirach (ef13l/IM-A690L)
- Mirach (ef13s/IM-A690S)
- Mirach A (ef32k/IM-A750K)
- MIRACH\_J (mirachj/EIS01PT)
- MIRACH\_J (mirachj/IS11PT)
- P9090 (magnus/PantechP9090)
- PLANET (mini/PLANET)
- Pocket (mini/PantechP9060)
- PTL21 (maruko/PTL21)
- Sirius (ef10s/SKY IM-A600S)
- SIRIUS  $\alpha$  (jmasai/IS06)
- Vega (ef12s/SKY IM-A650S)
- Vega LTE M (ef65l/IM-A820L)
- VEGA RACER (ef34k/IM-A770K)
- VEGA RACER (ef35l/IM-A780L)
- VEGA Secret Note (EF59K/IM-A890K)
- VEGA Secret Note (EF59L/IM-A890L)
- VEGA Secret Note (EF59S/IM-A890S)
- VEGA Secret UP (EF60S/IM-A900S)
- VEGA Secret UP (ef60s/IM-A900S)
- VEGA Secret UP (EF61K/IM-A900K)
- VEGA Secret UP (ef61k/IM-A900K)
- VEGA Secret UP (ef62l/IM-A900L)
- VEGA Secret UP (EF62L/IM-A900L)
- Vega X (ef14l/IM-A720L)
- Vega X (ef18k/IM-A710K)

## **Partner**

- OT-310 (OT-310/OT-310)

## **Pegatron**

- Android Tablet PC (Duke3G/Android Tablet PC)
- Android Tablet PC (DukeWifi/Android Tablet PC)
- Android Tablet PC (TabletPC/Android Tablet PC)
- chagall (chagall/Chagall 10.1 WiFi)
- chagall (chagall/chagall)
- chagall (chagall/E-Tab 4G)
- MaxiIQ (MaxiIQ/MaxiIQ)
- Olipad (OP111/chagall)

## **pendo**

- PNDPP44QC10 (PNDPP44QC10/PNDPP44QC10)
- PNDPP44QC7 (PNDPP44QC7/PNDPP44QC7)

## **Philips**

- Philips Android 2014 (philipstv/AND1E)
- Philips W8510 (Topaz/Philips W8510)
- Philips\_W3500 (Philips\_W3500/Philips\_W3500)
- S221C3A (MMD\_WW/G2SMNT)
- W337 (W337/W337)
- W3568 (Philips\_W3568/Philips W3568)
- W3620 (W3620/W3620)
- W6500 (Philips\_W6500\_A/W6500)
- W6610 (Marathon/Philips W6610)
- W6620 (W6620/W6620)
- W8555 (Pride/Philips W8555)

## **PHILIPS**

- PHP-S221C4AFD (MMD\_WW/G3SMNTS22)
- PHP-S231C4AFD (G3SMNTS23/G3SMNTS23)

## **Philips Electronics**

- HMP8100/93 (HMP8100\_ATV\_93/HMP8100\_ATV\_93)
- HMP8100/98 (HMP8100\_ATV/HMP8100\_ATV\_INT)
- Philips GoGear Connect (SA2CNTxx/Philips GoGear Connect)
- Philips\_PI5000 (Philips\_PI5000/Philips\_PI5000)
- PI2000 (PI2000/PI2000)



- PI2010 (PI2010/PI2010)
- PI2011 (PI2011/PI2011)
- PI3100/51 (PI3100\_51/PI3100)
- PI3100/58 (PI3100\_58/PI3100)
- PI3100/93 (PI3100\_93/PI3100-93)
- PI3100/98 (PI3100\_98/PI3100)
- PI3100Z3/93 (PI3100Z3\_93/PI3100Z3\_93)
- PI3105 (PI3105/PI3105)
- PI3106 (PI3106/PI3106)
- PI3110 (PI3110/PI3110)
- PI3205G (PI3205G\_93/PI3205G)
- PI3210G (PI3210G/PI3210G)
- PI3900 (T7p\_Duo\_93/PI3900-93)
- PI3900/51 (PI3900\_51/PI3900)
- PI3900/58 (PI3900\_58/PI3900)
- PI3900/98 (PI3900\_98/PI3900)
- PI3910 (PI3910/PI3910)
- PI4010G (PI4010G/PI4010G)
- PI7100/93 (PI7100\_93/PI7100\_93)
- SA3CNT (Philips\_GGC3/SA3CNT)
- T8 PI7000 (Tablet\_8/PI7000)

## **PIONEER**

- PIONEER R1 (RCK8726Y703H/R1)

## **polaris\_Condroid\_X7**

- polaris\_Condroid\_X7 (polaris-Condroid\_X7/Condroid\_X7)

## **POLAROID**

- MID4X07 (RCT6773W22/MID4X07)
- MID4X10 (RCT6203W46/MID4X10)
- P1001 (P1001/P1001)
- P791 (P791/P791)
- POLAROID A7\_PTAB735 (A7\_PTAB735/HS-7DTB39)

## **Polaroid**

- A9x/PTAB935x (A9xPTAB935x/A9x/PTAB935x)
- Infinite (MID1324/MID 1324)
- P10/Q10/PTAB1040/PTAB1041 (pq10-Polaroid/P10/Q10/PTAB1040/PTAB1041)
- P7/Q7/PTAB740/PTAB741 (pq7-Polaroid/P7/Q7/PTAB740/PTAB741)
- P9/Q9/PTAB940/PTAB941 (pq9-Polaroid/P9/Q9/PTAB940/PTAB941)
- Polaroid A/S10 (wing-AS10/A/S10)
- Polaroid A/S7 (wing-AS7/A/S7)
- Polaroid A/S8 (wing-AS8/A/S8)

- Polaroid A7X\_PTAB735X (PTAB735X/A7X\_PTAB735X)
- Polaroid K7 (PTAB782/K7/PTAB782)
- Polaroid MID1028 (MID1028/MID1028)
- Polaroid PTAB751 (STJR76/PTAB751)
- Polaroid V7 (nuclear-M7021/V7)
- PRO5023PW (up06\_h25\_polaroid/PRO5023PW)
- PTAB1051-PTAB1055 (RCT6203W46/PTAB1051\_PTAB1055)

## Positivo

- Positivo AB7 (YPY\_AB7D/YPY\_AB7D)
- Positivo AB7D (YPY\_AB7DC/YPY\_AB7DC)
- Positivo Mini (mini/Positivo Mini TE)
- Positivo Mini (mini/Positivo Mini)
- Positivo mini I (mini\_i/Positivo Mini I)
- Positivo S380 (S380/S380)
- Positivo S450 (S450/S450)
- Positivo SX1000 (SX1000/Positivo SX1000)
- Positivo T701 TV (T701/T701)
- Positivo T705 (T705/T705)
- Positivo T705 (T705/T705K)
- Positivo T750 (t750/Positivo T750)
- Positivo Ypy 07FTB (YPY\_07FTB/YPY\_07FTB)
- Positivo Ypy 07FTBF (YPY\_07FTBF/YPY\_07FTBF)
- Positivo Ypy 07STB (YPY\_07STB/YPY\_07STB)
- Positivo Ypy 07STBF (YPY\_07STBF/YPY\_07STBF)
- Positivo Ypy 10FTB (YPY\_10FTB/YPY\_10FTB)
- Positivo Ypy 10FTBF (YPY\_10FTBF/YPY\_10FTBF)
- Positivo Ypy 10STB (YPY\_10STB/YPY\_10STB)
- Positivo Ypy 10STBF (YPY\_10STBF/YPY\_10STBF)
- Positivo Ypy AB10 (YPY\_AB10D/YPY\_AB10D)
- Positivo Ypy AB10D (YPY\_AB10DC/YPY\_AB10DC)
- Positivo Ypy AB10E (YPY\_AB10EC/Positivo Ypy AB10EC)
- Positivo YPY AB7 (YPY\_AB7/Positivo Ypy AB7E)
- Positivo YPY AB7 (YPY\_AB7/Positivo Ypy AB7EC)
- Positivo Ypy L700 (YPY\_L700/Positivo Ypy L700 Ed. Especial)
- Positivo Ypy L700 (YPY\_L700/Positivo Ypy L700)
- Positivo Ypy L700 (YPY\_L700/Positivo Ypy L700+)
- Positivo Ypy S350p (YPY\_S350/YPY\_S350\_PLUS)
- Positivo Ypy S405 (YPY\_S405/YPY\_S405)
- Positivo Ypy TQ7 (YPY\_TQ7/YPY\_TQ7)
- Positivo YPY7 3G (TB07FTA/Positivo Ypy 7 - TB07FTA)
- Positivo YPY7 3G (TB07FTA/Ypy 7 - TB07FTA)
- Positivo YPY7 3G (YPY\_07FTA/YPY\_07FTA)
- Positivo YPY7 wifi (TB07STA/Positivo Ypy 7 - TB07STA)
- Positivo YPY7 wifi (TB07STA/Ypy 7 - TB07STA)
- Positivo YPY7 wifi (YPY\_07STA/YPY\_07STA)
- S440 (S440/S440)
- S480 (S480/S480)
- YPY 10 3G (YPY\_10FTA/YPY\_10FTA)

- Ypy AB10DP (YPY\_AB10DP/YPY\_AB10DP)
- Ypy AB10E (YPY\_AB10E/Positivo Ypy AB10E)
- Ypy AB7K (YPY\_AB7K/YPY\_AB7K)
- Ypy Kids (YPY\_L700/Positivo Ypy L700 Kids)
- Ypy Kids (YPY\_L700/Positivo Ypy L700+ Kids)
- Ypy L1000 (YPY\_L1000/Positivo Ypy L1000)
- Ypy L1000 (YPY\_L1000/Positivo Ypy L1000F)
- Ypy L1050 (YPY\_L1050/Positivo Ypy L1050)
- Ypy L1050 (YPY\_L1050/Positivo Ypy L1050F)
- Ypy L1050E (YPY\_L1050E/Positivo Ypy L1050E)
- Ypy S350 (YPY\_S350/YPY\_S350)
- YPY S400 (YPY\_S400/YPY\_S400)
- Ypy S450 (YPY\_S450/YPY\_S450)
- Ypy S460 (YPY\_S460/YPY\_S460)
- Ypy S500 (YPY\_S500/YPY\_S500)

## **Positivo BGH**

- Ypy (T701\_AR/L701 TV)
- Ypy (YPY\_L700/Positivo BGH Ypy L700)
- Ypy Kids (YPY\_L700/Positivo BGH Ypy L700 Kids)
- Ypy Mini (mini/Positivo BGH Mini)

## **Prestige**

- ELITE10Q (Elite10Q/Elite10Q)
- ELITE7Q (Elite7Q/Elite7Q)
- ELITE8Q (ELITE8Q/ELITE8Q)
- ELITE8QS (Elite8QS/Elite8QS)
- ELITE9Q (ELITE9Q/ELITE9Q)
- Prestige 7G (Prestige-7G/Prestige 7G)
- Prestige PRO10D (PRO10D/PRO10D)
- PRO7DS (PRO7DS/PRO7DS)
- PRO8D (PRO8D/PRO8D)
- PRO9D (PRO9D/PRO9D)

## **Prestigio**

- MultiPad Thunder 7.0i (g01p/PMT3377\_Wi)
- MultiPad Wize 3038 3G (PMT3038\_3G/PMT3038\_3G)
- MultiPhone 5453 DUO (PSP5453DUO/PSP5453DUO)
- MultiPhone 5455 DUO (PSP5455DUO/PSP5455DUO)
- MultiPhone 5504 DUO (PSP5504DUO/PSP5504DUO)
- MultiPhone 5505 DUO (PSP5505DUO/PSP5505DUO)
- Multiphone 5508 DUO (PSP5508DUO/PSP5508DUO)
- MultiPhone 5517 DUO (PSP5517DUO/PSP5517DUO)
- PMT3008\_Wi (PMT3008\_Wi\_C/PMT3008\_Wi\_C)
- PMT3047\_3G (PMT3047\_3G/PMT3047\_3G)

- PMT3177\_3G (PMT3177\_3G/PMT3177\_3G)
- PMT3277\_3G (PMT3277\_3G/PMT3277\_3G)
- PMT3287\_3G (PMT3287\_3G/PMT3287\_3G)
- PMT3677\_Wi (PMT3677/PMT3677\_Wi)
- PMT5001\_3G (PMT5001\_3G/PMT5001\_3G)
- PMT5002\_Wi (PMT5002\_Wi/PMT5002\_Wi)
- PMT5008\_3G (PMT5008\_3G/PMT5008\_3G)
- PMT5011\_3G (PMT5001\_3G/PMT5011\_3G)
- PMT5018\_3G (PMT5008\_3G/PMT5018\_3G)
- PMT5021\_3G (PMT5001\_3G/PMT5021\_3G)
- PMT5287\_4G (PMT5287\_4G/PMT5287\_4G)
- PMT5487\_3G (PMT5487\_3G/PMT5487\_3G)
- PMT5777\_3G (PMT5777\_3G/PMT5777\_3G)
- PMT5887\_3G (PMT5887\_3G/PMT5887\_3G)
- PMT7177\_3G (PMT7177\_3G/PMT7177\_3G)
- PMT7287\_3G (PMT7287\_3G/PMT7287\_3G)
- PMT7787\_3G (PMT7787\_3G/PMT7787\_3G)
- Prestigio Grace (PSP7557/PSP7557)
- Prestigio MultiPad Wize 3009 (PMT3009\_Wi\_C/PMT3009\_Wi\_C)
- Prestigio MultiPad Wize 3017 (PMT3017\_WI/PMT3017\_WI)
- Prestigio MultiPad Wize 3018 (PMT3018\_WI/PMT3018\_WI)
- Prestigio PMT5587\_Wi (AML8726-MXS/PMT5587\_Wi)
- Prestigio PMT5877C (PMT5877C/PMT5877C)
- Prestigio PMT7077\_3G (PMT7077\_3G/PMT7077\_3G)
- Prestigio PMT7287C3G (PMT7287C3G/PMT7287C3G)
- Prestigio PSP5307DUO (PSP5307DUO/PSP5307DUO)
- PSP3404DUO (PSP3404DUO/PSP3404DUO)
- PSP3450DUO (PSP3450DUO/PSP3450DUO)
- PSP3502DUO (PSP3502DUO/PSP3502DUO)
- PSP5047DUO (MT6589/PSP5047DUO)
- PSP5457DUO (MT6572/PSP5457DUO)
- PSP5507DUO (PSP5507DUO/PSP5507DUO)

## **Proscan**

- PLT1077G(1GB/8GB) (PLT1077G/PLT1077G)

## **PROSCAN**

- PLT7100G (PLT7100G/PLT7100G)
- PLT7130G (PLT7130G/PLT7130G)
- PLT7602G (PLT7602G/PLT7602G)
- PLT7804G (PLT7804G/PLT7804G)
- PLT8802G (PLT8802G/PLT8802G)
- PLT9602G (PLT9602G/PLT9602G)
- PLT9606G (PLT9606G/PLT9606G)
- PROSCAN PLT8235G Tablet (MID807\_K/PLT8235G)

## **PROSCAN(Curtis International ltd.)**

- PLT7803G (PLT7803G/PLT7803G)

## **Qilive**

- Q.3778 (Q3778/Q.3778)
- Qilive W55 (W55/W55)

## **QLA**

- C600 (GBC\_bravo/C600)

## **QOOQ**

- QOOQV3 (QOOQ/QOOQ)

## **Quanta Corporation**

- CT2200 (CT2200/CT2200)
- FT103 (FT103/FT103)
- IGS-1000 (nk1/IGS-1000)
- INFINITY G NK2 (infinity\_g/INFINITY G NK2)
- Nirvana\_Tablet (Nirvana\_Tablet/Nirvana\_Tablet)
- NK1\_111018\_002\_HC (ventana/NK1\_111018\_002\_HC)
- Q10 (ventana/Q10)
- TA1013 (nk1/TA1013)
- True Beyond 4G (al7/TRUE BEYOND 4G)
- VSD220 (VSD220/VSD220)

## **RAINBOW**

- WIKO (s5501/RAINBOW)

## **RCA**

- RCA DAA730R / RCA DAA738R (MD7081/DAA730R)
- RCA DAA730R / RCA DAA738R (MD7081/DAA738R)
- RCA RCS13101T (RCS13101T/RCS13101T)
- RCA RCT6077W2 (RCT6077W2/RCT6077W2)
- RCA RCT6077W22 (RCT6077W22/RCT6077W22)
- RCA RCT6272W23 (RCT6272W23/RCT6272W23)
- RCA RCT6378W2 (RCT6378W2/RCT6378W2)
- RCA RCT6691W3 (RCT6691W3/RCT6691W3)
- RCT6002W46 (RCT6002W46/RCT6002W46)
- RCT6103W46 (RCT6103W46/RCT6103W46)

- RCT6203W46 (RCT6203W46/RCT6203W46)
- RCT6273W26 (RCT6273W26/RCT6273W26)
- RCT6293W23 (RCT6293W23/RCT6293W23)
- RCT6573W23 (RCT6573W23/RCT6573W23)
- RCT6672W23 (RCT6672W23/RCT6672W23)
- RCT6773W22 (RCT6773W22/RCT6773W22)

## **REACH**

- Q882 (Q882/Q882)

## **Revel**

- R45 (Revel\_R45/R45)

## **SAKAISIO**

- SAKAISIO FP-U320-711-WIFI (U320-WF/FP-U320-711-WIFI)
- SAKAISIO FP-U320-711-WWAN (U320-3G/FP-U320-711-WWAN)

## **Samsung**

- Absolute (GT-B9120/GT-B9120)
- Acclaim (SCH-R880/SCH-R880)
- Admire (SCH-R720/SCH-R720)
- Amazing (amazingtrf/SGH-S730M)
- Baffin (baffintelgt/SHV-E270L)
- Behold II (SGH\_T939/Behold II)
- Captivate Glide (SGH-I927/SAMSUNG-SGH-I927)
- Captivate Glide (SGH-I927/SGH-I927)
- China Telecom (kylevectc/SCH-I699I)
- Conquer (SPH-D600/SPH-D600)
- DoubleTime (SGH-I857/SAMSUNG-SGH-I857)
- Droid Charge (SCH-I510/SCH-I510)
- EK-KC120K (gd1ltekt/EK-KC120K)
- Europa (GT-I5500B/GT-I5500B)
- Europa (GT-I5500L/GT-I5500L)
- Europa (GT-I5500M/GT-I5500M)
- Europa (GT-I5503T/GT-I5503T)
- Europa (GT-I5510L/GT-I5510L)
- Exhibit (SGH-T759/SGH-T759)
- Galaxy (China) (GT-B9062/GT-B9062)
- Galaxy 070 (hendrix/YP-GI2)
- Galaxy A (archer/archer)
- Galaxy A (archer/SHW-M100S)
- Galaxy A3 (a33g/SM-A300H)
- Galaxy A3 (a3lte/SM-A300F)
- Galaxy A3 (a3lte/SM-A300M)

- Galaxy A3 (a3ltechn/SM-A3000)
- Galaxy A3 (a3ltechn/SM-A300X)
- Galaxy A3 (a3ltectc/SM-A3009)
- Galaxy A3 (a3ltezh/SM-A3000)
- Galaxy A3 (a3ulte/SM-A300FU)
- Galaxy A3 (a3ulte/SM-A300XU)
- Galaxy A5 (a53g/SM-A500H)
- Galaxy A5 (a5lte/SM-A500F)
- Galaxy A5 (a5lte/SM-A500G)
- Galaxy A5 (a5lte/SM-A500M)
- Galaxy A5 (a5ltechn/SM-A5000)
- Galaxy A5 (a5ltechn/SM-A500X)
- Galaxy A5 (a5ltectc/SM-A5009)
- Galaxy A5 (a5ltezh/SM-A5000)
- Galaxy A5 (a5ltezt/SM-A500YZ)
- Galaxy Ace (GT-S5830/GT-S5830)
- Galaxy Ace (GT-S5830B/GT-S5830B)
- Galaxy Ace (GT-S5830C/GT-S5830C)
- Galaxy Ace (GT-S5830D/GT-S5830D)
- Galaxy Ace (GT-S5830F/GT-S5830F)
- Galaxy Ace (GT-S5830G/GT-S5830G)
- Galaxy Ace (GT-S5830i/GT-S5830i)
- Galaxy Ace (GT-S5830L/GT-S5830L)
- Galaxy Ace (GT-S5830M/GT-S5830M)
- Galaxy Ace (GT-S5830T/GT-S5830T)
- Galaxy Ace (GT-S5831i/GT-S5831i)
- Galaxy Ace (GT-S5838/GT-S5838)
- Galaxy Ace (GT-S5839i/GT-S5839i)
- Galaxy Ace (GT-S6358/GT-S6358)
- Galaxy Ace (heatlte/SM-G357M)
- Galaxy Ace (SCH-I619/SCH-I619)
- Galaxy Ace (SHW-M240S/SHW-M240S)
- Galaxy Ace 4 (vivaltods5m/SM-G313HU)
- Galaxy Ace 4 (vivaltods5m/SM-G313HY)
- Galaxy Ace 4 (vivaltods5m/SM-G313M)
- Galaxy Ace 4 (vivaltods5m/SM-G313MY)
- Galaxy Ace 4 Lite (vivalto3g/SM-G313U)
- Galaxy Ace Advance (GT-S6800/GT-S6800)
- Galaxy Ace Duos (GT-S6352/GT-S6352)
- Galaxy Ace Duos (GT-S6802/GT-S6802)
- Galaxy Ace Duos (GT-S6802B/GT-S6802B)
- Galaxy Ace Duos (SCH-I579/SCH-i579)
- Galaxy Ace Duos (SCH-i579/SCH-i579)
- Galaxy Ace Duos (SCH-I589/SCH-I589)
- Galaxy Ace Duos (SCH-I589/SCH-i589)
- Galaxy Ace Duos (SCH-i589/SCH-i589)
- Galaxy Ace Plus (GT-S7500L/GT-S7500L)
- Galaxy Ace Plus (GT-S7500T/GT-S7500T)
- Galaxy Ace Plus (GT-S7500W/GT-S7500W)
- Galaxy Ace Plus (GT-S7508/GT-S7508)
- Galaxy Ace Q (SGH-I827D/SGH-I827D)

- Galaxy Ace Style (heat3gtfnvzw/SM-S765C)
- Galaxy Ace Style (heat3gtfnvzw/SM-S766C)
- Galaxy Ace Style (heatnfc3g/SM-G310HN)
- Galaxy Ace Style (heatqlte/SM-G357FZ)
- Galaxy Ace2 (GT-I8160/GT-I8160)
- Galaxy Ace2 (GT-I8160L/GT-I8160L)
- Galaxy Ace2 (GT-I8160P/GT-I8160P)
- Galaxy Ace2 X (kylesopen/GT-S7560)
- Galaxy Ace2 X (kylesopen/GT-S7560M)
- Galaxy Ace3 (logan/GT-S7270)
- Galaxy Ace3 (logan/GT-S7270L)
- Galaxy Ace3 (logan/SCH-I679)
- Galaxy Ace3 (logan3gcmcc/GT-S7278)
- Galaxy Ace3 (logands/GT-S7272)
- Galaxy Ace3 (loganlte/GT-S7275)
- Galaxy Ace3 (loganrelte/GT-S7275B)
- Galaxy Ace3 (loganrelte/GT-S7275R)
- Galaxy Ace3 (loganrelte/GT-S7275T)
- Galaxy Ace3 Duos (loganlite3g/GT-S7272C)
- Galaxy Ace3 Duos (loganu3gcmcc/GT-S7278U)
- Galaxy Ace3 Duos TV (logandsdtv/GT-S7273T)
- Galaxy Ace4 (vivalto3g/SM-G313ML)
- Galaxy Ace4 (vivaltolte/SM-G313F)
- Galaxy Ace4 (vivaltolte/SM-G313MU)
- Galaxy Ace4 (vivaltonfc3g/SM-G313HN)
- Galaxy Ace4 Lite (vivalto/SM-G3139D)
- Galaxy Ace4 Lite (vivalto3g/SM-G313H)
- Galaxy Admire (SCH-R820/SCH-R820)
- Galaxy Admire 2 (goghcri/SCH-R830C)
- Galaxy Alpha (slte/SM-G850F)
- Galaxy Alpha (slte/SM-G850FQ)
- Galaxy Alpha (slte/SM-G850M)
- Galaxy Alpha (slte/SM-G850Y)
- Galaxy Alpha (slteatt/SAMSUNG-SM-G850A)
- Galaxy Alpha (sltecan/SM-G850W)
- Galaxy Alpha (sltechn/SM-G8508S)
- Galaxy Alpha (sltekt/SM-G850K)
- Galaxy Alpha (sltelgt/SM-G850L)
- Galaxy Alpha (slteskt/SM-G850S)
- Galaxy Amp (kyleatt/SAMSUNG-SGH-I407)
- Galaxy Apollo (GT-I5800/GT-I5800)
- Galaxy Apollo (GT-I5800/GT-I5800L)
- Galaxy Apollo (GT-I5800D/GT-I5800D)
- Galaxy Apollo (GT-I5801/GT-I5801)
- Galaxy Appeal (SGH-I827/SAMSUNG-SGH-I827)
- Galaxy Attain (SCH-R920/SCH-R920)
- Galaxy Avant (afyonltetmo/SM-G386T)
- Galaxy Axiom (infiniteusc/SCH-R830)
- Galaxy Beam (GT-I8250/GT-I8250)
- Galaxy Beam (GT-I8530/GT-I8530)
- GALAXY Camera (gd1/EK-GC100)



- Galaxy Camera (gd1/EK-GC100)
- Galaxy Camera (gd1att/SAMSUNG-EK-GC100)
- Galaxy Camera (gd1can/EK-GC100)
- Galaxy Camera (gd1ktt/EK-KC100K)
- Galaxy Camera (gd1ltelgt/EK-KC120L)
- Galaxy Camera (gd1lteskt/EK-KC120S)
- Galaxy Camera (gd1ltevzw/EK-GC120)
- Galaxy Camera (gd1skt/EK-KC100S)
- Galaxy Camera (gd1wifi/EK-GC110)
- Galaxy Camera (gd1wifi/any/EK-GC110)
- Galaxy Camera (u0lte/EK-GN100)
- Galaxy Camera (u0lte/EK-GN120)
- Galaxy Camera 2 (sf2wifi/EK-GC200)
- Galaxy Centura (amazing3gtrf/SCH-S738C)
- Galaxy Chat (zanin/GT-B5330)
- Galaxy Chat (zanin/GT-B5330B)
- Galaxy Chat (zanin/GT-B5330L)
- Galaxy Core (afyonltecan/SM-G386W)
- Galaxy Core (afyonlteMetroPCS/SM-G386T1)
- Galaxy Core (arubaslim/GT-I8262)
- Galaxy Core (arubaslimss/GT-I8260)
- Galaxy Core (arubaslimss/GT-I8260L)
- Galaxy Core 2 (kanas/SM-G355H)
- Galaxy Core Advance (cane3g/GT-I8580)
- Galaxy Core Advance (cane3gskt/SHW-M570S)
- Galaxy Core Lite (victorlte/SM-G3586V)
- Galaxy Core Lite (victorlte/SM-G3589W)
- Galaxy Core LTE (afyonlte/SM-G386F)
- Galaxy Core LTE (cs03lte/SM-G3518)
- Galaxy Core Max (kleoslte/SM-G5108)
- Galaxy Core Max Duos (kleoslte/SM-G5108Q)
- Galaxy Core Plus (cs02/SM-G350)
- Galaxy Core Plus (cs023g/SM-G3502)
- Galaxy Core Plus (cs02ve3g/SM-G3502L)
- Galaxy Core Plus (cs02ve3gdtv/SM-G3502T)
- Galaxy Core Plus (cs02ve3gss/SM-G350L)
- Galaxy Core Plus (cs02ve3gss/SM-G350M)
- Galaxy Core Prime (rossalte/SM-G3606)
- Galaxy Core Prime (rossalte/SM-G3608)
- Galaxy Core Prime (rossaltectc/SM-G3609)
- Galaxy Core Safe (arubaslimss/GT-I8260E)
- Galaxy Core Safe (arubaslimss/SHW-M580D)
- Galaxy Core Safe (arubaslimss/SHW-M585D)
- Galaxy Core2 (kanas/SM-G355H)
- Galaxy Core2 (kanas/SM-G355HQ)
- Galaxy Core2 (kanas/SM-G355M)
- Galaxy Core2 (kanas3g/SM-G3556D)
- Galaxy Core2 (kanas3gcmcc/SM-G3558)
- Galaxy Core2 (kanas3gctc/SM-G3559)
- Galaxy Core2 (kanas3gnfc/SM-G355HN)
- Galaxy Discover (amazing3gcric/SCH-R740C)

- Galaxy Discover (amazingtrfcd/SCH-S735C)
- Galaxy Duos (aruba3gcmcc/GT-I8268)
- Galaxy Europa (GT-I5500/GT-I5500)
- Galaxy Europa (GT-I5503/GT-I5503)
- Galaxy Europa (GT-I5508/GT-I5508)
- Galaxy Europa (GT-I5510/GT-I5510)
- Galaxy Exhibit (codinaMetroPCS/SGH-T599N)
- Galaxy Exhibit (codinatmo/SGH-T599)
- Galaxy Exhibit (codinavid/SGH-T599V)
- Galaxy Exhibit2 (SGH-T679/SGH-T679)
- Galaxy Exhilarate (SGH-I577/SAMSUNG-SGH-I577)
- Galaxy Express (expressatt/SAMSUNG-SGH-I437)
- Galaxy Express (expressatt/SAMSUNG-SGH-I437P)
- Galaxy Express (expresslte/GT-I8730)
- Galaxy Express (expresslte/GT-I8730T)
- Galaxy Express (expressziglteatt/SAMSUNG-SGH-I437Z)
- Galaxy Express2 (wilcoxlte/SM-G3815)
- Galaxy Fame (nevis/GT-S6810)
- Galaxy Fame (nevis/GT-S6810B)
- Galaxy Fame (nevis/GT-S6810E)
- Galaxy Fame (nevis/GT-S6810L)
- Galaxy Fame (nevis3g/GT-S6812i)
- Galaxy Fame (nevis3gcmcc/GT-S6818)
- Galaxy Fame (nevis3gcmcc/GT-S6818V)
- Galaxy Fame (nevisds/GT-S6812)
- Galaxy Fame (nevisds/GT-S6812B)
- Galaxy Fame (nevisnvess/GT-S6790N)
- Galaxy Fame (nevisp/GT-S6810M)
- Galaxy Fame (nevisp/GT-S6810P)
- Galaxy Fame (nevisvess/GT-S6790)
- Galaxy Fame (nevisvess/GT-S6790E)
- Galaxy Fame (nevisvess/GT-S6790L)
- Galaxy Fame (nevisw/GT-S6812C)
- Galaxy Fame (SCH-I629/SCH-I629)
- Galaxy Fame Lite Duos (nevisw/GT-S6792L)
- Galaxy Fit (GT-S5670/GT-S5670)
- Galaxy Fit (GT-S5670B/GT-S5670B)
- Galaxy Fit (GT-S5670L/GT-S5670L)
- Galaxy Fresh (kylevess/GT-S7390)
- Galaxy Fresh (kylevess/GT-S7390E)
- Galaxy Fresh (kylevess/GT-S7390G)
- Galaxy Gio (GT-S5660/GT-S5660)
- Galaxy Gio (GT-S5660B/GT-S5660B)
- Galaxy Gio (GT-S5660L/GT-S5660L)
- Galaxy Gio (GT-S5660M/GT-S5660M)
- Galaxy Gio (GT-S5660V/GT-S5660V)
- Galaxy Gio (SCH-i569/SCH-i569)
- Galaxy Gio (SHW-M290K/SHW-M290K)
- Galaxy Gio (SHW-M290S/SHW-M290S)
- Galaxy Golden (ks02lte/GT-I9230)
- Galaxy Golden (ks02lte/GT-I9235)

- Galaxy Golden (ks02ltekt/SHV-E400K)
- Galaxy Golden (ks02lteskt/SHV-E400S)
- Galaxy Golden 2 (pateklte/SM-W2015)
- Galaxy Grand (baffin3gduosctc/SCH-I879)
- Galaxy Grand (baffinmcc/GT-I9128)
- Galaxy Grand (baffinmcc/GT-I9128V)
- Galaxy Grand (baffinltekt/SHV-E270K)
- Galaxy Grand (baffinlteskt/SHV-E270S)
- Galaxy Grand (baffinrd/GT-I9118)
- Galaxy Grand (baffinss/GT-I9080E)
- Galaxy Grand (baffinss/GT-I9080L)
- Galaxy Grand (baffinvekt/SHV-E275K)
- Galaxy Grand (baffinveskt/SHV-E275S)
- Galaxy Grand (baffinvetd3g/GT-I9128E)
- Galaxy Grand (baffinvetd3g/GT-I9128I)
- Galaxy Grand Duos (baffin/GT-I9082)
- Galaxy Grand duos (baffin/GT-I9082i)
- Galaxy Grand Duos (baffin/GT-I9082L)
- Galaxy Grand Neo (baffinlite/GT-I9060)
- Galaxy Grand Neo (baffinlite/GT-I9060L)
- Galaxy Grand Neo (baffinlite/GT-I9082C)
- Galaxy Grand Neo (baffinlitedtv/GT-I9063T)
- Galaxy Grand Neo (baffinq3g/GT-I9168)
- Galaxy Grand Neo (baffinq3g/GT-I9168I)
- Galaxy Grand Neo+ (baffinq3gduosctc/SCH-I879E)
- Galaxy Grand Prime (fortuna3g/SM-G530H)
- Galaxy Grand Prime (fortuna3gdtv/SM-G530BT)
- Galaxy Grand Prime (fortunalte/SM-G5306W)
- Galaxy Grand Prime (fortunalte/SM-G5308W)
- Galaxy Grand Prime (fortunalte/SM-G530F)
- Galaxy Grand Prime (fortunalte/SM-G530M)
- Galaxy Grand Prime (fortunaltectc/SM-G5309W)
- Galaxy Grand Prime (fortunaltezh/SM-G5308W)
- Galaxy Grand Prime (fortunaltezt/SM-G530Y)
- Galaxy Grand2 (ms013g/SM-G7102)
- Galaxy Grand2 (ms013g/SM-G7106)
- Galaxy Grand2 (ms013g/SM-G7108)
- Galaxy Grand2 (ms013g/SM-G7109)
- Galaxy Grand2 (ms013gdtv/SM-G7102T)
- Galaxy Grand2 (ms013gss/SM-G710)
- Galaxy Grand2 (ms01lte/SM-G7105)
- Galaxy Grand2 (ms01lte/SM-G7105L)
- Galaxy Grand2 (ms01ltekt/SM-G710K)
- Galaxy Grand2 (ms01ltelgt/SM-G710L)
- Galaxy Grand2 (ms01lteskt/SM-G710S)
- Galaxy Indulge (SCH-R910/SCH-R910)
- Galaxy Indulge (SCH-R915/SCH-R915)
- Galaxy Infinite (infinite3gduosctc/SCH-I759)
- Galaxy J (hltejs01tw/SGH-N075T)
- Galaxy K (SHW-M130K/SHW-M130K)
- Galaxy K Zoom (m2a3g/SM-C111M)

- Galaxy K Zoom (m2alte/SM-C115)
- Galaxy K Zoom (m2alte/SM-C115M)
- Galaxy K Zoom (m2altecan/SM-C115W)
- Galaxy M Pro2 (lucas/GT-B7810)
- Galaxy M Style (SHW-M340L/SHW-M340L)
- Galaxy M Style (SHW-M340S/SHW-M340S)
- Galaxy M Style (vastocimcc/GT-I8258)
- Galaxy Mega 2 (mega23g/SM-G750H)
- Galaxy Mega 5.8 (crater/GT-I9152)
- Galaxy Mega 5.8 (crater3gctc/SCH-P709)
- Galaxy Mega 5.8 (craterss/GT-I9150)
- Galaxy Mega 5.8 (cratertd3g/GT-I9158)
- Galaxy Mega 6.3 (melius3g/GT-I9200)
- Galaxy Mega 6.3 (melius3g/GT-I9208)
- Galaxy Mega 6.3 (melius3gduosctc/SCH-P729)
- Galaxy Mega 6.3 (meliuslte/GT-I9205)
- Galaxy Mega 6.3 (meliuslteatt/SAMSUNG-SGH-I527)
- Galaxy Mega 6.3 (meliusltecan/SGH-I527M)
- Galaxy Mega 6.3 (meliusltekt/SHV-E310K)
- Galaxy Mega 6.3 (meliuslteigt/SHV-E310L)
- Galaxy Mega 6.3 (meliuslteMetroPCS/SGH-M819N)
- Galaxy Mega 6.3 (meliuslteskt/SHV-E310S)
- Galaxy Mega 6.3 (meliusltespr/SPH-L600)
- Galaxy Mega 6.3 (meliuslteusc/SCH-R960)
- Galaxy Mega Plus (craterq3g/GT-I9152P)
- Galaxy Mega Plus (craterq3g/GT-I9158P)
- Galaxy Mega Plus (megapluslte/GT-I9158V)
- Galaxy Mega2 (mega2lte/SM-G750F)
- Galaxy Mega2 (mega2lteatt/SAMSUNG-SM-G750A)
- Galaxy Mega2 (vasta3g/SM-G750H)
- Galaxy Mega2 (vastalte/SM-G7508Q)
- Galaxy Mega2 (vastaltezh/SM-G7508Q)
- Galaxy Mini (GT-S5570/GT-S5570)
- Galaxy Mini (GT-S5570B/GT-S5570B)
- Galaxy Mini (GT-S5570I/GT-S5570I)
- Galaxy Mini (GT-S5570L/GT-S5570L)
- Galaxy Mini (GT-S5578/GT-S5578)
- Galaxy Mini (SGH-T499/SGH-T499)
- Galaxy Mini (SGH-T499V/SGH-T499V)
- Galaxy Mini (SGH-T499Y/SGH-T499Y)
- Galaxy Mini2 (GT-S6500/GT-S6500)
- Galaxy Mini2 (GT-S6500D/GT-S6500D)
- Galaxy Mini2 (GT-S6500L/GT-S6500L)
- Galaxy Mini2 (GT-S6500T/GT-S6500T)
- Galaxy Music (ivoryss/GT-S6010)
- Galaxy Music (ivoryss/GT-S6010L)
- Galaxy Music Duos (ivory/GT-S6012)
- Galaxy Music Duos (ivory/GT-S6012B)
- Galaxy Neo (SHW-M220L/SHW-M220L)
- Galaxy Nexus (maguro/Galaxy Nexus)
- Galaxy Nexus (maguro/Galaxy X)

- Galaxy Nexus (toro/Galaxy Nexus)
- Galaxy Nexus (toroplus/Galaxy Nexus)
- Galaxy Note (GT-I9220/GT-I9220)
- Galaxy Note (GT-I9228/GT-I9228)
- Galaxy Note (GT-N7000/GT-N7000)
- Galaxy Note (GT-N7005/GT-N7005)
- Galaxy Note (SC-05D/SC-05D)
- Galaxy Note (SCH-i889/SCH-i889)
- Galaxy Note (SGH-I717/SAMSUNG-SGH-I717)
- Galaxy Note (SGH-I717/SGH-I717)
- Galaxy Note (SGH-I717D/SGH-I717D)
- Galaxy Note (SGH-I717M/SGH-I717M)
- Galaxy Note (SGH-I717R/SGH-I717R)
- Galaxy Note (SGH-T879/SGH-T879)
- Galaxy Note (SHV-E160K/SHV-E160K)
- Galaxy Note (SHV-E160L/SHV-E160L)
- Galaxy Note (SHV-E160S/SHV-E160S)
- Galaxy Note 10.1 (lt033g/SM-P601)
- Galaxy Note 10.1 (lt033g/SM-P602)
- Galaxy Note 10.1 (lt03ltekt/SM-P605K)
- Galaxy Note 10.1 (lt03lteigt/SM-P605L)
- Galaxy Note 10.1 (lt03lteskt/SM-P605S)
- Galaxy Note 10.1 (p4notelte/GT-N8020)
- Galaxy Note 10.1 (p4noteltekt/SHV-E230K)
- Galaxy Note 10.1 (p4notelteilgt/SHV-E230L)
- Galaxy Note 10.1 (p4notelteskt/SHV-E230S)
- Galaxy Note 10.1 (p4noteltespr/SPH-P600)
- Galaxy Note 10.1 (p4notelteusc/SCH-I925U)
- Galaxy Note 10.1 (p4noteltevzw/SCH-I925)
- Galaxy Note 10.1 (p4noterf/GT-N8000)
- Galaxy Note 10.1 (p4noterf/GT-N8005)
- Galaxy Note 10.1 (p4noterfkt/SHW-M480K)
- Galaxy Note 10.1 (p4notewifi/GT-N8013)
- Galaxy Note 10.1 (p4notewifi43241any/SHW-M486W)
- Galaxy Note 10.1 (p4notewifiany/SHW-M480W)
- Galaxy Note 10.1 (p4notewifiktt/SHW-M485W)
- Galaxy Note 10.1 (p4notewifiww/GT-N8010)
- Galaxy Note 10.1 2014 Edition (lt033g/SM-P601)
- Galaxy Note 10.1 2014 Edition (lt03lte/SM-P605)
- Galaxy Note 10.1 2014 Edition (lt03lte/SM-P605M)
- Galaxy Note 10.1 2014 Edition (lt03ltevzw/SM-P605V)
- Galaxy Note 10.1 2014 Edition (lt03wifi/SM-P600)
- Galaxy Note 10.1 2014 Edition (lt03wifikx/SM-P600)
- Galaxy Note 10.1 2014 Edition (lt03wifiue/SM-P600)
- Galaxy Note 8 (konalteatt/SAMSUNG-SGH-I467)
- Galaxy Note 8.0 (kona3g/GT-N5100)
- Galaxy Note 8.0 (kona3g/GT-N5105)
- Galaxy Note 8.0 (konalte/GT-N5120)
- Galaxy Note 8.0 (konaltecan/SGH-I467M)
- Galaxy Note 8.0 (konawifi/GT-N5110)
- Galaxy Note 8.0 (konawifiany/SHW-M500W)

- Galaxy Note Edge (SCL24/SCL24)
- Galaxy Note Edge (tbeltekt/SM-N915K)
- Galaxy Note Edge (tbeltelgt/SM-N915L)
- Galaxy Note Edge (tbelteskt/SM-N915S)
- Galaxy Note Edge (tblte/SM-N9150)
- Galaxy Note Edge (tblte/SM-N915F)
- Galaxy Note Edge (tblte/SM-N915FY)
- Galaxy Note Edge (tblte/SM-N915G)
- Galaxy Note Edge (tblte/SM-N915X)
- Galaxy Note Edge (tblteatt/SAMSUNG-SM-N915A)
- Galaxy Note Edge (tbltechn/SM-N9150)
- Galaxy Note Edge (tbltespr/SM-N915P)
- Galaxy Note Edge (tbltetmo/SM-N915T)
- Galaxy Note Edge (tblteusc/SM-N915R4)
- Galaxy Note Edge (tbltevw/SM-N915V)
- Galaxy Note II (t0lteatt/SAMSUNG-SGH-I317)
- Galaxy Note Pro 12.2 (v1a3g/SM-P901)
- Galaxy Note Pro 12.2 (v1awifi/SM-P900)
- Galaxy Note Pro 12.2 (v1awifikx/SM-P900)
- Galaxy Note Pro 12.2 (viennalte/SM-P905)
- Galaxy Note Pro 12.2 (viennalte/SM-P905M)
- Galaxy Note Pro 12.2 (viennalte/SM-P905F0)
- Galaxy Note Pro 12.2 (viennaltevw/SM-P905V)
- Galaxy Note2 (SC-02E/SC-02E)
- Galaxy Note2 (t03g/GT-N7100)
- Galaxy Note2 (t03g/GT-N7100T)
- Galaxy Note2 (t03gchn/GT-N7100)
- Galaxy Note2 (t03gchnduos/GT-N7102)
- Galaxy Note2 (t03gchnduos/GT-N7102i)
- Galaxy Note2 (t03gcmcc/GT-N7108)
- Galaxy Note2 (t03gctc/SCH-N719)
- Galaxy Note2 (t03gcuduos/GT-N7102)
- Galaxy Note2 (t03gcuduos/GT-N7102i)
- Galaxy Note2 (t0lte/GT-N7105)
- Galaxy Note2 (t0lte/GT-N7105T)
- Galaxy Note2 (t0lteatt/SAMSUNG-SGH-I317)
- Galaxy Note2 (t0ltecan/SGH-I317M)
- Galaxy Note2 (t0ltecan/SGH-T889V)
- Galaxy Note2 (t0ltecmcc/GT-N7108D)
- Galaxy Note2 (t0ltedcm/SC-02E)
- Galaxy Note2 (t0ltekt/SHV-E250K)
- Galaxy Note2 (t0ltekg/SHV-E250L)
- Galaxy Note2 (t0lteskt/SHV-E250S)
- Galaxy Note2 (t0ltespr/SPH-L900)
- Galaxy Note2 (t0ltetmo/SGH-T889)
- Galaxy Note2 (t0lteusc/SCH-R950)
- Galaxy Note2 (t0ltevw/SCH-I605)
- Galaxy Note3 (ha3g/SM-N900)
- Galaxy Note3 (ha3g/SM-N9000Q)
- Galaxy Note3 (hlte/SM-N9005)
- Galaxy Note3 (hlte/SM-N9006)

- Galaxy Note3 (hlte/SM-N9007)
- Galaxy Note3 (hlte/SM-N9008V)
- Galaxy Note3 (hlte/SM-N9009)
- Galaxy Note3 (hlte/SM-N900U)
- Galaxy Note3 (hlteatt/SAMSUNG-SM-N900A)
- Galaxy Note3 (hltecan/SM-N900W8)
- Galaxy Note3 (hltekt/SM-N900K)
- Galaxy Note3 (hlteigt/SM-N900L)
- Galaxy Note3 (hlteskt/SM-N900S)
- Galaxy Note3 (hltespr/SM-N900P)
- Galaxy Note3 (hltetmo/SM-N900T)
- Galaxy Note3 (hlteusc/SM-N900R4)
- Galaxy Note3 (hltevw/SM-N900V)
- Galaxy Note3 (SC-02F/SC-02F)
- Galaxy Note3 (SCL22/SCL22)
- Galaxy Note3 Duos (hlte/SM-N9002)
- Galaxy Note3 Duos (hlte/SM-N9008)
- Galaxy Note3 Neo (frescoltekt/SM-N750K)
- Galaxy Note3 Neo (frescolteigt/SM-N750L)
- Galaxy Note3 Neo (frescolteskt/SM-N750S)
- Galaxy Note3 Neo (hl3g/SM-N750)
- Galaxy Note3 Neo (hl3g/SM-N7500Q)
- Galaxy Note3 Neo (hl3gds/SM-N7502)
- Galaxy Note3 Neo (hllte/SM-N7505)
- Galaxy Note3 Neo (hllte/SM-N7507)
- Galaxy Note4 (tre3g/SM-N910H)
- Galaxy Note4 (trelte/SM-N910C)
- Galaxy Note4 (treltekt/SM-N910K)
- Galaxy Note4 (trelteigt/SM-N910L)
- Galaxy Note4 (trelteskt/SM-N910S)
- Galaxy Note4 (trhplte/SM-N910U)
- Galaxy Note4 (trlte/SM-N910F)
- Galaxy Note4 (trlte/SM-N910G)
- Galaxy Note4 (trlte/SM-N910X)
- Galaxy Note4 (trlteatt/SAMSUNG-SM-N910A)
- Galaxy Note4 (trlteatt/SM-N910F)
- Galaxy Note4 (trltecan/SM-N910W8)
- Galaxy Note4 (trltechn/SM-N9100)
- Galaxy Note4 (trltechn/SM-N9106W)
- Galaxy Note4 (trltechn/SM-N9108V)
- Galaxy Note4 (trltechn/SM-N9109W)
- Galaxy Note4 (trltechnzh/SM-N9100)
- Galaxy Note4 (trltespr/SM-N910P)
- Galaxy Note4 (trltetmo/SM-N910T)
- Galaxy Note4 (trlteusc/SM-N910R4)
- Galaxy Note4 (trltevw/SM-N910V)
- Galaxy NX (u0lte/EK-GN120)
- Galaxy NX (u0lte/EK-GN120A)
- Galaxy NX (u0lteue/EK-GN120A)
- Galaxy Player (YP-GB70/YP-GB70)
- Galaxy Player 3.6 (YP-GS1/YP-GS1)

- Galaxy Player 4 (YP-GB1/YP-GB1)
- Galaxy Player 4.0 (YP-G1/YP-G1)
- Galaxy Player 4.2 (YP-GI1/YP-GI1)
- Galaxy Player 5 (YP-G70/YP-G70)
- Galaxy Player 5.8 (harrison/YP-GP1)
- Galaxy Player 5.8 (harrisonkrkt/YP-GP1)
- Galaxy Player 5.8 (harrisonkrlgt/YP-GP1)
- Galaxy Player 50 (YP-G50/YP-G50)
- Galaxy player 70 Plus (YP-GB70D/YP-GB70D)
- Galaxy Pocket (coriplus/GT-S5301)
- Galaxy Pocket (coriplusds/GT-S5303)
- Galaxy Pocket (GT-S5300/GT-S5300)
- Galaxy Pocket (GT-S5300B/GT-S5300B)
- Galaxy Pocket (GT-S5300L/GT-S5300L)
- Galaxy Pocket (GT-S5302/GT-S5302)
- Galaxy Pocket (GT-S5302B/GT-S5302B)
- Galaxy Pocket Neo (corsica/GT-S5312)
- Galaxy Pocket Neo (corsica/GT-S5312B)
- Galaxy Pocket Neo (corsica/GT-S5312L)
- Galaxy Pocket Neo (corsicass/GT-S5310)
- Galaxy Pocket Neo (corsicass/GT-S5310B)
- Galaxy Pocket Neo (corsicass/GT-S5310E)
- Galaxy Pocket Neo (corsicass/GT-S5310G)
- Galaxy Pocket Neo (corsicass/GT-S5310L)
- Galaxy Pocket Neo (corsicass/GT-S5310T)
- Galaxy Pocket Neo (corsicave3g/GT-S5310I)
- Galaxy Pocket Neo (corsicave3g/GT-S5310N)
- Galaxy Pocket Neo (corsicaveds3gvj/GT-S5312C)
- Galaxy Pocket Neo (corsicaveds3gvj/GT-S5312M)
- Galaxy Pocket Plus (coriplus/GT-S5301)
- Galaxy Pocket SS (corsicave3g/GT-S5310C)
- Galaxy Pocket SS (corsicave3g/GT-S5310M)
- Galaxy Pocket2 (pocket23g/SM-G110B)
- Galaxy Pocket2 (pocket23g/SM-G110M)
- Galaxy Pocket2 (pocket2ss3g/SM-G110H)
- Galaxy Pop (CDMA) (SCH-i559/SCH-i559)
- Galaxy Pop (superiorlteskt/SHV-E220S)
- Galaxy Precedent (SCH-M828C/SCH-M828C)
- Galaxy Premier (superior/GT-I9260)
- Galaxy Premier (superiorcmcc/GT-I9268)
- Galaxy Prevail (SPH-M820/SPH-M820-BST)
- Galaxy Prevail2 (raybst/SPH-M840)
- Galaxy Pro (GT-B7510/GT-B7510)
- Galaxy Pro (GT-B7510B/GT-B7510B)
- Galaxy Pro (GT-B7510L/GT-B7510L)
- Galaxy Proclaim (SCH-S720C/SCH-S720C)
- Galaxy Q (SGH-T589/SGH-T589)
- Galaxy Q (SGH-T589R/SGH-T589R)
- Galaxy Q (SGH-T589W/SGH-T589W)
- Galaxy R-Style (jaguark/SHV-E170K)
- Galaxy R-Style (jaguarl/SHV-E170L)



- Galaxy R-Style (jaguars/SHV-E170S)
- Galaxy Reverb (iconvmu/SPH-M950)
- Galaxy Round (flteskt/SM-G910S)
- Galaxy Rugby (comanchecan/SGH-I547C)
- Galaxy Rugby Pro (comancheatt/SAMSUNG-SGH-I547)
- Galaxy Rush (prevail2spr/SPH-M830)
- Galaxy S (GT-I9000/GT-I9000)
- Galaxy S (GT-I9000B/GT-I9000B)
- Galaxy S (GT-I9000M/GT-I9000M)
- Galaxy S (GT-I9000T/GT-I9000T)
- Galaxy S (GT-I9003/GT-I9003)
- Galaxy S (GT-I9003L/GT-I9003L)
- Galaxy S (GT-I9008L/GT-I9008L)
- Galaxy S (GT-I9010/GT-I9010)
- Galaxy S (GT-I9018/GT-I9018)
- Galaxy S (GT-I9050/GT-I9050)
- Galaxy S (loganlte/GT-S7275)
- Galaxy S (SC-02B/SC-02B)
- Galaxy S (SCH-I500/SCH-I500)
- Galaxy S (SCH-i909/SCH-i909)
- Galaxy S (SCH-S950C/SCH-S950C)
- Galaxy S (SGH-I897/SAMSUNG-SGH-I897)
- Galaxy S (SGH-T959V/SGH-T959V)
- Galaxy S (SGH-T959W/SGH-T959W)
- Galaxy S (SHW-M110S/SHW-M110S)
- Galaxy S (SHW-M190S/SHW-M190S)
- Galaxy S (SPH-D700/SPH-D700)
- Galaxy S Advance (GT-I9070/GT-I9070)
- Galaxy S Advance (GT-I9070P/GT-I9070P)
- Galaxy S Aviator (SCH-R930/SCH-R930)
- Galaxy S Blaze (SGH-T769/SGH-T769)
- Galaxy S BlazeQ (apexqtm0/SGH-T699)
- Galaxy S Captivate (SGH-I896/SAMSUNG-SGH-I896)
- Galaxy S Captivate (SGH-I896/SGH-I896)
- Galaxy S Continuum (SCH-I400/SCH-I400)
- Galaxy S Duos (kylechn/GT-S7562)
- Galaxy S duos (kyleichn/GT-S7566)
- Galaxy S Duos (kyleopen/GT-S7562)
- Galaxy S DUOS (kyleopen/GT-S7562)
- Galaxy S DUOS (kyleopen/GT-S7562L)
- Galaxy S Duos (kyletdcmcc/GT-S7568)
- Galaxy S Duos2 (kyleprods/GT-S7582)
- Galaxy S Duos2 (kyleprods/GT-S7582L)
- Galaxy S Duos3 (vivalto3gvn/SM-G313HZ)
- Galaxy S Epic (SPH-D700/SPH-D700)
- Galaxy S Fascinate (SGH-T959P/SGH-T959P)
- Galaxy S Glide (SGH-I927R/SAMSUNG-SGH-I927R)
- Galaxy S Lightray (SCH-R940/SCH-R940)
- Galaxy S Plus (GT-I9001/GT-I9001)
- Galaxy S Stratosphere (SCH-I405/SCH-I405)
- Galaxy S Vibrant (SGH-T959/SGH-T959)

- Galaxy S Vibrant (SGH-T959D/SGH-T959D)
- Galaxy S2 (GT-I9100/GT-I9100)
- Galaxy S2 (GT-I9100M/GT-I9100M)
- Galaxy S2 (GT-I9100T/GT-I9100T)
- Galaxy S2 (GT-I9103/GT-I9103)
- Galaxy S2 (GT-I9108/GT-I9108)
- Galaxy S2 (GT-I9210T/GT-I9210T)
- Galaxy S2 (SC-02C/SC-02C)
- Galaxy S2 (SGH-I777/SAMSUNG-SGH-I777)
- Galaxy S2 (SGH-S959G/SGH-S959G)
- Galaxy S2 (SGH-T989/SGH-T989)
- Galaxy S2 (SHV-E110S/SHV-E110S)
- Galaxy S2 (SHW-M250K/SHW-M250K)
- Galaxy S2 (SHW-M250L/SHW-M250L)
- Galaxy S2 (SHW-M250S/SHW-M250S)
- Galaxy S2 (t1cmcc/GT-I9108)
- Galaxy S2 Duos (SCH-i929/SCH-i929)
- Galaxy S2 Duos TV (logandsdtv/GT-S7273T)
- Galaxy S2 Epic (SCH-R760/SCH-R760)
- Galaxy S2 Epic (SPH-D710/SPH-D710)
- Galaxy S2 Epic (SPH-D710BST/SPH-D710BST)
- Galaxy S2 Epic (SPH-D710VMUB/SPH-D710VMUB)
- Galaxy S2 HD LTE (SGH-I757M/SGH-I757M)
- Galaxy S2 HD LTE (SHV-E120K/SHV-E120K)
- Galaxy S2 HD LTE (SHV-E120L/SHV-E120L)
- Galaxy S2 HD LTE (SHV-E120S/SHV-E120S)
- Galaxy S2 LTE (GT-I9210/GT-I9210)
- Galaxy S2 LTE (SC-03D/SC-03D)
- Galaxy S2 LTE (SGH-I727R/SGH-I727R)
- Galaxy S2 Plus (s2ve/GT-I9105)
- Galaxy S2 Plus (s2vep/GT-I9105P)
- Galaxy S2 Skyrocket (SGH-I727/SAMSUNG-SGH-I727)
- Galaxy S2 Skyrocket (SGH-I727/SGH-I727)
- Galaxy S2 Wimax (ISW11SC/ISW11SC)
- Galaxy S2 X (SGH-T989D/SGH-T989D)
- Galaxy S3 (c1att/SGH-I748)
- Galaxy S3 (c1ktt/SHV-E210K)
- Galaxy S3 (c1lgt/SHV-E210L)
- Galaxy S3 (c1skt/SHV-E210S)
- Galaxy S3 (d2att/SAMSUNG-SGH-I747)
- Galaxy S3 (d2can/SGH-I747M)
- Galaxy S3 (d2can/SGH-T999V)
- Galaxy S3 (d2cri/SCH-R530C)
- Galaxy S3 (d2dcm/Gravity)
- Galaxy S3 (d2dcm/SC-06D)
- Galaxy S3 (d2lteMetroPCS/SGH-T999N)
- Galaxy S3 (d2ltetmo/SGH-T999L)
- Galaxy S3 (d2mtr/SCH-R530M)
- Galaxy S3 (d2spi/SCH-L710)
- Galaxy S3 (d2spr/SPH-L710)
- Galaxy S3 (d2tfnspr/SCH-S960L)

- Galaxy S3 (d2tfnvzw/SCH-S968C)
- Galaxy S3 (d2tmo/SGH-T999)
- Galaxy S3 (d2usc/SCH-R530U)
- Galaxy S3 (d2vmu/SPH-L710)
- Galaxy S3 (d2vzw/SCH-I535)
- Galaxy S3 (d2xar/SCH-R530X)
- Galaxy S3 (m0/GT-I9300)
- Galaxy S3 (m0/GT-I9300T)
- Galaxy S3 (m0apt/SCH-I939)
- Galaxy S3 (m0chn/GT-I9300)
- Galaxy S3 (m0cmcc/GT-I9308)
- Galaxy S3 (m0ctc/SCH-I939)
- Galaxy S3 (m0ctcduos/SCH-I939D)
- Galaxy S3 (m0skt/SHW-M440S)
- Galaxy S3 (m3/GT-I9305)
- Galaxy S3 (m3/GT-I9305N)
- Galaxy S3 (m3/GT-I9305T)
- Galaxy S3 (m3dcm/GravityQuad)
- Galaxy S3 (m3dcm/SC-03E)
- Galaxy S3 (SC-03E/SC-03E)
- Galaxy S3 Duos (arubaslim/GT-I8262B)
- Galaxy S3 Mini (golden/GT-I8190)
- Galaxy S3 Mini (golden/GT-I8190L)
- Galaxy S3 Mini (golden/GT-I8190N)
- Galaxy S3 Mini (golden/GT-I8190T)
- Galaxy S3 Mini (goldenlteatt/SAMSUNG-SM-G730A)
- Galaxy S3 Mini (goldenltebmc/SM-G730W8)
- Galaxy S3 Mini (goldenltevzw/SM-G730V)
- Galaxy S3 Mini (goldenve3g/GT-I8200L)
- Galaxy S3 Mini Value Edition (goldenve3g/GT-I8200N)
- Galaxy S3 Mini Value Edition (goldenve3g/GT-I8200)
- Galaxy S3 Mini Value Edition (goldenve3g/GT-I8200Q)
- Galaxy S3 Neo (s3ve3g/GT-I9300I)
- Galaxy S3 Neo (s3ve3g/GT-I9301I)
- Galaxy S3 Neo (s3ve3g/GT-I9301Q)
- Galaxy S3 Neo (s3ve3gdd/GT-I9300I)
- Galaxy S3 Neo (s3ve3gdsdd/GT-I9300I)
- Galaxy S3 Neo Plus (s3ve3g/GT-I9300I)
- Galaxy S3 Neo Plus (s3ve3g/GT-I9308I)
- Galaxy S3 Progre (SCL21/SCL21)
- Galaxy S3 Slim (wilcoxds/SM-G3812B)
- Galaxy S4 (ja3g/GT-I9500)
- Galaxy S4 (ja3gduosctc/SCH-I959)
- Galaxy S4 (jaltekt/SHV-E300K)
- Galaxy S4 (jalteigt/SHV-E300L)
- Galaxy S4 (jalteskt/SHV-E300S)
- Galaxy S4 (jflte/GT-I9505)
- Galaxy S4 (jflte/GT-I9508)
- Galaxy S4 (jflte/GT-I9508C)
- Galaxy S4 (jflteaio/SAMSUNG-SGH-I337Z)
- Galaxy S4 (jflteatt/SAMSUNG-SGH-I337)

- Galaxy S4 (jfltecan/SGH-I337M)
- Galaxy S4 (jfltecan/SGH-M919V)
- Galaxy S4 (jfltecri/SCH-R970C)
- Galaxy S4 (jfltecp/SCH-R970X)
- Galaxy S4 (jfltelra/SCH-I545L)
- Galaxy S4 (jflterefreshspr/SPH-L720T)
- Galaxy S4 (jfltespr/SPH-L720)
- Galaxy S4 (jfltetfnatt/SM-S975L)
- Galaxy S4 (jfltetfntmo/SGH-S970G)
- Galaxy S4 (jfltetmo/SGH-M919)
- Galaxy S4 (jflteusc/SCH-R970)
- Galaxy S4 (jfltevw/SCH-I545)
- Galaxy S4 (jftdd/GT-I9507)
- Galaxy S4 (jftdd/GT-I9507V)
- Galaxy S4 (jfvelte/GT-I9515)
- Galaxy S4 (jfwifi/GT-I9505X)
- Galaxy S4 (ks01lte/GT-I9506)
- Galaxy S4 (ks01ltekt/SHV-E330K)
- Galaxy S4 (ks01ltekt/SHV-E330L)
- Galaxy S4 (SC-04E/SC-04E)
- Galaxy S4 Active (jactivelte/GT-I9295)
- Galaxy S4 Active (jactivelteatt/SAMSUNG-SGH-I537)
- Galaxy S4 Active (jactivelteatt/SGH-I537)
- Galaxy S4 Active (jactivelteskt/SHV-E470S)
- Galaxy S4 Duos (ja3gchnduos/GT-I9502)
- Galaxy S4 Google Play Edition (jgedlte/GT-I9505G)
- Galaxy S4 LTE-A (ks01lteskt/SHV-E330S)
- Galaxy S4 Mini (serrano3g/GT-I9190)
- Galaxy S4 Mini (serranods/GT-I9192)
- Galaxy S4 Mini (serranolte/GT-I9195)
- Galaxy S4 Mini (serranolte/GT-I9195L)
- Galaxy S4 Mini (serranolte/GT-I9195T)
- Galaxy S4 Mini (serranolte/GT-I9195X)
- Galaxy S4 Mini (serranolte/GT-I9197)
- Galaxy S4 Mini (serranoltebmc/SGH-I257M)
- Galaxy S4 Mini (serranoltekt/SHV-E370K)
- Galaxy S4 Mini (serranoltekx/SHV-E370D)
- Galaxy S4 Mini (serranoltelra/SCH-I435L)
- Galaxy S4 Mini (serranoltespr/SPH-L520)
- Galaxy S4 Mini (serranolteusc/SCH-R890)
- Galaxy S4 Mini (serranoltevw/SCH-I435)
- Galaxy S4 Mini (serranovolteatt/SAMSUNG-SGH-I257)
- Galaxy S4 Zoom (mproject3g/SM-C101)
- Galaxy S4 Zoom (mprojectlteatt/SAMSUNG-SM-C105A)
- Galaxy S4 Zoom (mprojectltekt/SM-C105L)
- Galaxy S4 Zoom (mprojectlteskt/SM-C105S)
- Galaxy S4 Zoom (mprojectqlte/SM-C105)
- Galaxy S5 (k3g/SM-G900H)
- Galaxy S5 (klte/SM-G9008W)
- Galaxy S5 (klte/SM-G9009W)
- Galaxy S5 (klte/SM-G900F)

- Galaxy S5 (klte/SM-G900FQ)
- Galaxy S5 (klte/SM-G900I)
- Galaxy S5 (klte/SM-G900M)
- Galaxy S5 (klte/SM-G900MD)
- Galaxy S5 (klteacg/SM-G900R7)
- Galaxy S5 (klteatt/SAMSUNG-SM-G900A)
- Galaxy S5 (kltecan/SM-G900W8)
- Galaxy S5 (klteduoszn/SM-G9006W)
- Galaxy S5 (kltekt/SM-G900K)
- Galaxy S5 (kltelgt/SM-G900L)
- Galaxy S5 (kltelra/SM-G900R6)
- Galaxy S5 (klteMetroPCS/SM-G900T1)
- Galaxy S5 (klteskt/SM-G900S)
- Galaxy S5 (kltespr/SM-G900P)
- Galaxy S5 (kltetmo/SM-G900T)
- Galaxy S5 (klteusc/SM-G900R4)
- Galaxy S5 (kltevzw/SM-G900V)
- Galaxy S5 (kwifi/SM-G900X)
- Galaxy S5 (lentisltekt/SM-G906K)
- Galaxy S5 (lentisltelgt/SM-G906L)
- Galaxy S5 (lentislteskt/SM-G906S)
- Galaxy S5 (SCL23/SCL23)
- Galaxy S5 Active (klteactive/SM-G870F)
- Galaxy S5 Active (klteattactive/SAMSUNG-SM-G870A)
- Galaxy S5 Active (kltecanactive/SM-G870W)
- Galaxy S5 Dual SIM (klte/SM-G900FD)
- Galaxy S5 Google Play Edition (kgedlte/SM-G900FG)
- Galaxy S5 K Sport (kltesprsports/SM-G860P)
- Galaxy S5 LTE-A (kccat6/SM-G901F)
- Galaxy S5 Mini (kmini3g/SM-G800H)
- Galaxy S5 mini (kmini3g/SM-G800HQ)
- Galaxy S5 Mini (kminilte/SM-G800F)
- Galaxy S5 mini (kminilte/SM-G800M)
- Galaxy S5 Mini (kminilte/SM-G800Y)
- Galaxy S5 Mini (kminilteusc/SM-G800R4)
- Galaxy S5 mini (kminiwifi/SM-G800X)
- Galaxy S5 mini LTE (kminilte/SM-G800Y)
- Galaxy Spica (GT-I5700/GT-I5700)
- Galaxy Spica (GT-I5700/GT-I5700L)
- Galaxy Spica (GT-I5700/GT-I5700R)
- Galaxy Spica (GT-I5700L/GT-I5700L)
- Galaxy Spica (spica/GT-i5700)
- Galaxy Spica (spica/GT-I5700)
- Galaxy Spica (spica/GT-I5700L)
- Galaxy Spica (spica/GT-I5700R)
- Galaxy Star (mint/GT-S5282)
- Galaxy Star (mintss/GT-S5280)
- Galaxy Star Plus (logan2g/GT-S7262)
- Galaxy Star Trios (mintts/GT-S5283B)
- Galaxy Star2 Plus (higgs2g/SM-G350E)
- Galaxy Stellar (jaspervzw/SCH-I200)

- Galaxy Stellar (jaspervzw/SCH-I200PP)
- Galaxy Style Duos (aruba3gduosctc/SCH-I829)
- Galaxy Tab (GT-P1000/GT-P1000)
- Galaxy Tab (GT-P1000L/GT-P1000L)
- Galaxy Tab (GT-P1000M/GT-P1000M)
- Galaxy Tab (GT-P1000N/GT-P1000N)
- Galaxy Tab (GT-P1000R/GT-P1000R)
- Galaxy Tab (GT-P1000T/GT-P1000T)
- Galaxy Tab (GT-P1010/GT-P1010)
- Galaxy Tab (GT-P1013/GT-P1013)
- Galaxy Tab (SC-01C/SC-01C)
- Galaxy Tab (SCH-I800/SCH-I800)
- Galaxy Tab (SGH-T849/SGH-T849)
- Galaxy Tab (SHW-M180K/SHW-M180K)
- Galaxy Tab (SHW-M180L/SHW-M180L)
- Galaxy Tab (SHW-M180S/SHW-M180S)
- Galaxy Tab (SHW-M180W/SHW-M180W)
- Galaxy Tab (SMT-i9100/SMT-i9100)
- Galaxy Tab 10.1 (GT-P7500/GT-P7500)
- Galaxy Tab 10.1 (GT-P7500D/GT-P7500D)
- Galaxy Tab 10.1 (GT-P7503/GT-P7503)
- Galaxy Tab 10.1 (GT-P7510/GT-P7510)
- Galaxy Tab 10.1 (SC-01D/SC-01D)
- Galaxy Tab 10.1 (SCH-I905/SCH-I905)
- Galaxy Tab 10.1 (SGH-T859/SGH-T859)
- Galaxy Tab 10.1 (SHW-M300W/SHW-M300W)
- Galaxy Tab 10.1 (SHW-M380K/SHW-M380K)
- Galaxy Tab 10.1 (SHW-M380S/SHW-M380S)
- Galaxy Tab 10.1 (SHW-M380W/SHW-M380W)
- Galaxy Tab 10.1 N (GT-P7501/GT-P7501)
- Galaxy Tab 10.1 N (GT-P7511/GT-P7511)
- Galaxy Tab 10.1 v (p3/GT-P7100)
- Galaxy Tab 4 Active (rubenslte/SM-T365)
- Galaxy Tab 7.0 (SPH-P100/SPH-P100)
- Galaxy Tab 7.0 Plus (GT-P6200/GT-P6200)
- Galaxy Tab 7.0 Plus (GT-P6200L/GT-P6200L)
- Galaxy Tab 7.0 Plus (GT-P6201/GT-P6201)
- Galaxy Tab 7.0 Plus (GT-P6210/GT-P6210)
- Galaxy Tab 7.0 Plus (GT-P6211/GT-P6211)
- Galaxy Tab 7.0 Plus (SC-02D/SC-02D)
- Galaxy Tab 7.0 Plus (SGH-T869/SGH-T869)
- Galaxy Tab 7.0 Plus (SHW-M430W/SHW-M430W)
- Galaxy Tab 7.7 (GT-P6800/GT-P6800)
- Galaxy Tab 7.7 (GT-P6810/GT-P6810)
- Galaxy Tab 7.7 (SCH-I815/SCH-I815)
- Galaxy Tab 7.7 Plus (SC-01E/SC-01E)
- Galaxy Tab 8.9 (GT-P7300/GT-P7300)
- Galaxy Tab 8.9 (GT-P7310/GT-P7310)
- Galaxy Tab 8.9 (GT-P7320/GT-P7320)
- Galaxy Tab 8.9 (SCH-P739/SCH-P739)
- Galaxy Tab 8.9 (SGH-I957/SAMSUNG-SGH-I957)

- Galaxy Tab 8.9 (SGH-I957D/SAMSUNG-SGH-I957D)
- Galaxy Tab 8.9 (SGH-I957D/SGH-I957D)
- Galaxy Tab 8.9 (SGH-I957M/SAMSUNG-SGH-I957M)
- Galaxy Tab 8.9 (SGH-I957M/SGH-I957M)
- Galaxy Tab 8.9 (SGH-I957R/SAMSUNG-SGH-I957R)
- Galaxy Tab 8.9 (SGH-I957R/SGH-I957R)
- Galaxy Tab 8.9 (SHV-E140K/SHV-E140K)
- Galaxy Tab 8.9 (SHV-E140L/SHV-E140L)
- Galaxy Tab 8.9 (SHV-E140S/SHV-E140S)
- Galaxy Tab 8.9 (SHW-M305W/SHW-M305W)
- Galaxy Tab Pro 10.1 (picassolte/SM-T525)
- Galaxy Tab Pro 10.1 (picassowifi/SM-T520)
- Galaxy Tab Pro 12.2 (v2lte/SM-T905)
- Galaxy Tab Pro 12.2 (v2wifi/SM-T900)
- Galaxy Tab Pro 12.2 (v2wifi/SM-T900X)
- Galaxy Tab Pro 8.4 (mondrianlte/SM-T325)
- Galaxy Tab Pro 8.4 (mondrianwifi/SM-T320)
- Galaxy Tab Pro 8.4 (mondrianwifi/SM-T320X)
- Galaxy Tab Pro 8.4 (mondrianwifikx/SM-T320)
- Galaxy Tab Pro 8.4 (mondrianwifiue/SM-T320)
- Galaxy Tab Q (q7/SM-T2519)
- Galaxy Tab S 10.5 (chagallwifi/SM-T800)
- Galaxy Tab S 8.4 (klimtlte/SM-T705)
- Galaxy Tab S 8.4 (klimtlte/SM-T705C)
- Galaxy Tab S 8.4 (klimtlte/SM-T705Y)
- Galaxy Tab S 8.4 (klimtltevw/SM-T707V)
- Galaxy Tab S 8.4 (klimtwifi/SM-T700)
- Galaxy Tab S 8.4 (SC-03G/SC-03G)
- Galaxy Tab2 10.1 (espresso10att/SAMSUNG-SGH-I497)
- Galaxy Tab2 10.1 (espresso10can/SGH-I497)
- Galaxy Tab2 10.1 (espresso10rf/GT-P5100)
- Galaxy Tab2 10.1 (espresso10spr/SPH-P500)
- Galaxy Tab2 10.1 (espresso10tmo/SGH-T779)
- Galaxy Tab2 10.1 (espresso10vzw/SCH-I915)
- Galaxy Tab2 10.1 (espresso10wifi/GT-P5110)
- Galaxy Tab2 10.1 (espresso10wifi/GT-P5113)
- Galaxy Tab2 7.0 (espresso10rf/GT-P3100)
- Galaxy Tab2 7.0 (espresso10rf/GT-P3100B)
- Galaxy Tab2 7.0 (espresso10rf/GT-P3105)
- Galaxy Tab2 7.0 (espresso10vzw/SCH-i705)
- Galaxy Tab2 7.0 (espresso10vzw/SCH-I705)
- Galaxy Tab2 7.0 (espresso10wifi/GT-P3110)
- Galaxy Tab2 7.0 (espresso10wifi/GT-P3113)
- Galaxy Tab3 (lt01wifikx/SM-T310)
- Galaxy Tab3 10.1 (santos103g/GT-P5200)
- Galaxy Tab3 10.1 (santos10lte/GT-P5220)
- Galaxy Tab3 10.1 (santos10wifi/GT-P5210)
- Galaxy Tab3 10.1 (santos10wifi/GT-P5210XD1)
- Galaxy Tab3 7.0 (lt023g/SM-T211)
- Galaxy Tab3 7.0 (lt023g/SM-T212)
- Galaxy Tab3 7.0 (lt023gdtv/SM-T211M)

- Galaxy Tab3 7.0 (lt02lte/SM-T215)
- Galaxy Tab3 7.0 (lt02lteatt/SAMSUNG-SM-T217A)
- Galaxy Tab3 7.0 (lt02ltespr/SM-T217S)
- Galaxy Tab3 7.0 (lt02ltetmo/SM-T217T)
- Galaxy Tab3 7.0 (lt02wifi/SM-T210)
- Galaxy Tab3 7.0 (lt02wifi/SM-T210R)
- Galaxy Tab3 7.0 (lt02wifilgt/SM-T210L)
- Galaxy Tab3 8.0 (lt013g/SM-T311)
- Galaxy Tab3 8.0 (lt013g/SM-T312)
- Galaxy Tab3 8.0 (lt01lte/SM-T315)
- Galaxy Tab3 8.0 (lt01lte/SM-T315T)
- Galaxy Tab3 8.0 (lt01wifi/SM-T310)
- Galaxy Tab3 8.0 (lt01wifi/SM-T310X)
- Galaxy Tab3 8.0 (lt02lduwifi/SM-T210X)
- Galaxy Tab3 Kids (lt02kidswifi/SM-T2105)
- Galaxy Tab3 Lite (goya3g/SM-T111)
- Galaxy Tab3 Lite (goya3g/SM-T111M)
- Galaxy Tab3 Lite (goyawifi/SM-T110)
- Galaxy Tab4 (matissewifigoog/SM-T530NN)
- Galaxy Tab4 10.0 (matisse3g/SM-T531)
- Galaxy Tab4 10.0 (matisse/SM-T535)
- Galaxy Tab4 10.1 (matissewifi/SM-T530)
- Galaxy Tab4 10.1 (matissewifi/SM-T530X)
- Galaxy Tab4 10.1 (matissewifikx/SM-T530)
- Galaxy Tab4 10.1 (matissewifiu/SM-T530NU)
- Galaxy Tab4 7.0 (403SC/403SC)
- Galaxy Tab4 7.0 (degas3g/SM-T231)
- Galaxy Tab4 7.0 (degas3g/SM-T232)
- Galaxy Tab4 7.0 (degaslte/SM-T235)
- Galaxy Tab4 7.0 (degaslte/SM-T235Y)
- Galaxy Tab4 7.0 (degasltespr/SM-T237P)
- Galaxy Tab4 7.0 (degasltevzw/SM-T237V)
- Galaxy Tab4 7.0 (degaswifi/SM-T230)
- Galaxy Tab4 7.0 (degaswifi/SM-T230X)
- Galaxy Tab4 7.0 (degaswifidtv/SM-T230NT)
- Galaxy Tab4 7.0 (degaswifioopenbnn/SM-T230NU)
- Galaxy Tab4 7.0 (degaswifiu/SM-T230NU)
- Galaxy Tab4 8.0 (millet3g/SM-T331)
- Galaxy Tab4 8.0 (milletlte/SM-T335)
- Galaxy Tab4 8.0 (milletlteatt/SAMSUNG-SM-T337A)
- Galaxy Tab4 8.0 (milletltekt/SM-T335K)
- Galaxy Tab4 8.0 (milletlte/SM-T335L)
- Galaxy Tab4 8.0 (millettetmo/SM-T337T)
- Galaxy Tab4 8.0 (milletwifi/SM-T330)
- Galaxy Tab4 8.0 (milletwifiu/SM-T330NU)
- Galaxy Tab4 Active (rubenslte/SM-T365M)
- Galaxy Tab4 Active (rubenswifi/SM-T360)
- Galaxy Tab4 Nook 10.1 (matissewifioopenbnn/SM-T530NU)
- Galaxy TabS 10.5 (chagallhktekt/SM-T805K)
- Galaxy TabS 10.5 (chagallhltelgt/SM-T805L)
- Galaxy TabS 10.5 (chagallhltesk/SM-T805S)



- Galaxy TabS 10.5 (chagallte/SM-T805)
- Galaxy TabS 10.5 (chagallte/SM-T805M)
- Galaxy TabS 10.5 (chagallte/SM-T805Y)
- Galaxy TabS 10.5 (chagallteatt/SAMSUNG-SM-T807A)
- Galaxy TabS 10.5 (chagalltecan/SM-T805W)
- Galaxy TabS 10.5 (chagalltespr/SM-T807P)
- Galaxy TabS 10.5 (chagalltetmo/SM-T807T)
- Galaxy TabS 10.5 (chagallteusc/SM-T807R4)
- Galaxy TabS 10.5 (chagalltevw/SM-T807V)
- Galaxy TabS 10.5 (chagallwifi/SM-T800)
- Galaxy TabS 10.5 (chagallwifi/SM-T800X)
- Galaxy TabS 10.5 (chagallwifikx/SM-T800)
- Galaxy TabS 10.5 (SCT21/SCT21)
- Galaxy TabS 8.4 (klimlte/SM-T705)
- Galaxy TabS 8.4 (klimlte/SM-T705M)
- Galaxy TabS 8.4 (klimlteatt/SAMSUNG-SM-T707A)
- Galaxy TabS 8.4 (klimltecan/SM-T705W)
- Galaxy TabS 8.4 (klimtwifi/SM-T700)
- Galaxy TabS 8.4 (klimtwifikx/SM-T700)
- Galaxy Tap Pro 10.1 (picassolte/SM-T525)
- Galaxy Tap Pro 8.4 (mondrianwifi/SM-T320)
- Galaxy Trend (kyleve/GT-S7392)
- Galaxy Trend (kyleve/GT-S7392L)
- Galaxy Trend (kyleve3gcmcc/GT-S7568I)
- Galaxy Trend Duos (kyleichn/GT-S7562i)
- Galaxy Trend Duos (kylepluschn/GT-S7572)
- Galaxy Trend Duos (kyleve/GT-S7390)
- Galaxy Trend Duos (kyleve/GT-S7392)
- Galaxy Trend Duos (kyleve/GT-S7562C)
- Galaxy Trend Lite (kylevess/GT-S7390)
- Galaxy Trend Lite (kylevess/GT-S7390L)
- Galaxy Trend Plus (kylepro/GT-S7580)
- Galaxy Trend Plus (kylepro/GT-S7580E)
- Galaxy Trend Plus (kylepro/GT-S7580L)
- Galaxy Trend2 (garda3gcmcc/GT-S7898)
- Galaxy Trend2 (gardave3gcmcc/GT-S7898I)
- Galaxy Trend2 (kyleplusctc/SCH-I739)
- Galaxy Trend3 (cs023g/SM-G3502U)
- Galaxy Trend3 (cs02cmcc/SM-G3508)
- Galaxy Trend3 (cs02ctc/SM-G3509)
- Galaxy Trend3 (cs02ve/SM-G3508I)
- Galaxy Trend3 (cs02ve3g/SM-G3502C)
- Galaxy Trend3 (cs02ve3g/SM-G3502I)
- Galaxy Trend3 (cs02ve3g/SM-G3508J)
- Galaxy Trend3 (cs02ve3g/SM-G3509I)
- Galaxy U (SHW-M130L/SHW-M130L)
- Galaxy Victory (goghsp/SPH-L300)
- Galaxy Victory (goghvmu/SPH-L300)
- Galaxy W (GT-I8150/GT-I8150)
- Galaxy W (GT-I8150B/GT-I8150B)
- Galaxy W (GT-I8150T/GT-I8150T)

- Galaxy W (SGH-T679M/SGH-T679M)
- Galaxy Win (delos3gcmcc/GT-I8558)
- Galaxy Win (delos3gduosctc/SCH-I869)
- Galaxy Win (delos3geur/GT-I8552)
- Galaxy Win (delos3geur/GT-I8552B)
- Galaxy Win (delos3gss/GT-I8550E)
- Galaxy win (delos3gss/GT-I8550L)
- Galaxy Win (delosltelgt/SHV-E500L)
- Galaxy Win (deloslteskt/SHV-E500S)
- Galaxy Win Duos (delos3gchn/GT-I8552)
- Galaxy Win Pro (wilcox3g/SM-G3818)
- Galaxy Win Pro (wilcoxctc/SM-G3819)
- Galaxy Win Pro (wilcoxctc/SM-G3819D)
- Galaxy Win Pro (wilcoxds/SM-G3812)
- Galaxy Xcover (GT-S5690/GT-S5690)
- Galaxy Xcover (GT-S5690L/GT-S5690L)
- Galaxy Xcover (GT-S5690M/GT-S5690M)
- Galaxy Xcover (GT-S5690R/GT-S5690R)
- Galaxy Xcover2 (skomer/GT-S7710)
- Galaxy Xcover2 (skomer/GT-S7710L)
- Galaxy Y (GT-S5360/GT-S5360)
- Galaxy Y (GT-S5360B/GT-S5360B)
- Galaxy Y (GT-S5360L/GT-S5360L)
- Galaxy Y (GT-S5360T/GT-S5360T)
- Galaxy Y (GT-S5363/GT-S5363)
- Galaxy Y (GT-S5368/GT-S5368)
- Galaxy Y (GT-S5369/GT-S5369)
- Galaxy Y (SCH-I509/SCH-I509)
- Galaxy Y (SCH-i509/SCH-i509)
- Galaxy Y Duos (GT-S6102/GT-S6102)
- Galaxy Y Duos (GT-S6102B/GT-S6102B)
- Galaxy Y Duos (GT-S6102E/GT-S6102E)
- Galaxy Y Plus (coriplusds/GT-S5303)
- Galaxy Y Plus (coriplusds/GT-S5303B)
- Galaxy Y Pop (GT-S6108/GT-S6108)
- Galaxy Y Pro (GT-B5510/GT-B5510)
- Galaxy Y Pro (GT-B5510B/GT-B5510B)
- Galaxy Y Pro (GT-B5510L/GT-B5510L)
- Galaxy Y Pro Duos (GT-B5512/GT-B5512)
- Galaxy Y Pro Duos (GT-B5512B/GT-B5512B)
- Galaxy Y TV (GT-S5367/GT-S5367)
- Galaxy Young (roy/GT-S6312)
- Galaxy Young (roydtv/GT-S6313T)
- Galaxy Young (royss/GT-S6310)
- Galaxy Young (royss/GT-S6310B)
- Galaxy Young (royss/GT-S6310L)
- Galaxy Young (royss/GT-S6310T)
- Galaxy Young (royssdtv/GT-S6313T)
- Galaxy Young (royssnfc/GT-S6310N)
- Galaxy Young2 (young23g/SM-G130H)
- Galaxy Young2 (young23g/SM-G130M)

- Galaxy Young2 (young23g/SM-G130U)
- Galaxy Young2 (young23gdtv/SM-G130BT)
- Galaxy Young2 (young2ds2g/SM-G130E)
- Galaxy Young2 (young2nfc3g/SM-G130HN)
- Garda (gardalteMetroPCS/SGH-T399N)
- Gear Live (sprat/Gear Live)
- Gem (SCH-I100/SCH-I100)
- GT-B9388 (ironcmcc/GT-B9388)
- GT-I5510M (GT-I5510M/GT-I5510M)
- GT-I5510T (GT-I5510T/GT-I5510T)
- GT-I5800L (GT-I5800L/GT-I5800L)
- GT-I8262D (aruba3gchn/GT-I8262D)
- GT-I9260 (superiorchn/GT-I9260)
- GT-N7000B (GT-N7000B/GT-N7000B)
- GT-P3108 (espressoRFCMCC/GT-P3108)
- GT-P7300B (GT-P7300B/GT-P7300B)
- GT-P7320T (GT-P7320T/GT-P7320T)
- GT-P7500M (GT-P7500M/GT-P7500M)
- GT-P7500R (GT-P7500R/GT-P7500R)
- GT-P7500V (GT-P7500V/GT-P7500V)
- GT-S5698 (GT-S5698/GT-S5698)
- GT-S5820 (GT-S5820/GT-S5820)
- GT-S5830V (GT-S5830V/GT-S5830V)
- Hennessy (hennessy3gduosctc/SCH-W789)
- Homesync (spcwifi/GT-B9150)
- IceTouch (gokey/YP-GH1)
- Illusion (SCH-I110/SCH-I110)
- Infuse (SGH-I997/SAMSUNG-SGH-I997)
- Infuse (SGH-I997R/SAMSUNG-SGH-I997R)
- Moment (SPH-M900/SPH-M900)
- Montblanc (montblanc3gctc/SM-W2014)
- Nexus 10 (manta/Nexus 10)
- Nexus S (crespo/Nexus S)
- Nexus S (crespo4g/Nexus S 4G)
- olleh (ik1/SMT-E5015)
- ProXpress M4580 (fiber-athena/samsung-printer-tablet)
- Replenish (SPH-M580/SPH-M580)
- Replenish (SPH-M580BST/SPH-M580BST)
- Repp (SCH-R680/SCH-R680)
- Roy VE DTV (royvedtv/GT-S6293T)
- Rugby Smart (SGH-I847/SAMSUNG-SGH-I847)
- Samsung Galaxy S4 (jflteMetroPCS/SGH-M919N)
- Samsung Galaxy S4 Zoom (mprojectltektt/SM-C105K)
- Samsung Galaxy Stratosphere2 (aegis2vzw/SCH-I415)
- Samsung Garda (gardaltetmo/SGH-T399)
- Samsung Homesync (spcwifi/GT-B9150)
- Samsung Homesync (spcwifiany/GT-B9150)
- SC-01F (SC-01F/SC-01F)
- SC-01G (SC-01G/SC-01G)
- SC-02G (SC-02G/SC-02G)
- SC-04F (SC-04F/SC-04F)

- SCH-I339 (SCH-I339/SCH-I339)
- SCH-I405U (SCH-I405U/SCH-I405U)
- SCH-I425 (godivaltevw/SCH-I425)
- SCH-I509U (SCH-I509U/SCH-I509U)
- SCH-I519 (SCH-I519/SCH-I519)
- SCH-I559 (SCH-I559/SCH-I559)
- SCH-i559 (SCH-I559/SCH-i559)
- SCH-I639 (SCH-I639/SCH-I639)
- SCH-I659 (SCH-I659/SCH-I659)
- SCH-I699 (SCH-I699/SCH-I699)
- SCH-I779 (SCH-I779/SCH-I779)
- SCH-i809 (SCH-i809/SCH-i809)
- SCH-i919 (SCH-i919/SCH-i919)
- SCH-I919U (SCH-I919U/SCH-I919U)
- SCH-W2013 (m0grandectc/SCH-W2013)
- SCH-W899 (SCH-W899/SCH-W899)
- SCH-W9913 (m0grandectc/SCH-W9913)
- SCH-W999 (SCH-W999/SCH-W999)
- SGH-I987 (SGH-I987/SGH-I987)
- SGH-S730G (amazingtrf/SGH-S730G)
- SHV-E150S (SHV-E150S/SHV-E150S)
- SHW-M115S (SHW-M115S/SHW-M115S)
- SHW-M135K (SHW-M135K/SHW-M135K)
- SHW-M135L (SHW-M135L/SHW-M135L)
- SHW-M340D (SHW-M340D/SHW-M340D)
- SHW-M340K (SHW-M340K/SHW-M340K)
- SHW-M460D (SHW-M460D/SHW-M460D)
- SHW-M480S (p4noterfskt/SHW-M480S)
- Sidekick (SGH-T839/SGH-T839)
- SPH-L500 (stunnerltespr/SPH-L500)
- Transfix (SCH-R730/SCH-R730)
- Transform (SPH-M920/SPH-M920)
- Transform Ultra (SPH-M930/SPH-M930)
- Transform Ultra (SPH-M930BST/SPH-M930BST)
- VinsQ (SPH-M910/SPH-M910)
- VinsQ(M910) (SPH-M910/SPH-M910)

## **Sanyo**

- Benesse (31TL04/31TL04)
- Benesse (40TL04/40TL04)
- Benesse (41EA04/41EA04)
- CEA1 (CEA1/CEA1)
- CEA3 (CEA3/CEA3)

## **SELECLINE**

- MID7526CM (MID7526CM/NID\_7010)
- MID\_9526CM (MID\_9526CM/S952)

## **SENSEIT**

- SENSEIT L301 (SENSEIT-L301/SENSEIT L301)

## **SFR**

- SFR-G8800 (stb\_dvb\_sfr/SFR-G8800)
- Star Shine II (up11\_sfr\_mensa/STARSHINE II)
- Star Trail 5 (STARTRAIL5/STARTRAIL5)
- Star Trail III (mobewire\_startrail3/StarTrail III)
- STARADDICT 4 (staraddict4/STARADDICT 4)

## **SHARP**

- 306SH (SG306SH/306SH)
- A01SH (A01SH/A01SH)
- ADS1 (ADS1/SHARP-ADS1)
- AQUOS PAD SHT22 (SHT22/SHT22)
- AQUOS PAD SH-06F (SH-06F/SH-06F)
- AQUOS PAD SH-08E (SH-08E/SH-08E)
- AQUOS PAD SHT21 (SHT21/SHT21)
- AQUOS PHONE SERIE mini SHL24 (SHL24/SHL24)
- AQUOS PHONE SERIE SHL22 (SHL22/SHL22)
- AQUOS PHONE SERIE SHL23 (SHL23/SHL23)
- AQUOS PHONE CL IS17SH (SHI17/IS17SH)
- AQUOS PHONE es WX04SH (WX04SH/WX04SH)
- AQUOS PHONE EX SH-02F (SH-02F/SH-02F)
- AQUOS PHONE EX SH-04E (SH04E/SH-04E)
- AQUOS PHONE f SH-13C (SH13C/SH-13C)
- AQUOS PHONE IS11SH (SHI11/IS11SH)
- AQUOS PHONE IS12SH (SHI12/IS12SH)
- AQUOS PHONE IS13SH (SHI13/IS13SH)
- AQUOS PHONE IS14SH (SHI14/IS14SH)
- AQUOS PHONE SERIE ISW16SH (SHI16/ISW16SH)
- AQUOS PHONE SERIE SHL21 (SHL21/SHL21)
- AQUOS PHONE SH-01D (SH01D/SH-01D)
- AQUOS PHONE SH-06D (SH06D/SH-06D)
- AQUOS PHONE SH-12C (SH12C/SH-12C)
- AQUOS PHONE SH90B (SH90B/SH90B)
- AQUOS PHONE si SH-01E (SH01E/SH-01E)
- AQUOS PHONE si SH-07E (SH-07E/SH-07E)
- AQUOS PHONE SL IS15SH (SHI15/IS15SH)
- AQUOS PHONE slider SH-02D (SH02D/SH-02D)
- AQUOS PHONE SoftBank 102SH II (SBM102SH2/SBM102SH2)
- AQUOS PHONE SoftBank 006SH (SBM006SH/SBM006SH)
- AQUOS PHONE SoftBank 102SH (SBM102SH/SBM102SH)
- AQUOS PHONE SoftBank 103SH (SBM103SH/SBM103SH)
- AQUOS PHONE SoftBank 104SH (SBM104SH/SBM104SH)

- AQUOS PHONE ss 205SH (SBM205SH/SBM205SH)
- AQUOS PHONE st SH-07D (SH07D/SH-07D)
- AQUOS PHONE sv SH-10D (SH10D/SH-10D)
- AQUOS PHONE THE HYBRID SoftBank 007SH (SBM007SH/SBM007SH)
- AQUOS PHONE THE HYBRID SoftBank 007SH J (SBM007SHJ/SBM007SHJ)
- AQUOS PHONE THE HYBRID SoftBank 101SH (SBM101SH/SBM101SH)
- AQUOS PHONE THE PREMIUM SoftBank 009SH (SBM009SH/SBM009SH)
- AQUOS PHONE WX05SH (WX05SH/WX05SH)
- AQUOS PHONE Xx 206SH (SBM206SH/SBM206SH)
- AQUOS PHONE Xx 302SH (SBM302SH/SBM302SH)
- AQUOS PHONE Xx mini 303SH (SBM303SH/SBM303SH)
- AQUOS PHONE Xx SoftBank 106SH (SBM106SH/SBM106SH)
- AQUOS PHONE ZETA SH-01F (SH-01F/SH-01F)
- AQUOS PHONE ZETA SH-02E (SH02E/SH-02E)
- AQUOS PHONE ZETA SH-06E (SH-06E/SH-06E)
- AQUOS PHONE ZETA SH-09D (SH09D/SH-09D)
- AQUOS SERIE SHL25 (SHL25/SHL25)
- AQUOS Xx 304SH (SG304SH/304SH)
- AQUOS ZETA SH-04F (SH-04F/SH-04F)
- Disney Mobile DM014SH (DM014SH/DM014SH)
- Disney Mobile on docomo SH-05F (SH-05F/SH-05F)
- DM009SH (DM009SH/DM009SH)
- DM010SH (DM010SH/DM010SH)
- DM011SH (DM011SH/DM011SH)
- DM012SH (DM012SH/DM012SH)
- DM013SH (DM013SH/DM013SH)
- DM016SH (DM016SH/DM016SH)
- EB-A71GJ (EB-A71GJ/EB-A71GJ)
- EB-WX1GJ/EB-W51GJ (Galapagos/EB-W51GJ)
- EB-WX1GJ/EB-W51GJ (Galapagos/EB-WX1GJ)
- GALAPAGOS SoftBank 003SH (SBM003SH/SBM003SH)
- GALAPAGOS SoftBank 005SH (SBM005SH/SBM005SH)
- INFOBAR A01 (SHX11/INFOBAR A01)
- INFOBAR C01 (SHX12/INFOBAR C01)
- IS01 (SHI01/IS01)
- IS03 (SHI03/IS03)
- IS05 (SHI05/IS05)
- LC-42LE860M (LC-42LE860M/LC-42LE860M)
- LC-50LE860M (LC-50LE860M/LC-50LE860M)
- LC-55LE860M (LC-55LE860M/LC-55LE860M)
- LYNX 3D SH-03C (SH03C/SH-03C)
- LYNX SH-10B (SH10B/SH-10B)
- PANTONE 5 SoftBank 107SH (SBM107SH/SBM107SH)
- PANTONE 6 SoftBank 200SH (SBM200SH/SBM200SH)
- Q-pot.Phone SH-04D (SH04D/SH-04D)
- RW107 (RW107/RW107)
- SBM204SH (SBM204SH/SBM204SH)
- SC-S01 (scallop/SC-S01)
- SH-01E Vivienne Westwood (SH01EVW/SH-01EVW)
- SH-01F DRAGON QUEST (SH-01FDQ/SH-01FDQ)
- SH-03F (SH03F/SH-03F)

- SH-05E (SH05E/SH-05E)
- SH-06D NERV (SH06DNERV/SH-06DNERV)
- SH7218T (SH7218T/SH7218T)
- SH80F (SH80F/SH80F)
- SH8118U (msm7627/SH8118U)
- SH8118U (msm7627\_surf/SH8118U)
- SH8128U (msm7627/SH8128U)
- SH8188U (SH8188U/SH8188U)
- SH8268U (SH8268U/SH8268U)
- SH8288U (SH8288U/SH8288U)
- SH8298U (SH8298U/SH8298U)
- SoftBank 007SH KT (SBM007SHK/SBM007SHK)
- SoftBank 107SH B (SBM107SHB/SBM107SHB)
- SoftBank 305SH (SG305SH/305SH)
- SoftBank AQUOS PHONE Xx 203SH (SBM203SH/SBM203SH)
- Yahoo! Phone SoftBank 009SH Y (SBM009SHY/SBM009SHY)

## **Sharp**

- 401SH (SG401SH/401SH)
- AQUOS SH-M01 (SH-M01/SH-M01)
- AQUOS ZETA SH-01G (SH-01G/SH-01G)
- Disney Mobile on docomo SH-02G (SH-02G/SH-02G)
- LCD-LX560A (lx560a/LCD-LX560A)

## **SHARP Corp.**

- LCD-LX565A (msd818sharp/LCD-LX565A)

## **SiAL**

- Bic camera (Si01BB/Si01BB)
- Si01BE (Si01BE/Si01BE)

## **Sico SmartPhone**

- SSR1-5-8M (GBC\_bravo/sico pro)
- SSR1-5-8M (GBC\_bravo/SSR1-5-8M)

## **Siragon**

- Siragon SP-5000 (SP-5000/Siragon SP-5000)

## **SK Broadband**

- B tv smart (BHX-S100/BHX-S100)

- B tv smart (BKO-S200/BKO-S200)

## **SK Telesys**

- AN200 (AN200/AN200)
- Fly (htt77\_ics2/Fly)
- Ice-Phone Forever (z262\_wvga\_mge/Ice-Phone Forever)
- icube-830 (icube-830/icube-830)
- ITP-E410W (willow/ITP-E410W)
- ITP-R208W (rk30sdk/ITP-R208W)
- K2401 (K2401/S201)
- S150 (msm8255\_k5/S150)
- SK-S100 (qsd8250\_s1/SK-S100)
- SK-S150 (msm8255\_k5/SK-S150)
- SK-S170 (K4/SK-S170)
- T720 (T720/Clear)
- UTA200 (htt75\_nand\_6628\_ics/UTA200)

## **SKnetworks**

- EG68BE (EG668BE/EG668)
- EG978TW (EG978TW/EG978)
- EG980 (eg980tw/EG980)
- WA966 (u966e\_2/WA966)
- WA978 (u978e\_1/WA978)

## **Smartab**

- Smartab SRF79 (SRF79/SRF79)
- Smartab STJR76 (STJR76/STJR76)

## **SMARTAB**

- SMARTAB ST700 (ST700/ST700)

## **Smartfren**

- AD688G (AD688G/Smartfren Andromax AD688G)
- AD689G (AD689G/Smartfren Andromax AD689G)
- Andromax AD687G (AD687G/Andromax AD687G)
- EG680 (eg680/EG680)
- NEWAD688G (NEWAD688G/Smartfren Andromax AD688G)
- Smartfren Andromax AD682H (AD682H/Smartfren Andromax AD682H)

## **Sonim**



- XP6 (XP6700/XP6700)
- XP7 (XP7700/XP7700)

## Sony

- BRAVIA Smart Stick (NSZGU1/NSZ-GU1)
- Internet TV (asura/Internet TV)
- Internet TV (eagle/Internet TV Box)
- NSZGS7 (NSZGS7/NSZ-GS7/GX70)
- NW-F800 (icx1227/WALKMAN)
- NW-F880 Series (icx1237/WALKMAN)
- NW-Z1000 (icx1216/NW-Z1000Series)
- NW-ZX1 (icx1240/WALKMAN)
- NWZ-Z1000 (icx1216/NWZ-Z1000Series)
- SmartWatch 3 (tetra/SmartWatch 3)
- Sony Smartphone Z Ultra Google Play edition (C6806/C6806\_GPe)
- Sony Tablet P (nbx02/Sony Tablet P)
- Tablet P (nbx02/Sony Tablet P)
- Tablet S (nbx03/Sony Tablet S)
- Xperia E1 dual (D2114/D2114)
- Xperia A (SO-04E/SO-04E)
- Xperia A2 (SO-04F/SO-04F)
- Xperia acro HD (SO-03D/SO-03D)
- Xperia acro S (LT26w/LT26w)
- Xperia C (C2304/C2304)
- Xperia C (C2305/C2305)
- Xperia C3 (D2533/D2533)
- Xperia C3 Dual (D2502/D2502)
- Xperia E (C1504/C1504)
- Xperia E (C1505/C1505)
- Xperia E dual (C1604/C1604)
- Xperia E dual (C1605/C1605)
- Xperia E1 (D2004/D2004)
- Xperia E1 (D2005/D2005)
- Xperia E1 (D2114/D2114)
- Xperia E1 Dual (D2104/D2104)
- Xperia E1 dual (D2104/D2104)
- Xperia E1 Dual (D2105/D2105)
- Xperia E1 dual (D2105/D2105)
- Xperia E3 (D2202/D2202)
- Xperia E3 (D2203/D2203)
- Xperia E3 (D2206/D2206)
- Xperia E3 (D2243/D2243)
- Xperia E3 Dual (D2212/D2212)
- Xperia go (ST27i/ST27i)
- Xperia ion (LT28h/LT28h)
- Xperia ion (LT28i/LT28i)
- Xperia J (ST26a/ST26a)
- Xperia J (ST26i/ST26i)
- Xperia L (C2104/C2104)

- Xperia L (C2105/C2105)
- Xperia M (C1904/C1904)
- Xperia M (C1905/C1905)
- Xperia M dual (C2004/C2004)
- Xperia M dual (C2005/C2005)
- Xperia M2 (D2303/D2303)
- Xperia M2 (D2305/D2305)
- Xperia M2 (D2306/D2306)
- Xperia M2 Aqua (D2403/D2403)
- Xperia M2 Aqua (D2406/D2406)
- Xperia M2 dual (D2302/D2302)
- Xperia miro (ST23a/ST23a)
- Xperia miro (ST23i/ST23i)
- Xperia neo L (MT25i/MT25i)
- Xperia P (LT22i/LT22i)
- Xperia S (LT26i/LT26i)
- Xperia SL (LT26ii/LT26ii)
- Xperia sola (MT27i/MT27i)
- Xperia SP (C5302/C5302)
- Xperia SP (C5303/C5303)
- Xperia SP (C5306/C5306)
- Xperia SP (M35h/M35h)
- Xperia SP (M35t/M35t)
- Xperia T (LT30a/LT30a)
- Xperia T (LT30p/LT30p)
- Xperia T2 Ultra (D5303/D5303)
- Xperia T2 Ultra (D5306/D5306)
- Xperia T2 Ultra (D5316/D5316)
- Xperia T2 Ultra (D5316N/D5316N)
- Xperia T2 Ultra (D5322/D5322)
- Xperia T2 Ultra dual (D5322/D5322)
- Xperia T3 (D5102/D5102)
- Xperia T3 (D5103/D5103)
- Xperia T3 (D5106/D5106)
- Xperia Tablet S (txs03/SGPT12)
- Xperia Tablet S (txs03/SGPT13)
- Xperia Tablet Z (SGP311/SGP311)
- Xperia Tablet Z (SGP312/SGP312)
- Xperia Tablet Z (SGP321/SGP321)
- Xperia Tablet Z (SGP351/SGP351)
- Xperia tipo (ST21a/ST21a)
- Xperia tipo dual (ST21a2/ST21a2)
- Xperia TX (LT29i/LT29i)
- Xperia U (ST25a/ST25a)
- Xperia U (ST25i/ST25i)
- Xperia V (LT25i/LT25i)
- Xperia Z (C6602/C6602)
- Xperia Z (C6603/C6603)
- Xperia Z (C6606/C6606)
- Xperia Z (C6616/C6616)
- Xperia Z (L36h/L36h)

- Xperia Z (SO-02E/SO-02E)
- Xperia Z Ultra (C6802/C6802)
- Xperia Z Ultra (C6806/C6806)
- Xperia Z Ultra (C6833/C6833)
- Xperia Z Ultra (C6843/C6843)
- Xperia Z Ultra (SGP412/SGP412)
- Xperia Z Ultra (SOL24/SOL24)
- Xperia Z Ultra (XL39h/XL39h)
- Xperia Z1 (C6902/C6902)
- Xperia Z1 (C6903/C6903)
- Xperia Z1 (C6906/C6906)
- Xperia Z1 (C6916/C6916)
- Xperia Z1 (C6943/C6943)
- Xperia Z1 (L39h/L39h)
- Xperia Z1 (L39t/L39t)
- Xperia Z1 (L39u/L39u)
- Xperia Z1 (SO-01F/SO-01F)
- Xperia Z1 (SOL23/SOL23)
- Xperia Z1 Compact (D5503/D5503)
- Xperia Z1 Compact (M51w/M51w)
- Xperia Z1f (SO-02F/SO-02F)
- Xperia Z2 (D6502/D6502)
- Xperia Z2 (D6503/D6503)
- Xperia Z2 (D6543/D6543)
- Xperia Z2 (SO-03F/SO-03F)
- Xperia Z2 Tablet (SGP511/SGP511)
- Xperia Z2 Tablet (SGP512/SGP512)
- Xperia Z2 Tablet (SGP521/SGP521)
- Xperia Z2 Tablet (SGP551/SGP551)
- Xperia Z2 Tablet (SGP561/SGP561)
- Xperia Z2 Tablet (SO-05F/SO-05F)
- Xperia Z2 Tablet (SOT21/SOT21)
- Xperia Z2a (D6563/D6563)
- Xperia Z3 (401SO/401SO)
- Xperia Z3 (D6603/D6603)
- Xperia Z3 (D6616/D6616)
- Xperia Z3 (D6643/D6643)
- Xperia Z3 (D6653/D6653)
- Xperia Z3 (SO-01G/SO-01G)
- Xperia Z3 (SOL26/SOL26)
- Xperia Z3 Compact (D5803/D5803)
- Xperia Z3 Compact (D5833/D5833)
- Xperia Z3 Compact (SO-02G/SO-02G)
- Xperia Z3 Dual (D6633/D6633)
- Xperia Z3 Tablet Compact (SGP611/SGP611)
- Xperia Z3 Tablet Compact (SGP612/SGP612)
- Xperia Z3 Tablet Compact (SGP621/SGP621)
- Xperia Z3 Tablet Compact (SGP641/SGP641)
- Xperia Z3v (D6708/D6708)
- Xperia ZL (C6502/C6502)
- Xperia ZL (C6503/C6503)

- Xperia ZL (C6506/C6506)
- Xperia ZL (L35h/L35h)
- Xperia ZL2 (SOL25/SOL25)
- Xperia ZR (C5502/C5502)
- Xperia ZR (C5503/C5503)

## **SONY**

- BRAVIA Smart Stick (NSZGU1/NSZ-GU1)

## **Sony Ericsson**

- Live with Walkman (WT19a/WT19a)
- Live with Walkman (WT19i/WT19i)
- Live with Walkman(TM) (WT19a/WT19a)
- LT15a (LT15a/LT15a)
- LT18i (LT18i/LT18i)
- LT22i (LT22i/LT22i)
- LT26i (LT26i/LT26i)
- LT28h (LT28h/LT28h)
- LT28i (LT28i/LT28i)
- MK16a (MK16a/MK16a)
- MK16i (MK16i/MK16i)
- MT11i (MT11i/MT11i)
- MT15i (MT15i/MT15i)
- MT27i (MT27i/MT27i)
- R800x (R800x/R800x)
- SK17i (SK17i/SK17i)
- ST15i (ST15i/ST15i)
- ST17i (ST17i/ST17i)
- ST18i (ST18i/ST18i)
- WT18i (WT18i/WT18i)
- WT19a (WT19a/WT19a)
- WT19i (WT19i/WT19i)
- X10 Xperia Mini (robyn/E10i)
- Xperia A (SO-04E/SO-04E)
- Xperia Acro (IS11S/IS11S)
- Xperia Acro (SO-02C/SO-02C)
- Xperia acro HD (IS12S/IS12S)
- Xperia acro S (LT26w/LT26w)
- Xperia active (ST17i/ST17i)
- Xperia arc (LT15a/LT15a)
- Xperia Arc (LT15i/LT15i)
- Xperia arc (LT15i/LT15i)
- Xperia Arc (SO-01C/SO-01C)
- Xperia arc S (LT18a/LT18a)
- Xperia arc S (LT18i/LT18i)
- Xperia AX (SO-01E/SO-01E)
- Xperia C (S39h/S39h)

- Xperia Go (ST27a/ST27a)
- Xperia go (ST27i/ST27i)
- Xperia Go (ST27i/ST27i)
- Xperia GX (SO-04D/SO-04D)
- Xperia ion (LT28at/LT28at)
- Xperia ion (LT28h/LT28h)
- Xperia ion (LT28i/LT28i)
- Xperia J (ST26i/ST26i)
- Xperia live (WT19a/WT19a)
- Xperia mini (S51SE/S51SE)
- Xperia mini (ST15a/ST15a)
- Xperia mini (ST15i/ST15i)
- Xperia mini pro (SK17a/SK17a)
- Xperia mini pro (SK17i/SK17i)
- Xperia miro (ST23i/ST23i)
- Xperia neo (MT15a/MT15a)
- Xperia Neo (MT15i/MT15i)
- Xperia neo (MT15i/MT15i)
- Xperia neo L (MT25i/MT25i)
- Xperia neo V (MT11a/MT11a)
- Xperia neo V (MT11i/MT11i)
- Xperia P (LT22i/LT22i)
- Xperia PLAY (R800a/R800a)
- Xperia PLAY (R800at/R800at)
- Xperia PLAY (R800i/R800i)
- Xperia Play (R800i/R800i)
- Xperia PLAY (R800x/R800x)
- Xperia PLAY (SO-01D/SO-01D)
- Xperia Play (Zeus/Zeus)
- Xperia pro (MK16a/MK16a)
- Xperia pro (MK16i/MK16i)
- Xperia ray (SO-03C/SO-03C)
- Xperia ray (ST18a/ST18a)
- Xperia ray (ST18i/ST18i)
- Xperia S (LT26i/LT26i)
- Xperia S (SO-02D/SO-02D)
- Xperia SL (LT26ii/LT26ii)
- Xperia sola (MT27i/MT27i)
- Xperia SP (M35c/M35c)
- Xperia SX (SO-05D/SO-05D)
- Xperia T (LT30a/LT30a)
- Xperia T (LT30at/LT30at)
- Xperia T (LT30p/LT30p)
- Xperia Tablet Z (SGP311/SGP311)
- Xperia Tablet Z (SGP321/SGP321)
- Xperia Tablet Z (SGP341/SGP341)
- Xperia Tablet Z (SO-03E/SO-03E)
- Xperia tipo (ST21i/ST21i)
- Xperia tipo dual (ST21i2/ST21i2)
- Xperia TX (LT29i/LT29i)
- Xperia U (ST25i/ST25i)

- Xperia UL (SOL22/SOL22)
- Xperia V (LT25c/LT25c)
- Xperia V (LT25i/LT25i)
- Xperia VL (SOL21/SOL21)
- Xperia X10 (SO-01B/SO-01B)
- Xperia X10 (SonyEricssonSO-01B/SO-01B)
- Xperia X10 (SonyEricssonX10iv/X10i)
- Xperia X10 (X10a/X10a)
- Xperia X10 (X10i/X10i)
- Xperia X10 Mini (E10i/E10i)
- Xperia X10 mini (SonyEricssonE10a/E10a)
- Xperia X10 Mini (SonyEricssonE10i/E10i)
- Xperia X10 mini pro (SonyEricssonU20a/U20a)
- Xperia X10 Mini Pro (U20i/U20i)
- Xperia X8 (E15i/E15i)
- Xperia Z (SO-02E/SO-02E)
- Xperia Z Ultra (C6806/C6806)
- Xperia Z1 (C6903/C6903)
- Xperia Z1 (C6906/C6906)
- Xperia Z1 (C6943/C6943)

### **Sophix\_Digix**

- TAB-750\_G (TAB-750\_G/TAB-750\_G)

### **SOSMART**

- SOSMART T5 (SOSMART\_T5/SOSMART\_T5)

### **Spice**

- Dream Uno (Mi-498\_sprout/Spice Mi-498)
- Dream Uno (Mi-498\_sprout/Spice Mi-498H)
- Smart Flo Mi-449 (hongyu72\_wet\_jb3/SpiceMi-449)
- Smart Flo Mi-449 (SpiceMi449/SpiceMi-449)
- Stellar Mi-438 (Spice/MI-438)
- Stellar Mi-506 (SpiceMi506/Spice Mi-506)

### **Storex**

- eZeeTab10D12-S (eZeeTab10D12-S/eZeeTab10D12-S)
- eZeeTab7D15-M (eZeeTab7D15-M/eZeeTab7D15-M)

### **STOREX**

- eZee'Tab7Q11-M (Tab7Q11/Tab7Q11)
- eZee'Tab7D14-S (STOREX7526/NID\_7010)

## **Sugar**

- Sugar (s9121/SUGAR)

## **sugar\_aums**

- QPOINT (QPI-1/QPI-1)

## **Sumitomo Electric Networks**

- Hikari-iFrame/WDPF-703SE (dhe1100/Hikari-iFrame/WDPF-703SE)

## **TA71CA5\_JP**

- JP SA COUTO, S.A. \_MG070A2T (TA71CA5\_1/TA71CA5)

## **Taiwan Mobile**

- Amazing X3 (TX3/Amazing X3)

## **TaiwanMobile**

- A6S (A6S/A6S)
- Amazing A8 (D78/Amazing A8)
- TaiwanMobile A5C (A5C/A5C)
- TaiwanMobile A6S (A6S/A6S)

## **TCL**

- IDOL 2 S (EOS\_lte/6050A)
- IDOL 2 S (EOS\_lte/6050F)
- IDOL 2 S (EOS\_lte/ALCATEL ONETOUCH 6050A)
- IDOL 2 S (EOS\_lte/OWN S5030)
- L55E6700UDS (movo\_la/movo\_la)
- LE50UHDE5692G (movo/movo)
- POP S3 (RIO\_4G/5050S)

## **TCT**

- 730U (Rio5C/J730U)
- IDOL 2 S (EOS4G/6050Y)
- IDOL 2 S (EOS4G/ALCATEL ONE TOUCH 6050Y)
- IDOL 2 S (EOS4G/Idol2S\_Orange)
- IDOL 2 S (EOS\_lte/6050Y)

- IDOL 2 S (EOS\_lte/TCL S830U)
- IDOL 2 S (EOS\_lte/TCL S838M)
- Idol2 MINI S (MIATA\_lte/6036A)
- POP S3 (RIO\_4G/5050X)
- POP S3 (RIO\_4G/5050Y)
- POP S3 (RIO\_4G/ALCATEL ONETOUCH 5050X)
- POP S3 (RIO\_4G/Siru)
- TCL 738M (Rio5C/TCL J738M)

## **TCT (Alcatel)**

- 5038D (SOUL45\_GSM/5038D)
- 6037Y (Eclipse/6037Y)
- A851L (Viper\_gsm/Alcatel 7030L)
- A851L (Viper\_gsm/Alcatel A851L)
- ALCATEL ONE TOUCH 4005D (Beetle\_Lite\_Edge\_GSM/ALCATEL ONE TOUCH 4005D)
- ALCATEL ONE TOUCH 4005D (Beetle\_Lite\_Edge\_GSM/ALCATEL ONE TOUCH\_4005D)
- ALCATEL ONE TOUCH 4010X (Beetle\_Lite\_GSM/ALCATEL ONE TOUCH 4010A)
- ALCATEL ONE TOUCH 4010X (Beetle\_Lite\_GSM/ALCATEL ONE TOUCH 4010D)
- ALCATEL ONE TOUCH 4010X (Beetle\_Lite\_GSM/ALCATEL ONE TOUCH 4010E)
- ALCATEL ONE TOUCH 4010X (Beetle\_Lite\_GSM/ALCATEL ONE TOUCH 4010X)
- ALCATEL ONE TOUCH 4010X (Beetle\_Lite\_GSM/TCL\_J210)
- ALCATEL ONE TOUCH 4010X (Beetle\_Lite\_GSM/Telenor Smart 2)
- ALCATEL ONE TOUCH 7040A (YARISXL/ALCATEL ONE TOUCH 7040A)
- ALCATEL ONE TOUCH 7041D (YARISXL/ALCATEL ONE TOUCH 7041D)
- ALCATEL ONE TOUCH 903 (one\_touch\_903A\_gsm/ALCATEL ONE TOUCH\_903)
- ALCATEL ONE TOUCH 918S (one\_touch\_918S\_gsm/ALCATEL ONE TOUCH 918S)
- ALCATEL ONE TOUCH 985 (one\_touch\_985\_gsm/ALCATEL ONE TOUCH 985)
- ALCATEL ONE TOUCH 991D (one\_touch\_991D\_gsm/ALCATEL ONE TOUCH 991D)
- ALCATEL ONETOUCH 4037R (SOUL4NA/ALCATEL ONE TOUCH 4037R)
- ALCATEL ONETOUCH 4037R (SOUL4NA/ALCATEL ONETOUCH 4037R)
- ALCATEL ONETOUCH POP D3 (SOUL4NA/ALCATEL ONETOUCH POP D3)
- Boost View 5.0 (YARISXL/Boost View 5.0)
- D819 (HERO8/D819)
- D820X (HERO8/D820X)
- DL900 (YARISXL/DL900)
- E500 (X50D/E500)
- IDOL 2 S (EOS\_lte/6050W)
- IDOL 2 S (EOS\_lte/ALCATEL ONE TOUCH 6050Y)
- Idol S (Diablo\_LTE/ALCATEL ONE TOUCH 6034L)
- Idol S (Diablo\_LTE/ALCATEL ONE TOUCH 6034M)
- Idol S (Diablo\_LTE/ALCATEL ONE TOUCH 6034R)
- Idol S (Diablo\_LTE/ALCATEL ONE TOUCH 6034Y)
- Idol S (Diablo\_LTE/San Remo 4G)
- Idol S (Diablo\_LTE/TCL-S850L)
- Idol S (DiabloHD\_LTE/ALCATEL ONE TOUCH 6035L)
- Idol S (DiabloHD\_LTE/BS472)
- Idol S (DiabloHD\_LTE/MTC 978)
- Idol X (DiabloHD\_LTE/ALCATEL ONE TOUCH 6035R)
- Juke-A554C (A554C/A554C)



- M812C (M812/M812C)
- ONE TOUCH 4007X (Pixo\_GSM/ONE TOUCH 4007A)
- ONE TOUCH 4007X (Pixo\_GSM/ONE TOUCH 4007D)
- ONE TOUCH 4007X (Pixo\_GSM/ONE TOUCH 4007E)
- ONE TOUCH 4007X (Pixo\_GSM/ONE TOUCH 4007X)
- ONE TOUCH 4033X (Yaris\_M\_GSM/4032A)
- ONE TOUCH 4033X (Yaris\_M\_GSM/4032D)
- ONE TOUCH 4033X (Yaris\_M\_GSM/4032E)
- ONE TOUCH 4033X (Yaris\_M\_GSM/4032X)
- ONE TOUCH 4033X (Yaris\_M\_GSM/4033L)
- ONE TOUCH 4033X (Yaris\_M\_GSM/MS3B)
- ONE TOUCH 4033X (Yaris\_M\_GSM/ONE TOUCH 4032A)
- ONE TOUCH 4033X (Yaris\_M\_GSM/ONE TOUCH 4033A)
- ONE TOUCH 4033X (Yaris\_M\_GSM/ONE TOUCH 4033D)
- ONE TOUCH 4033X (Yaris\_M\_GSM/ONE TOUCH 4033E)
- ONE TOUCH 4033X (Yaris\_M\_GSM/ONE TOUCH 4033X)
- ONE TOUCH 4033X (Yaris\_M\_GSM/OWN S3010)
- ONE TOUCH 4033X (Yaris\_M\_GSM/OWN S3010D)
- ONE TOUCH 4033X (Yaris\_M\_GSM/TCLJ330)
- ONE TOUCH 6012A (California\_GSM/ONE TOUCH 6012A)
- ONE TOUCH 983 (one\_touch\_983\_gsm/ALCATEL\_one\_touch\_983)
- ONE TOUCH 983 (ONE\_TOUCH\_983\_gsm/ALCATEL\_one\_touch\_983)
- ONE TOUCH 983 (ONE\_TOUCH\_983\_gsm/ONE TOUCH 983)
- ONE TOUCH 983 (ONE\_TOUCH\_983\_gsm/VALENCIA)
- ONE TOUCH SCRIBE 5 (Scribe5\_gsm/ALCATEL ONE TOUCH 8000A)
- ONE TOUCH SCRIBE 5 (Scribe5\_gsm/ALCATEL ONE TOUCH 8000D)
- ONE TOUCH SCRIBE 5 (Scribe5\_gsm/TCL Y710)
- ONE TOUCH T10 (GR-TB7/GR-TB7)
- ONE TOUCH Ultra 960c (Alltel/ONE\_TOUCH\_960C)
- ONE TOUCH Ultra 960c (nTelos/ONE\_TOUCH\_960C)
- ONE TOUCH Ultra 960c (ONE\_TOUCH\_960C/ADR3010)
- ONE TOUCH Ultra 960c (ONE\_TOUCH\_960C/ONE TOUCH 960C)
- ONE TOUCH Ultra 960c (RadioShack/ADR3010)
- ONE TOUCH Ultra 960c (vulcan/ONE\_TOUCH\_960C)
- ONT TOUCH 4015X (Yaris35\_GSM/4016D)
- ONT TOUCH 4015X (Yaris35\_GSM/ONE TOUCH 4015A)
- ONT TOUCH 4015X (Yaris35\_GSM/ONE TOUCH 4015D)
- ONT TOUCH 4015X (Yaris35\_GSM/ONE TOUCH 4015N)
- ONT TOUCH 4015X (Yaris35\_GSM/ONE TOUCH 4015X)
- ONT TOUCH 4015X (Yaris35\_GSM/ONE TOUCH 4015X-orange)
- ONT TOUCH 4015X (Yaris35\_GSM/ONE TOUCH 4016A)
- ONT TOUCH 4015X (Yaris35\_GSM/Orange Yomi)
- Orange\_Sego (Orange\_Sego/Orange Sego)
- P688L (Rio5C/TCL-P688L)
- P688L (Rio5C/TOM007)
- Pixo 7 (PIXO7/I211)
- Pixo 7 (PIXO7/I212)
- Pixo 7 (PIXO7/I213)
- POP 2 (Alto45/5042A)
- POP 2 (Alto45/5042D)
- POP 2 (Alto45/5042X)

- POP S3 (RIO4G\_TF/ALCATEL A845L)
- POP S3 (RIO\_4G/5050A)
- POP S9 (RIO6\_lte/7050Y)
- POP S9 (RIO6\_lte/ALCATEL A995L)
- POP S9 (RIO6\_lte/Smartphone Android by SFR STARXTREM II)
- POP S9 (RIO6\_lte/STARXTREM II)
- Soul 3.5 (SOUL35/4018A)
- Soul 3.5 (SOUL35/4018D)
- Soul 3.5 (SOUL35/4018E)
- Soul 3.5 (SOUL35/4018F)
- Soul 3.5 (SOUL35/4018M)
- Soul 3.5 (SOUL35/4018X)
- Soul 3.5 (SOUL35/T4018)
- Soul 4 (SOUL4/4035A)
- Soul 4 (SOUL4/4035D)
- Soul 4 (SOUL4/4035X)
- Soul 4 (SOUL4/4035X\_Orange)
- Soul 4 (SOUL4/4035Y)
- Soul 4 (SOUL4/4036E)
- Soul 4.5 (SOUL45\_GSM/5038A)
- Soul 4.5 (SOUL45\_GSM/5038E)
- SOUL 4.5 (SOUL45\_GSM/5038X)
- Soul 4.5 (SOUL45\_GSM/D45)
- TCL 736L (Rio5C/TCL-J736L)
- TCL A988 (one\_touch\_993\_gsm/ALCATEL ONE TOUCH 993)
- TCL A988 (one\_touch\_993\_gsm/MTC\_968)
- TCL A988 (one\_touch\_993D\_gsm/ALCATEL ONE TOUCH 993D)
- TCL D35 (SOUL35/TCL D35)
- TCL DL750 (SOUL4/DL750)
- TCL J929L (Diablo\_LTE/TCL-J929L)
- TCL P360W (Focus5\_CU/TCL P360W)
- VF 860 (Vodafone\_Smart\_II\_gsm/Vodafone Smart II)
- X35E (X35E/X35E)
- X50D (X50D/X50D)

### **TCT Mobile Limited (Alcatel)**

- 6010A (Miata\_3G/6016A)
- 6014X (Miata\_3G/6014X)
- 6016D (Miata\_3G/6016D)
- 6016E (Miata\_3G/6016E)
- 6016X (Miata\_3G/6016X)
- 6037B (Eclipse/6037B)
- 6037K (Eclipse/6037K)
- 6042D (CROSSAPAC/6042D)
- 6043A (DIABLOXPLUS/6043A)
- 6043D (DIABLOXPLUS/6043D)
- 7040N (Yaris5TMO/7040N)
- 7040T (Yaris5TMO/7040T)
- 7045Y (RIO5/7045Y)

- 8030Y (HERO2/8030Y)
- A556C (A556C/A556C)
- ALCATEL 4015T (Yaris35\_GSM/ALCATEL 4015T)
- ALCATEL A564C (Yaris5NA/ALCATEL A564C)
- ALCATEL ONE TOUCH 4030X (Beetle\_GSM/ALCATEL ONE TOUCH 4029A)
- ALCATEL ONE TOUCH 4030X (Beetle\_GSM/ALCATEL ONE TOUCH 4030D)
- ALCATEL ONE TOUCH 4030X (Beetle\_GSM/ALCATEL ONE TOUCH 4030E)
- ALCATEL ONE TOUCH 4030X (Beetle\_GSM/ALCATEL ONE TOUCH 4030X)
- ALCATEL ONE TOUCH 4030X (Beetle\_GSM/ALCATEL ONE TOUCH 4030Y)
- ALCATEL ONE TOUCH 4030X (Beetle\_GSM/ALCATEL ONE TOUCH 4030Y\_orange)
- ALCATEL ONE TOUCH 4030X (Beetle\_GSM/Infinity POP)
- ALCATEL ONE TOUCH 4030X (Beetle\_GSM/Orange Runo)
- ALCATEL ONE TOUCH 4037N (SOUL4NA/ALCATEL ONE TOUCH 4037N)
- ALCATEL ONE TOUCH 4037N (SOUL4NA/ALCATEL ONE TOUCH 4037T)
- ALCATEL ONE TOUCH 5020D (Megane\_GSM/ALCATEL ONE TOUCH 5020A)
- ALCATEL ONE TOUCH 5020D (Megane\_GSM/ALCATEL ONE TOUCH 5020D)
- ALCATEL ONE TOUCH 5020D (Megane\_GSM/ALCATEL ONE TOUCH 5020E)
- ALCATEL ONE TOUCH 5020D (Megane\_GSM/ALCATEL ONE TOUCH 5020T)
- ALCATEL ONE TOUCH 5020D (Megane\_GSM/ALCATEL ONE TOUCH 5020W)
- ALCATEL ONE TOUCH 5020D (Megane\_GSM/ALCATEL ONE TOUCH 5020X)
- ALCATEL ONE TOUCH 5020D (Megane\_GSM/ALCATEL ONE TOUCH 5021E)
- ALCATEL ONE TOUCH 5020D (Megane\_GSM/ALCATEL\_ONE\_TOUCH\_5020D\_Orange)
- ALCATEL ONE TOUCH 5020D (Megane\_GSM/ALCATEL\_ONE\_TOUCH\_5020X\_Orange)
- ALCATEL ONE TOUCH 5020D (Megane\_GSM/AURUS III)
- ALCATEL ONE TOUCH 5020D (Megane\_GSM/MTC 972)
- ALCATEL ONE TOUCH 5020D (Megane\_GSM/Orange Kivo)
- ALCATEL ONE TOUCH 5020D (Megane\_GSM/Telenor Smart Pro 2)
- ALCATEL ONE TOUCH 5020N (Megane/ALCATEL ONE TOUCH 5020N)
- ALCATEL ONE TOUCH 5035D (Camry\_GSM/ALCATEL ONE TOUCH 5035A)
- ALCATEL ONE TOUCH 5035D (Camry\_GSM/ALCATEL ONE TOUCH 5035D)
- ALCATEL ONE TOUCH 5035D (Camry\_GSM/ALCATEL ONE TOUCH 5035E)
- ALCATEL ONE TOUCH 5035D (Camry\_GSM/ALCATEL ONE TOUCH 5035X)
- ALCATEL ONE TOUCH 5035D (Camry\_GSM/TCL J610)
- ALCATEL ONE TOUCH 5035D (Camry\_GSM/TCL S810)
- ALCATEL ONE TOUCH 5036A (YarisL\_GSM/ALCATEL ONE TOUCH 5036A)
- ALCATEL ONE TOUCH 5036D (YarisL\_GSM/ALCATEL ONE TOUCH 5036D)
- ALCATEL ONE TOUCH 5036D (YarisL\_GSM/ONE TOUCH 5036X)
- ALCATEL ONE TOUCH 5036F (YarisL\_GSM/ALCATEL ONE TOUCH 5036F)
- ALCATEL ONE TOUCH 5036X (YarisL\_GSM/ALCATEL ONE TOUCH 5036X)
- ALCATEL ONE TOUCH 5037E (YarisL\_GSM/ALCATEL ONE TOUCH 5037E)
- ALCATEL ONE TOUCH 601 (Telsa/ALCATEL ONE TOUCH 6010)
- ALCATEL ONE TOUCH 6010A (Telsa/ALCATEL ONE TOUCH 6010A)
- ALCATEL ONE TOUCH 6010D (Telsa/ALCATEL ONE TOUCH 6010D)
- ALCATEL ONE TOUCH 6010X (Telsa/ALCATEL ONE TOUCH 6010)
- ALCATEL ONE TOUCH 6010X (Telsa/ALCATEL ONE TOUCH 6010D)
- ALCATEL ONE TOUCH 6010X (Telsa/ALCATEL ONE TOUCH 6010X)
- ALCATEL ONE TOUCH 6010X (Telsa/ALCATEL ONE TOUCH 6010X-orange)
- ALCATEL ONE TOUCH 6010X (Telsa/TCL S520)
- ALCATEL ONE TOUCH 6030A (Diablo/ALCATEL ONE TOUCH 6030A)
- ALCATEL ONE TOUCH 6030D (Diablo/ALCATEL ONE TOUCH 6030D)
- ALCATEL ONE TOUCH 6030N (Diablo/ALCATEL ONE TOUCH 6030N)

- ALCATEL ONE TOUCH 6030X (Diablo/ALCATEL ONE TOUCH 6030A)
- ALCATEL ONE TOUCH 6030X (Diablo/ALCATEL ONE TOUCH 6030D)
- ALCATEL ONE TOUCH 6030X (Diablo/ALCATEL ONE TOUCH 6030X)
- ALCATEL ONE TOUCH 6030X (Diablo/ALCATEL ONE TOUCH 6030X-orange)
- ALCATEL ONE TOUCH 6030X (Diablo/ALCATEL\_ONE\_TOUCH\_6030X\_Orange)
- ALCATEL ONE TOUCH 6030X (Diablo/Optimus\_San\_Remo)
- ALCATEL ONE TOUCH 6030X (Diablo/TCL S820)
- ALCATEL ONE TOUCH 6030X-orange (Diablo/ALCATEL ONE TOUCH 6030X-orange)
- ALCATEL ONE TOUCH 6032 (Alpha/ALCATEL ONE TOUCH 6032)
- ALCATEL ONE TOUCH 6032A (Alpha/ALCATEL ONE TOUCH 6032A)
- ALCATEL ONE TOUCH 6032X (Alpha/ALCATEL ONE TOUCH 6032X)
- ALCATEL ONE TOUCH 6033A (DiabloHD/ALCATEL ONE TOUCH 6033A)
- ALCATEL ONE TOUCH 6033M (DiabloHD/ALCATEL ONE TOUCH 6033M)
- ALCATEL ONE TOUCH 6033X (DiabloHD/ALCATEL ONE TOUCH 6033M)
- ALCATEL ONE TOUCH 6033X (DiabloHD/ALCATEL ONE TOUCH 6033X)
- ALCATEL ONE TOUCH 6033X (DiabloHD/TCL S850)
- ALCATEL ONE TOUCH 6040A (DIABLOX/ALCATEL ONE TOUCH 6040A)
- ALCATEL ONE TOUCH 6040D (DIABLOX/ALCATEL ONE TOUCH 6040D)
- ALCATEL ONE TOUCH 6040D (DIABLOX/TCL S950)
- ALCATEL ONE TOUCH 6040E (DIABLOX/ALCATEL ONE TOUCH 6040E)
- ALCATEL ONE TOUCH 6040X (DIABLOX/ALCATEL ONE TOUCH 6040X)
- ALCATEL ONE TOUCH 7024W (Rav4/ALCATEL ONE TOUCH 7024R)
- ALCATEL ONE TOUCH 7024W (Rav4/ALCATEL ONE TOUCH 7024W)
- ALCATEL ONE TOUCH 7024W (Rav4/ALCATEL ONE TOUCH FIERCE)
- ALCATEL ONE TOUCH 7025D (Rav4/ALCATEL ONE TOUCH 7025D)
- ALCATEL ONE TOUCH 7040D (YARISXL/ALCATEL ONE TOUCH 7040D)
- ALCATEL ONE TOUCH 7040E (YARISXL/ALCATEL ONE TOUCH 7040E)
- ALCATEL ONE TOUCH 7040K (YARISXL/ALCATEL ONE TOUCH 7040K)
- ALCATEL ONE TOUCH 7040X (YARISXL/ALCATEL ONE TOUCH 7040X)
- ALCATEL ONE TOUCH 7041X (YARISXL/ALCATEL ONE TOUCH 7041X)
- ALCATEL ONE TOUCH 7042D (YARISXL/ALCATEL ONE TOUCH 7042D)
- ALCATEL ONE TOUCH 7047D (YARIS\_55/ALCATEL ONE TOUCH 7047D)
- ALCATEL ONE TOUCH 7047E (YARIS\_55/ALCATEL ONE TOUCH 7047E)
- ALCATEL ONE TOUCH 8008D (Scribe5HD/ALCATEL ONE TOUCH 8008D)
- ALCATEL ONE TOUCH 8008D (Scribe5HD/ALCATEL ONE TOUCH 8008X)
- ALCATEL ONE TOUCH 8008D (Scribe5HD/Orange Infinity 8008X)
- ALCATEL ONE TOUCH 8020A (SCRIBEPRO/ALCATEL ONE TOUCH 8020A)
- ALCATEL ONE TOUCH 8020D (SCRIBEPRO/ALCATEL ONE TOUCH 8020D)
- ALCATEL ONE TOUCH 8020E (SCRIBEPRO/ALCATEL ONE TOUCH 8020E)
- ALCATEL ONE TOUCH 8020X (SCRIBEPRO/ALCATEL ONE TOUCH 8020X)
- ALCATEL one touch 890D (one\_touch\_890D\_gsm/ALCATEL one touch 890D)
- ALCATEL ONE TOUCH 903 (one\_touch\_903\_gsm/ALCATEL ONE TOUCH 903)
- ALCATEL ONE TOUCH 903 (one\_touch\_903\_gsm/ALCATEL\_ONE\_TOUCH\_903)
- ALCATEL ONE TOUCH 903 (one\_touch\_903A\_gsm/ALCATEL\_one\_touch\_903)
- ALCATEL ONE TOUCH 903 (one\_touch\_903D\_gsm/ALCATEL ONE TOUCH 903D)
- ALCATEL ONE TOUCH 903A (one\_touch\_903A\_gsm/ALCATEL ONE TOUCH 903A)
- ALCATEL ONE TOUCH 903D (one\_touch\_903D\_gsm/ALCATEL ONE TOUCH 903D)
- ALCATEL ONE TOUCH 908 (one\_touch\_908\_gsm/ALCATEL ONE TOUCH 908)
- ALCATEL ONE TOUCH 916 (one\_touch\_916\_gsm/ALCATEL ONE TOUCH 916)
- ALCATEL ONE TOUCH 916A (one\_touch\_916A\_gsm/ALCATEL ONE TOUCH 916A)
- ALCATEL ONE TOUCH 916D (one\_touch\_916D\_gsm/ALCATEL ONE TOUCH 916D)

- ALCATEL ONE TOUCH 918 (one\_touch\_918\_gsm/ALCATEL ONE TOUCH 918)
- ALCATEL ONE TOUCH 918 (one\_touch\_918\_gsm/ALCATEL one touch 918)
- ALCATEL ONE TOUCH 918 (one\_touch\_918\_gsm/ALCATEL\_one\_touch\_918)
- ALCATEL ONE TOUCH 918 (one\_touch\_918\_gsm/Alcatel\_one\_touch\_918\_Orange)
- ALCATEL ONE TOUCH 918A (one\_touch\_918A\_gsm/ALCATEL ONE TOUCH 918A)
- ALCATEL ONE TOUCH 918A (one\_touch\_918A\_gsm/ALCATEL\_one\_touch\_918A)
- ALCATEL ONE TOUCH 918D (one\_touch\_918D\_gsm/ALCATEL ONE TOUCH 918D)
- ALCATEL ONE TOUCH 918D (ONE\_TOUCH\_918D\_umts/ALCATEL ONE TOUCH 918D)
- ALCATEL ONE TOUCH 918N (one\_touch\_918N\_gsm/ALCATEL ONE TOUCH 918N)
- ALCATEL ONE TOUCH 918N (ONE\_TOUCH\_918N\_umts/ALCATEL ONE TOUCH 918N)
- ALCATEL ONE TOUCH 918S (one\_touch\_918S\_gsm/ALCATEL ONE TOUCH 918S)
- ALCATEL ONE TOUCH 922 (one\_touch\_922\_gsm/ALCATEL ONE TOUCH 922)
- ALCATEL ONE TOUCH 928D (ONE\_TOUCH\_928D\_gsm/ALCATEL ONE TOUCH 928D)
- ALCATEL ONE TOUCH 930D (OT-930/ALCATEL ONE TOUCH 930D)
- ALCATEL ONE TOUCH 930D (OT-930/ALCATEL ONE TOUCH 930N)
- ALCATEL ONE TOUCH 985 (one\_touch\_985\_gsm/ALCATEL ONE TOUCH 985)
- ALCATEL ONE TOUCH 985 (one\_touch\_985\_gsm/ALCATEL\_one\_touch\_985)
- ALCATEL ONE TOUCH 985 (one\_touch\_985\_gsm/ALCATEL\_ONE\_TOUCH\_985)
- ALCATEL ONE TOUCH 985 (one\_touch\_985\_gsm/Telenor\_One\_Touch\_C)
- Alcatel one touch 985 (one\_touch\_985A\_gsm/ALCATEL\_one\_touch\_985)
- ALCATEL ONE TOUCH 985D (one\_touch\_985D\_gsm/ALCATEL ONE TOUCH 985D)
- ALCATEL ONE TOUCH 985N (one\_touch\_985N\_gsm/ALCATEL ONE TOUCH 985N)
- ALCATEL one touch 986+ (OT986/ALCATEL one touch 986+)
- ALCATEL ONE TOUCH 990 (one\_touch\_990\_gsm/ALCATEL ONE TOUCH 990)
- Alcatel one touch 990 Orange (one\_touch\_990\_gsm/Alcatel one touch 990 Orange)
- ALCATEL ONE TOUCH 990A (one\_touch\_990A\_gsm/ALCATEL ONE TOUCH 990A)
- ALCATEL one touch 990C (one\_touch\_990C\_cdma/ALCATEL one touch 990C)
- ALCATEL one touch 990C+ (one\_touch\_990C\_Plus\_cdma/ALCATEL one touch 990C+)
- ALCATEL ONE TOUCH 991 (one\_touch\_991\_gsm/ALCATEL ONE TOUCH 991)
- ALCATEL ONE TOUCH 991 (ONE\_TOUCH\_991\_gsm/ALCATEL ONE TOUCH 991)
- ALCATEL ONE TOUCH 991 (ONE\_TOUCH\_991\_gsm/ALCATEL\_one\_touch\_991)
- ALCATEL ONE TOUCH 991 (ONE\_TOUCH\_991\_gsm/Telenor\_Smart\_Pro)
- ALCATEL ONE TOUCH 991 (ONE\_TOUCH\_991D\_gsm/ALCATEL ONE TOUCH 991D)
- ALCATEL ONE TOUCH 991A (ONE\_TOUCH\_991A\_gsm/ALCATEL ONE TOUCH 991A)
- ALCATEL ONE TOUCH 991D (one\_touch\_991D\_gsm/ALCATEL ONE TOUCH 991D)
- ALCATEL ONE TOUCH 991D (ONE\_TOUCH\_991D\_gsm/ALCATEL ONE TOUCH 991D)
- ALCATEL ONE TOUCH 991S (one\_touch\_991S\_gsm/ALCATEL ONE TOUCH 991S)
- ALCATEL ONE TOUCH 991T (one\_touch\_991T\_gsm/ALCATEL ONE TOUCH 991T)
- ALCATEL ONE TOUCH 992D (Martell\_lite\_GSM/ALCATEL ONE TOUCH 992)
- ALCATEL ONE TOUCH 992D (Martell\_lite\_GSM/ALCATEL ONE TOUCH 992D)
- ALCATEL ONE TOUCH 992D (Martell\_lite\_GSM/TCL S500)
- ALCATEL ONE TOUCH 992D (Martell\_lite\_GSM/TCL S600)
- ALCATEL ONE TOUCH 993D (one\_touch\_993D\_gsm/ALCATEL ONE TOUCH 993D)
- ALCATEL ONE TOUCH 995 (one\_touch\_995\_gsm/ALCATEL\_one\_touch\_995)
- ALCATEL ONE TOUCH 995 (one\_touch\_995\_gsm/Optimus\_Madrid)
- ALCATEL ONE TOUCH 995 (one\_touch\_995\_gsm/Telenor\_Smart\_HD)
- ALCATEL ONE TOUCH 995A (one\_touch\_995\_gsm/ALCATEL\_one\_touch\_995A)
- ALCATEL ONE TOUCH 997D (Martell\_GSM/ALCATEL ONE TOUCH 997)
- ALCATEL ONE TOUCH 997D (Martell\_GSM/ALCATEL ONE TOUCH 997D)
- ALCATEL ONE TOUCH 997D (Martell\_GSM/BASE\_Lutea\_3)
- ALCATEL ONE TOUCH 997D (Martell\_GSM/TCL S710)

- ALCATEL ONE TOUCH 997D (Martell\_GSM/TCL S800)
- ALCATEL ONE TOUCH D668 (DANIEL/ALCATEL ONE TOUCH D668)
- ALCATEL ONE TOUCH D668 (DANIEL/TCL D668)
- ALCATEL ONE TOUCH D668 (DANIEL/TCL-D668)
- ALCATEL ONE TOUCH Fierce (Rav4/ALCATEL ONE TOUCH 7024N)
- ALCATEL ONE TOUCH Fierce (Rav4/ALCATEL ONE TOUCH 7024W)
- ALCATEL ONE TOUCH Fierce (Rav4/ALCATEL ONE TOUCH Fierce)
- ALCATEL one touch J320 (Iris/ALCATEL one touch J320)
- ALCATEL ONE TOUCH P310A (POP7/ALCATEL ONE TOUCH P310A)
- ALCATEL ONE TOUCH P320A (POP8/ALCATEL ONE TOUCH P320A)
- ALCATEL ONE TOUCH P321 (POP8/ALCATEL ONE TOUCH P321)
- ALCATEL ONE TOUCH918N (one\_touch\_918\_gsm/ALCATEL ONE TOUCH 918N)
- ALCATEL ONETOUCH 6032 (Alpha/ALCATEL ONETOUCH 6032)
- ALCATEL ONETOUCH 6032A (Alpha/ALCATEL ONETOUCH 6032A)
- ALCATEL ONETOUCH 6032X (Alpha/ALCATEL ONETOUCH 6032X)
- ALCATEL ONETOUCH 6043D (DIABLOXPLUS/ALCATEL ONETOUCH 6043D)
- ALCATEL ONETOUCH P310A (POP7/ALCATEL ONE TOUCH P310A)
- ALCATEL ONETOUCH P310A (POP7/ALCATEL ONETOUCH P310A)
- ALCATEL OT 918 (OT\_918\_gsm/ALCATEL OT 918)
- ALCATEL OT 919 (OT\_919\_gsm/ALCATEL OT 919)
- ALCATEL OT 919 HelloKitty (OT\_919\_HelloKitty\_gsm/ALCATEL OT 919 HelloKitty)
- Alcatel OT-980 (msm7627\_ffa/Alcatel OT-980)
- Alcatel OT-980 (OT-980\_gsm/Alcatel OT-980)
- Alcatel OT-980A (msm7627\_ffa/Alcatel OT-980A)
- Alcatel OT-980A (OT-980\_gsm/Alcatel OT-980A)
- Alcatel OT-980A (OT-980A\_gsm/Alcatel OT-980A)
- Alcatel OT-981A (OT-980\_gsm/Alcatel OT-981A)
- Alcatel OT-981A (OT-981\_gsm/Alcatel OT-981A)
- Alcatel OT-981A (OT-981A\_gsm/Alcatel OT-981A)
- ALCATEL\_ONE\_TOUCH\_5037A (YarisL\_GSM/ALCATEL ONE TOUCH 5037A)
- ALCATEL\_ONE\_TOUCH\_5037X (YarisL\_GSM/ALCATEL ONE TOUCH 5037X)
- ALCATEL\_ONE\_TOUCH\_6010X\_Orange  
(ONE\_TOUCH\_6010X\_gsm/ALCATEL\_ONE\_TOUCH\_6010X\_Orange)
- ALCATEL\_ONE\_TOUCH\_6030X\_Orange  
(ONE\_TOUCH\_6030X\_gsm/ALCATEL\_ONE\_TOUCH\_6030X\_Orange)
- ALCATEL\_ONE\_TOUCH\_7047A (YARIS\_55/ALCATEL ONE TOUCH 7047A)
- ALCATEL\_one\_touch\_890 (one\_touch\_890\_gsm/ALCATEL\_one\_touch\_890)
- ALCATEL\_one\_touch\_891 (one\_touch\_891\_gsm/ALCATEL\_one\_touch\_891)
- ALCATEL\_ONE\_TOUCH\_903 (one\_touch\_903\_gsm/ALCATEL\_ONE\_TOUCH\_903)
- ALCATEL\_ONE\_TOUCH\_903 (one\_touch\_903A\_gsm/ALCATEL\_ONE\_TOUCH\_903)
- ALCATEL\_one\_touch\_906 (OT-906/ALCATEL\_one\_touch\_906)
- ALCATEL\_one\_touch\_906Y (OT-906/ALCATEL\_one\_touch\_906Y)
- ALCATEL\_one\_touch\_908A (one\_touch\_908A\_gsm/ALCATEL\_one\_touch\_908A)
- ALCATEL\_one\_touch\_908F (one\_touch\_908F\_gsm/ALCATEL\_one\_touch\_908F)
- Alcatel\_one\_touch\_908F (one\_touch\_908F\_gsm/Alcatel\_one\_touch\_908F)
- ALCATEL\_one\_touch\_908F\_Orange  
(one\_touch\_908F\_gsm/ALCATEL\_one\_touch\_908F\_Orange)
- Alcatel\_one\_touch\_908F\_Orange (one\_touch\_908F\_gsm/Alcatel\_one\_touch\_908F\_Orange)
- ALCATEL\_one\_touch\_908M (one\_touch\_908M\_gsm/ALCATEL\_one\_touch\_908M)
- ALCATEL\_one\_touch\_908S (one\_touch\_908S\_gsm/ALCATEL\_one\_touch\_908S)
- ALCATEL\_one\_touch\_909A (one\_touch\_909A\_gsm/ALCATEL\_one\_touch\_909A)

- ALCATEL\_one\_touch\_909B (one\_touch\_909B\_cdma/ALCATEL\_one\_touch\_909B)
- ALCATEL\_one\_touch\_909S (one\_touch\_909S\_gsm/ALCATEL\_one\_touch\_909S)
- ALCATEL\_one\_touch\_910 (one\_touch\_910\_gsm/ALCATEL\_one\_touch\_910)
- ALCATEL\_one\_touch\_910A (one\_touch\_910A\_gsm/ALCATEL\_one\_touch\_910A)
- ALCATEL\_one\_touch\_913D (OT-913D/ALCATEL\_one\_touch\_913D)
- Alcatel\_one\_touch\_918\_Orange (one\_touch\_918\_gsm/Alcatel\_one\_touch\_918\_Orange)
- ALCATEL\_one\_touch\_918D (one\_touch\_918D\_umts/ALCATEL\_one\_touch\_918D)
- ALCATEL\_ONE\_TOUCH\_918M (one\_touch\_918M\_gsm/ALCATEL\_ONE\_TOUCH\_918M)
- ALCATEL\_one\_touch\_918M (one\_touch\_918M\_umts/ALCATEL\_one\_touch\_918M)
- ALCATEL\_one\_touch\_918N (one\_touch\_918N\_umts/ALCATEL\_one\_touch\_918N)
- ALCATEL\_one\_touch\_976 (OT-976/ALCATEL\_one\_touch\_976)
- ALCATEL\_one\_touch\_978 (OT-978/ALCATEL\_one\_touch\_978)
- ALCATEL\_one\_touch\_979 (OT-979/ALCATEL\_one\_touch\_979)
- ALCATEL\_one\_touch\_979\_HelloKitty (OT-979/ALCATEL\_one\_touch\_979\_HelloKitty)
- ALCATEL\_one\_touch\_983A (ONE\_TOUCH\_983A\_gsm/ALCATEL\_one\_touch\_983A)
- ALCATEL\_one\_touch\_988 (one\_touch\_988\_cdma/ALCATEL\_one\_touch\_988)
- ALCATEL\_one\_touch\_990A (one\_touch\_990A\_gsm/ALCATEL\_one\_touch\_990A)
- ALCATEL\_one\_touch\_991 (one\_touch\_991\_gsm/ALCATEL\_one\_touch\_991)
- ALCATEL\_one\_touch\_991 (ONE\_TOUCH\_991A\_gsm/ALCATEL\_one\_touch\_991)
- ALCATEL\_ONE\_TOUCH\_991\_Orange  
(one\_touch\_991\_gsm/ALCATEL\_ONE\_TOUCH\_991\_Orange)
- ALCATEL\_one\_touch\_995 (one\_touch\_995\_gsm/ALCATEL\_one\_touch\_995)
- ALCATEL\_one\_touch\_995 (one\_touch\_995\_gsm/RPSPE4301)
- ALCATEL\_one\_touch\_995 (one\_touch\_995\_gsm/Telenor\_One\_Touch\_S)
- ALCATEL\_one\_touch\_995 (one\_touch\_995\_gsm/Telenor\_Smart\_HD)
- ALCATEL\_one\_touch\_995A (one\_touch\_995\_gsm/ALCATEL\_one\_touch\_995A)
- ALCATEL\_one\_touch\_995A (one\_touch\_995A\_gsm/ALCATEL\_one\_touch\_995A)
- ALCATEL\_one\_touch\_995S (one\_touch\_995\_gsm/ALCATEL\_one\_touch\_995S)
- ALCATEL\_ONE\_TOUCH\_P310X (POP7/ALCATEL ONE TOUCH P310X)
- ALCATEL\_ONE\_TOUCH\_P320X (POP8/ALCATEL ONE TOUCH P320X)
- ALCATEL\_OT\_990M (OT\_990M\_gsm/ALCATEL\_OT\_990M)
- ALOO 6032 (Alpha/ALOO 6032)
- ASB-D T918 (ASB-D\_T918/ASB-D T918)
- ASB-D T918 (B-GriffinPlus\_TD/ASB-D T918)
- ATEL ONE TOUCH 995 (one\_touch\_995\_gsm/ALCATEL\_one\_touch\_995)
- BASE\_Varia (BASE\_Varia\_gsm/BASE\_Varia)
- D820 (HERO8/D820)
- EVO7 (EVO7/MTC 1065)
- EVO7 (EVO7/onetouch EVO7)
- EVO7 (EVO7/starTIM tab 7)
- freebit Panda\_m14 (YARIS\_55/freebit Panda\_m14)
- I-L1 (mercury/I-L1)
- I216A (PIXI7/I216A)
- I216X (PIXI7/I216X)
- I220 (PIXI8/I220)
- I221 (PIXI8/I221)
- Idol2 MINI S (MIATA\_lte/6036X)
- Idol2 MINI S (MIATA\_lte/6036Y)
- Megafon Login (OT-930/MegaFon\_SP-AI)
- MegaFon\_SP-A10 (MegaFon\_SP-A10/MegaFon\_SP-A10)
- MegaFon\_SP-A10 (one\_touch\_995\_gsm/MegaFon\_SP-A10)

- Moov2 (move\_2\_gsm/move 2)
- MOVE (MOVE\_gsm/MOVE)
- move 2 (move\_2\_gsm/move 2)
- MTC 960 (MTC\_960\_gsm/MTC 960)
- MTC 970 (Beetle\_GSM/MTC 970)
- MTC-962 (MTC-962\_gsm/MTC-962)
- MTC975 (Camry\_GSM/MTC975)
- ONE TOUCH 4011X (BeetleliteJB/ONE TOUCH 4011X)
- ONE TOUCH 6012D (California/ALCATEL ONE TOUCH 6012D)
- ONE TOUCH 6012D (California/ALCATEL ONE TOUCH 6012X)
- ONE TOUCH 6012D (California/Mobile Sosh)
- ONE TOUCH 6012D (California/ONE TOUCH 6012A)
- ONE TOUCH 6012D (California/ONE TOUCH 6012D)
- ONE TOUCH 6012D (California/ONE TOUCH 6012E)
- ONE TOUCH 6012D (California/ONE TOUCH 6012X)
- ONE TOUCH 6012D (California/ONE TOUCH IDOL MINI)
- ONE TOUCH 6012D (California/Orange Covo)
- ONE TOUCH 6012D (California/Orange Hiro)
- ONE TOUCH 6012X (California/ONE TOUCH 6012X)
- ONE TOUCH 8020D (SCRIBEPRO/ONE TOUCH 8020D)
- One Touch 890D (one\_touch\_890D\_gsm/ALCATEL one touch 890D)
- one touch 906 (Martini/one touch 906)
- One Touch 906 (one\_touch\_906\_gsm/ALCATEL\_one\_touch\_906Y)
- One Touch 908 (one\_touch\_908\_gsm/ALCATEL ONE TOUCH 908)
- One Touch 908 (one\_touch\_908\_gsm/ALCATEL\_one\_touch\_908)
- One Touch 908 (one\_touch\_908\_gsm/Alcatel\_one\_touch\_908F\_Orange)
- ONE TOUCH 983M (ONE\_TOUCH\_983M\_gsm/ONE TOUCH 983M)
- One Touch 990 (one\_touch\_990\_gsm/Alcatel one touch 908F Orange)
- One Touch 990 (one\_touch\_990\_gsm/Alcatel one touch 990 Orange)
- One Touch 990 (one\_touch\_990\_gsm/ALCATEL ONE TOUCH 990)
- One Touch 990 (one\_touch\_990\_gsm/ALCATEL one touch 990)
- One Touch 990 (one\_touch\_990\_gsm/ALCATEL\_one\_touch\_990)
- One Touch 990 (one\_touch\_990\_gsm/Los Angeles)
- One Touch 990 (one\_touch\_990\_gsm/TCL A990)
- One Touch 990 (one\_touch\_990\_gsm/TCL ONE TOUCH 990)
- One Touch 990 (one\_touch\_990\_gsm/Telenor\_OneTouch)
- One Touch 990 (one\_touch\_990\_gsm/Vodafone 958)
- One Touch 990A (one\_touch\_990A\_gsm/ALCATEL\_one\_touch\_990A)
- One Touch 990S (one\_touch\_990S\_gsm/Alcatel one touch 990S)
- One Touch 990S (one\_touch\_990S\_gsm/ALCATEL\_one\_touch\_990S)
- one touch 995C+ (one\_touch\_995C\_cdma/one touch 995C+)
- ONE TOUCH C505C (ONE\_TOUCH\_C505C\_cdma/ONE TOUCH C505C)
- one touch D920 (one\_touch\_D920/ALCATEL one touch D920)
- one touch D920 (one\_touch\_D920/one touch D920)
- ONE TOUCH EVO7HD (E710/MTC 1078)
- ONE TOUCH EVO7HD (E710/ONE TOUCH E710)
- ONE TOUCH EVO7HD (E710/ONE TOUCH EVO7HD)
- ONE TOUCH EVO8HD (E720/ONE TOUCH EVO7HD)
- ONE TOUCH EVO8HD (E720/ONE TOUCH EVO8HD)
- one touch T20 (T20/one touch T20)
- ONE TOUCH TAB 7 (T011/ONE TOUCH TAB 7)



- ONE TOUCH TAB 7 (T011/TCL TAB 7)
- ONE TOUCH TAB 7HD (T016/ONE TOUCH TAB 7HD)
- ONE TOUCH TAB 8HD (T021/ONE TOUCH TAB 8HD)
- one\_touch\_D920\_ALIQ (one\_touch\_D920/one touch D920)
- ONE\_TOUCH\_P310A (POP7/ONE TOUCH P310A)
- ONE\_TOUCH\_P310X (POP7/ALCATEL ONE TOUCH P310X)
- onetouch T60 (T60/onetouch T60)
- OP070 (OP070/OP070)
- Orange\_infinity\_996 (one\_touch\_996\_gsm/Orange\_infinity\_996)
- OT-990C (OT-990C\_cdma/OT-990C)
- OWN S4010 (Telsa/OWN S4010)
- OWN S5010 (DiabloHD/OWN S5010)
- OWN\_S4025 (YARIS\_55/OWN\_S4025)
- P330X (Pop7\_LTE/P330X)
- P330X\_orange (Pop7\_LTE/P330X\_orange)
- P350X (POP8\_LTE/P350X)
- PandA\_m14 (YARIS\_55/PandA\_m14)
- RASPG3201 (RASPG3201\_umts/RASPG3201)
- RPSPG3201 (RPSPG3201\_umts/RPSPG3201)
- Smartphone Android by SFR STARADDICT II (one\_touch\_996\_gsm/Smartphone Android by SFR STARADDICT II)
- Smartphone Android by SFR STARADDICT II (one\_touch\_996\_gsm/Smartphone\_Android\_by\_SFR\_STARADDICT\_II)
- T10 (T10/one touch T10)
- TAB 7 DUAL CORE (T015/TAB 7 DUAL CORE)
- TAB 7 DUAL CORE (T017/TAB 7 DUAL CORE)
- TCL A506 (TCL\_A506/TCL A506)
- TCL A510 (TCL\_A510/TCL A510)
- TCL A865 (TCL\_A865/TCL A865)
- TCL A890 2SIM (TCL\_890D\_gsm/TCL A890 2SIM)
- TCL A909 (TCL-A909\_A909\_gsm/TCL A909)
- TCL A919 (A919\_gsm/TCL A919)
- TCL A919 (TCL\_A919\_umts/TCL A919)
- TCL A966 (TCL\_A966\_gsm/TCL A966)
- TCL A968 (TCL\_A968/TCL A968)
- TCL A980 (TCL\_A980\_gsm/TCL A980)
- TCL A986 (TCL\_A986\_gsm/TCL A986)
- TCL A998 (TCL\_A998\_gsm/TCL A998)
- TCL C990+ (TCL\_C990\_Plus\_cdma/TCL C990+)
- TCL C995 (TCL\_C995\_cdma/TCL C995)
- TCL D40 DUAL (D40/TCL D40 DUAL)
- TCL D515 (TCL\_D515\_cdma/TCL D515)
- TCL D662 (TCL\_D662\_cdma/TCL D662)
- TCL D706 (EG502/TCL D706)
- TCL D768 (EG501/TCL D768)
- TCL D920 (TCL\_D920/TCL D920)
- TCL D920 (TCL\_D920/TCL-D920)
- TCL E928 (E928\_TD/TCL E928)
- TCL E928 (Griffin\_TD/TCL E928)
- TCL H900M (HERO2/TCL H900M)
- TCL J210C (TCL\_J210C\_cdma/TCL J210C)

- TCL J210C (TCL\_J210C\_cdma/TCL-J210C)
- TCL J300 (Megane/ALCATEL ONE TOUCH 5020T)
- TCL J300 (Megane/TCL J300)
- TCL J310 (MeganeB/TCL J310)
- TCL J320 (Iris/TCL J320)
- TCL J320C (Daniel\_lite/TCL J320C)
- TCL J320T (IrisTD/TCL J320T)
- TCL J600T (Iris2TD/TCL J600T)
- TCL J620 (md501/TCL J620)
- TCL J630 (Iris2PlusUMTS/J630)
- TCL J630T (Iris2PlusTD/TCL J630T)
- TCL J720 (YARISXL/TCL J720)
- TCL J726T (YARISXL/TCL J726T)
- TCL J900 (Camry2/TCL J900)
- TCL J900T (Camry2\_TD/TCL J900T)
- TCL J920 (YARIS\_55/TCL J920)
- TCL J926T (YARIS\_55/TCL J926T)
- TCL J928 (Prius/TCL J928)
- TCL J938M (RIO55\_LTE/TCL J938M)
- TCL P301C (Cooper\_40/TCL P301C)
- TCL P301M (TCL\_P301M/TCL P301M)
- TCL P331M (TCL\_P331M/TCL P331M)
- TCL P606 (Rav4\_GSM/TCL P600)
- TCL P606 (Rav4\_GSM/TCL P606)
- TCL P606 (Rav4\_GSM/TCL P606T)
- TCL P631M (Civic\_X/TCL P631M)
- TCL P728M (CROSS\_LTE/TCL P728M)
- TCL S300T (TCLS300T/TCL S300T)
- TCL S500 (TCL\_S500\_GSM/TCL S500)
- TCL S520 (TCL\_S520\_GSM/TCL S520)
- TCL S530T (California/TCL S530T)
- TCL S600 (TCL\_S600\_GSM/TCL S600)
- TCL S700 (TCLS700/TCL S700)
- TCL S700T (TCLS700T/TCL S700T)
- TCL S720 (Cross55/TCL S720)
- TCL S720T (Cross55/TCL S720T)
- TCL S725T (Cross55\_TD\_Plus/TCL\_S725T)
- TCL S800 (TCL\_S800\_GSM/TCL S800)
- TCL S820 (Diablo/TCL S820)
- TCL S850 (DiabloHD/TCL S850)
- TCL S860 (Alpha/TCL S860)
- TCL S900 (S900/TCL S900)
- TCL S950 (DIABLOX/TCL S950)
- TCL S950T (DIABLOX/TCL S950T)
- TCL S960 (DIABLOXPLUS/TCL S960)
- TCL S960T (DIABLOXPLUS/TCL S960T)
- TCL W969 (TCL\_W969\_gsm/TCL W969)
- TCL Y900 (Scribe5HD\_GSM/TCL Y900)
- TCL Y910 (SCRIBEPRO/TCL Y910)
- TCL Y910T (SCRIBEPRO/TCL Y910T)
- TCL-J320D (Daniel\_lite\_2S/TCL-J320D)

- TCL-J900C (TCL\_J900C/TCL-J900C)
- TCL-P306C (Ford50/TCL-P306C)
- TCL-S806 (TCL-S806/TCL-S806)
- TCL\_6110A (Telsa/TCL 6110A)
- TCL\_6110A (Telsa/TCL\_6110A)
- TCL\_A510 (TCL\_A510/TCL\_A510)
- TCL\_A988 (TCL\_A988\_gsm/TCL\_A988)
- TCL\_J636D (msm7627a\_a5y\_j636d/TCL\_J636D)
- TCL\_J706T (Focus\_L/TCL\_J706T)
- TCL\_U980 (TCL\_U980/TCL\_U980)
- TCL\_W939 (TCL\_W939\_gsm/TCL\_W939)
- TCL\_W969 (TCL\_A919\_umts/TCL\_W969)
- Telenor Smart (one\_touch\_985\_gsm/Telenor Smart)
- Telenor\_OneTouch (one\_touch\_990\_gsm/Telenor\_OneTouch)
- Telenor\_Smart (one\_touch\_985\_gsm/Telenor\_Smart)
- tmn smarta8 (ONE\_TOUCH\_991D\_gsm/moche smart a8)
- tmn smarta8 (ONE\_TOUCH\_991D\_gsm/tmn smart a8)
- USCC\_ALCATEL\_one\_touch\_909B  
(one\_touch\_909B\_cdma/USCC\_ALCATEL\_one\_touch\_909B)
- USCC\_ALCATEL\_one\_touch\_988 (one\_touch\_988\_cdma/USCC\_ALCATEL\_one\_touch\_988)
- Vancouver\_Orange (Vancouver\_gsm/Vancouver\_Orange)
- VF685 (VF685/VF685)
- Vip\_MiniDroid (one\_touch\_890\_gsm/Vip\_MiniDroid)
- Vodafone 785 (Vodafone\_785/MTC 982)
- Vodafone 785 (Vodafone\_785/Vodafone 785)
- Vodafone 861 (one\_touch\_922\_gsm/ALCATEL ONE TOUCH 922)
- Vodafone 861 (one\_touch\_922\_gsm/Vodafone 861)
- Vodafone 975N (SmartIII4/Vodafone 975N)
- Vodafone 985N (Vodafone985N/Vodafone 985N)
- Vodafone Smart III (with NFC) (Vodafone\_975N/Vodafone 975N)
- Vodafone Smart Tab 4 (Vodafone\_Smart\_Tab\_4/Vodafone Smart Tab 4)
- Vodafone\_Smart\_Tab\_3G (Vodafone\_Smart\_Tab\_3G/Vodafone Smart Tab 3G)
- Vodafone\_Smart\_Tab\_4G (Vodafone\_Smart\_Tab\_4G/Vodafone Smart Tab 4G)

## **Technicolor**

- T-Hub2 (omap4\_WT3/T-Hub2)

## **tecmobile**

- OmnisOne (OmnisOne/Omnis One)

## **TECNO**

- H5S (up09\_tecno\_h5s/TECNO H5S)
- H7S (qp16\_tecno\_h7s/H7S)
- M3 (up11\_tecno\_m3s/TECNO M3S)
- P5 (up08\_tecno\_p5s/TECNO P5S)

- TECNO-A7S (TECNO-A7S/TECNO-A7S)

## **Tele2**

- Tele2fon V4 (Tele2fon\_v4/Tele2fon v4)
- Tele2fon V5 (Tele2fon\_v5/Tele2fon v5)

## **Teleepoch**

- Chaser (chaser-921/Chaser)
- Essentiel B SmartTab 1002 (T9660R/SmartTAB 1002)
- PMI920 (MaxBravo/PMI920)
- U670C (U670C/U670C)
- U675 (U675/U675)
- UMX U680C (U680C/U680C)

## **Telefunken**

- VP73\_Telefunken (Telefunken/VP73\_Telefunken)

## **Tesco**

- hudl 2 (HTF8A4/Hudl 2)
- Hudl 2 (HTF8A4/Hudl 2)
- Hudl HT7S3 (ht7s3/Hudl HT7S3)
- Hudl HT7S3 (ht7s3/hudl ht7s3)

## **THOMSON**

- THOMSON PRIMO7 Tablet (PRIMO7/PRIMO7)
- THOMSON PRIMO8 Tablet (AMLMY8306P/PRIMO8)

## **Thomson**

- TLink 455 (TLINK455/TLINK455)

## **THTF**

- TSINGHUA TONGFANG CO., LTD. (TR10CD1\_3/TR10CD1)

## **Tinhvan**

- TA80TA1 (TA80TA1\_1/TA80TA1)

## **TMAX**

- TMAX TM9S775 (MID908A-K/TM9S775)

## **Tonino Lamborghini**

- Antares (TL66/TL66)
- Antares (TL\_Antares/Antares)

## **Toshiba**

- A204 (tos14ast10/A204)
- AT400 (tostab12AL/AT300SE)
- AT400 (tostab12AL/AT400)
- L5450/L5400 (tostv14rtk1/15400)
- L5450/L5400 (tostv14rtk1/15450)
- L5450/L5400 (tostv14rtk2/15400)
- L5450/L5400 (tostv14rtk2/15450)
- L9450 (19450/19450)
- tt300/tt301/tt302 (Mozart/Mozart)

## **TOSHIBA**

- L5450C (15450/13453)
- L5450C (15450/15450)

## **Toshiba Corporation**

- AT10-A/AT15-A (Japan: AT503) (tostab12BL/AT10-A)
- AT10-A/AT15-A (Japan: AT503) (tostab12BL/AT502)
- AT10-A/AT15-A (Japan: AT503) (tostab12BL/AT503)
- AT10-A/AT15-A (Japan: AT503) (tostab12BL/AT503\_HEMS)
- AT100 (tostab03/AT100)
- AT100 (tostab03/Tostab03)
- AT10LE-A/AT15LE-A/AT10PE-A/AT15PE-A (Japan: AT703) (tostab12BA/AT10LE-A)
- AT10LE-A/AT15LE-A/AT10PE-A/AT15PE-A (Japan: AT703) (tostab12BA/AT10PE-A)
- AT10LE-A/AT15LE-A/AT10PE-A/AT15PE-A (Japan: AT703) (tostab12BA/AT702)
- AT10LE-A/AT15LE-A/AT10PE-A/AT15PE-A (Japan: AT703) (tostab12BA/AT703)
- AT200 (tostab05/AT200)
- AT7-A (tost7t/AT374)
- AT7-A (tost7t/AT7-A)
- AT7-B (tos13t7gt/AT374)
- AT7-B (tos13t7gt/AT7-B)
- AT7-C (tos14riy20/A17)
- AT7-C (tos14riy20/AT7-C)
- DB50 (tosebook01/DB50)
- Hikari-iFrame/WDPF-703TI (WDPF-703TI/Hikari-iFrame/WDPF-703TI)
- JP:REGZA Tablet AT570 Others:TOSHIBA AT270 (tostab11BS/AT270)

- JP:REGZA Tablet AT570 Others:TOSHIBA AT270 (tostab11BS/AT470)
- JP:REGZA Tablet AT570 Others:TOSHIBA AT270 (tostab11BS/AT570)
- JPN:REGZA Tablet AT500 Other countries:TOSHIBA AT300 (tostab11BA/AT300)
- JPN:REGZA Tablet AT500 Other countries:TOSHIBA AT300 (tostab11BA/AT500)
- JPN:REGZA Tablet AT500 Other countries:TOSHIBA AT300 (tostab11BA/AT500a)
- JPN:REGZA Tablet AT830 Other countries:TOSHIBA AT330 (tostab11BT/AT330)
- JPN:REGZA Tablet AT830 Other countries:TOSHIBA AT330 (tostab11BT/AT830)
- L4300 (l4300/l4300)
- LT170 (tostabg1/LT170)
- Thrive 7 (tostab04/AT1S0)
- TOSHIBA STB10 (TOSPASB/TOSPASB)

## **Toughshield**

- R200 (R200/R200)
- T700\_TABLET (T700\_TABLET/T700)

## **Trekstor**

- SurfTab ST70204-3 (TREKM7100KLD/SurfTab ST70204-3)
- SurfTab xintron i 7.0 (st70408\_4\_coho/st70408\_4\_coho)
- toline tab 8 (tolino8/tolino tab 8)

## **TrekStor GmbH**

- TrekStor toline tab 7 (tolino7/tolino tab 7)
- TrekStor toline tab 8.9 (tolino89/tolino tab 8.9)

## **Trio**

- Trio AXS 3G (Trio\_AXS\_3G/Trio AXS 3G)
- Trio MST711 (nuclear-MST711/MST711)

## **TSUNAMi**

- Tablet Tsunami TSTA080D1 (MG080D1T/MG080D1T)

## **Tunisie Telecom**

- Star Trail by TT (startrail3\_tt/StarTrail TT)

## **TUNTUN English**

- DREAM PAD (delight/ITP-R408W)

## **TUPAD**

- TU7\_58212\_18222 (TU7\_58212/TU7\_18222)

## **Turk Telekom**

- Turk Telekom E4 (722T/E4)

## **U606**

- Hisense (U606/STARSHINE III)

## **U688**

- Hisense (U688/HS-U688)

## **ucall**

- EASY1 (EASY1/EASY1)

## **VENSTAR**

- VENSTAR2050 (VENSTAR2050/VENSTAR2050)

## **Venturer**

- i7 (RCT6773W22/i7)

## **Verizon Wireless**

- Ellipsis 7 (QMV7A) (QMV7A/QMV7A)
- Ellipsis 7 (QMV7A/QMV7A)
- Ellipsis 7 (QMV7A/QMV7B)
- Ellipsis 7 (QMV7B) (QMV7A/QMV7B)
- Ellipsis 8 (QTAQZ3/QTAQZ3)

## **Verssed**

- FW8977-ED (FW8977-ED/FW8977-ED)

## **Vertu**

- Aster (alexa/Aster)

- Constellation V (gambit/Constellation V)
- Signature Touch (odin/Signature Touch)
- VERTU Ti (hermione/VERTU Ti)

## **Vestel**

- VP100+ (ephesus/10.1Myros)
- VP100+ (ephesus/VP100+)
- VP73 (wing-ibt/VP73)
- VP73 (wing-ibt/VP73\_Hyundai)
- VP73 (wing-ibt/VP73\_le)
- VP73 (wing-ibt/VP73\_Myros)
- VP73 (wing-ibt/VP73\_Vox)
- VP74 (wifionly-gms/VP74)
- VP74 (wifionly-gms/VP74-Celcus)
- VP74 (wifionly-gms/VP74-Finlux)
- VP74 (wifionly-gms/VP74-Orava)
- VP74 (wifionly-gms/VP74-Telefunken)
- VP74 (wifionly-gms/VP74-Vox)
- VSP145M (VSP145M/VSP145M)
- VSP250g (VSP250g/VSP250g)
- VSP250s (VSP250s/VSP250s)
- VSP355g (g55/VSP355g)
- VSP355s (s55/VSP355s)

## **VF**

- Vodafone Smart mini (Vodafone\_875/Vodafone 875)

## **VIBE Z**

- K910 (kitonw/Lenovo K910)

## **ViewSonic**

- VSD221 (VSD221/VSD221)
- VSD231 (VSD231-VSA/VSD231)
- VSD241 Smart Display (VSD241/VSD241)

## **Vizio**

- StreamPlayer (VAP430/VAP430)

## **Vizio, Inc.**

- VTAB1008 (VTAB1008/VTAB1008)



## **VSN**

- V.35 (up11\_h1\_vsn/V.35)

## **Vulcan**

- TA10TA2 (TA10TA2\_1/TA10TA2)
- TA71CA1 (TA71CA1/TA71CA1)
- TA71CA2 (TA71CA2\_1/TA71CA2)

## **W.e.**

- WeTab1004B (WeTab1004B/WeTab1004B)
- WETAB700DG (WETAB700DG/WETAB700DG)

## **WACOM**

- Cintiq Companion Hybrid 13HD (CintiqCompanionHybrid13HD/Cintiq Companion Hybrid 13HD)

## **Welgate**

- WA-U420D (WA-U420D/WA-U420D)

## **Wenu**

- Kate (Wenu/Kate)

## **WeTek**

- Play (Play/Play)

## **Wiko**

- BLOOM (s4700/BLOOM)
- GETAWAY (s8812/GETAWAY)
- GOA (s3511/GOA)
- HIGHWAY SIGNS (s4750/HIGHWAY SIGNS)
- KITE (14020/KITE)
- LENNY (s5201ap/LENNY)
- RAINBOW (s5501/RAINBOW)
- RAINBOW 4G (15503/RAINBOW 4G)
- SLIDE (s8321/SLIDE)
- SUNSET (s4011/SUNSET)

## **WIKO**

- Barry (s7811/BARRY)
- DARKFULL (s9311/DARKFULL)
- DARKFULL (s9311/Dream)
- DARKNIGHT (s9203/DARKNIGHT)
- DARKNIGHT (s9203/X-tremer)
- HIGHWAY (s9320/HIGHWAY)
- IGGY (s7521/Cynus F4)
- IGGY (s7521/Golf)
- IGGY (s7521/IGGY)

## **Wintec**

- T730 (T730/Clear)
- T730 (T730/T730)
- T750 (T750/Clear)

## **Wistron**

- W1011A (w1011a/W1011A)

## **Xiaomi**

- China (braveheart/MiTV)
- China (casablanca/MiBOX1S)
- China (HM2013023/2013023)
- HM 1SC (armani/HM 1AC)
- HM 1SC (armani/HM 1SC)
- HM 1SC (armani/HM 1SW)
- HM 1SLTETD (HM2014501/2014501)
- HM 1STD (HM2014011/2014011)
- HM NOTE 1LTETD (dior/HM NOTE 1LTETD)
- HM NOTE 1LTETD (dior/HM NOTE 1LTEW)
- HM NOTE 1TD (lcsh92\_wet\_tdd/HM NOTE 1TD)
- HM NOTE 1W (lcsh92\_wet\_jb9/HM NOTE 1W)
- Hong Mi (HM2013022/2013022)
- MI 2A (taurus/MI 2A)
- MI 2S (aries/MI 2)
- MI 2S (aries/MI 2S)
- Mi 3 (pisces/MI 3)
- MI 3W (cancro/MI 3W)
- MI 4LTE (cancro/MI 4LTE)
- MI PAD (mocha/MI PAD)
- MiBOX2 (dredd/MiBOX2)
- MiTV2 (entrapment/MiTV2)

## **Xperia M2 Dual**

- Sony (D2302/D2302)

## **Xplore\_Technologies**

- RangerX (iX101T1/iX101T1)
- RangerX (iX101T1\_2G/iX101T1-2G)

## **Yota Devices**

- YotaPhone2 (yotaphone2/YD201)

## **YotaPhone**

- YotaPhone C9660 (yotaphone/C9660)

## **Zeki**

- TBDG734 (TBDG734/TBDG734)
- TBQG1084 (TBQG1084/TBQG1084)
- TBQG855 (TBQG855/TBQG855)
- Zeki TBDG1073 (TBDG1073/TBDG1073)
- Zeki TBDG874 Tablet (TBDG874B/TBDG874)
- Zeki TBQC1063B (TBQC1063B/TBQC1063)
- Zeki TBQG774 (TBQG774/TBQG774)
- Zeki TBQG884 (TBQG884/TBQG884)

## **Zilo**

- Zilo (Zilo/Zilo)

## **ZTE**

- 008Z (bladeplus/008Z)
- 009Z (bladeplus/009Z)
- 009Z (bladeplus/ZTE V882)
- 009Z (bladeplus/ZTE V886J)
- A2 (A2/A2)
- A21plus (nice/A21plus)
- Acqua (atlas40/Acqua)
- Amazing A1 (roamer2/Amazing A1)
- Amazing p5\_Lite (V77/Amazing p5\_Lite)
- Amazing P6 (msm8226/Amazing P6)
- Amazing X2 (msm8226/Amazing X2)
- Android edition by sfr STARADDICT (skate/Android edition by sfr STARADDICT)

- Android Edition Starnaute (amigo/Android Edition Starnaute)
- Android Edition StarText (turies/Android Edition StarText)
- ARIZONA (racer2/ARIZONA)
- ATLAS W (blade2/ATLAS W)
- Avea inTouch 2 (atlas40/Avea inTouch 2)
- Avea inTouch 4 (msm8916\_32/Avea inTouch 4)
- Baker (ZTE-Baker/Baker)
- BASE Lutea 2 (skate/BASE Lutea 2)
- BASE Tab 7.1 (v9plus/BASE Tab 7.1)
- Beeline E600 (roamer2/Beeline E600)
- Blade (blade/003Z)
- Blade (blade/a5)
- Blade (blade/Android Edition StarTrail)
- Blade (blade/BASE lutea)
- Blade (blade/Beeline E400)
- Blade (blade/BLADE\_N880)
- Blade (blade/Kyivstar Spark)
- Blade (blade/MF8604)
- Blade (blade/Movistar Prime)
- Blade (blade/N880)
- Blade (blade/Netphone 701)
- Blade (blade/Optimus San Francisco)
- Blade (blade/Orange San Francisco)
- Blade (blade/Orange Tactile internet 2)
- Blade (blade/RTK V8)
- Blade (blade/San Francisco)
- Blade (blade/V8502)
- Blade (blade/WayteQ Libra)
- Blade (blade/XCD35)
- Blade (blade/ZTE Libra)
- Blade (blade/ZTE V880)
- Blade (blade/ZTE-BLADE)
- Blade (blade/ZTE-C N880S)
- Blade (blade/ZTE-LIBRA)
- Blade (blade/ZTE-Libra)
- Blade (blade/ZTE-U V880)
- Blade Apex (coeus/Blade Apex)
- Blade Apex2 (msm8226/Blade Apex2)
- Blade G LTE (oceanus/Blade G LTE)
- BLADE III (atlas40/BLADE III)
- Blade III (atlas40/Blade III)
- Blade III (atlas40/Skate Pro)
- BLADE III\_IL (atlas40/BLADE III\_IL)
- Blade S (blade2/Blade S)
- blade S (blade2/Blade S)
- BLADEII (blade2/BLADEII)
- Bouygues Telecom Bs 351 (nice/Bouygues Telecom Bs 351)
- Bouygues Telecom Bs 402 (P172G10/A4C)
- Bouygues Telecom Bs 402 (P172G10/Amazing A4C)
- Bouygues Telecom Bs 402 (P172G10/Bouygues Telecom Bs 402)
- Bouygues Telecom Bs 402 (P172G10/ZTE Blade Q Mini)

- Cosmote Smart Share (nice/Cosmote Smart Share)
- Cosmote Xplore (Cosmote-Xplore/Cosmote Xplore)
- Cosmote Xplore (Cosmote/Cosmote Xplore)
- D930 (D930/D930)
- Dialog Q143L (frosty/Dialog Q143L)
- Dubai (roamer2/Dubai)
- Dublin (roamer2/Dublin)
- FT142D (msm8226/FT142D)
- Grand Memo (prindle/Grand Memo)
- Grand S Flex (iris/Grand S Flex)
- Grand X (P175A20/Grand X(M))
- Grand X (P175A20/Grand X)
- Grand X (P175A20/tmn smart a18)
- Grand X (P175A20/ZTE Grand X Classic)
- Grand X (P175A20/ZTE V970)
- Grand X (P175A20/ZTE V970M)
- Grand X (P175A20/ZTE-U V970M)
- Grand X In (mfld\_pr2/Grand X In)
- Grand X In (mfld\_pr2/STARADDICT II Plus)
- Grand X In (mfld\_pr2/ZTE Grand X In)
- Grand X Pro (P177A20/Blade Super)
- Grand X Pro (P177A20/Grand X Pro)
- Grand X Pro (P177A20/KPN Smart 300)
- ICE (nice/ICE)
- Infinity X^2 mini (msm8226/Infinity X^2 mini)
- K75 (crane-zte7/K75)
- K97 (K97/K97)
- K97 (K97/ZTE K97)
- Karbonn\_A1 (N721/Karbonn\_A1)
- KIS (roamer2/KIS)
- KIS II (nice/KIS II)
- Kis T3 (roamer2/Kis T3)
- KPN Smart 200 (skate/KPN Smart 200)
- KPN Smart 400 (msm8226/KPN Smart 400)
- Kyivstar Shine (racer2/Kyivstar Shine)
- Leopard MF800 (roamer2/Leopard MF800)
- Light Tab 2 (v9plus/Light Tab 2)
- Light Tab 2W (v9plus/Light Tab 2W)
- M8402 (roamer2/M8402)
- MEDION LIFE P4012 (atlas40/MEDION LIFE P4012)
- MEDION LIFE P4310 (skate/MEDION LIFE P4310)
- MEDION Smartphone LIFE E3501 (roamer2/MEDION Smartphone LIFE E3501)
- MegaFon SP-A5 (blade/MegaFon SP-A5)
- MegaFon V9+ (v9plus/MegaFon V9+)
- MF97A (MF97A/MF97A)
- Micromax A60 (N720\_Micromax/Micromax A60)
- Momodesign MD Droid (atlas40/Momodesign MD Droid)
- Monte Carlo (skate/Monte Carlo)
- Movistar Express (QB7211/Movistar Express)
- Movistar Motion (roamer2/Movistar Motion)
- MS4A (kiska/MS4A)

- MS4A (roundtop/MS4A)
- Mtag 281 (mooncake2/Mtag 281)
- MTS-SP102 (mooncake2/MTS-SP102)
- myPad P5 (K78/Amazing\_P5)
- myPad P5 (K78/myPad P5)
- N720 (N720/N720)
- N720 (N720/ZTE-U N720)
- N720 (N720/ZTE\_U N720)
- N721 (N721/N721)
- N762 (roamer/N762)
- N765\_APT (N765/N765\_APT)
- N788\_BASHA (roamer2/N788\_BASHA)
- N790 (deepblue/N790)
- N800 (nex/N800)
- N8000\_USA\_Cricket (N8000/N8000\_USA\_Cricket)
- N8000\_USA\_RS (N8000/N8000\_USA\_RS)
- N8000\_WHITE\_CKT (N8000/N8000\_WHITE\_CKT)
- N8010\_APT (N8010\_APT/N8010\_APT)
- N810 (fluid/N810)
- N8300\_Reliance (N8300\_Reliance/N8300\_Reliance)
- N8303 (roamer2/N8303)
- N850 (sean/N850)
- N850L (seanplus/N850L)
- N855D (hope/N855D)
- N855D\_PERFECTUM (hope/N855D\_PERFECTUM)
- N855D\_YM (hope/N855D\_YM)
- N860 (arthur/N860)
- N860 (arthur/Warp)
- N861 (warp2/N861)
- N880E (atlas40/N880E)
- N910 (arthur4g/ZTE-N910)
- N9100 (hayes/N9100)
- N9101 (apollo/N9101)
- N9130 (speed/N9130)
- N9180 (N9180/N9180)
- N918St (N918St/N918St)
- N9500 (gordon/N9500)
- N9510 (warplte/N9510)
- N9515 (warp4/N9515)
- N9516 (eridani/N9516)
- N9520 (stormer/N9520)
- N958St (N958St/N958St)
- N9810 (quantum/N9810)
- N986D (P188F10/N986+)
- N986D (P188F10/N986D)
- NE501J (NE501J/NE501J)
- NE501J (NE501J/V5)
- NE501J (NE501J/ZTE\_V5)
- nubia Z5 (NX501/nubia Z5)
- NX402 (NX40X/NX402)
- NX403A (NX403A/NX403A)

- NX404H (NX404H/NX404H)
- NX405H (NX405H/NX405H)
- NX40X (NX402/NX402)
- NX40X\_APT (NX40X/NX40X)
- NX40X\_APT (NX40X/NX40X\_APT)
- NX501 (NX501/NX501)
- NX501\_APT (NX501/NX501\_APT)
- NX503A\_Z4 (NX503A\_Z4/NX503A\_Z4)
- NX503J (NX503J/NX503J)
- NX505J (NX505J/NX505J)
- NX506J (NX506J/NX506J)
- NX507J (NX507J/NX507J)
- NX601J (NX601J/NX601J)
- Optimus Barcelona (blade2/Optimus Barcelona)
- Optimus Monte Carlo (skate/Optimus Monte Carlo)
- Orange Dublin (roamer2/Orange Dublin)
- Orange Hi 4G (msm8226/Orange Hi 4G)
- Orange Hi 4G (Orange\_Hi\_4G/Orange Hi 4G)
- Orange Monte Carlo (skate/Orange Monte Carlo)
- Orange Novi (oceanus/Orange Novi)
- Orange Reyo (P172D10/Avea inTouch 3 Large)
- Orange Reyo (P172D10/Blade Q Maxi)
- Orange Reyo (P172D10/Orange Reyo)
- Orange Reyo (P172D10/ZTE Blade Q Maxi)
- Orange Rono (msm8226/Orange Rono)
- Orange Rono (Vec4G/Orange Rono)
- Orange San Francisco (P729B/Orange San Francisco)
- Orange Zali (nice/Orange Zali)
- QB7211 (QB7211/QB7211)
- Racer (mooncake/Carl)
- Racer (mooncake/Movistar Link)
- Racer (mooncake/MTC 916)
- Racer (mooncake/MTS-SP100)
- Racer (mooncake/Racer)
- Racer (mooncake/RTK D1)
- Racer (mooncake/TaiWan Mobile T2)
- Racer (mooncake/V8402)
- Racer (mooncake/Vip Droid)
- Racer (mooncake/XCD 28)
- Racer (mooncake/ZTE X850)
- Racer (mooncake/ZTE-C N600)
- Racer (mooncake/ZTE-C N600+)
- Racer (mooncake/ZTE-LINK)
- Racer (mooncake/ZTE-RACER)
- Racer (mooncake/ZTE-U V852)
- Racer (mooncake/ZTE-U X850)
- RACER III mini (roamer2/RACER III mini)
- RacerII (racer2/RacerII)
- RACERII (racer2/RACERII)
- S8Q (MT8123/S8Q)
- San Francisco II (blade2/San Francisco II)

- Skate Pro (atlas40/Skate Pro)
- Skate4.3 H (skateplus/Skate4.3 H)
- SmartTab10 (V11A/SmartTab10)
- SmartTab7 (V71A/SmartTab7)
- soft stone (P726N/soft stone)
- soft-stone (P726N/soft-stone)
- Soshphone 4G (msm8226/Soshphone 4G)
- Soshphone 4G (Vec4G/Soshphone 4G)
- STARADDICT II (whistler/STARADDICT II)
- STARNAUTE II (V6600/STARNAUTE II)
- STARTAB (V71A/STARTAB)
- STARTEXT II (QB7211/STARTEXT II)
- STARTRAIL 4 (P172E10/Avea inTouch 3)
- STARTRAIL 4 (P172E10/STARTRAIL 4)
- STARTRAIL 4 (P172E10/ZTE Blade Q)
- STARXTREM (prindle/STARXTREM)
- T-Mobile Vivacity (blade2/T-Mobile Vivacity)
- T3 (skate/T3)
- T77 (T77/T77)
- Taiwan Mobile T2 (TWM\_P726G/Taiwan Mobile T2)
- Telenor Touch Pad (v9plus/Telenor Touch Pad)
- Telenor Touch Plus (blade2/Telenor Touch Plus)
- tmn smart a15 (atlas40/tmn smart a15)
- tmn smart a60 (kiska/tmn smart a60)
- tmn smart a7 (sailboat/tmn smart a7)
- TQ150 (QB7211/TQ150)
- TT102 (v9plus/TT102)
- Turkcell Maxi Plus 5 (nice/Turkcell Maxi Plus 5)
- Turkcell T11 (racer2/Turkcell T11)
- TURKCELL T40 (TURKCELL-T40/TURKCELL T40)
- TURKCELL T50 (msm8226/TURKCELL T50)
- U880 (U880/ZTE-T U880)
- U9180 (U9180/U9180)
- U9180 (U9180/ZTE U9180)
- Ultym 5.2 (msm8916\_32/Ultym 5.2)
- UZTE V790 (roamer2/UZTE V790)
- UZTE V817 (ZTE-V956/UZTE V817)
- V55 (V55/V55)
- V6020\_Claro (V6020\_Claro/V6020\_Claro)
- V66 (V66/V66)
- V68 (V68/V68)
- V71B (V71A/V71B)
- V72A (ZTE-V72A/V72A)
- V72C (v72c/V72C)
- V72M (eos/V72M)
- V788D (roamer2/V788D)
- V8000\_USA\_Cricket (V8000/V8000\_USA\_Cricket)
- V8100\_Z55 (V8100\_Z55/V8100\_Z55)
- V8110 (V8110/V8110)
- V8200-Memphis-orange-Slovakia (V8200\_OSK/V8200-Memphis-orange-Slovakia)
- V8200\_EE\_UK (V8200\_EE\_UK/V8200\_EE\_UK)



- V8200plus (V8200plus/V8200plus)
- V8285 (MT8382/V8285)
- V8300\_Z39 (V8300\_Z39/V8300\_Z39)
- V8403 (roamer2/V8403)
- V8514 (P821E10/V8514)
- V865M (hct77\_ics2/V865M)
- V865M (hct77\_jb/V865M)
- V871 (joe/V871)
- V880 (blade/V880)
- V880S (nice/V880S)
- V881 (bladeplus/V881)
- V9 (v9/A100)
- V9 (v9/BASE Tab)
- V9 (v9/Beeline M2)
- V9 (v9/BLACK 03)
- V9 (v9/Light Tab)
- V9 (v9/Light)
- V9 (v9/MTC 1055)
- V9 (v9/myPad P2)
- V9 (v9/One Pad)
- V9 (v9/RTK V9)
- V9 (v9/TO101)
- V9 (v9/TT101)
- V9 (v9/V9)
- V9 (v9/V9C)
- V9 (v9/V9c)
- V9 (v9/V9e)
- V9+ (v9plus/V9+)
- V9180 (V9180/V9180)
- V961 (whistler/V961)
- V96A (V96A/V96A)
- V9A (v9plus/Light Tab 2)
- V9A (v9plus/my Pad P3)
- V9A (v9plus/myPad P3)
- V9A (v9plus/V9A)
- V9A (v9plus/ZTE V9A)
- V9e+ (v9plus/V9e+)
- V9S (V9S/myPadP4)
- V9S (V9S/V9S)
- VF945 (P727A/VF945)
- Vip Racer III (atlas40/Vip Racer III)
- Vodafone 945 (joe/Vodafone 945)
- Vodafone Smart Chat (turies/Vodafone Smart Chat)
- X500 (X500/X500)
- X500\_USA\_General (X500/X500\_USA\_General)
- X501\_USA\_Cricket (X501/X501\_USA\_Cricket)
- X501\_USA\_Cricket (X501/X501\_USA\_RS)
- X501\_USA\_OM (X501/X501\_USA\_OM)
- X9180 (X9180/X9180)
- Z660G (nice/Z660G)
- Z665C (seanplus/Z665C)

- Z667 (demi/Z667)
- Z730 (ada/Z730)
- Z740 (metis/Z740)
- Z740G (metis/Z740G)
- Z750C (Z750C/Z750C)
- Z768G (Z768G/Z768G)
- Z777 (betty/Z777)
- Z787 (apus/Z787)
- Z795G (ZTE-Z795G/Z795G)
- Z796C (Z796C/Z796C)
- Z797C (carol/Z797C)
- Z826 (herculis/Z826)
- Z830 (gruis/Z830)
- Z930L (coeus/Z930L)
- Z933 (glaucus/Z933)
- Z970 (draconis/Z970)
- Z992 (aviva/Z992)
- Z993 (aviva/Z993)
- Z995 (becky/Z995)
- Z998 (coeus/Z998)
- ZTE A880 (ZTE-A880/ZTE A880)
- ZTE B790 (roamer2/ZTE B790)
- ZTE Blade Apex (oceanus/ZTE Blade Apex)
- ZTE Blade Apex2 (msm8226/ZTE Blade Apex2)
- ZTE Blade G (ZTE-Blade-G/ZTE Blade G)
- ZTE Blade G LTE (coeus/ZTE Blade G LTE)
- ZTE Blade G Lux (P172F10/Blade G Lux)
- ZTE Blade G Lux (P172F10/DIGICEL DL800)
- ZTE Blade G Lux (P172F10/Orange Tado)
- ZTE Blade G Lux (P172F10/ZTE Blade G Lux)
- ZTE Blade G Lux (P172F10/ZTE Kis3 max)
- ZTE Blade G Lux (P172F10/ZTE V830W)
- ZTE BLADE III (atlas40/Skate Pro)
- ZTE BLADE III (atlas40/ZTE BLADE III)
- ZTE Blade III (atlas40/ZTE Blade III)
- ZTE Blade III Pro (Blade-III-Pro/ZTE Blade III Pro)
- ZTE Blade L2 (P182A10/BGH Joy Smart AXS)
- ZTE Blade L2 (P182A10/Blade L2)
- ZTE Blade L2 (P182A10/MEO Smart A75)
- ZTE Blade L2 (P182A10/ZTE Blade L2)
- ZTE Blade Q Mini (P172G10\_UK\_VIRGIN/ZTE Blade Q Mini)
- ZTE Blade V (ZTE-Blade-V/Vodafone Blade V)
- ZTE Blade V (ZTE-Blade-V/ZTE Blade V)
- ZTE Blade Vec (P692S20\_Q82/Blade Vec)
- ZTE Blade Vec (P692S20\_Q82/ZTE Blade Vec)
- ZTE Blade Vec (P692S20\_Q82/ZTE Geek 2)
- ZTE Blade Vec 4G (msm8226/ZTE Blade Vec 4G)
- ZTE Blade Vec Pro (P692S20\_M92/ZTE Blade Vec Pro)
- ZTE G601U (P172E02/ZTE G601U)
- ZTE G717C (P692N30/ZTE G717C)
- ZTE G718C (ZTE-G718C/ZTE G718C)

- ZTE G882 (atlas40/ZTE G882)
- ZTE Geek (redhookbay/ZTE Geek)
- ZTE Geek 2 LTE (msm8226/ZTE Geek 2 LTE)
- ZTE Geek 2 pro (P692S20\_M92/ZTE Geek 2 pro)
- ZTE GEEK II 4G (msm8226/ZTE GEEK II 4G)
- ZTE GEEK II Pro (ztexasp92\_wet\_jb9/ZTE GEEK II Pro)
- ZTE GEEK II Pro (ztexasp92\_wet\_jb9/ZTE M1001)
- ZTE Grand Era (enterprise\_HK/ZTE Grand Era)
- ZTE Grand Era (enterprise\_RU/ZTE Grand Era)
- ZTE Grand Memo LTE (Grand-Memo/ZTE Grand Memo LTE)
- ZTE Grand Memo LTE (Grand-Memo/ZTE Grand Memo)
- ZTE Grand S (Grand-S/ZTE Grand S)
- ZTE Grand S (ZTE-Grand-S/ZTE Grand S)
- ZTE Grand S (ZTE-V988/ZTE Grand S)
- ZTE Grand S Flex (iris/ZTE Grand S Flex)
- ZTE Grand S II (P541T50/ZTE Grand S II)
- ZTE Grand S II (P541T50/ZTE S221)
- ZTE Grand S II (P897A21/ZTE Grand S II)
- ZTE Grand S II LTE (msm8974/ZTE Grand S II LTE)
- ZTE Grand X (whistler/ZTE Grand X)
- ZTE Grand X 2 (P682F06/Amazing A7)
- ZTE Grand X 2 (P682F06/ZTE Grand X 2)
- ZTE Grand X 2 (P682F06/ZTE V968)
- ZTE Grand X 2 (P682F06/ZTE V969)
- ZTE Grand X Quad Lite (P188F07/Amazing A6)
- ZTE Grand X Quad Lite (P188F07/V8602)
- ZTE Grand X Quad Lite (P188F07/ZTE Grand X Quad Lite)
- ZTE Grand X Quad Lite (P188F07/ZTE Grand X2)
- ZTE Grand X Quad Lite (P188F07/ZTE Skate 2)
- ZTE Grand X Quad Lite (P188F07/ZTE V967S)
- ZTE Grand X2 In (redhookbay/Grand X2 In)
- ZTE Grand X2 In (redhookbay/ZTE Grand X2 In)
- ZTE Kis 3 (ZTE-P821E10/MEO SMART A16)
- ZTE Kis 3 (ZTE-P821E10/MEO Smart A16)
- ZTE Kis 3 (ZTE-P821E10/MOCHE SMART A16)
- ZTE Kis 3 (ZTE-P821E10/ZTE Kis 3)
- ZTE Kis Lite (roamer2/ZTE Kis Lite)
- ZTE Kis Pro (nice/Optimus Zali)
- ZTE Kis Pro (nice/ZTE Kis Pro)
- ZTE Kis Q (P172D02/ZTE Kis Q)
- ZTE LEO M1 (V883M/V883M)
- ZTE LEO M1 (V883M/ZTE LEO M1)
- ZTE LEO S1 (V972M/V972M)
- ZTE LEO S1 (V972M/ZTE LEO S1)
- ZTE LEO S2 (V982M\_Z64/ZTE LEO S2)
- ZTE Libra (blade/ZTE Libra)
- ZTE M901C (P692N60/ZTE M901C)
- ZTE N5 (ZTE-N5/ZTE N5)
- ZTE N5L (prnthus/ZTE N5L)
- ZTE N5S (P189F10/ZTE N5S)
- ZTE N660 (mooncake2/ZTE N660)

- ZTE N788 (roamer2/ZTE N788)
- ZTE N789 (roamer2/ZTE N789)
- ZTE N790 (deepblue/ZTE N790)
- ZTE N790S (deepblue/ZTE N790S)
- ZTE N795 (deepblue/ZTE N795)
- ZTE N798 (atlas40/ZTE N798)
- ZTE N798+ (ZTE\_N798/ZTE N798+)
- ZTE N798+ (ZTE\_N798P/ZTE N798+)
- ZTE N799D (ZTE-N799D/N799D)
- ZTE N799D (ZTE-N799D/ZTE N799D)
- ZTE N807 (ZTE-N807/ZTE N807)
- ZTE N818 (ZTE-N818/N818)
- ZTE N818 (ZTE-N818/ZTE N818)
- ZTE N855 (hope/ZTE N855)
- ZTE N855D (hope/ZTE N855D)
- ZTE N855D+ (hope/ZTE N855D+)
- ZTE N880E (atlas40/ZTE N880E)
- ZTE N880F (msm7627a/ZTE N880F)
- ZTE N880F (ZTE-N880F/ZTE N880F)
- ZTE N880G (ZTE-N880G/ZTE N880G)
- ZTE N881D (atlas40/ZTE N881D)
- ZTE N881E (ZTE-N881E/ZTE N881E)
- ZTE N881F (ZTE-N881F/ZTE N881F)
- ZTE N882E (atlas40/ZTE N882E)
- ZTE N900 (ZTE-N900/ZTE N900)
- ZTE N900D (ZTE-N900D/ZTE N900D)
- ZTE N909 (ZTE-N909/ZTE N909)
- ZTE N909D (ZTE-N909D/ZTE N909D)
- ZTE N9120 (elden/ZTE N9120)
- ZTE N919 (ZTE-N919/ZTE N919)
- ZTE N919D (ZTE-N919D/N919D)
- ZTE N919D (ZTE-N919D/ZTE N919D)
- ZTE N960 (skate/ZTE N960)
- ZTE N970 (dana/ZTE N970)
- ZTE N980 (ZTE-N980/ZTE N980)
- ZTE N983 (P177F03/ZTE N983)
- ZTE N9835 (chovar/N9835)
- ZTE N9835 (chovar/ZTE N9835)
- ZTE N986 (P188F02/N986)
- ZTE N986 (P188F02/ZTE N986)
- ZTE N988 (ZTE-N988/ZTE N988)
- ZTE Q101T (P810T10/ZTE Q101T)
- ZTE Q201T (P172T24/ZTE Q201T)
- ZTE Q2S-C (P826N50/ZTE Q2S-C)
- ZTE Q2S-T (P826T50/ZTE Q2S-T)
- ZTE Q301C (APT\_TW\_P810N30/ZTE Q301C)
- ZTE Q301C (P810N30/ZTE Q301C)
- ZTE Q301T (P172T33/ZTE Q301T)
- ZTE Q501T (P172T31/ZTE Q501T)
- ZTE Q501U (P172F04/ZTE Q501U)
- ZTE Q503U (P682V53/ZTE Q503U)

- ZTE Q505T (P826T20/ZTE Q505T)
- ZTE Q507T (P682T20/ZTE Q507T)
- ZTE Q508U (P816V50/ZTE Q508U)
- ZTE Q705U (P682V60/ZTE Q705U)
- ZTE Q801T (P181L30/ZTE Q801T)
- ZTE Q801U (P826V30/ZTE Q801U)
- ZTE Q802C (ZTE-Q802C/ZTE Q802C)
- ZTE Q802D (ZTE-Q802D/ZTE Q802D)
- ZTE Q802T (P826T30/ZTE Q802T)
- ZTE Q805T (P120T55/ZTE Q805T)
- ZTE R22 (atlas40/ZTE R22)
- ZTE R83 (demeter/ZTE R83)
- ZTE roamer (roamer/ZTE roamer)
- ZTE Roamer (roamer/ZTE Roamer)
- ZTE S118 (P189S10/Grand S Lite)
- ZTE S118 (P189S10/ZTE S118)
- ZTE S2004 (msm8974/ZTE S2004)
- ZTE S2005 (msm8974/ZTE S2005)
- ZTE Skate (skate/ZTE Skate)
- ZTE STAR (msm8226/ZTE GEEK II Pro 4G)
- ZTE STAR (msm8226/ZTE S2002)
- ZTE STAR (msm8226/ZTE Star 1)
- ZTE STAR (msm8226/ZTE STAR)
- ZTE Switch X1 (deepblue/ZTE Switch X1)
- ZTE Switch X1 (deepblue/ZTE V796)
- ZTE T12 (P173A30T/ZTE T12)
- ZTE T22 (atlas40/ZTE T22)
- ZTE T28 (bluetick/ZTE T28 Prepaid)
- ZTE T28 (bluetick/ZTE T28)
- ZTE T60 (turies/ZTE T60)
- ZTE T760 (P173A10T/ZTE T760)
- ZTE T790 (roamer2/ZTE T790)
- ZTE T792 (ZTE-T792/ZTE T792)
- ZTE T80 (msm8226/ZTE T80)
- ZTE T81 (iliamna/ZTE T81)
- ZTE T82 (frosty/ZTE T82)
- ZTE T83 (demeter/ZTE T83)
- ZTE T86 (msm8226/Amazing X1)
- ZTE T86 (msm8226/ZTE T86)
- ZTE T88 (msm8226/ZTE T88)
- ZTE U5 (enterprise/ZTE U5)
- ZTE U5S (P188T51/ZTE U5S)
- ZTE U788 (U788/ZTE U788)
- ZTE U788+ (z788/ZTE U788+)
- ZTE U790 (U790/ZTE U790)
- ZTE U791 (P810T01/ZTE U791)
- ZTE U791(OPEN) (P810T01/ZTE U791(OPEN))
- ZTE U793 (P810T02/ZTE U793)
- ZTE U795 (U795/ZTE U795)
- ZTE U795+ (z795/ZTE U795+)
- ZTE U807 (P117A11/ZTE U807)

- ZTE U807N (P117A13/ZTE U807N)
- ZTE U808 (P825T10/ZTE U808)
- ZTE U808(OPEN) (P825T10/ZTE U808(OPEN))
- ZTE U809 (P172T11/ZTE U809)
- ZTE U816 (P988T20/ZTE U816)
- ZTE U817 (P117A20/ZTE U817)
- ZTE U817 (P117A20qHD/ZTE U817)
- ZTE U818 (P172T21/ZTE U818)
- ZTE U819 (P188T20/ZTE U819)
- ZTE U879 (P172T30/ZTE U879)
- ZTE U880E (U880E/ZTE U880E)
- ZTE U880F (ventana\_U880F/ZTE U880F)
- ZTE U880F1 (U880F1/ZTE U880F1)
- ZTE U880s (U880s/ZTE U880s)
- ZTE U880s2 (P810A10/ZTE U880s2)
- ZTE U885 (U885/ZTE U885)
- ZTE U887 (P810A20/ZTE U887)
- ZTE U889 (P183T30/ZTE U889)
- ZTE U930 (ventana\_U930/ZTE U930)
- ZTE U930HD (U930HD/ZTE U930HD)
- ZTE U935 (P117A30/ZTE U935)
- ZTE U950 (enterprise\_U950/ZTE U950)
- ZTE U956 (P188T10/ZTE U956)
- ZTE U960D (msm7630\_zteu960/ZTE U960D)
- ZTE U960E (P117T21/ZTE U960E)
- ZTE U960s2 (U960s2/ZTE U960s2)
- ZTE U960s3 (U960s3/ZTE U960s3)
- ZTE U968 (P682T51/ZTE U968)
- ZTE U969 (P682T50/ZTE U969)
- ZTE U970 (ventana/ZTE U970)
- ZTE U9815 (P945T20/ZTE U9815)
- ZTE U985 (enterprise\_U985/ZTE U985)
- ZTE U988S (pluto/ZTE U988S)
- ZTE V10 (v9plus/ZTE V10)
- ZTE V5S (P189F13/ZTE Grand Memo lite)
- ZTE V5S (P189F13/ZTE V5S)
- ZTE V70 (ZTE-V70/ZTE V70)
- ZTE V7073 (V7073/ZTE V7073)
- ZTE V72 (V72/MT7A)
- ZTE V72 (V72/myPad P4 Lite)
- ZTE V72 (V72/ZTE V72)
- ZTE V768 (P253A20/ZTE V768)
- ZTE V768 (V768/ZTE V768)
- ZTE V769M (V769M/V769M)
- ZTE V769M (V769M/ZTE LEO Q2)
- ZTE V769M (V769M/ZTE V769M)
- ZTE V779M (ZTEV779M/ZTE V779M)
- ZTE V788D (roamer2/ZTE V788D)
- ZTE V790 (roamer2/ZTE V790)
- ZTE V791 (P175A40/V791)
- ZTE V791 (P175A40/ZTE V791)

- ZTE V792C (P810D01/ZTE V792C)
- ZTE V793 (P175A60/Amazing A3)
- ZTE V793 (P175A60/Cellcom 4G)
- ZTE V793 (P175A60/M9000)
- ZTE V793 (P175A60/Telcel T20)
- ZTE V793 (P175A60/tmn smart a6)
- ZTE V793 (P175A60/ZTE KIS Flex)
- ZTE V793 (P175A60/ZTE V793)
- ZTE V795 (P172D01/V795(A3S))
- ZTE V795 (P172D01/ZTE B795)
- ZTE V795 (P172D01/ZTE KIS II PRO)
- ZTE V795 (P172D01/ZTE Kis II)
- ZTE V795 (P172D01/ZTE KIS II)
- ZTE V795 (P172D01/ZTE V795)
- ZTE V797 (P172D03/VIETTEL V8411)
- ZTE V797 (P172D03/ZTE V797)
- ZTE V807 (P177E01/Amazing A4)
- ZTE V807 (P177E01/Beeline E700)
- ZTE V807 (P177E01/Leopard MF900)
- ZTE V807 (P177E01/UZTE V807)
- ZTE V807 (P177E01/V8501)
- ZTE V807 (P177E01/ZTE BLADE C)
- ZTE V807 (P177E01/ZTE V807)
- ZTE V807 (P177E01/ZTE V889S)
- ZTE V808 (P172E01/UZTE V808)
- ZTE V808 (P172E01/ZTE V808)
- ZTE V809 (P172A10/meo smart a12)
- ZTE V809 (P172A10/ZTE Blade C2)
- ZTE V809 (P172A10/ZTE T809)
- ZTE V809 (P172A10/ZTE V809)
- ZTE V811 (ZTE-V811/Beeline Smart2)
- ZTE V811 (ZTE-V811/ZTE V811)
- ZTE V811C (P810E01/ZTE V811C)
- ZTE V811W (P821E10/ZTE V811)
- ZTE V811W (P821E10/ZTE V811W)
- ZTE V813W (P172B20/ZTE Blade C2 Plus)
- ZTE V813W (P172B20/ZTE V813W)
- ZTE V815W (P172R10/Amazing A4S)
- ZTE V815W (P172R10/B8405)
- ZTE V815W (P172R10/KIS II Max)
- ZTE V815W (P172R10/SMART Start)
- ZTE V815W (P172R10/UZTE GRAND V7)
- ZTE V815W (P172R10/ZTE Blade Buzz)
- ZTE V815W (P172R10/ZTE Kis II Max)
- ZTE V815W (P172R10/ZTE Maxx)
- ZTE V815W (P172R10/ZTE T815)
- ZTE V815W (P172R10/ZTE V815W)
- ZTE V817 (ZTE-V817/V817)
- ZTE V817 (ZTE-V817/ZTE V817)
- ZTE V817 (ZTE-V956/ZTE V817)
- ZTE V818 (P172F01/ZTE Blade 2)

- ZTE V818 (P172F01/ZTE V818)
- ZTE V829 (P172A30/Blade G Pro)
- ZTE V829 (P172A30/V8507)
- ZTE V829 (P172A30/ZTE Blade G Plus)
- ZTE V829 (P172A30/ZTE Blade G Pro)
- ZTE V829 (P172A30/ZTE V829)
- ZTE V875 (sailboat/ZTE V875)
- ZTE V879 (P172F02/ZTE V879)
- ZTE V880E (atlas40/ZTE V880E)
- ZTE V880G (ZTE-V880G/ZTE V880G)
- ZTE V881 (bladeplus/ZTE V881)
- ZTE V887 (P177A10/tmn smart a20)
- ZTE V887 (P177A10/ZTE Blade L)
- ZTE V887 (P177A10/ZTE V887)
- ZTE V889D (atlas40/ZTE V889D)
- ZTE V889F (msm7627a/ZTE V889F)
- ZTE V889F (ZTE-V889F/ZTE V889F)
- ZTE V889M (P175A10/UZTE V889M)
- ZTE V889M (P175A10/ZTE V889M)
- ZTE V891 (P986E01/ZTE V891)
- ZTE V9500 (okmok/ZTE V9500)
- ZTE V955 (ZTE-V955/ZTE V955)
- ZTE V956 (ZTE-V956/ZTE V956)
- ZTE V960 (skate/ZTE V960)
- ZTE V965 (P188F03/ZTE Blade G2)
- ZTE V965 (P188F03/ZTE R880H)
- ZTE V965 (P188F03/ZTE V880H)
- ZTE V965 (P188F03/ZTE V965)
- ZTE V969 (P682F01/ZTE V969)
- ZTE V970 (whistler/UZTE V970)
- ZTE V970 (whistler/ZTE V970)
- ZTE V970T (whistler/ZTE V970T)
- ZTE V975 (redhookbay/V975)
- ZTE V975 (redhookbay/ZTE Geek)
- ZTE V975 (redhookbay/ZTE V975)
- ZTE V9800 (kiska/ZTE V9800)
- ZTE V9800 (roundtop/ZTE V9800)
- ZTE V9820 (ZTE-V9820/ZTE V9820)
- ZTE V983 (P177A30/ZTE V983)
- ZTE V985 (enterprise\_V985/ZTE V985)
- ZTE V987 (P188F04/UZTE GRAND X Quad)
- ZTE V987 (P188F04/ZTE Grand X)
- ZTE V987 (P188F04/ZTE V987)
- ZTE V988 (ZTE-V988/ZTE V988)
- ZTE V993W (ZTE\_V993W/ZTE V993W)
- ZTE V9A (v9plus/ZTE V9A)
- ZTE Z932L (warplte/Z932L)
- ZTE Z932L (warplte/ZTE Z932L)
- ZTE-BLADE (blade/ZTE-BLADE)
- ZTE-BLADE (P729C/ZTE-BLADE)
- ZTE-C N760 (roamer/ZTE-C N760)



- ZTE-C N780 (banana/ZTE-C N780)
- ZTE-C R750 (r750/ZTE-C R750)
- ZTE-C X500 (X500MMB/ZTE-C X500)
- ZTE-LINK (P726G/ZTE-LINK)
- ZTE-Mimosa X (whistler/ZTE-Mimosa X)
- ZTE-N910 (arthur4g/ZTE-N910)
- ZTE-RACER (BUL\_P726G/ZTE-RACER)
- ZTE-RACER (P726G/ZTE-RACER)
- ZTE-Skate (skate/ZTE-Skate)
- ZTE-SKATE (skate/ZTE-SKATE)
- ZTE-T T9 (T9/ZTE-T T9)
- ZTE-T T98 (cardhu/ZTE-T T98)
- ZTE-T U805 (U805/ZTE-T U805)
- ZTE-T U812 (U812/ZTE-T U812)
- ZTE-T U830 (U830/ZTE-T U830)
- ZTE-T U960 (msm7630\_zteu960/ZTE-T U960)
- ZTE-T U960s (U960s/ZTE-T U960s)
- ZTE-Tureis (turies/ZTE-Tureis)
- ZTE-U N721 (N721/ZTE-U N721)
- ZTE-U V760 (p173a10/ZTE-U V760)
- ZTE-U V760 (ztenj73\_gb/MD Smart)
- ZTE-U V760 (ztenj73\_gb/moii E598)
- ZTE-U V760 (ztenj73\_gb/Telenor Touch Mini)
- ZTE-U V760 (ztenj73\_gb/ZTE-U V760)
- ZTE-U V760 (ztenj73\_gb/ZTE-U V856)
- ZTE-U V760 (ztenj73\_gb/ZTE-U V857)
- ZTE-U V857 (V857/ZTE-U V857)
- ZTE-U V857 (zte\_v857/ZTE-U V857)
- ZTE-U V859 (racer2/ZTE-U V859)
- ZTE-U V875m (V875m/ZTE-U V875m)
- ZTE-U V881 (bladeplus/ZTE-U V881)
- ZTE-U V889F (msm7627a/ZTE-U V889F)
- ZTE-U V889F (ZTE-U-V889F/ZTE-U V889F)
- ZTE-U V960 (skate/ZTE-U V960)
- ZTE-U X850 (P726CU/ZTE-U X850)
- ZTE-U X850 (P726VV/ZTE-U X850)
- ZTE-U X876 (P722G/ZTE-U X876)
- ZTE-V6500 (V6500/Etisalat Smartphone)
- ZTE-V6500 (V6500/ZTE-V6500)
- ZTE-V856 (zte\_v856/ZTE-V856)
- ZTE-WAVE (P726G/ZTE-WAVE)
- ZTE-X500 (X500/ZTE-X500)
- ZTE-Z990 (roamer/ZTE-Z990)
- ZTE-Z990G (roamer/ZTE-Z990G)
- ZTE\_LEO\_Q1 (hct72\_wet\_jb3/mobifone M9001)
- ZTE\_LEO\_Q1 (hct72\_wet\_jb3/V765M)
- ZTE\_LEO\_Q1 (hct72\_wet\_jb3/ZTE LEO Q1)
- ZTE\_LEO\_Q1 (hct72\_wet\_jb3/ZTE V765M)
- ZTE\_LEO\_Q1 (hct72\_wet\_jb3/ZTE\_CLARO\_Q1)
- ZTE\_LEO\_Q1 (hct72\_wet\_jb3/ZTE\_LEO\_Q1)
- ZTE\_N9511 (hera/ZTE\_N9511)

- ZTE\_Q701C (ZTE-Q701C/ZTE Q701C)
- ZTE\_Q801C (ZTE-Q801C/ZTE Q801C)
- ZTE\_Q801L (ZTE-Q801L/ZTE Q801L)
- ZTE\_U N721 (N721/ZTE\_U N721)
- ZXY-ZTE N8300 (N8300\_CT/ZXY-ZTE N8300)
- ZXY-ZTE\_N8010 (N8010\_CT/ZXY-ZTE\_N8010)
- ZXY-ZTE\_N8010 (N8010\_CT\_BL/ZXY-ZTE\_N8010)
- ZXY-ZTE\_N8010 (N8010\_YM/ZXY-ZTE\_N8010)
- ZXY-ZTE\_V6700 (V6700/ZTE V6700)
- ZXY-ZTE\_V6700 (V6700/ZXY-ZTE\_V6700)