



User Manual

AI-FaceT5

1.Appearance Display

(The appearance may have some difference, The pictures are just for your reference)

Front

Dual IR Illuminators

HD Color Camera
HD Infrared (IR) Camera

LED Fill Light

Sensor scanner

Speaker

Card

LCD

Reset button

10PIN (Power supply/Lock/Exit button
/Wiegand out/Door bell)

4PIN (RS485) --

TCP/IP--

USB flash
disk port
Power
Switch


Backup Battery Compartment

Mounting Bracket Screw Holes


Cable Duct

2.Wall Mount Installation

- 1) The recommended installation location is 130cm from the lowest point of the device to the ground (a suitable height can be identified according to the actual situation).
- 2) Disassemble rear hanging plate and attach it to the wall to select the suitable installation position, then make a mark.
- 3) Drilling on wall according to the marked position.
- 4) Fix the rear hanging plate on the wall.
- 5) Install the device on the rear hanging plate and fix it, then power it up.

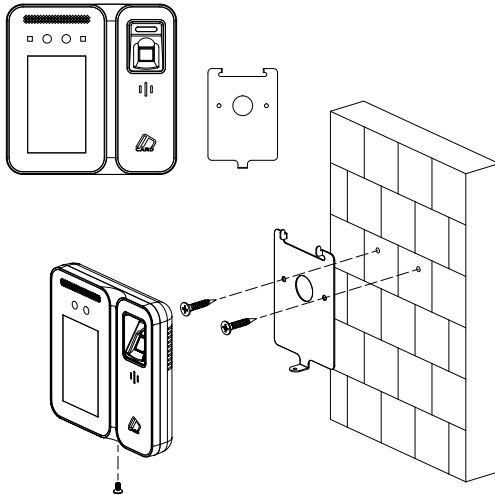

Wall mounted installation

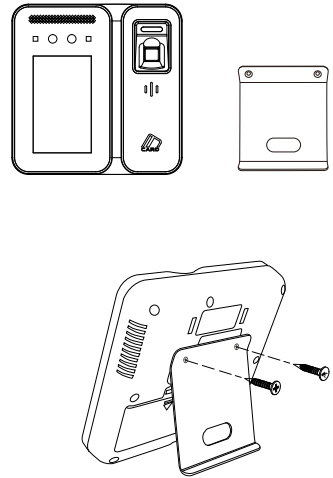


Desktop installation

3.Attention

- 1) Do not operate with power during installation.
- 2) When connecting electric lock, 12V/2A power supply is recommended .
- 3) Do not install the device in direct sunlight or in a humid place.
- 4) Please read the wiring diagram of access control, and wire it according to the rules strictly.
- 5) On the situation that static electricity is a bit heavy, please connect ground wire first and then connect other wires, which can protect the device from damaging in static electricity.

4. User Management

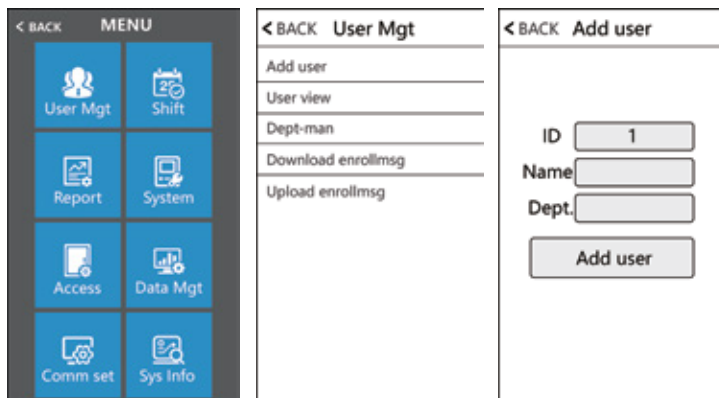

Touch the screen and a menu bar will pop up on the right side of the screen, click > **【User Mgt】** > **【Add user】**, when there is a registered admin, After passing the verification of admin then the menu can be entered

【ID】 When registering, each user can only have one unique 'ID'.

【Name】 Input, edit name by T9 input method.


【Face】 Gaze at the camera to complete the face registration.

Note: Please stand directly in front of the device, face the camera, and keep the entire face displayed in the frame, In order to maintain a good face recognition effect. The following picture is for your reference.



【Fingerprint】 Press finger three time to finish enrollment. **(Optional)**

【Password】 IAn ID can only register one password. After clicking the password icon, enter the password to be set and then press ok to confirm the password again.

【Password Verification】 Verify password by to Subhash the face recognition area of the screen then click  then input ID-click 'OK'-input password-click 'OK'


【Card】 Each user can only register one card.

【User】 :If there is Admin in this device, user is not allow to access into menu

【Admin】 : The manager of this device. Only admin has permission to access into menu.

【Super.user】 : Only when there is Admin in device, then can enroll Super.user, but Super.user can only operate part of menu, such as register users


5.Download and upload user information

Touch the screen and a menu bar will pop up on the right side of the screen, click  > 【User Mgt】 > 【Download enrollmsg】 ,insert U-disk in device to download, 3 files will be exported as below:

- 1、 User data file (AFP_001.dat): It can be used to synchronized users between devices, and '001' represents device ID
- 2、 User's enrolled photo(EnrollPhoto)
- 3、 User information Excel sheet(Staff): Users can edit it in PC then upload back to device, please refer to below picture:

Staff												
Note:A. Enroll number: only fill in the number (maximum of 30) required. B. Name: up to 40 words. C. Department: up to 40 words. D. Shift: 0'B. E. Admin :0 or not filled: user, 1: admin. F.Fingerprint, Face: no need to fill in. G. Password: up to 8 digits												
ID	Name	Dept.	Shift	Admin	Face	PWD	Card	Lock timezone	GRP	Birthdate	Start:	End:
1	Jenny		0	0		123	3653177	0	0			
2	Sophie		0	0		0	0	0	0			

Fill in personnel information according to the prompt of form header. As for“Shift” item, it is the editing shift number in the time attendance setting. When complete the editing. Directly Click 【Save】 , and save the edited file into U-disk.


After editing shift form , Touch the screen and a menu bar will pop up on the right side of the screen, click  > 【User Mgt】 ,then insert U-disk, click 【Upload enrollmsg】 and transmit the edited user information to device.

Remark: For Lock Time zone, start time and end time, Pls refer to Chapter 9 Access

6.Time Attendance Management


This chapter is used for setting shifts and attendance rules

1、 Attendance Rule

Touch the screen and a menu bar will pop up on the right side of the screen, click  > 【Shift】 > 【Atten rules】

Item	Meaning
Re verify	Check if users make punch repeatedly within this range, if records interval is less than this value, records won't be stored
Log Warning	When rest available storage capacity is less than this value, device will alarm
Save Photo	If select 'Yes', when device connect to software, captured photo when users verify face can be shown in software
Stranger Photo	If select 'Yes', and enable 'save photo', when device connect to software, captured photo when strangers verify face can be shown in software
Default Shift	Set default shift, when you add users, they will apply this default shift
Excel Pwd	Set password for attendance report
Late time	When user's late arrival time exceeds *** mins , then it is counted as late arrival.
Lea time	When user's early leave time exceeds *** mins , then it is counted as early leave.

2、Edit Shift

【Download Shift】 : Touch the screen and a menu bar will pop up on the right side of the screen, click  > 【Shift】 > 【Atten rules】 , then insert U-disk. Click 【Download Shift】 , then you can download shift arrangement in excel form, Also you can edit the form on PC. Pls refer to below picture:

Shift											
Note: A, shift name: up to 48 words. B, Section type: 0: normal attendance.1: overtime. C, cut off time: if the punch before the cut off time ,it will calculate as the previous day											
NO.	Name	Sec1			Sec2			Sec3			CutoffTime:
		IN	OUT	Sec_type	IN	OUT	Sec_type	IN	OUT	Sec_type	
1	Day shift	08:30	12:00	0	13:30	18:00	0	18:30	21:00	1	09:00
2	Night Shift	22:00	06:00	0							07:00

Edit shift arrangement according to the prompts of form header. Maximum 8 shifts can be set. Click 【Save】 after editing and save the file into U-disk.

Note:

1) Attendance time must be in the format of time, and attendance type must be in the format of digits. So when you handle the setting, pls pay attention that the input method is in English half-angle status. Checking Method: For example, when you input 10:30, double click this cell, then software will automatically turn the digits into 10:30:00.

2) If you set the shift of cross time, then the Clock-in before the cross time will be counted as the record of previous day. And shift should start after the cross time. For example:

Shift											
Note: A. shift name: up to 48 words. B. Section type: 0: normal attendance,1: overtime. C. cut off time: If the punch before the cut off time ,it will calculate as the previous day											
No.	Name	Sec1			Sec2			Sec3			CutoffTime:
		IN	OUT	SEC_Type	IN	OUT	SEC_Type	IN	OUT	SEC_Type	
1	Shift 1	23:00	08:00	0							09:00

Cross time is set at 09:00am. Then shift should start after 09:00, and Clock-in record before 09:00am on Tuesday should be counted as the record of Monday.


3) If you don't need to clock at noon, combine the two sections into one .

For example: 08: 30-12: 00 13: 30-17: 50, it can be set to section 1: 08: 30-17: 50

4) Time Skip setting is not allowed. For example, When you complete the setting of Section 1, you cannot skip Section 2 and get to set Section 3.

【Upload shift】 : After editing, insert U-disk and click 【Upload Shift】 , then you can upload the edited shift arrangements into device.

7.Report

Touch the screen and a menu bar will pop up on the right side of the screen, click  > 【Report】 , Insert U-disk, and input the start and end time that you need to check. Click “OK” to download the report. The report includes original record sheet(Original Record), attendance list(Schedule) and summary sheet (Summary Report).

Original Record: You can check all users' attendance records in the sheet.
 Pls refer to below picture:

Original record																																	
Date:2019-8-1~2019-8-31																																	
ID:1 Name:Lucas Dept.:Office Shift:Day Shift																																	
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31			
08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	08:25	
12:08	12:08	12:08	12:08	12:08	12:08	12:08	12:08	12:08	12:08	12:08	12:08	12:08	12:08	12:08	12:08	12:08	12:08	12:08	12:08	12:08	12:08	12:08	12:08	12:08	12:08	12:08	12:08	12:08	12:08	12:08	12:08	12:08	
13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	13:26	
18:26	18:26	18:26	18:26	18:26	18:26	18:26	18:26	18:26	18:26	18:26	18:26	18:26	18:26	18:26	18:26	18:26	18:26	18:26	18:26	18:26	18:26	18:26	18:26	18:26	18:26	18:26	18:26	18:26	18:26	18:26	18:26	18:26	
D H Original record Schedule Summary Report Feedback Print Close																																	


Schedule: Attendance machine can automatically analysis the clock-in and clock-out data, and transmit these data in EXCEL file to the U disk. Format as below:
 (Remark: Red text indicates that the attendance is abnormal, such as late, early leave. Blue means overtime)

schedule												
ID:1		Name:Lucas										
Dept.:Office		Shift:Day Shift								Date:2019-8-1~2019-8-31		
Date	week	Sec1		Sec2		Sec3		Work hours		OT hours	Late minutes	Leave minutes
		IN	OUT	IN	OUT	IN	OUT	Normal	Actual			
8-1	THU	08:25	12:03	13:26	18:06	18:06		8	8	0	0	0

Summary Report: It is a Statistics display of employee attendance for one month

Summary Report												
Date: 2019-8-1~2019-8-31												
ID	Name	Dept.	Work hours		Late minutes		Leave minutes		OT hours		Work Dates(Normal /Actual)	
			Normal	Actual	TIMES		Minutes	TIMES	Minutes	Normal		Truancy
1	Lucas	Office	248.0	248					77.5		31.0/31.0	0

8.System settings

Touch the screen and a menu bar will pop up on the right side of the screen, click  > 【System】


1. Device Setup

Item	Meaning
Time	Set device time
Time fmt	24H and 12H format can be selected
Date fmt	Select different date format
Language	Change device displayed language
Voice	Set the volume of speaker
Screen Idle	How long does it take to enter screen saver when the main Interface is not operating
bio-assay	Verify that the user is a live person instead of photo.

2. Advanced setup

Item	Meaning	
Max Admin	Set the maximum number of device admin	
Verify Mode	FA/C/P	No matter what kind of verification method can be verified
	Others	Need to verify two verification methods together
Visitor QRCode	Whether enable scanning QRcode function or not. Connect device to our cloud software and generate QRcode then verify it in device	
1:N Identify	Set the threshold of face recognition	
Live threshold	When enable 'bio-assay', the threshold of face recognition	
Testing	Check whether the camera is normal	
Firmware upgrade	Insert U-disk (FAT32 format) to do device firmware upgrade	

9. Access control management

Touch the screen and a menu bar will pop up on the right side of the screen, click  > 【Access】

1、Access

Item	Meaning
OD delay	Set the time between lock relay effective and the state of resume normal.
Users	Set the number of user required to open the door. For example: set it to 2, only when 2 different users verify at the same time, the door can be opened
Wg output	Define the content of wiegand output, user ID and card number can be selected
Wg format	You can define wiegand port output format. The default format is 34bits, and it can be changed to 26bits

2、Timezone settings

2.1 Day timezone

According to the rules and regulations of user's entry and exit, set the daily access time to the corresponding time period. You can totally set 8 groups of day time zones, or week time zones. For example, you can set the time between 6:00am and 8:00am to open the door, and the time between 17:00pm and 19:00pm to open the door. Pls refer to below picture Day Timezone 1 setting. If you want to set the door to be open in all day, pls refer to below picture Day Timezone 2 setting.

Example: 【Day Timezone 1】 setting as below

T.Zone1	06 : 00	08 : 00
T.Zone2	17 : 00	19 : 00
T.Zone3	00 : 00	00 : 00
T.Zone4	00 : 00	00 : 00
T.Zone5	00 : 00	00 : 00

Example: 【Day Timezone 2】 setting as below

T.Zone1	00 : 00	23 : 59
T.Zone2	00 : 00	00 : 00
T.Zone3	00 : 00	00 : 00
T.Zone4	00 : 00	00 : 00
T.Zone5	00 : 00	00 : 00

2.2 Week timezone

According to the rules and regulations of user's entry and exit, Set the passage time of each week to the corresponding day time zone. For example, the above-mentioned daily time zone rule(only 6:00am to 8:00am can open the door, and only 17:00pm to 19:00pm can open the door) applies from Monday to Friday, and door can be opened all day on Saturday and Sunday. Pls refer to (Figure 1) for Week Timezone 1:

Week time zone	
MON	1
TUE	1
WED	1
THU	1
FRI	1
SAT	2
SUN	2

(Figure 1)

Normal open time zone	
MON	1
TUE	1
WED	1
THU	1
FRI	1
SAT	1
SUN	1


(Figure 2)

Remark: In our device, 【Week Timezone 0】 is default to open the door all day. All other time zones are customizable


2.3 Normal open timezone

According to requirements, Set the passage time of each week to the corresponding day time zone .Example: If the setting is as (Figure 2), Day time 1 applies to every day , then it means the door is kept open between 6:00 am and 8:00 am and 17:00pm to 19:00pm everyday

3、User access settings


Touch the screen and a menu bar will pop up on the right side of the screen, click  > **【User Mgt】** > **【User View】** > select users > **【Advanced setup】** to edit T.zone

< BACK Subhash	
Edit	Advanced setup
ID	1
Name	Subhash
Card	31061
PWD	
Privilege	User Modify Face Delete



< BACK Subhash	
Edit	Advanced setup
Dept	
Shift	No
T.Zone	No
Birthdate	00/00
Start:	2000-01-01
End:	2099-01-01
GRP	No

10.Data management

Touch the screen and a menu bar will pop up on the right side of the screen, click 

【Data Mgt】 , Data management consists of 6 modules: Download Glog、Download All Glog、Clear All Enroll、Delete All Glog、Initialize Menu、Clean Manager.

< BACK Data Mgt
Down GLog
Down all GLog
Clean all enroll
Delete all GLog
Init Menu
Clean manager

【Down Glog】 : New attendance logs saved in device can be downloaded to U-disk, and form a TXT file, eg:'GLG_001.TXT'

【Down All Glog】 : All attendance logs saved in device can be downloaded to U-disk, and form a TXT file, eg:'AGL_001.TXT'


【Clear All Enroll】 : Delete all registration info of all users(include face、 card and pwd)

【Delete All Glog】 : Delete all logs of all users.

【Initialize Menu】 : Reset device parameter settings, it won't affect user data and records

【Clean Manager】 : Clear all manager privileges on the device







11.Communication

Touch the screen and a menu bar will pop up on the right side of the screen, click  > 【Comm set】

1、Comm set

Item	Meaning
Device ID	Set corresponding device No., the default device No. is 1, Please note that the number is related to the communication
Port No.	The default port No. is 5005, For communication connection under LAN

2、Server

< BACK	Server
Server Rep	NO 
Use domainNm	NO 
DomainNm	
Server IP	047.106.068.143 
Ser Port NO	7791 
Heartbeat	3 



When using WAN connection, please do corresponding server settings

Item	Meaning
Server Req	Select 'Yes' or 'No', select 'yes' to enable server communication
Use domainNm	Select 'Yes' or 'No'
DomainNm	If you select 'Yes' for 'Use domain Nm', enter the server domain name here
Server IP	If you select 'No' for 'Use domain Nm', enter the server ip address here
SerPortNo	Enter server port number
Heartbeat	Default value is 30s

3、Ethernet

< BACK Ethernet	
DHCP	No ↗
IP address	192.168.001.224 ↗
Subnet mask	255.255.255.000 ↗
Gate way	192.168.001.001 ↗
DNS ServerIP	008.008.008.008 ↗
MAC Address	2e:43:67:28:3a:e2 ↗

Use Ethernet to connect the device to computer, An example is shown in the figure below:

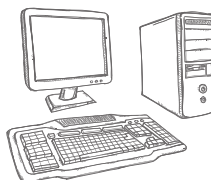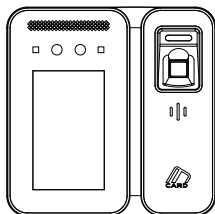

IP Address: 192.168.1.224
 Subnet Mask: 255.255.255.0
 Gateway: 192.168.1.1

IP Address: 192.168.1.100
 Subnet Mask: 255.255.255.0
 Gateway: 192.168.1.1

4、WIFI(Optional)

click 【Search】 to select corresponding wifi hotspot, then input wifi password to connect it.

< BACK WIFI	
Search	GSWIFI-21AD ▶
DHCP	No ↗
IP address	192.168.001.225 ↗
Subnet mask	255.255.255.000 ↗
Gate way	192.168.001.001 ↗
DNS ServerIP	008.008.008.008 ↗
MAC Address	38:01:46:18:ab:68 ↗

12. Schematic Diagram of Access Control Wiring

1) Schematic diagram of device wiring port


TCP/IP	TCP/IP interface
--------	------------------

+12V	+12V
GND	GND
Button	Open signal
Lock_NO	Normal opened end of the control lock signal
Lock_COM	The common end of the control lock signal
Lock_NC	Normal closed end of the control lock signal
WG_D0	WG 0
WG_D1	WG 1
Bell -	Door bell -
Bell+	Door bell +

BAT	Backup power
-----	--------------

+12V	+12V
RS485A	RS485A
RS485B	RS485B
GND	GND


2) Device connection diagram

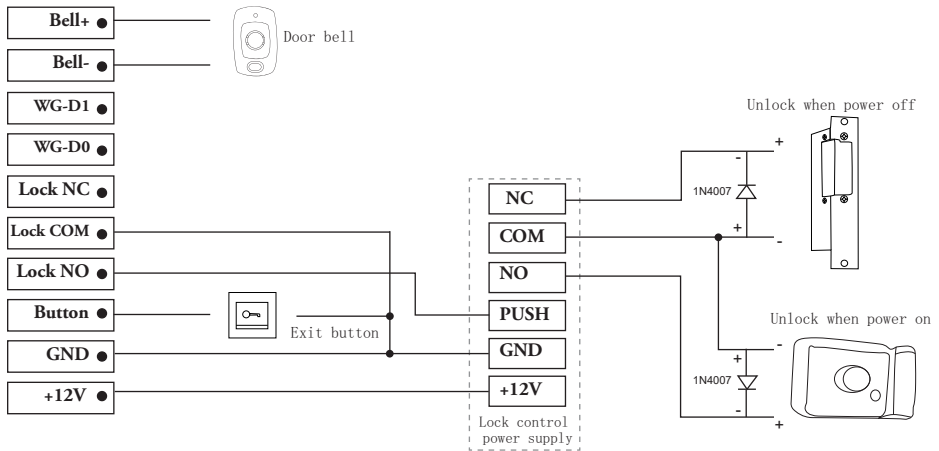

Special Note: To protect the power supply, a diode must be connected across the positive and negative terminals of the electric lock wiring. The end of the diode marked with white should be connected to the positive terminal of the electric lock.

3) RS485 connection

Compatible with other RS-485-equipped devices manufactured by our company

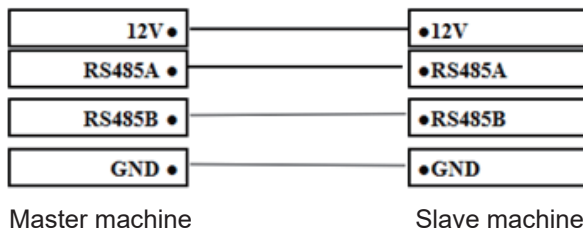

13.T9 Input Method

Touch 'Alt' to switch capital/small letter or number, after finished,touch 'Ok' to save it

How to input punctuation:when the input method is in capital/small letter state,continuous click '↵' to select what you want to input. The first one is space, the second is dot and so on .





Contact Us

D-162, Okhla Industrial Area, Phase-I, Delhi 110020

Email: sales@timewatchindia.com

Phone: +91-11-41916615

Mobile No: +91-95999-53923



New Delhi - NCR



Mumbai



Ahmedabad



Bengaluru



Chennai



Kolkata



Dubai

www.timewatchindia.com