



## How to Remove the Plastic tag

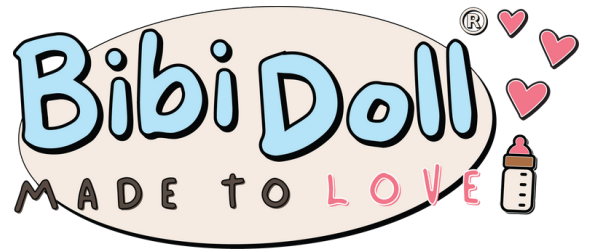

1. The sound box is located in the doll's front pocket, underneath the outer layer of clothes.
2. Remove the doll's clothes to access the pocket.
3. Inside of the pocket you can find a small white, soundbox which can be easily removed.
4. Once the soundbox is removed, pull out the small plastic tag that is inserted into the battery compartment.

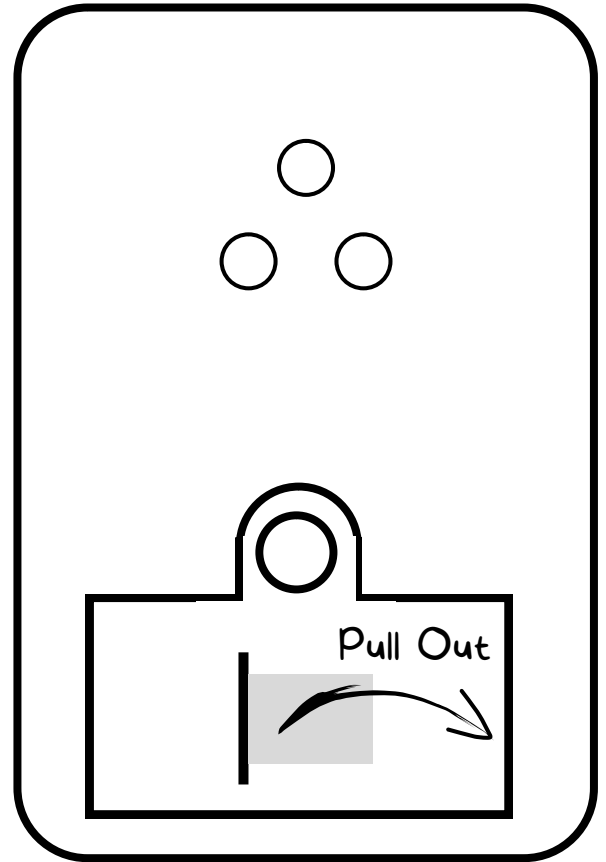

## How Change The Battery

1. Find the battery compartment on the back of the soundbox.
2. Use a screwdriver to remove any screws securing the compartment.
3. Take off the battery compartment cover.
4. Check the battery type required for the soundbox. You need 3 LR44 batteries.
5. Remove the old batteries and dispose of them properly.
6. Insert the new LR44 batteries, making sure they're in the correct position.
7. Put the battery compartment cover back on.
8. Use a screwdriver to secure the compartment with the screw.

