


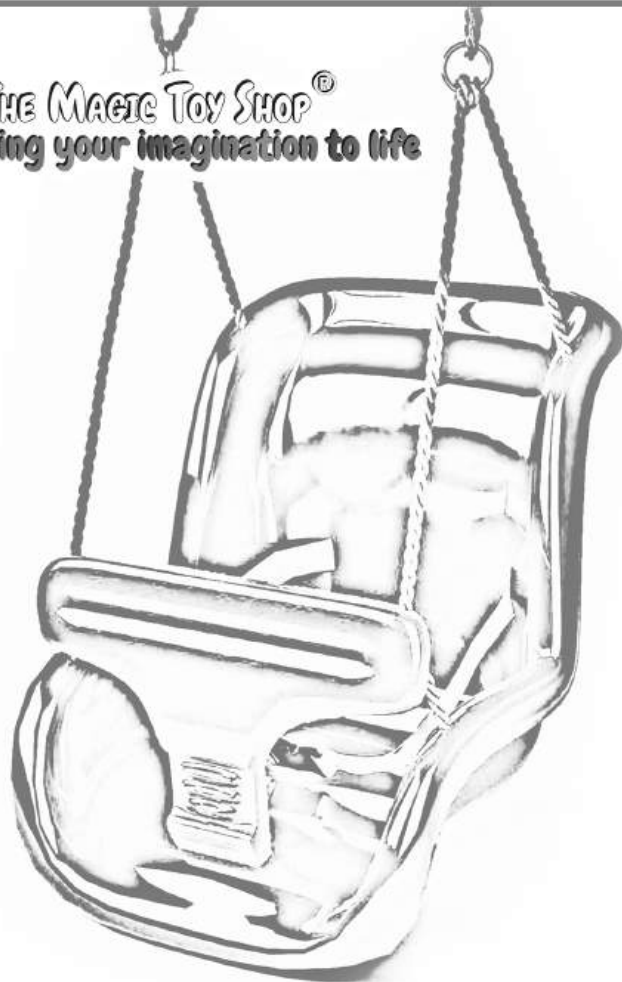

THE MAGIC TOY SHOP®
Bring your imagination to life



Instruction Manual

www.TheMagicToyShop.com

Plastic Swing Seat

Model No: S04-107

Max. User Weight: 35 kg

Recommended Age Range: 10–36 months

Manufactured for: The Magic Toy Shop Ltd

Customer Support: Support@TheMagicToyShop.com

1. Safety Precautions

To ensure your child's safety and enjoyment, please read the following safety precautions carefully before using this product:

- Always supervise children when using the swing.
- Use only as intended — this swing is for domestic, outdoor use only.
- Install on strong, stable structures capable of supporting the user's weight and motion.
- Do not exceed 35 kg (77 lbs) in user weight.
- Ensure all fastenings, ropes, and knots are secure before each use.
- Never leave a child unattended in the swing seat.
- Check for damage or wear before every use. Discontinue use if any part is broken or damaged.
- Do not modify the swing or use replacement parts not recommended by the manufacturer.

2. Assembly Instructions

Included Components:

- 1x Plastic swing seat with front T-bar
- Pre-attached ropes with metal hanging rings
- Adjustable safety harness straps

Tools Required: None

Installation Steps:

1. Choose a suitable location – The swing should be installed in an area clear of obstacles and hard surfaces.
2. Secure suspension – Attach the metal rings at the top of each rope to a swing frame or a solid beam using compatible hooks (not included).
3. Adjust the ropes – Ensure both sides of the swing are level and at the appropriate height for your child.
4. Check safety harness – Make sure the harness is securely fastened and adjusted to snugly fit the child.
5. Test before use – Push the swing gently with some weight applied to confirm stability and balance.

3. Operating Instructions

1. Place your child gently into the swing seat.
2. Bring the T-bar down into place in front of the child.
3. Fasten the harness straps securely.
4. Gently push the swing, keeping the motion smooth and controlled.
5. Stop the swing before removing the child.

4. Care and Maintenance

- Regularly inspect the seat, T-bar, ropes, and harness for any signs of wear or damage.
- Clean with a damp cloth and mild soap. Do not use abrasive cleaners or solvents.
- Store indoors when not in use for extended periods or during harsh weather conditions to prolong lifespan.
- Do not leave the swing exposed to direct sunlight for long durations as this may weaken the plastic and fade the colour.

5. Warranty and Customer Support

For any questions, concerns, or replacement part inquiries, please contact:

Customer Support:

✉ Email: support@themagictoyshop.com

Please include your model number (S04-107) and a description of the issue for faster service.

6. WARNING!

- This toy is not suitable for children under 10 months.
- Adult assembly required.
- Intended for outdoor, domestic use only.
- Keep away from fire or other heat sources.