


FIG II

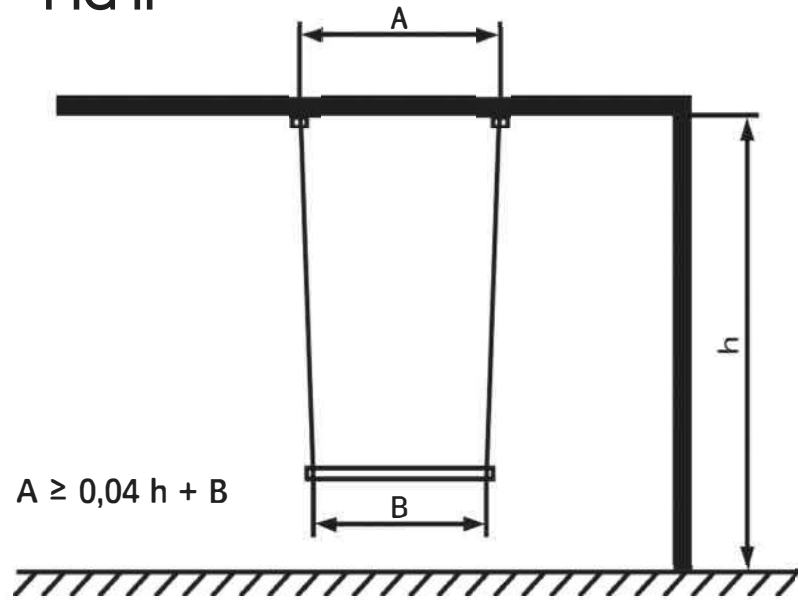

$A \geq 0,04 h + B$


For example: $h=2,5 \text{ m}$ $B=38 \text{ cm}$

$(0,04 \times 250 \text{ cm}) + 38 \text{ cm} \rightarrow A \geq 48 \text{ cm}$

A distance between the suspension points along the crossbeam.
 B distance between the junction points of the swing element and the means of suspension.
 h distance from the ground to the lower side of the crossbeam.

FIG II


Assembly of the ropes

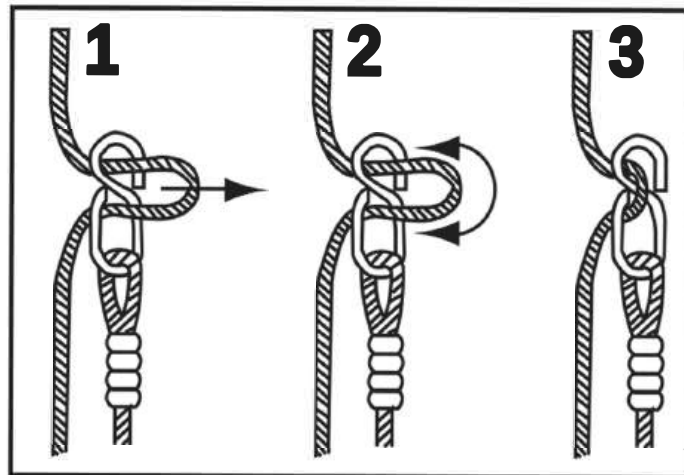

Manufactured for: The Magic Toy Shop Ltd
 Customer Support: Support@TheMagicToyShop.com
 Website: www.TheMagicToyShop.com

FIG III


Mounting not included!

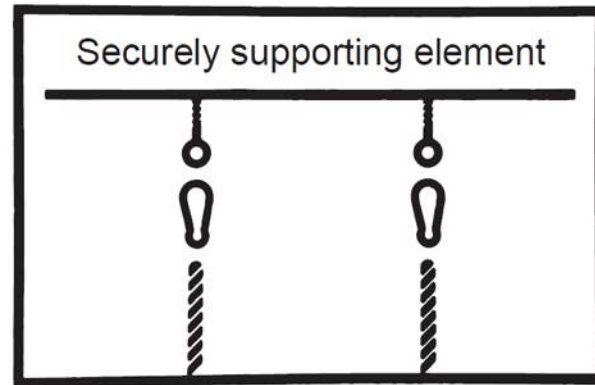

INSTRUCTIONS FOR USE

Cotton Canvas Baby Seat
 Outdoor Swing

S04-218B

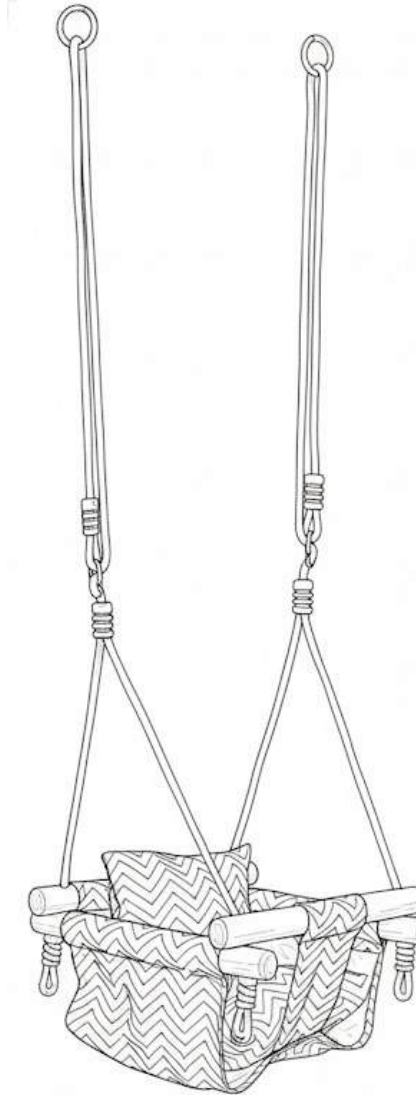

Warning. Only for domestic use.

Warnings: Outdoor use only. Recommended user age 9-36 months. Maximum user weight 35kg. Strangulation hazard. To be assembled by an adult. To be used only under the direct supervision of an adult.

Keep the assembly and installation instructions for future reference.
 Conforms to EN 71 parts 1, 2, 3, 8.

INSTRUCTIONS FOR USE

SAFETY INSTRUCTIONS

Please do not modify the product or the assembly details in any way. Modifications will affect the structural integrity and replacement parts will be at the buyer's expense. Inappropriate use or faulty application of the product are explicitly forbidden and absolve the manufacturer of all liability. This product has to be mounted by an adult before use.

When installing the product, ensure that the play system or other construction can support the weight (minimum 200 kg) and that there is no risk of entrapment.

The product should be at a distance of at least 2 m from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines or electrical wires.

In this safety area no hard, angular or pointed objects should be present. The surface underneath the product should be flat and shock-absorbing. The product must not be installed over asphalt, concrete or any other hard surface. We advise the removal and storage of all accessories during winter and in heavy rain.

The crossbeam must not be higher than 2.5 m. Make sure that children do not climb the product to reach the top beam.

The distance between the suspension points along the crossbeam equals or is more than the distance between the junction points of the product, plus 4% of the distance between the ground and beam. See FIG I.

The distance from the bottom of the swing seat to the ground surface must be 35 cm. The minimum distance between the swing seat and other adjacent swing elements should be 45 cm if these are free-swinging elements, such as climbing ropes or monkey swings, or 30 cm for any other adjacent swing elements. The minimum distance between the swing seat and the frame should be 30 cm.

Specific instructions for adjusting the rope length : see FIG II. Ensure that the product hangs horizontally after adjustment of the ropes.

Modifications made by the consumer to the original activity toy /for example the adding of an accessory/shall be carried out according to the instructions of the manufacturer.

All pieces should be checked regularly. For replacement parts and expansion of the play-ground equipment, please contact the supplier.

This product can only be used in combination with sufficiently strong swing hooks with a nylon bearing. Only in this case the safety can be ensured. It is explicitly forbidden to use the metal rings on a suspension system without a hinged element.

The included strap must be fitted on the seat and should always be fastened during use.

INSPECTION AND MAINTENANCE

The frequency of inspection and maintenance may vary depending on the type of equipment or materials used or other factors (e.g. heavy use, levels of vandalism, coastal location, air pollution, age of equipment, ...).

Regular checks and maintenance of the main parts (i.e. swing hooks, rings, eights, plastic welds and ropes. etc) have to be carried out at regular intervals. If these checks are not carried out, the swing could overturn or otherwise become a hazard. It is of particular importance the following recommendations to be followed at the beginning of each season as well as at regular intervals during the usage season:

- a. To check all nuts and bolts for tightness and tighten when required;
- b. To oil all metallic moving parts;
To check all coverings for bolts and sharp edges and replace when required;
- d. To check swing seats, chains, ropes and other means of attachments for evidence of deterioration;
- e. To replace defective parts in accordance with the manufacturer's instructions

Routine visual inspection (weekly to monthly)

- Always check that the bolts and nuts are securely fastened.
- Check the shock absorbing surface for objects that don't belong there.
- Check for missing parts.
- Check the equipment ground clearances.

Operational inspection (1 to 3 months)

- Check the stability of the construction.
- Check every part for excessive wear and replace when necessary. Annual inspection (1 to 2 times per year)
- Check for rust and corrosion.
- Check every part for excessive wear and replace when necessary If any part has become damaged or faulty, immediately discontinue using the product.