
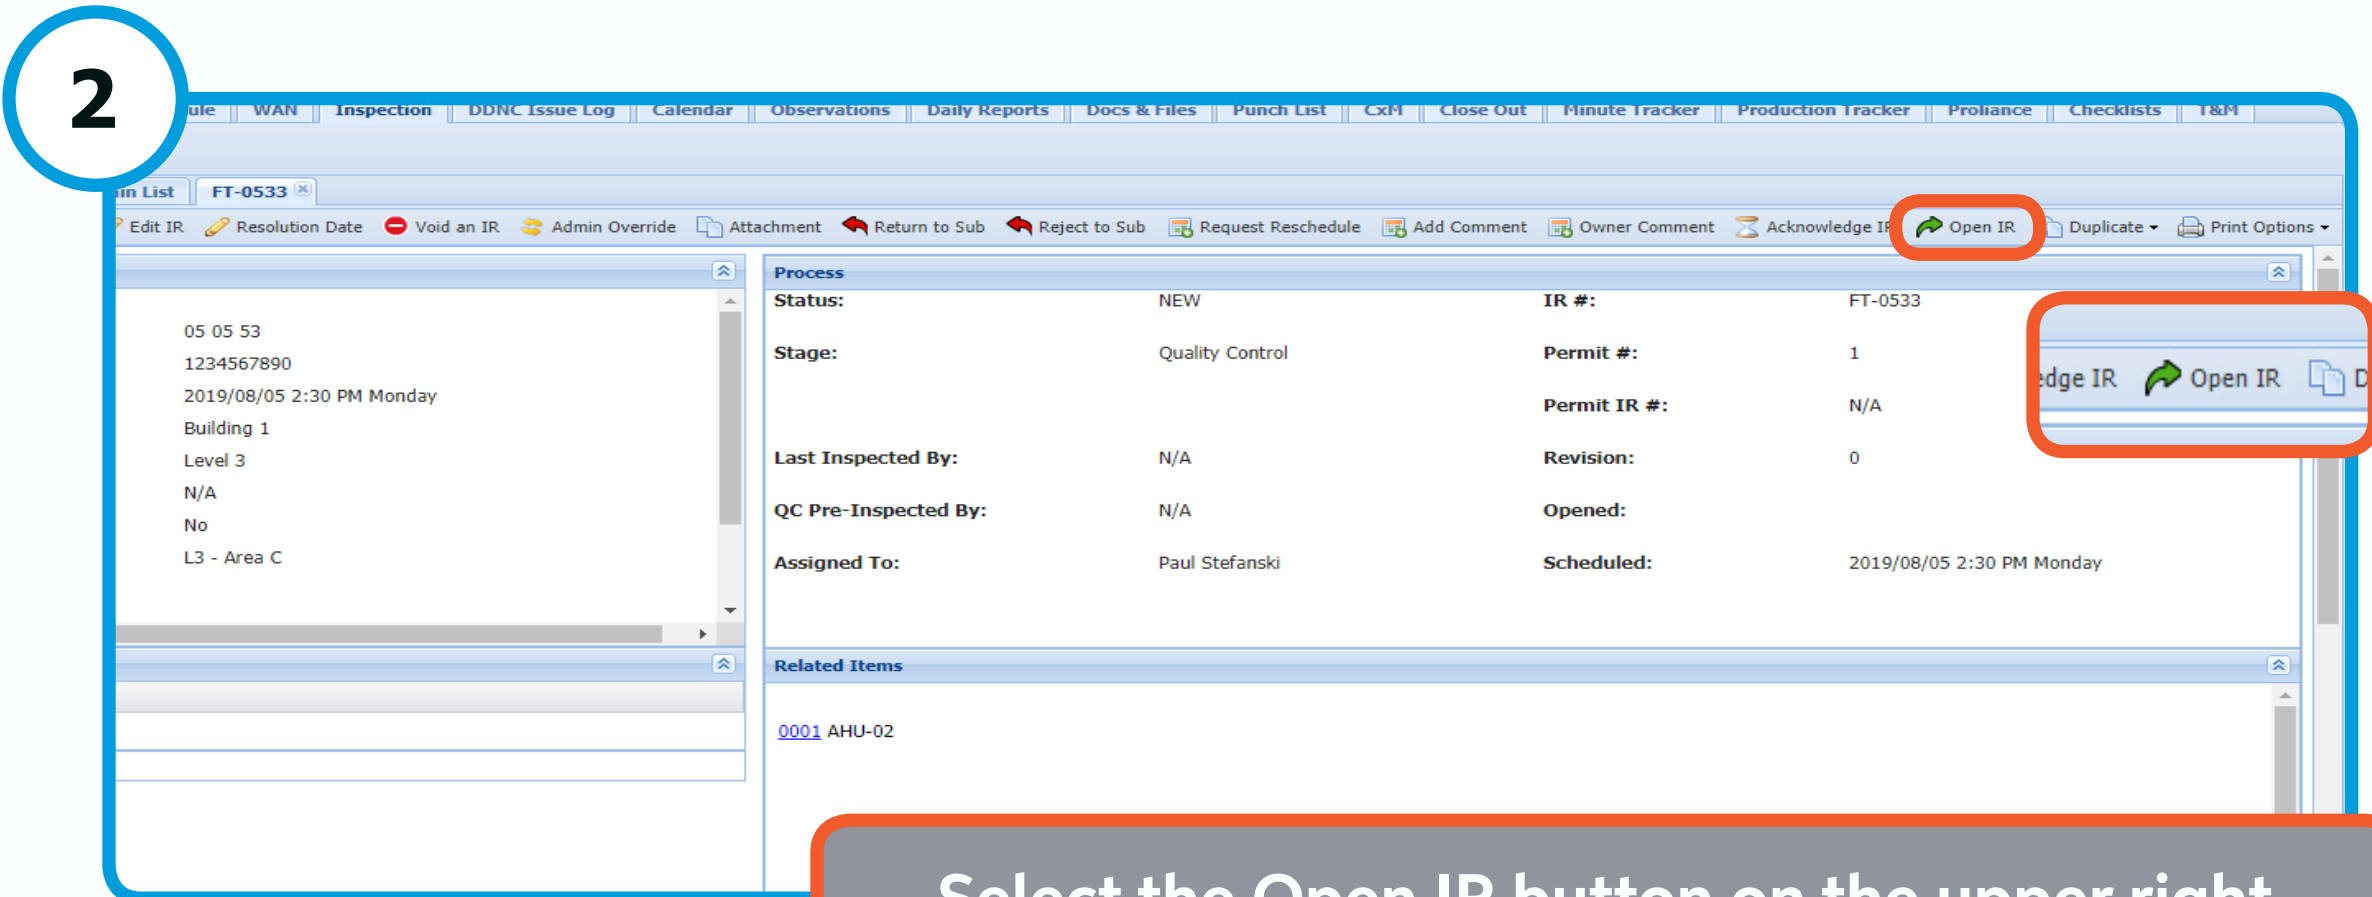



Quick Guide: Inspection Requests

How to locate an inspection request and open it to inspection
(GC/QC Guide)

1 Locate and open the new inspection request in the IR Main List tab under the Inspection tab

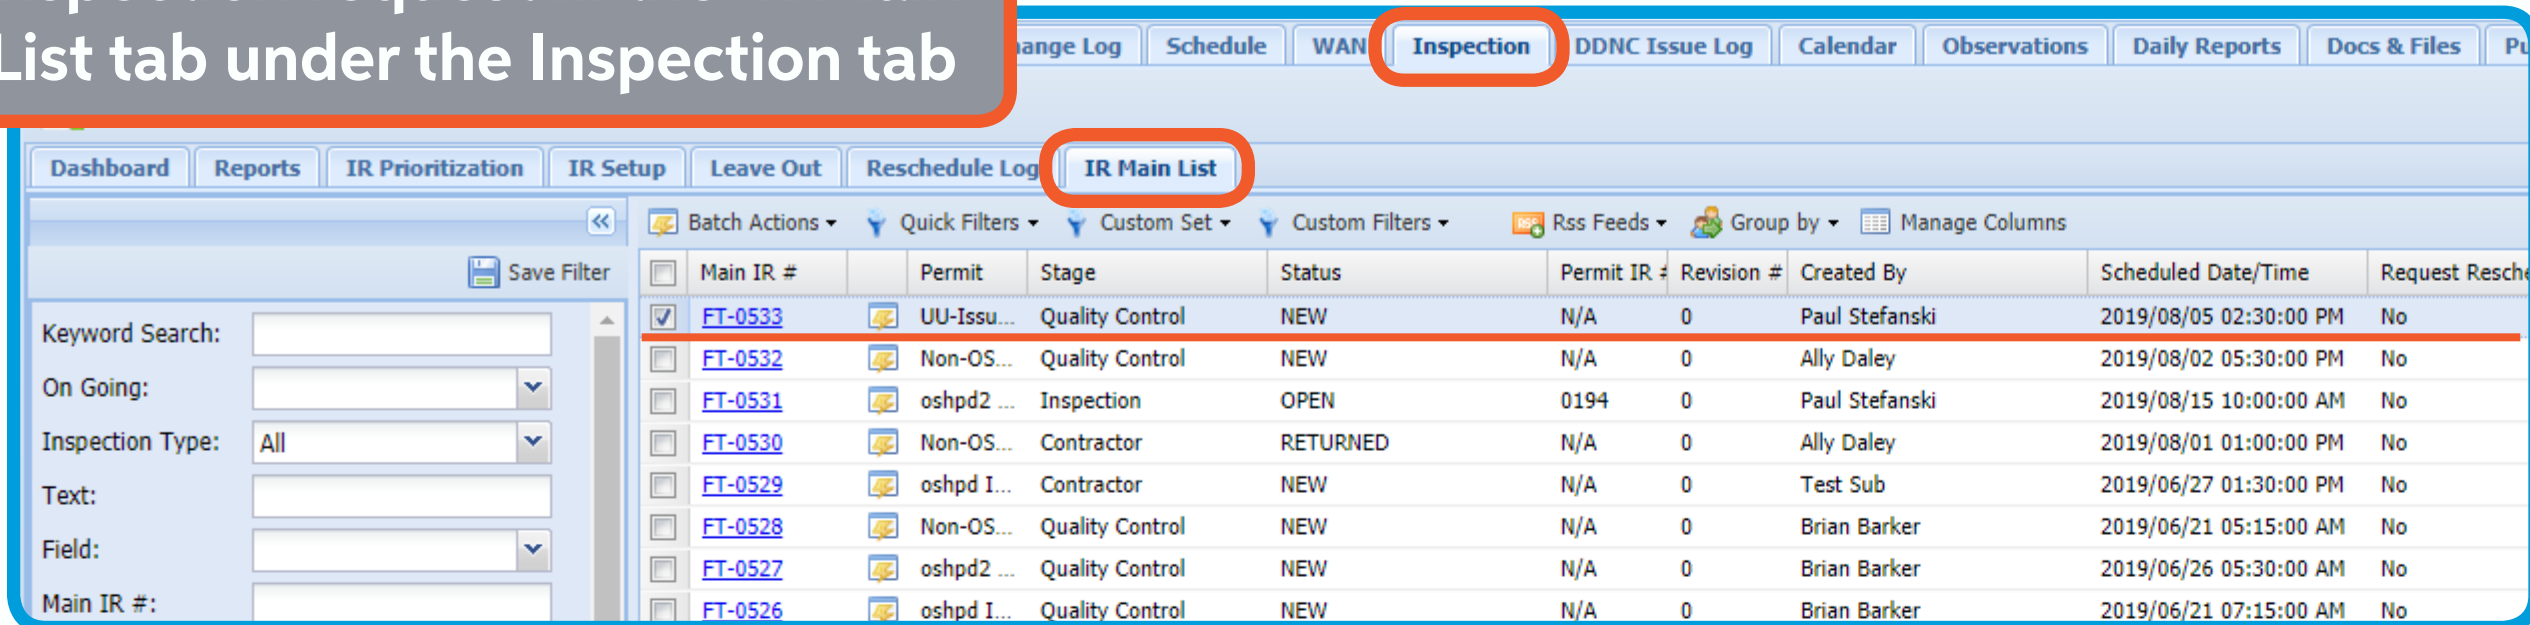


Select the Open IR button on the upper right

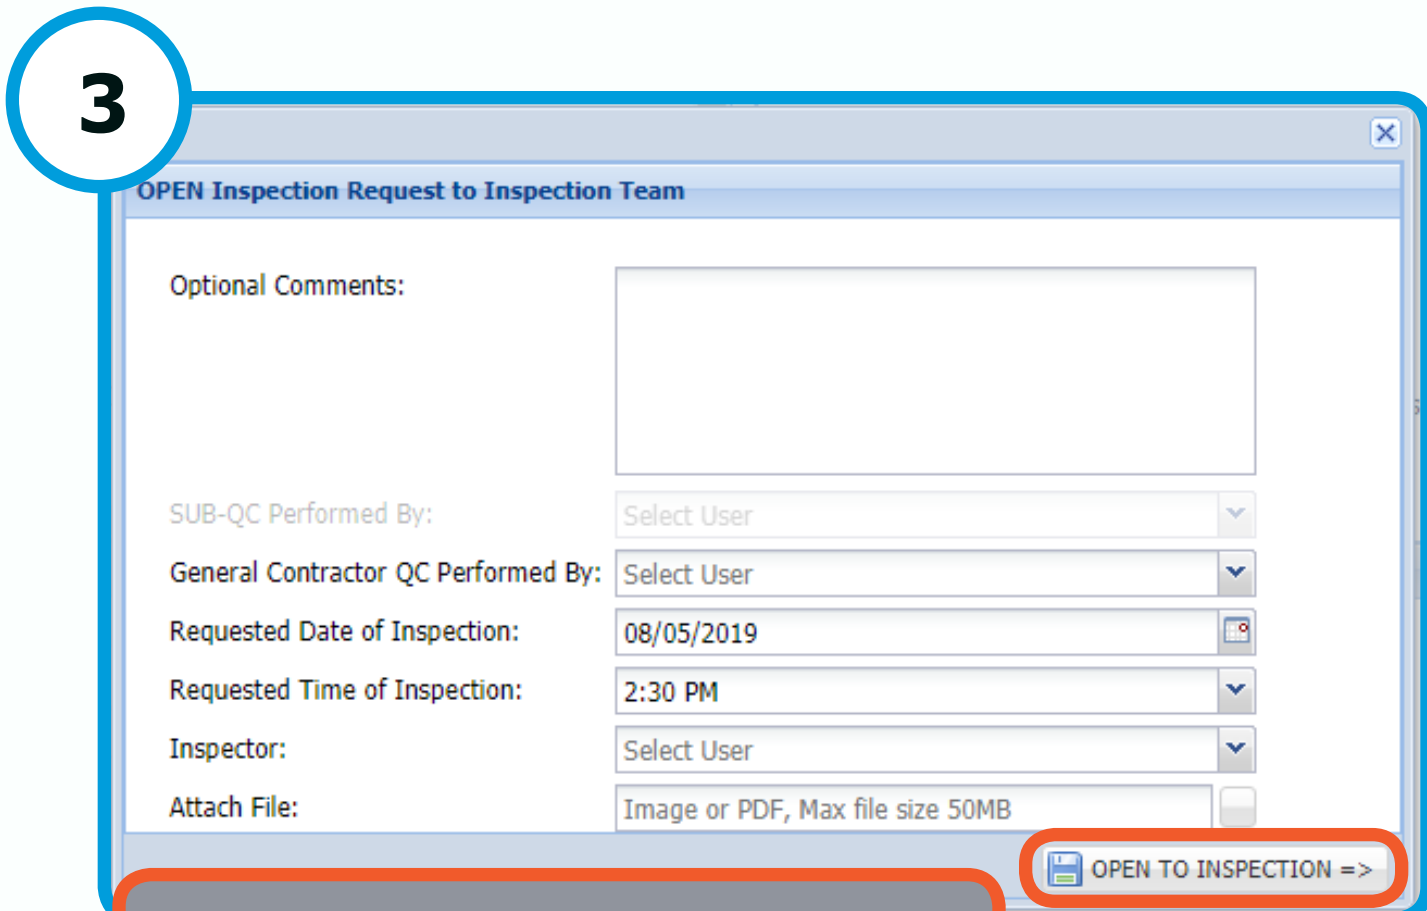

Fill all required fields with the correct information and upload additional files as desired, then select Open To Inspection button

4 Be sure your request has saved

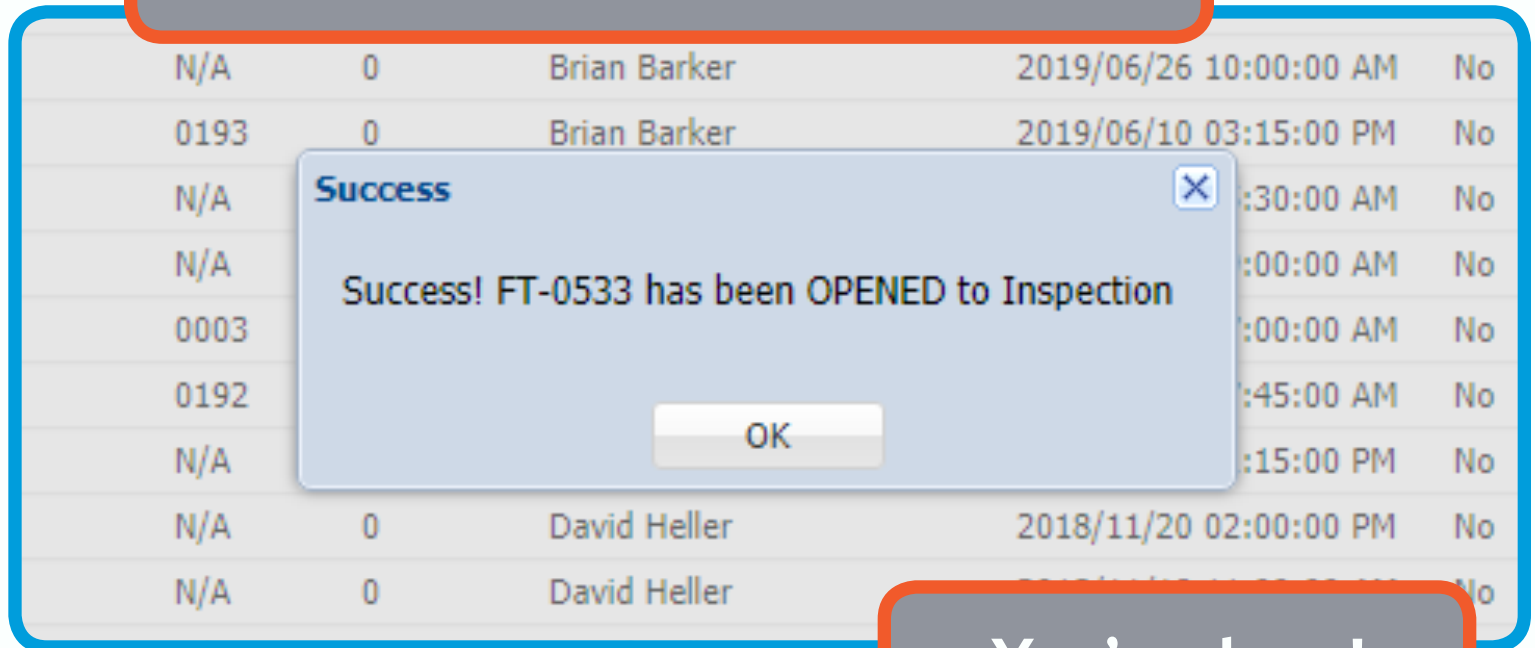

You're done!