

Canon

MULTIMEDIA PROJECTOR
WUX6000
User's Manual



AISYS
Aspectual Illumination
System

HDMI™
HIGH DEFINITION MULTIMEDIA INTERFACE

PJLink™

Table of Contents

Safety Instructions

Before Use

Operation

Projecting an Image

Useful Functions Available
During a Presentation

Setting Functions from
Menus

Installation and Maintenance

Installation

Connecting to a Network

Maintenance

Appendix

Other Information

Index

ENG

How to Use This Manual

Thank you for purchasing a Canon projector.

The WUX6000 Multimedia Projector (hereinafter referred to as “the projector”) is a high-performance projector that is capable of projecting a high-resolution computer screen and high-quality digital image on a large screen.


This Manual

This is the user’s manual for WUX6000 Multimedia Projectors. The “Operation” section describes how to use the projector. The “Installation and Maintenance” section describes the projector installation procedure, network connection procedure, and regular maintenance. Read this manual thoroughly to make the most of your projector. Installation of the projector should be performed by a qualified technician, if possible. Contact the Canon Customer Support Center for further information.

Symbols of Button Operations

The projector can be operated using the buttons on the remote control or on the side of the projector. The remote control allows you to operate all functions of the projector.

In this document, the button’s operations are shown as below.

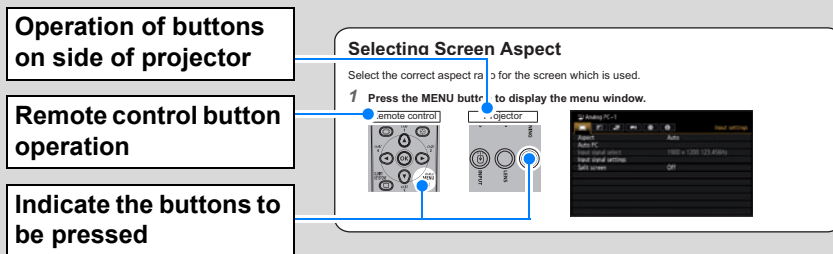

Symbols Used in This Manual

Meanings of the symbols used in this manual are as follows.

⚠ A precaution about operation or restriction is given here.

📄 Indicates supplemental information to note in use.

Copyright Notice

Please note that enlarging or reducing the size of an image for commercial purposes or public presentation may infringe on the legally protected copyright or the copyright holder of the original material.

About Trademarks

- Ethernet is a registered trademark of Xerox Corporation.
- Microsoft, Windows, Windows Vista, Windows 7, Windows 8 and Aero are registered trademarks or trademarks of Microsoft Corporation in the United States and / or other countries.
- Mac, Mac OS and Macintosh are trademarks of Apple Inc., registered in the United States and / or other countries.
- HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing, LLC.
- PjLink is a registered trademark, or an application has been submitted for trademark, in Japan, the United States and / or other countries or regions.
- AMX is a trademark of AMX Corporation.
- Crestron®, Crestron RoomView®, and Crestron Connected™ are registered trademarks of Crestron Electronics, Inc.

Projector Highlights

High-Resolution LCOS Projection

Projection at 1920x1200 (WUXGA), thanks to high-resolution reflective liquid crystal on silicon (LCOS) panels.

Lens Shift

Lens shift enables motorized image repositioning up, down, left, or right ([P46](#)) for greater freedom in installation.

Motorized Zoom and Focus Adjustment

Efficient setup using motorized zoom and focus adjustment.

Five Lens Units Available

Choose the optimal lens unit for the projection distance or purpose.

Split-Screen Display

Side-by-side projection of two input images from devices connected to the projector. ([P67](#))

USB File Viewer

Project JPEG images stored on a USB flash drive. ([P65](#))

Edge Blending

Blend the overlapping edges of images from multiple projectors to make the overall image more seamless. ([P154](#))

Displaying Test Pattern

Project a range of test patterns, with no image input needed. ([P153](#))

Networked Multi-Projection (NMPJ)

Project images from multiple computers via a network connection. For details on Networked Multi-Projection (NMPJ), refer to the separate user's manual.

Quick Reference Guide

This Quick Reference Guide will help you find functions that make full use of the projector and are useful for producing an attractive presentation, etc.

Connecting the Projector

Connecting to the Computer ([P132](#) - [P134](#))

Connecting to AV Equipment ([P135](#) - [P137](#))

Projecting an Image

Starting Projection ([P38](#))

Selecting an Input Signal ([P39](#), [P40](#))

Projecting Images from Two Sources at Once ([P67](#))

Adjusting the Image

Adjusting the Image Size and Focus ([P44](#), [P45](#))

Adjusting Keystone Distortion ([P54](#))

Adjusting Aspect Ratio ([P48](#) - [P53](#))

Eliminating Flickers from Computer Screen and Adjusting Positional Shift ([P77](#), [P78](#))

Adjusting Colors and Image Quality

Projecting an Image on a Greenboard ([P148](#))

Selecting an Image Mode Suitable for the Projecting Image ([P84](#))

Making Fine Color Adjustments ([P88](#))

Removing Noise ([P90](#), [P91](#))

Producing a Presentation

Temporarily Blacking Out an Image ([P62](#))

Freezing the Picture ([P62](#))

Adjusting the Volume ([P63](#))

Muting the Sound ([P63](#))

Zooming an Image ([P64](#))

Projecting Images on a USB Flash Drive ([P65](#), [P66](#))

Changing the Remote Control Channel ([P102](#))

Resetting Projector Setting

Canceling the Password ([P104](#))

Initializing the Network Setting ([P170](#))

Restoring Default Menu Settings ([P111](#))

Miscellaneous Functions

Using Power Management ([P98](#))

Turning on the Projector by Connecting the Power Cord ([P99](#))

Disabling the Beep During Operation ([P100](#))

Disabling Buttons ([P101](#))

Hiding Guide Messages ([P149](#))

Setting a Password ([P104](#))

Reducing the Lamp Brightness ([P95](#))

Displaying Test Pattern ([P153](#))

Selecting Audio In Terminal ([P106](#))

Combining Images from Multiple Projectors ([P154](#) - [P161](#))

Projecting Images Via Network (For details on Networked Multi-Projection (NMPJ), refer to the separate user's manual.)

Table of Contents

How to Use This Manual	2	Step 4 Select an Aspect Ratio (Screen Aspect) Matching the Screen	48
Projector Highlights	4	Selecting Screen Aspect	48
Quick Reference Guide	5	Moving Image with 16:9 D. Image Shift	50
Safety Instructions	10	Moving Image with 4:3 D. Image Shift	51
Safety Precautions.....	11	Resetting the Image Shift.....	52
CAUTION ON HANGING FROM THE CEILING	11	Select the Aspect	52
AC Power Cord Requirement.....	14	Types of Aspect Ratios	52
Federal Communication Commission Notice	15	Selecting an Aspect Ratio.....	53
Precautions for Use	17	Step 5 Correct the Image Distortion	54
Installation and Handling Precautions	18	Adjusting Keystone Distortion	54
Precautions on the Lamp	20	Step 6 Select the Image Quality (Image Mode)	57
Precautions for the Batteries of the Remote Control	21	Image Modes	57
For Safe Use	23	Step 7 Set Power-Saving Settings	59
Open Source Software	25	Step 8 Turn the Projector Off	60
Before Use	27	Useful Functions Available During a Presentation	61
Supplied Accessories.....	28	Useful Presentation Functions ..	62
Preparing the Remote Control...	29	Temporarily Blacking Out an Image...	62
Part Names	31	Freezing the Picture.....	62
Projector	31	Adjusting the Volume	63
Remote control.....	32	Muting the Sound.....	63
Side control	34	Zooming Part of an Image.....	64
Input Terminal	36	Projecting Images on a USB Flash Drive	65
Operation		Split-Screen Display	67
Projecting an Image	37	Setting Functions from Menus	71
Step 1 Turn the Projector On	38	Using Menus	72
Step 2 Select an Input Signal	39	Menu Configuration	72
Types of Input Signals.....	39	Basic Menu Operations	73
Selecting an Input Signal	40	Setting Display Status (Input Settings)	75
Step 3 Adjust the Image	41	Selecting the Aspect.....	75
Setting the Display Resolution of the Computer	41	Setup Using Auto PC	76
Auto PC Adjustment	43		
Focusing, Resizing, or Moving the Image.....	44		

Selecting an Input Signal (Analog PC Input).....	76	Positioning User Logos.....	96
Adjusting the Input Signal (Total dots).....	77	No Signal Screen	97
Adjusting the Input Signal (Tracking).....	77	Screen When Blank	97
Adjusting the Input Signal (Horizontal / Vertical position)	78	Selecting a Logo at Startup	98
Adjusting the Input Signal (Horizontal / Vertical pixels)	78	Specifying Power Management Mode	98
Adjusting HDMI Input Level	79	Specifying Power Management Duration	99
Setting the HDMI Color Format.....	79	Specifying Direct Power-On.....	99
Specifying HDMI Overscan	80	Specifying Silence or Operating Tones	100
Specifying Progressive Processing... ..	80	Specifying Key Repeat Operation	100
Specifying the Slideshow Interval.....	81	Locking Projector or Remote Buttons	101
Specifying Split-Screen Display	82	Assigning a Channel for Remote Control	102
Adjusting Image Quality (Image Adjustment)	83	Reducing Motion Blur.....	103
Specifying Image Priority in Split- Screen Mode.....	83	Selecting a Display Language	103
Specifying the Image Mode.....	84	Requiring a Password for Operation	104
Creating/Saving a User Profile	85	Setting a Password.....	105
Adjusting Brightness.....	86	Using the Remote Control [Fn] Button	105
Adjusting Contrast.....	86	Selecting Audio Input	106
Adjusting Sharpness	87	Restoring Original Gamma Settings	107
Correcting Gamma.....	87	Specifying HDMI Input.....	108
Adjusting Colors	88	Resetting the Lamp Counter	108
Adjusting to the Ambient Light (Ambient Light)	89	Resetting the Air Filter Counter.....	110
Reducing Image Noise (Random noise reduction)	90	Updating the Firmware	110
Reducing Image Noise (MPEG noise reduction)	90	Resetting to the Default Setting	111
Reducing Image Noise (Mosquito noise reduction).....	91	Checking Projector Information	112
Dynamic Gamma Adjustment.....	91		
Correcting Memory Color.....	92	Installation and Maintenance	
Fine-Tuning Colors (6-axis Color Adjustment)	92	Installation.....	113
Fine-Tuning Gamma	93	Before Installation	114
Specifying Lamp Control	94	Precautions When Carrying/ Shipping the Projector	114
Specifying the Lamp Mode	95	Precautions for Installation.....	114
Resetting Image Adjustment Settings	95	Installation Procedure.....	118
Customizing System Operation (System Settings).....	96	Setting Up the Projector	118
Registering User Logos	96	Installing / Removing the Lens Unit	120

Table of Contents

Relationship Between Image Size and Projecting Distance	125
Lens Shift Function	129
Connection Procedure	131
Connectable Equipment and Input Terminals	131
Connecting a Computer	132
Connecting AV Equipment.....	135
Plugging the Projector In	138
Starting Projection.....	139
Starting and Stopping Projection.....	139
Changing Notebook Computer Screen Output	140
Installation-Related Menu Settings	141
Locking Installation Settings	141
Flipping Image Display.....	141
Specifying the Screen Aspect	142
Adjusting the Size of Projected Images	143
Specifying Keystone Correction	144
Specifying Digital Image Shift	145
Specifying Micro Digital Image Shift	145
Adjusting Image Registration	146
Specifying the Fan Mode.....	146
Specifying Vertical Projection	147
Saving and Restoring Lens Positions	147
Screen Color Adjustment.....	148
Specifying a Menu Position	149
Showing/Hiding the Guide Screen ...	149
Showing/Hiding Input Status	150
Showing/Hiding Overheat Warnings	150
Specifying the Menu Display Time...	151
Showing/Hiding Lamp Replacement Warnings.....	151
Showing/Hiding Filter Cleaning Warnings.....	152
Showing/Hiding Split-Screen ID	152
Displaying Test Patterns	153
Projecting from Multiple Projectors at Once (Edge Blending)	154

Connecting to a Network	163
Network Connection Overview	164
Connection Methods	164
Completing Projector Settings	165
Locking/Unlocking Network Settings	165
Specifying the Network Password ...	166
Registering a Network Password	167
Specifying Standby Power Consumption.....	167
Specifying the Network Function	168
Viewing the IP Address, Gateway Address, and MAC Address.....	168
Specifying DHCP.....	169
Specifying TCP/IP Settings	169
Initializing Network Settings	170
Specifying PJLink Settings	170
Specifying AMX Device Discovery ...	171
Specifying Crestron RoomView	172
Completing Computer Settings	173
Specifying an IP Address	173
Setting Up the Network	177
Control via the Web Screen	191
Maintenance	193
Cleaning the Projector and the Air Filter.....	194
Cleaning the Air Filter.....	194
Replacing the Air Filter	196
Replacing the Lamp	197
Replacement Lamp	198
Replacing the Lamp.....	199
Appendix	201
Appendix	201
Troubleshooting	202
LED Indicator Meanings	202
Symptoms and Solutions	203

Relationship between Aspect and Screen Aspect	209
Displayed Test Patterns	213
Supported Signal Types	214
Product Specifications	216
Index.....	224
Option	227
Menu Configuration	228

Safety Instructions

Before installing and operating the projector, read this manual thoroughly.

This projector provides many convenient features and functions. Operating the projector properly enables you to manage those features and maintain it in good condition for many years to come.

Improper operation may result in not only shortening the product life, but also malfunctions, fire hazards, or other accidents.

If your projector does not seem to be operating properly, read this manual again, check operations and cable connections, and try the solutions in the “Troubleshooting” section in the back of this manual. If the problem still persists, contact the Canon Customer Support Center.



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE EXCEPT LAMP REPLACEMENT. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



THIS SYMBOL INDICATES THAT DANGEROUS VOLTAGE CONSTITUTING A RISK OF ELECTRIC SHOCK IS PRESENT WITHIN THIS UNIT.



THIS SYMBOL INDICATES THAT THERE ARE IMPORTANT OPERATING AND MAINTENANCE INSTRUCTIONS FOR THIS UNIT IN THE OWNER'S MANUAL.


CAUTION

Not for use in a computer room as defined in the Standard for the Protection of Electronic Computer / Data Processing Equipment, ANSI / NFPA 75.

Safety Precautions

WARNING:

- **THIS APPARATUS MUST BE GROUNDED.**
- **TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**
- This projector produces intense light from the projection lens. Do not stare directly into the lens, otherwise eye damage could result. Be especially careful that children do not stare directly into the beam.
- Install the projector in a proper position. Otherwise it may result in a fire hazard.
- Allowing the proper amount of space on the top, sides, and rear of the projector cabinet is critical for proper air circulation and cooling of the unit. The diagrams shown here indicates the minimum space required. If the projector is to be built into a compartment or similarly enclosed, these minimum distances must be maintained.

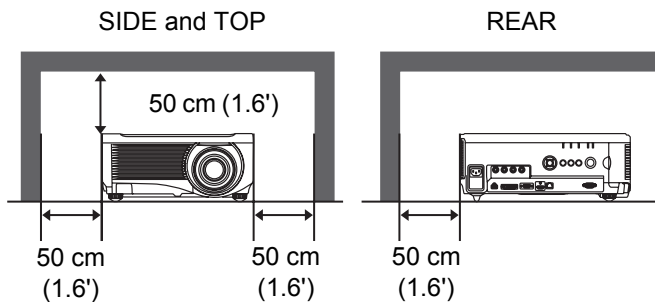

- Do not cover the ventilation slots on the projector. Heat build-up can reduce the service life of your projector, and can also be dangerous.
- If the projector is unused for an extended time, unplug the projector from the power outlet.
- Do not project the same image for a long time.

An afterimage may remain on the LCD panels due to the characteristics of the panels of the projector.

CAUTION ON HANGING FROM THE CEILING

When hanging the projector from the ceiling, clean the air intake vents and top of the projector periodically with a vacuum cleaner. If you leave the projector unclean for a long time, the cooling fans can be clogged with dust, and it may cause a breakdown or a disaster.

DO NOT SET THE PROJECTOR IN GREASY, WET, OR SMOKY CONDITIONS SUCH AS IN A KITCHEN TO PREVENT A BREAKDOWN OR A DISASTER. IF THE PROJECTOR COMES IN CONTACT WITH OIL OR CHEMICALS, IT MAY BECOME DETERIORATED.

■ READ AND KEEP THIS OWNER'S MANUAL FOR LATER USE.

All the safety and operating instructions should be read before beginning to operate the product.

Read all of the instructions given here and retain them for later use. Unplug this projector from the AC power supply before cleaning. Do not use liquid or aerosol cleaners on the projector. Use a damp cloth for cleaning.

Follow all warnings and instructions marked on the projector.

For added protection of the projector during a lightning storm, or when it is left unattended or unused for long periods of time, unplug it from the wall outlet. This will prevent damage due to lightning and power surges.

Do not expose this unit to rain or use near water... for example, in a wet basement, near a swimming pool, etc...

Do not use attachments not recommended by the manufacturer as they may result in hazards.

Do not place this projector on an unstable cart, stand, or table. The projector may fall, causing serious injury to a child or adult, and serious damage to the projector. Use only with a cart or stand recommended by the manufacturer, or sold with the projector. Wall or shelf mounting should be carried out in accordance with the manufacturer's directions, and should use a mounting kit approved by the manufacturers.

An appliance and cart combination should be moved with care. Sudden stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.



Slots and openings in the rear and front of the cabinet are provided for ventilation, to insure reliable operation of the equipment and to protect it from overheating.

The openings should never be covered with cloth or other materials, and the bottom opening should not be blocked by placing the projector on a bed, sofa, rug, or other similar surface. This projector should never be placed near or over a radiator or heat register.

This projector should not be placed in a built-in installation such as a book case unless proper ventilation is provided.

Never push objects of any kind into this projector through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind onto the projector.

Do not install the projector near the ventilation duct of air-conditioning equipment.

This projector should be operated using only the type of power source indicated on the marking label. If you are not sure of the type of power supplied, contact the Canon Customer Support Center or local power company.

Do not overload wall outlets and extension cords as this can result in fire or electric shock. Do not allow anything to rest on the power cord. Do not locate this projector where the cord may be damaged by people walking on it.

Do not attempt to service this projector yourself as opening or removing covers may expose you to dangerous voltages or other hazards. Refer all servicing to qualified service personnel.

Unplug this projector from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- a. When the power cord or plug is damaged or frayed.
- b. If liquid has been spilled into the projector.
- c. If the projector has been exposed to rain or water.
- d. If the projector does not operate normally after following the operating instructions. Adjust only those controls that are covered in the operating instructions as improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the projector to normal operating condition.
- e. If the projector has been dropped or the cabinet has been damaged.
- f. When the projector exhibits a distinct change in performance-this indicates a need for servicing.

When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer that have the same characteristics as the original parts. Unauthorized substitutions may result in fire, electric shock, or injury.

Upon completion of any service or repairs to this projector, ask the service technician to perform routine safety checks to determine that the projector is in safe operating condition.


AC Power Cord Requirement

The AC Power Cord supplied with this projector meets the requirements for use in the country you purchased it.

AC Power Cord for the United States and Canada:

The AC Power Cord used in the United States and Canada is listed by the Underwriters Laboratories (UL) and certified by the Canadian Standard Association (CSA).

The AC Power Cord has a grounding-type AC line plug. This is a safety feature to ensure the plug fits into the power outlet. Do not try to tamper with this safety feature. Should you be unable to insert the plug into the outlet, contact your electrician.

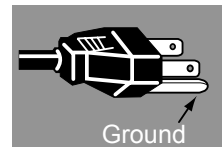

THE SOCKET-OUTLET SHOULD BE INSTALLED NEAR THE EQUIPMENT AND EASILY ACCESSIBLE.



For the U.S. and Canada, LAMP (S) INSIDE THIS PRODUCT CONTAIN MERCURY AND MUST BE RECYCLED OR DISPOSED OF ACCORDING TO LOCAL, MUNICIPAL, STATE, PROVINCIAL, OR FEDERAL LAWS. For lamp recycling and disposal information please call 1-800-OK-CANON for the U.S. and Canada.



Only for European Union and EEA (Norway, Iceland and Liechtenstein)

These symbols indicate that this product is not to be disposed of with your household waste, according to the WEEE Directive (2012/19/EU), the Battery Directive (2006/66/EC) and/or national legislation implementing those Directives.



If a chemical symbol is printed beneath the symbol shown above, in accordance with the Battery Directive, this indicates that a heavy metal (Hg = Mercury, Cd = Cadmium, Pb = Lead) is present in this battery or accumulator at a concentration above an applicable threshold specified in the Battery Directive.

This product should be handed over to a designated collection point, e.g., on an authorized one-for-one basis when you buy a new similar product or to an authorized collection site for recycling waste electrical and electronic equipment (EEE) and batteries and accumulators. Improper handling of this type of waste could have a possible impact on the environment and human health due to potentially hazardous substances that are generally associated with EEE. Your cooperation in the correct disposal of this product will contribute to the effective usage of natural resources.

For more information about the recycling of this product, please contact your local city office, waste authority, approved scheme or your household waste disposal service or visit

www.canon-europe.com/weee, or www.canon-europe.com/battery.

Federal Communication Commission Notice

Multimedia Projector, Model: WUX6000

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

The cable with a ferrite core provided with the projector must be used with this equipment in order to comply with Class B limits in Subpart B of Part 15 of the FCC rules.

Use of a shielded cable is required to comply with class B limits in Subpart B of Part 15 of FCC Rules.

Do not make any changes or modifications to the equipment unless otherwise specified in the instructions. If such changes or modifications should be made, you could be required to stop operation of the equipment.





Canon U.S.A. Inc.

One Canon Park, Melville, New York 11747, U.S.A.

Tel No. (631) 330-5000

Safety Symbols in this Manual

This section describes the safety symbols used in this manual. Important projector safety information is identified by the following symbols. Always observe the safety information by these symbols.

 Warning	Denotes the risk of death or serious injury from improper handling if the information is not observed. To ensure safe use, always observe this information.
 Caution	Denotes the risk of injury from improper handling if the information is not observed. To ensure safe use, always observe this information.
 Prohibition	Denotes prohibited actions.
 Caution	Denotes required actions or information that must be observed.

Precautions for Use

As this section contains important safety-related information, be sure to read the following carefully beforehand in order to use your projector correctly and safely.

Warning

During installation, keep the projector plug easily accessible so that the projector can be unplugged immediately if necessary, or keep a circuit breaker within reach.

If the following situations occur, turn the power off, remove the power plug from the power outlet and contact the Canon Customer Support Center. Failure to do so could cause a fire or result in an electric shock.

- If smoke is emitted
- If an unusual smell or noise is emitted
- If water or other liquid has entered the projector
- If metal or any other foreign material has entered the projector
- If the projector is knocked over or dropped and the cabinet is damaged

Pay attention to the following points for handling the power cord. Failure to do so may cause a fire, electric shock or personal injury.



Prohibition

- Do not place any objects on the power cord and do not allow it to become trapped under the projector.
- Do not cover the power cord with a carpet.
- Do not modify or excessively bend, twist, pull, wind, or bundle the power cord.
- Keep the power cord away from heaters and other sources of heat.
- Do not use a damaged power cord. If the power cord is damaged, purchase a replacement from your dealer.
- The power cord included with this projector is for use exclusively with this product. Do not use this cord for other products.
- Be sure to connect the ground wire of the power cord to ground.
- Be sure to connect the ground wire before connecting the power plug to the outlet. Also when you disconnect the ground wire, be sure to unplug the power plug from the outlet beforehand.

Warning

Pay attention to the following points regarding the power source, power plug and handling of the connector. Failure to do so may cause a fire, electric shock or personal injury.



- Do not use any power source with a voltage other than the voltage indicated (AC 100–240 V).
- Do not pull the power cord and be sure to hold the power plug or connector when removing. Incorrect handling may damage the power cord.
- Do not insert any metal objects into the contact parts of the power plug or connector.
- Do not remove the power plug or connector with wet hands.



- Insert the power plug and connector securely up to the base. Additionally, do not use a damaged power plug or an outlet that is loose.
- When using an extension cord, do not exceed the cord's rated capacity.



- Periodically inspect the power plug and outlet and remove any dust or dirt from between the plug and the outlet.

Installation and Handling Precautions

Pay attention to the following points regarding installation and handling of the projector. Failure to do so may cause a fire, electric shock or personal injury.

- Do not use the projector where it might get wet, such as outdoors or by bathtubs or showers.
- Do not place containers containing a liquid on top of the projector.
- Do not touch the projector itself, the power cord, or the cable if lightning strikes.
- Do not move the projector until you have switched off the power, removed the power plug from the power outlet and unplugged any other cables.
- Unplug the projector before cleaning or maintenance.
- Before installing or replacing a lens unit, make sure to remove the power plug from the outlet. Failure to do so could result in an electric shock or injury.

Warning

Pay attention to the following points regarding installation and handling of the projector. Failure to do so may cause a fire, electric shock or personal injury.



Prohibition

- Do not remove the cabinet from the projector or disassemble it. The interior of the projector contains high-voltage components as well as parts that are hot. If inspection, maintenance or repair is required, contact the Canon Customer Support Center.
- Do not disassemble or modify the projector (including consumable parts) or the remote control.
- Do not look directly into the exhaust vents during use.
- Do not insert any object into vents in the projector, such as the air intake vent or exhaust vents.
- Do not place a pressurized can in front of the exhaust vents. The pressure of the contents of the can may increase due to heat from the exhaust vents and this could result in an explosion.
- Using the lens shift function the lens in the projector moves up / down / left / right powered by a motor. Do not touch the lens when the lens is moving. Doing so could cause a personal injury.



Prohibition

- Before replacing the lens unit, wait at least one hour after the projector is turned off to allow the projector to cool thoroughly. Failure to do so could result in a burn or injury.
- When cleaning off dust or dirt from the projector lens etc., do not use any kind of spray that is flammable. As the temperature of the lamp inside the projector is high, it could ignite, causing a fire.
- As strong light beams are emitted while the projector is in use, do not look directly into the projector lens. Doing so could cause an eye injury. Pay particular attention to prevent small children from doing so.
- When setting the projector on a high surface for projection, be sure the surface is flat and stable.
- For ceiling mounting precautions, refer to the installation manual included with the ceiling mount (sold separately).



Caution

- When hanging the projector from a ceiling, put the projector down on the floor or a workbench before attaching or replacing the lens unit. Failure to do so could result in parts falling off the projector and may cause an accident or personal injury.

Warning

Precautions on the Lamp

This projector uses a high-pressure mercury lamp, which must be handled carefully and correctly as described below.

The mercury lamp has the following characteristics.

- The lamp will gradually become darker over time.
- Impact, abrasion, or use of worn-out lamps may cause lamps to rupture (accompanied by a loud noise) or burn out.
- Lamps are more likely to rupture after the lamp replacement message is displayed (see “Replacing the Lamp” (P197)). Replace the lamp with a new one as soon as possible.
- Useful life of lamps varies widely from lamp to lamp and depending on the environment of use. Some lamps may fail or rupture soon after they are first used.
- Be prepared by keeping a spare lamp.

Note the following precautions during lamp replacement or when a lamp has ruptured. Failure to do so could result in an electric shock or personal injury.

- Before replacing the lamp, always unplug the projector and wait at least an hour.
- Ruptured lamps may scatter shards of glass inside the projector. Contact the Canon Customer Support Center for cleaning and inspection of the projector interior and lamp replacement.

Precautions when replacing lamps that stop working

- If illumination suddenly stops, either when you turn the projector on or after it has been on for a while, the lamp may have ruptured. In this case, never attempt to replace the lamp by yourself. Always request service from the Canon Customer Support Center.
- With ceiling-mounted projectors, the lamp may fall out when you open the lamp cover, or during replacement. During replacement, stand to the side of the lamp cover, not directly under it.
- If the lamp ruptures, dust and gas (containing mercury vapor) may come out of the exhaust vents. If this happens, immediately open the windows and doors to provide ventilation to the room.
- If you accidentally inhale gas from the lamp or get any pieces in your eyes or mouth, consult a doctor immediately.



Caution

 **Warning****Precautions for the Batteries of the Remote Control**

Pay attention to the following points regarding handling of batteries. Failing to do so could result in a fire or personal injury.



- Do not heat, short circuit or disassemble the batteries, or place them in a fire.
- Do not attempt to recharge the batteries that are included with the remote control.



- Remove the batteries when they are flat or when the remote control will not be used for a long period of time.
- When replacing the batteries, replace both at the same time. Also, do not use two batteries of a different type at the same time.
- Insert the batteries with the + and - terminals in the correct directions.
- If any liquid from inside the batteries leaks out and contacts your skin, be sure to wash the liquid off thoroughly.

Caution

Pay attention to the following points regarding installation and handling of the projector.

- If the projector will not be used for a long period of time, be sure to remove the power plug from the power outlet to ensure safety. Failure to do so presents a risk of fire if dust accumulates on the plug or outlet.
- Parts of the cabinet around and above the exhaust vents may become hot during projection. Touching these areas during operation could cause burns to the hands. Pay particular attention in preventing young children from touching these parts. Additionally, do not place any metal objects around or above the exhaust vents. Due to the heat from the projector, doing so could cause an accident or personal injury.
- Do not place the projector where it may be exposed to oily smoke or steam, such as near kitchen counters or humidifiers. Doing so may cause fire or electric shock.
- Do not place any heavy objects on top of the projector or sit / stand on it. Pay particular attention to prevent small children from doing so. The projector may be knocked over and this could result in damage or a personal injury.
- Do not place the projector on an unstable or slanted surface. Doing so may cause the projector to fall or be knocked over and could result in a personal injury.
- Do not place any objects in front of the lens during projection. Doing so could cause a fire.
- Presenters in front of the projector should stand where the light does not seem too bright, and where their shadow does not fall on the screen.



Prohibition

When handling the lamp, pay attention to the following points.



Prohibition

- Be sure not to handle the lamp immediately after it has been used. Be sure to switch off the power and wait for approximately 1 hour for the lamp and the projector to cool down sufficiently. Failure to do so could result in a burn or personal injury due to heat from the lamp or projector.

Caution

Pay attention to the following points when carrying or transporting the projector.

- This projector is a precision instrument. Do not knock it over or subject it to impacts. Doing so may cause a malfunction.
- When carrying or holding up the projector after attaching the lens unit, be sure not to hold the lens. Doing so may cause damage to the lens unit.
- Do not reuse any packaging or shock-absorbent materials that were supplied with the projector at the time of purchase for transporting or shipping the projector. Protection of the projector cannot be guaranteed if used packaging or shock-absorbent materials are reused. Fragments from shock-absorbent material may also enter the interior of the projector which could cause a malfunction.
- If transportation is necessary, the lens unit should be removed before transporting the projector. If the projector is subjected to excessive impacts during transportation, the lens unit may be damaged. Removal and installation of the lens unit should not be performed by the user. Be sure to have the procedure performed by a qualified technician or contact the Canon Customer Support Center.
- Disconnect the cables connected to the projector. Carrying the projector while the cables are attached may cause an accident.
- Retract the adjustable feet before moving the projector. Leaving the feet extended may cause damage.



Caution

Caution

Pay attention to the following points when installing or using the projector.

- Do not touch the lens with bare hands. Doing so may result in deterioration of image quality.
- If the projector is abruptly taken from a cool to a warm location, condensation may form on the lens or mirrors, which may cause a blurred image. Wait until the condensation has evaporated for the image projected to return to normal.
- Do not install the projector in a location where the temperature is high or low. Doing so may cause a malfunction. For guidelines on operating temperatures, see “Product Specifications”.
- Do not place any objects on top of the projector that may change shape or color due to heat.
- Projector settings must be adjusted when using the projector at high altitudes or in upward or downward projection. Failure to adjust the settings may shorten the lamp life or damage the lamp. For details, contact the Canon Customer Support Center.
- Do not install the projector near high-voltage electrical power lines or an electrical power source.
- Do not use the projector on a soft surface such as carpet or sponge mat, etc. Doing so could cause heat to build up inside the projector and this could result in a malfunction.
- Do not block the air intake or exhaust vents of the cooling fan. If the air intake or exhaust vent is blocked, heat cannot be released from inside the projector, which may shorten the useful life of the lamp or cause malfunction.
- Installing the projector in the wrong direction may cause a malfunction or accident. Do not install the projector with one side raised, or with the projector tilted toward the left or right.
- Install the projector with sufficient space between air intakes and exhaust vents and walls. Failure to do so could cause a malfunction.
- Do not install the projector in a location that is damp, or where there is a lot of dust, oily smoke or tobacco smoke. Doing so could cause contamination of optical components such as the lens and the mirror and may result in deterioration of image quality.



Caution

The product contains Open Source Software modules. For details, see “ThirdPartySoftware.pdf” (Third-Party Software License) in the OpenSourceSoftware folder in the LICENSE folder on the Setup CD-ROM. Each module’s license conditions are also available in the same folder.

■ Software under the GNU General Public License Version 2

Contained programs are free software; you can redistribute them and/or modify them under the terms of the GNU General Public License attached to each copy of the program.

Each program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. Please see “NO WARRANTY” and “NO SUPPORT” stated below. For more detail, please see full text of the GNU General Public License.

NO WARRANTY

BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM “AS IS” WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

NO SUPPORT

Canon Inc., and all its subsidiaries or its dealers do not make any support service regarding the source code. Canon Inc., and all its subsidiaries or its dealers shall not respond to any questions or enquiries, from you or any other customers, regarding the source code.

Before Use

Table of Contents

Safety Instructions

Before Use

Operation

Projecting an Image

Useful Functions Available
During a Presentation

Setting Functions from
Menus

Installation and Maintenance

Installation

Connecting to a Network

Maintenance

Appendix


Other Information

Index

Supplied Accessories


Check that the following accessories have been supplied with the projector.

- Remote control

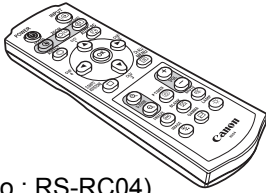

(part No.: RS-RC04)

 - Batteries for the remote control




(AAA size x2)



Optional remote controls are also available (RS-RC05). However, some buttons are not supported with this projector. The RS-RC05 can also be used as a wired remote. (P30)


- Computer cable (1.8 m / 5.9')
(mini D-sub 15-pin / mini D-sub 15-pin)

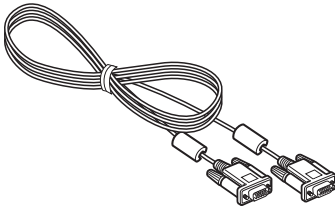

- CD-ROM
User's Manual / Supplement NMPJ Ver. 1.1
User's Manual



- Power cord (1.8 m / 5.9')

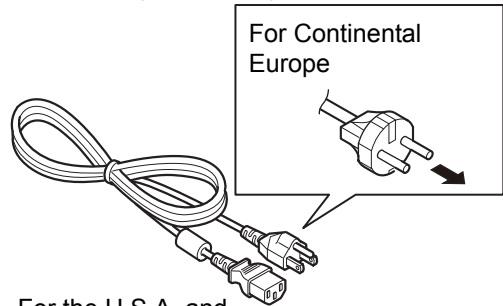


For the U.S.A. and Canada

- Warranty Card
- Important Information


Preparing the Remote Control

■ Installing Remote Control Batteries


- 1** **Open the battery compartment lid.**
Slide the lid while pressing it down.

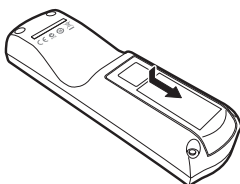

- 2** **Insert batteries.**
Insert 2 new AAA batteries in the compartment with the + and – poles positioned correctly.

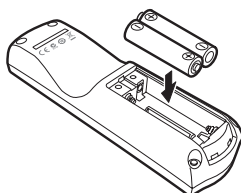

- 3** **Close the compartment lid.**
Slide the lid until you hear a click to securely close it.

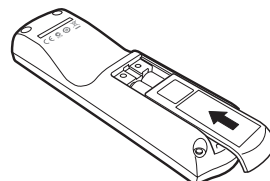

- If buttons on the remote control are inoperative when you attempt to operate the projector, replace the batteries with new ones.
- Do not drop the remote control or subject it to impact.
- Do not spill any liquids on the remote control. Doing so could damage it.



Prohibition




Caution

Pay attention to the following points when handling the batteries. Failing to do so could result in a fire or personal injury.

- Do not heat, short circuit or disassemble the batteries, or place them in a fire.
- Do not attempt to recharge the batteries that are included with the remote control.
- Remove the batteries when they are flat or when the remote control will not be used for a long period of time.
- When replacing the batteries, replace both at the same time. Also, do not use two batteries of a different type at the same time.
- Insert the batteries with the + and - terminals in the correct directions.
- If any liquid from inside the batteries leaks out and contacts your skin, be sure to wash the liquid off thoroughly.

■ Remote Control Operating Range


The remote control is an infrared type. Point it at the infrared remote receiver on the front or rear of the projector to operate it.

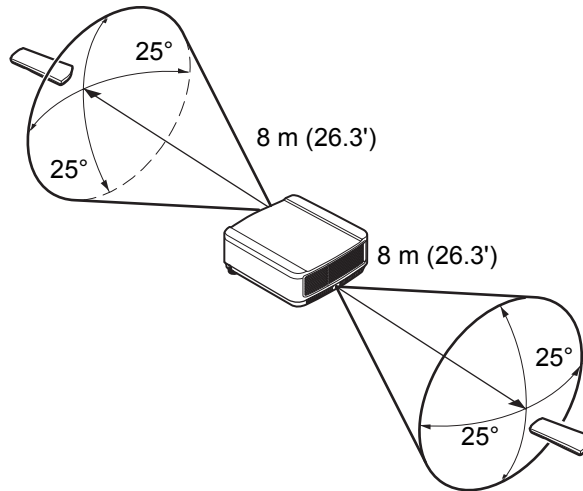

- Use the remote control within an angle of 25° in any direction from directly in front of the infrared remote receiver.
- The remote control may be inoperative if there is an obstacle between the remote control and the projector or the infrared remote receiver on the projector is exposed to direct sunlight or strong light of lighting equipment.
- When you use 2 or more projectors at the same time, you can change the channel settings to prevent the 2 remote controls from interfering with each other. (P102)

■ Using an Optional Wired Remote (RS-RC05)

To use a wired remote control with the projector, use the RS-RC05, sold separately. Use a cable with a $\varnothing 3.5$ mm stereo mini jack (not included).

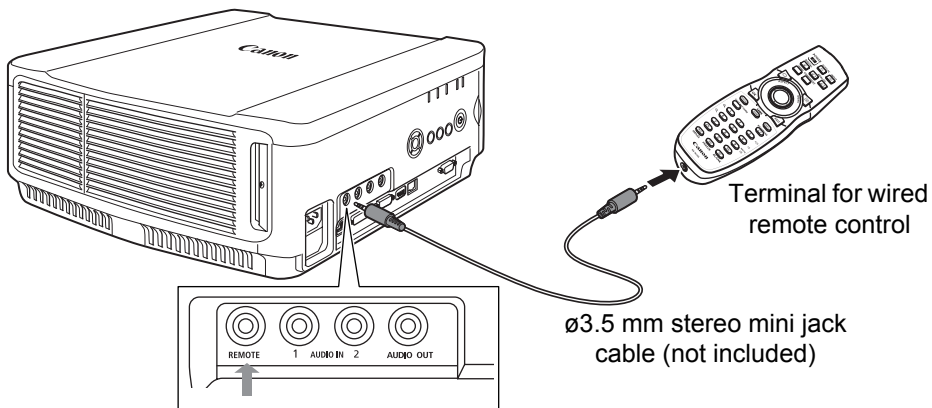


- Infrared operations cannot be performed if a cable is connected to the projector or the remote control.
- Use a cable with a $\varnothing 3.5$ mm stereo mini jack (not included) with a length of 30 m (98.4') or less.

Projector

■ Front Side

Power cord connector (P138)

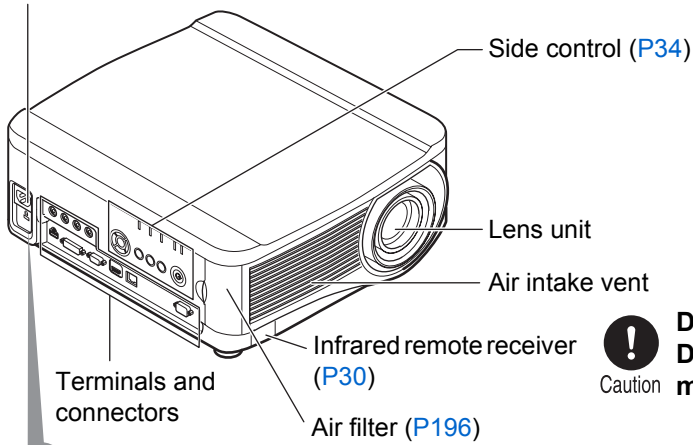


Do not block the air intake. Doing so may cause a malfunction.

Caution

An anti-theft wire cable (not included) can be connected.


■ Rear Side

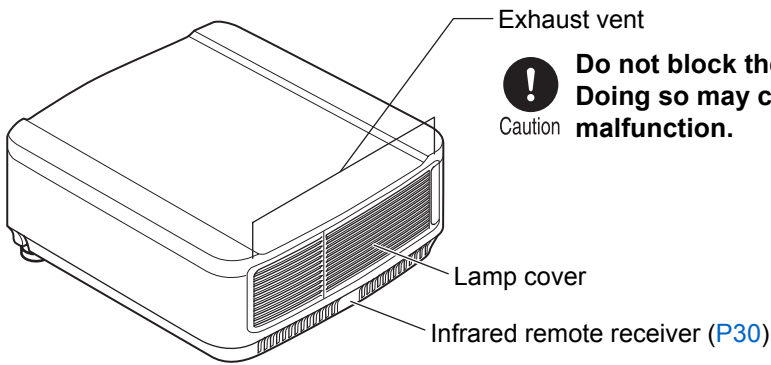

Do not block the air exhaust. Doing so may cause a malfunction.

Caution


■ Bottom Side

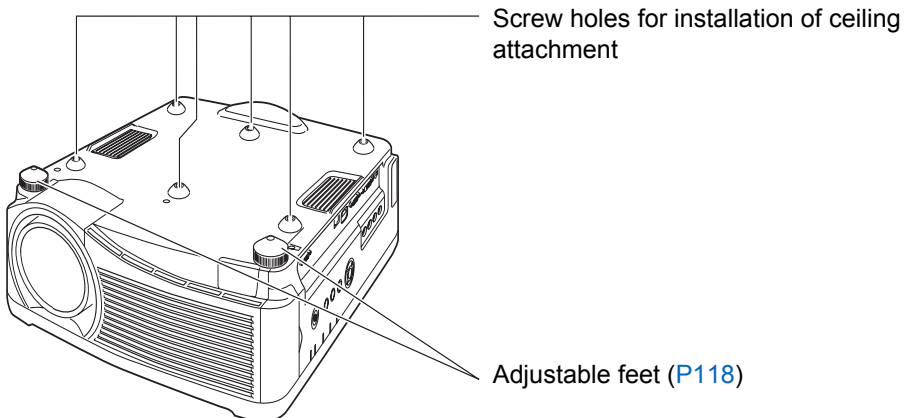

Remote control

The projector can be operated using buttons on the remote control or the side control on the main unit.

The remote control allows you to operate all functions of the projector.

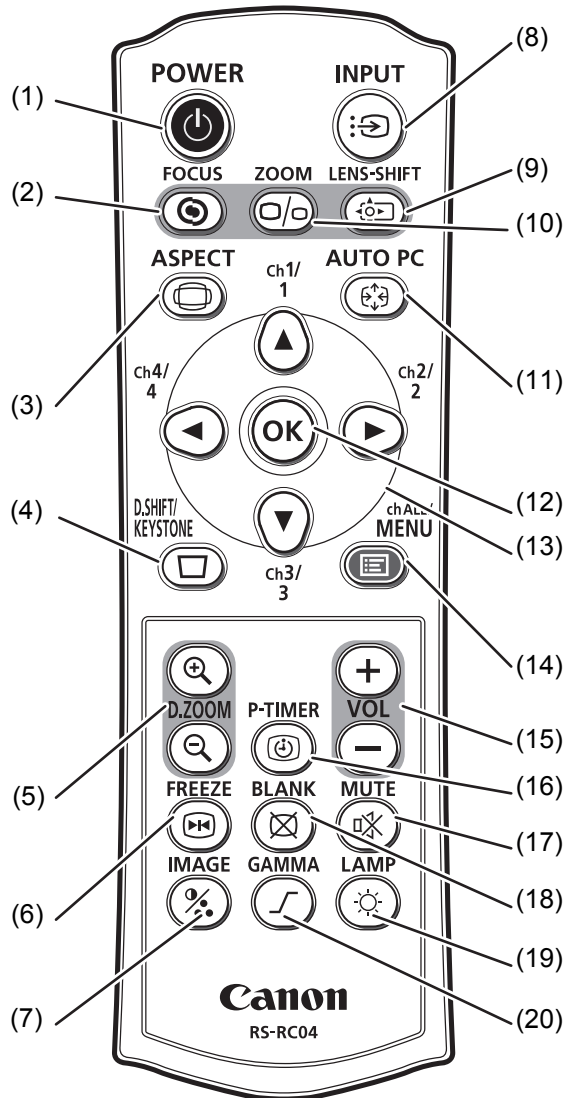

(1) POWER button (P38, P60)

Turns the projector on or off.

(2) FOCUS button (P44)

Adjusts focusing.

[▲] / [▶] buttons:

Moves the focus position further away.

[▼] / [◀] buttons:

Moves the focus position nearer.

(3) ASPECT button (P53)

Changes the aspect ratio mode.

(4) D.SHIFT/KEYSTONE button (P54)

Corrects keystone distortion.

[▲] / [▼] / [◀] / [▶] buttons:

Corrects keystone distortion.

Press **D.SHIFT/KEYSTONE** to correct keystone distortion.

- Moves the image up, down, left, or right when the screen aspect setting is [16:9 D. image shift] or [4:3 D. image shift] is selected. (P50, P51)
- To move the image, use the [▲] / [▼] or the [◀] / [▶] buttons.

(5) D.ZOOM button (P64)

Zooms the image in or out digitally.

[+] button:

Zooms the image in (up to 12x).

[-] button:

Zooms the image out (1x minimum).

[▲] / [▼] / [◀] / [▶] buttons:

Move the zoom-in location.

(6) FREEZE button (P62)

Freezes the projected image.

(7) IMAGE button (P57)

Switches the image mode (image quality).

(8) INPUT button (P40)

Switches the input signal.

(9) LENS-SHIFT button (P46)

Moves the lens up, down, left, or right.

[▲] / [▼] / [◀] / [▶] buttons:

Moves the image.

(10) ZOOM button (P45)

Adjusts the image size.

[▲] / [▶] buttons:

Increase the image size.

[▼] / [◀] buttons:

Decrease the image size.

(11) AUTO PC button (P43)

Adjusts tracking etc. automatically in accordance with the signal from a computer when the analog PC input is selected.

(12) OK button (P73)

Determines the item selected from the menu.

(13) Pointer buttons (P73)

Selects the upper, lower, left or right item in the menu. Also used to assign a channel to the remote control. (P102)

(14) MENU button (P72)

Displays a menu on the screen. Also used to assign a channel to the remote control. (P102)

(15) VOL button (P63)

Adjust the sound volume.

[+] button:

Increases the volume.

[-] button:

Decreases the volume.

(16) P-TIMER button

Cannot be used on this projector.

(17) MUTE button (P63)

Mutes the sound.

(18) BLANK button (P62)

Toggles between display / non-display of image.

(19) LAMP button (P95)

Displays the power saver settings screen, where you can adjust the lamp mode (Full power / Power saver) (P95), set the power management (P98) and specify the network standby settings (P167).

(20) GAMMA button (P87)

Adjusts the gamma of the image.

[▶] button:

Corrects dark parts of the image so that they are easier to see.

[◀] button:

Corrects bright parts of the image so that they are easier to see.


Side control

(1) LED indicators (P35)

The projector status is shown by the LED indicators (off / lit / flashing).

For indicator status, refer to “LED Indicator Displays” (P35).

POWER ON	Green	Lights up or flashes under normal conditions.
STAND BY	Red	Lights up or flashes during standby or when the projector is shut down.
WARNING	Red	Lights up or flashes when an error occurs.
LAMP	Orange	Flashes when the time for replacing the lamp is near. When a lamp cover error occurs, the [WARNING] indicator will also flash. When a lamp error occurs, it will illuminate at the same time as the [WARNING] indicator.
TEMP	Red	When the temperature inside the projector is high, it will flash. If the temperature inside the projector increases further and a temperature error occurs, it will illuminate at the same time that the [WARNING] indicator illuminates.

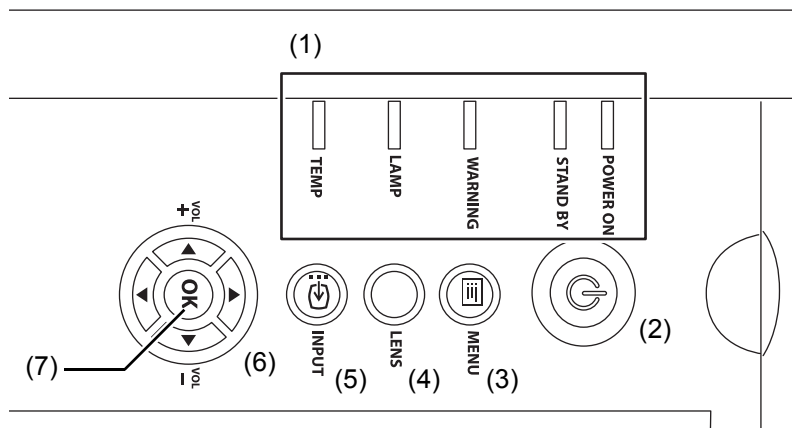

(2) POWER button (P38, P60)

Turns the projector on or off.

(3) MENU button (P72)

Displays a menu on the screen.

(4) LENS button

Each time the button is pressed, the screen changes to focus adjustment (P44), zoom (image size) adjustment (P45), or lens shift (image position) adjustment (P46). To adjust, use the [▲] / [▼] or the [◀] / [▶] buttons.

(5) INPUT button (P40)

Switches the input signal.

(6) Pointer / VOL buttons (P73)

Adjust the sound volume.

[▲] / VOL + buttons:

Increases the volume.

[▼] / VOL – buttons:

Decreases the volume.

Selects the upper, lower, left or right item in the menu.

(7) OK button (P73)

Determines the item selected from the menu.

■ LED Indicator Displays


The LED indicators flash or illuminate to indicate the operating status of the projector.



□: Off ■: Lit ◻: Flashing

LED indicator					Operating status
POWER ON (green)	STAND BY (red)	WARNING (red)	LAMP (orange)	TEMP (red)	
□	□	□	□	□	Not plugged in.
□	■	□	□	□	In standby mode.
■	□	□	□	□	Power is on (projecting).
◻	□	□	□	□	Transitioning from standby mode to power on.
□	◻	□	□	□	Cooling down while transitioning from power on to standby mode or power management mode.
◻	◻	□	□	□	In power management mode, with the lamp off.
□	■	□	◻	□	Nearly time to replace the lamp (in standby mode).
■	□	□	◻	□	Nearly time to replace the lamp (during projecting).
■	□	□	□	◻	Internal temperature is high.
□	□	■	■	□	A lamp error has occurred.
□	□	■	□	■	Power was turned off due to high internal temperature.
□	□	◻	■	□	The lamp cover is open.
□	□	◻	□	□	Another error has occurred.

If WARNING is on or flashing, refer to “LED Indicator Meanings” on [page 202](#).

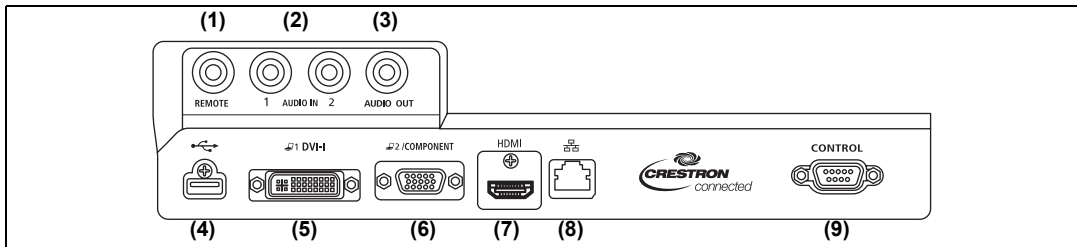Input Terminal



- (1) **Terminal for wired remote control (REMOTE) (P30)**
Connects to an optional wired remote control (RS-RC05).
- (2) **AUDIO IN terminal (AUDIO IN) (P132, P133, P136)**
Receives the audio signal input for 2 kinds of image input other than HDMI.
The internal speaker outputs the audio for the selected image signal.
- (3) **AUDIO OUT terminal (AUDIO OUT) (P134, P137)**
Outputs audio to an external speaker or other audio equipment. This outputs the audio signal that corresponds to the projected image signal.
- (4) **USB port (P65)**
Connects a USB flash drive. Used for projection of images on a USB flash drive, or for firmware updates.
- (5) **Analog PC-1 / DVI-I input terminal ( DVI-I) (P132, P133)**
Connects the external monitor output from a computer.
Receives analog and digital PC signals (Analog PC-1 and Digital PC, respectively).
- (6) **Analog PC-2 / COMPONENT input terminal ( / COMPONENT) (P132, P136)**
Receives the analog PC signal (Analog PC-2).
A component cable can be used to receive the component image signal (Component).
- (7) **HDMI input terminal (HDMI) (P134)**
Receives digital video signals (HDMI).
Carries both video and audio signals across a single cable.
- (8) **LAN port (P164)**
Connects the LAN cable (shielded twisted pair).
Used to connect the projector to a network.
- (9) **Service port (CONTROL)**
It is not used during ordinary use.

Projecting an Image

Table of Contents

Safety Instructions

Before Use

Projecting an Image

Operation

Useful Functions Available
During a Presentation

Setting Functions from
Menus

Installation and Maintenance

Installation

Connecting to a Network

Maintenance

Appendix

Other Information

Index


Step 1 Turn the Projector On

1 Check the connection between the projector and the computer or AV equipment. (P132 - P135)

For instructions on connecting the power cord, refer to “Plugging the Projector In” (P138).

2 Press the POWER button.

The [POWER ON] indicator initially flashes green, after which it remains lit.

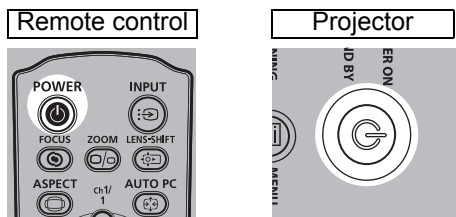

The countdown window is displayed for approximately 20 seconds, and then the projection is started. Press the **OK** button to make the countdown window disappear.



- Network functions are not available for the first 40 seconds after startup.
- A window appears when the projector is turned on for the first time. You can select a language to be used by the projector for displaying menus and messages in the window. Select the desired language with the pointer buttons and press the **OK** button. (P139)
You can change the language from the menu at a later time. (P103)

3 Turn on the computer or AV equipment power.

Changing Operations When Projector is Turned On

You can change operations when the projector is turned on as follows.

- You can turn on the projector by connecting the power cord, without pressing the **POWER** button. (P99)
- You can change the countdown window. (P98)
- You can skip the countdown window. (P98)

When the Projector Is Left Idle

If no signal is received, the power management feature automatically turns off the projector after a certain period of inactivity (by default, 15 minutes). (P98)




 



 
 
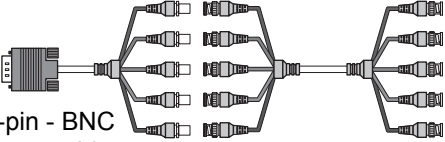

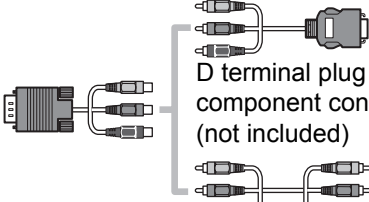
 

 
Step 2 Select an Input Signal

Select the input signal in the [Input] menu when you want to project a digital PC or AV equipment signal, or to switch between inputs when multiple computers or multiple sets of AV equipment are connected.

Skip this step if you have not changed the input signal since the last projection.




Types of Input Signals

The table below shows the relationship among input signals supported by the projector, input terminals and connection cables.

Input signal	Input terminal	Types of connection cables
HDMI	HDMI 	HDMI cable (not included) 
Digital PC	1 DVI-I 	DVI cable (not included) 
Analog PC-1	1 DVI-I 	DVI-D-sub 15 cable (not included) 
Analog PC-2	2/COMPONENT 	Computer cable (supplied) 
	2/COMPONENT 	BNC cable (not included)  Mini D-sub 15-pin - BNC terminal converter cable (not included) BNC cable (not included)
Component	2/COMPONENT 	Component cable (not included)  D terminal plug - RCA plug component conversion cable (not included) RCA plug - RCA plug component cable (not included)
LAN	LAN 	LAN cable (shielded twisted pair) (not included) 
USB	USB 	Connect a USB flash drive. (P65)

Selecting an Input Signal

1 Press the **INPUT** button to display the window shown below.

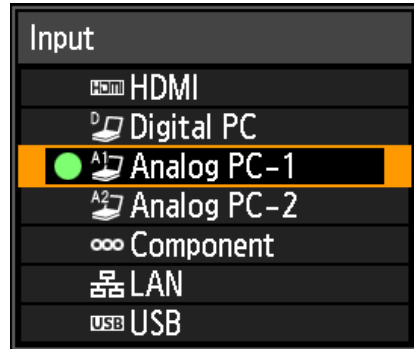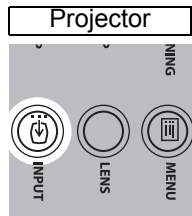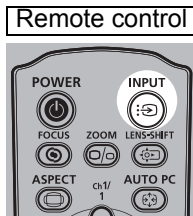

The currently active input signal is marked with a green circle and enclosed by an orange border.

An input signal that is ready for projection is displayed in white. When no signal is received, it is displayed in gray. However, [Digital PC] or [Analog PC-1] may be displayed in gray even if these signals are ready for projection.

2 You can switch the available input signal types by pressing the **INPUT** button.

You can select the target input signal with [▲] / [▼].

3 Press the **OK** button to confirm the input signal type.



- Images on USB flash drives can be projected when you have selected [USB] as the input signal. For details, refer to “Projecting Images on a USB Flash Drive” (P65).
- In split-screen mode, the side without control rights is identified by a white circle.

Step 3 Adjust the Image

Setting the Display Resolution of the Computer


Based on the maximum resolution of the projector, set the display resolution of the computer to the resolution closest to the output signal resolution of the projector.
(P214)

Maximum resolution

1920 X 1200 dots


■ Windows 8

- 1 Move the cursor toward the upper or lower right corner to access the menu.
- 2 Click [Settings], and then click [Control Panel].
- 3 From [Control Panel Home] - [Appearance and Personalization], select [Adjust screen resolution].
- 4 Select the resolution closest to the maximum output signal resolution of the projector from the [Resolution] list.
- 5 Click the [OK] button.

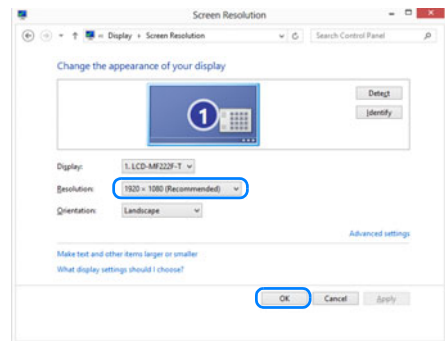

■ Windows 7


- 1 Open the [Control Panel] from the start menu, then select [Appearance and Personalization] - [Adjust screen resolution] in the [Control Panel Home].
- 2 Click the [Resolution] tab, and move the slider to select the resolution closest to the maximum output signal resolution of the projector.
- 3 Click the [OK] button.

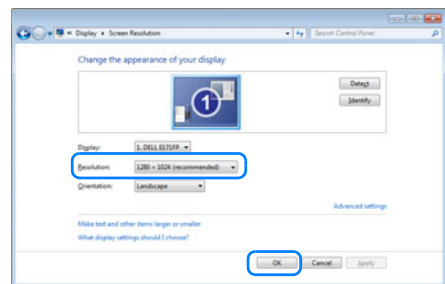

Step 3 Adjust the Image


■ Windows Vista

- 1 Open the [Control Panel] from the start menu, then select [Appearance and Personalization] - [Adjust screen resolution] in the [Control Panel Home].
- 2 Under [Resolution], use the slider to select the resolution closest to the projector's maximum resolution.
- 3 Click the [OK] button.

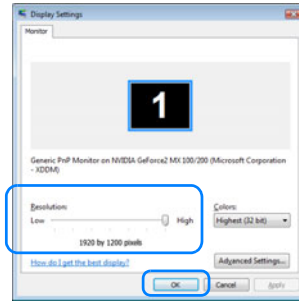

■ Mac OS X

- 1 Open the Apple Menu and select [System Preferences].
- 2 In the [System Preferences] window, click the [Displays] icon to display the Display window.
- 3 Select the [Display] tab and select the resolution closest to the maximum output signal resolution of the projector from the [Resolutions] list.
- 4 Close the [System Preferences] window.

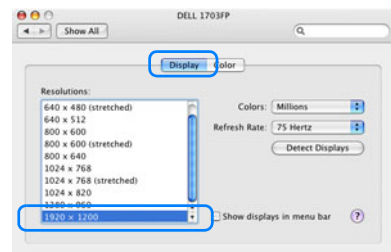

Auto PC Adjustment


If the image display is shifted or there is flickering of the screen when [Analog PC-1] or [Analog PC-2] is selected, press the **AUTO PC** button to adjust the projector to the optimal condition.

The adjustment results will be stored. If the projector is used again with the same computer, when the input signal is selected the image will be projected automatically under the same conditions that were previously adjusted.

■ Performing the Auto PC Function

Press the **AUTO PC** button to perform projector adjustment.

Remote control

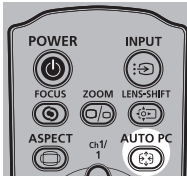

If the Auto PC adjustment is insufficient, perform the following operations.

- Select the input signal that matches the resolution of the computer from [Input signal select]. (P76)
- If adjustment is insufficient even when using the above operation, adjust [Total dots], [Tracking], [Horizontal position], [Vertical position], [Horizontal pixels] and [Vertical pixels] in [Input signal settings]. (P77, P78)
- For the signal types supported by the projector, see the table on [page 214](#).


Focusing, Resizing, or Moving the Image

Adjusting Image Focus


To adjust the focus, press the **FOCUS** button on the remote control or the **LENS** button on the projector.

For the projection distances of the lens unit, refer to “Relationship Between Image Size and Projecting Distance” on [page 125](#).

- 1 Press either the FOCUS button on the remote control or the LENS button on the projector to display the focus adjustment window.**

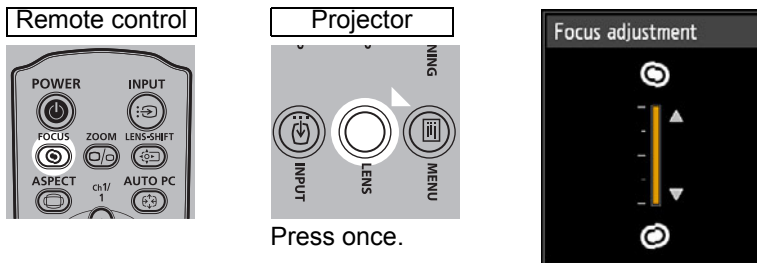

- 2 Press the pointer buttons to adjust the focus.**

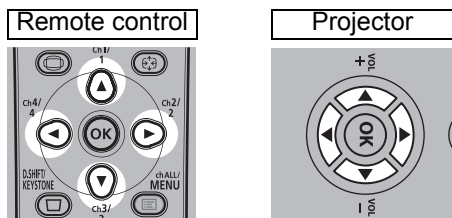

To adjust the focus, use the [▲] / [▶] / [▼] / [◀] buttons on the remote control or projector.


To continue adjusting the focus in a specific direction, hold down the [▲] / [▼] buttons on the remote control or projector.

- 3 When the focus is adjusted optimally, press the OK button or the FOCUS button.**


Adjusting Image Size

The size of the projected image can be adjusted by pressing the **ZOOM** button on the remote control or the **LENS** button on the projector. Change the projector installation position if your desired image is too large or too small to adjust it with the zoom function. (P118)

- 1 Press either the **ZOOM** button on the remote control or the **LENS** button on the projector twice to display the zoom adjustment window.

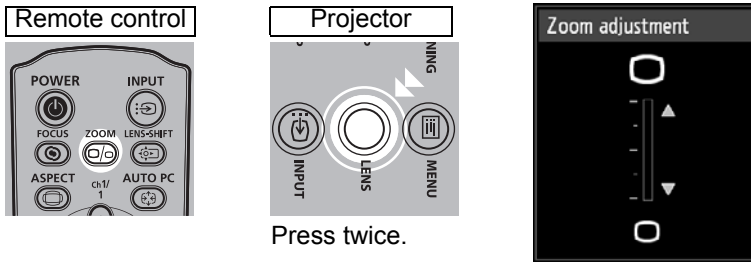

- 2 Press the pointer buttons to adjust the image size.

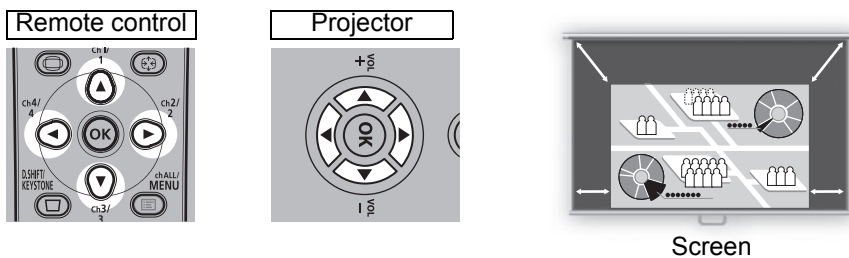

To enlarge the image, use the [▲] / [▶] buttons on the remote control or projector.

To reduce the image, use the [▼] / [◀] buttons on the remote control or projector.

To continue adjusting the size in a specific direction, hold down the [▲] / [▼] / [◀] / [▶] buttons on the remote control or projector.

- 3 When the desired image size is selected, press the **OK** button or the **ZOOM** button.

⚠ When the Short Fixed Lens (RS-IL03WF) is attached, digital zoom adjustment is performed in place of optical zoom adjustment.


Step 3 Adjust the Image

Adjusting the Image Position


To adjust the screen position up, down, left, or right, press the **LENS-SHIFT** button on the remote control or the **LENS** button on the projector. It can change the projected screen to the most suitable position by moving the position of the lens up/down/left/right. (P129)

- ◆ The available range for lens shift (percentage of movement relative to the screen size) varies depending on the lens unit which is used. (P129)
- Lens shift is not available in each corner for the Short Fixed Lens (RS-IL03WF) or in the top left and top right for the other lenses. (P130)

- 1 Press either the LENS-SHIFT button on the remote control or the LENS button on the projector three times to display the lens shift adjustment window.**

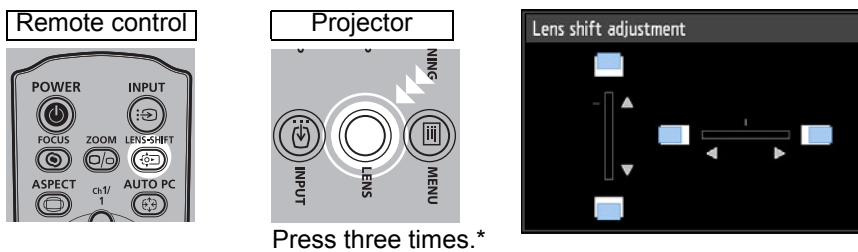

- 2 Press the pointer buttons to adjust.**

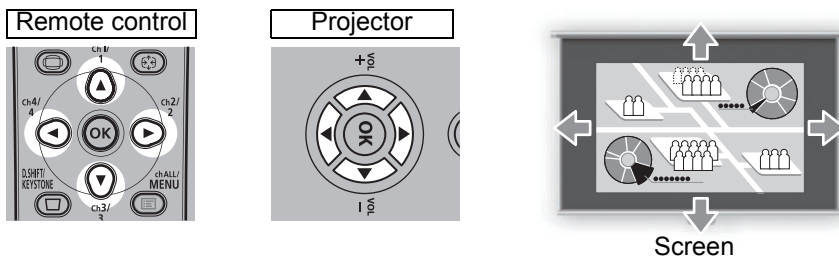

To raise or lower the image, use the [▲] / [▼] buttons on the remote control or projector.

To move the image left or right, use the [◀] / [▶] buttons on the remote control or projector.


To continue moving the image in a specific direction, hold down the corresponding button.

- 3 When the desired position is reached, press the OK button.**

■ Resetting the Position

The lens position after movement with the lens shift function is not returned when the power is turned off. To return it to its original position, perform reset.

During screen position adjustment, press and hold the **LENS-SHIFT** button on the remote control or the **LENS** button on the projector to display the [Lens shift reset] window. The selections for the lens currently used are displayed. Use the pointer buttons to select one of them, then press the **OK** button.

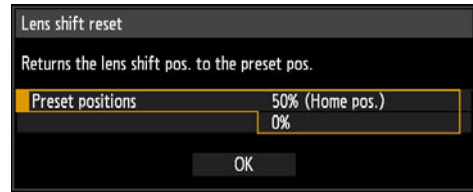

Lens unit type	Available items
Standard Zoom Lens RS-IL01ST	50% (Home position): Up 50%, left / right 0% 0%: Up / down / left / right 0%
Long Zoom Lens RS-IL02LZ	
Ultra Long Zoom Lens RS-IL04UL	
Wide Zoom Lens RS-IL05WZ	
Short Fixed Lens RS-IL03WF	0% (Home position): Up / down / left / right 0%

Step 4 Select an Aspect Ratio (Screen Aspect) Matching the Screen

Select an optimum aspect ratio of the projected image (screen aspect) or an optimum screen mode (aspect) according to the aspect ratio of the screen, type of input image signal and so on for the projection to make best use of the screen size.

[Screen aspect] Select the same screen aspect ratio as the screen you are using.




[Aspect] In general, select [Auto].

You may need to change the setting depending on the resolution of the computer or other AV equipment connected. If the image is not projected with the desired aspect ratio, refer to “Relationship between Aspect and Screen Aspect” on [page 209](#).




Selecting Screen Aspect

Select the correct aspect ratio for the screen which is used.

1 Press the MENU button to display the menu window.

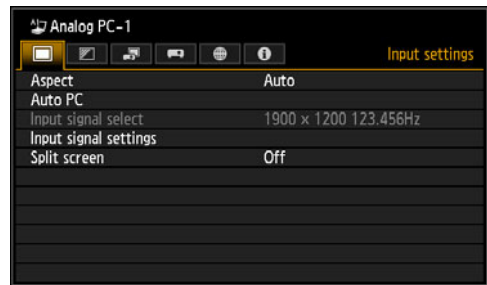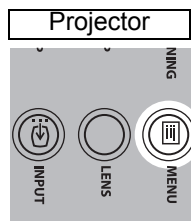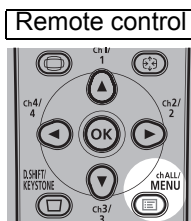




2 Press the [◀] / [▶] buttons to select the [Install settings] tab.

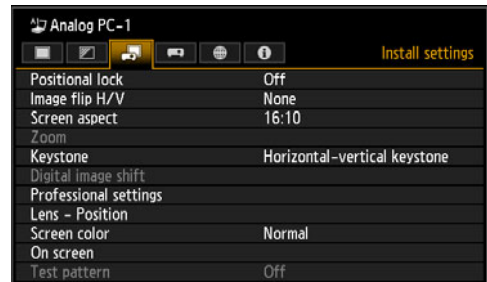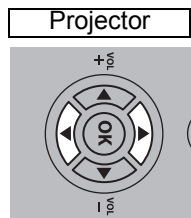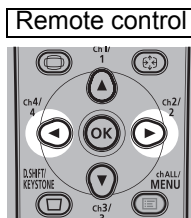




When the Short Fixed Lens is attached and if the projected image does not fit on the screen, you can display the image by electronically reducing its size. The [Zoom] setting will appear in the menu only when the Short Fixed Lens (RS-IL03WF) is attached.

Step 4 Select an Aspect Ratio (Screen Aspect) Matching the Screen

- 3** Select [Screen aspect] with the [▲] / [▼] buttons, and then press the OK button.

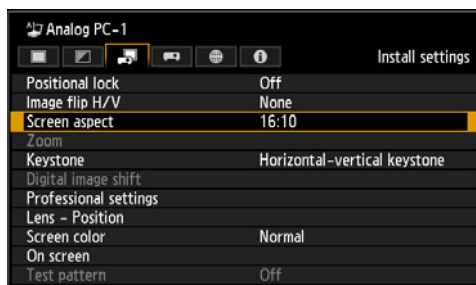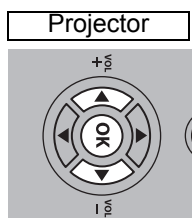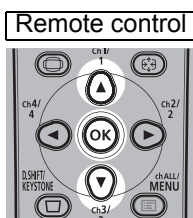

- 4** Use the [▲] / [▼] buttons to select the desired contents.

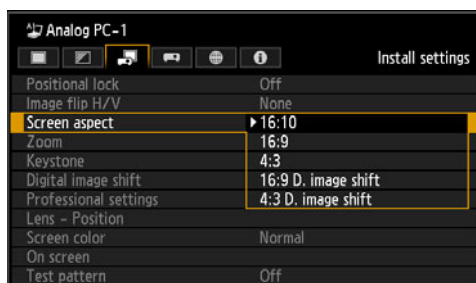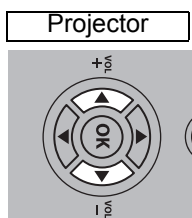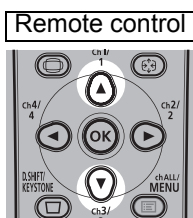

16:10

Select this when you use a screen with an aspect ratio of 16:10. Also select this screen aspect when projecting on a wall.

You can correct keystone distortion with this mode. (P54)



16:10 screen

16:9

Select this when you use a screen with an aspect ratio of 16:9.

You can correct keystone distortion with this mode. (P54)



16:9 screen

4:3

Select this when you use a screen with an aspect ratio of 4:3.

You can correct keystone distortion with this mode. (P54)



4:3 screen

Step 4 Select an Aspect Ratio (Screen Aspect) Matching the Screen

16:9 D. image shift

Select this when you use a screen with an aspect ratio of 16:9.

Keystone correction cannot be performed in this mode. However, it is possible to move the image up / down when projecting level.

For details about how to move the image, refer to “Moving Image with 16:9 D. Image Shift” on [page 50](#).

4:3 D. image shift

Select this when you use a screen with an aspect ratio of 4:3.

Keystone correction cannot be performed in this mode. However, it is possible to move the image left / right when projecting level.



For details about how to move the image, refer to “Moving Image with 4:3 D. Image Shift” on [page 51](#).

- 5 Press the OK button to accept your setting and then press the MENU button.



Moving Image with 16:9 D. Image Shift

This option applies image processing to reposition the image. For this reason, it is called digital image shift.

- 1 When the screen aspect is [16:9 D. image shift], press either the MENU button or, on the remote control, the D.SHIFT/KEYSTONE button.
If you pressed the D.SHIFT/KEYSTONE on the remote control, go to step 4.
- 2 Press the [◀] / [▶] buttons to select the [Install settings] tab.


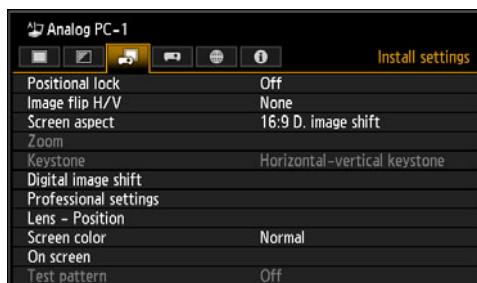
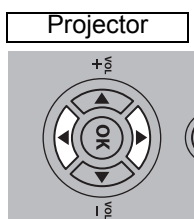


- 3 Use the [▲] / [▼] buttons to select [Digital image shift], then press the OK button.

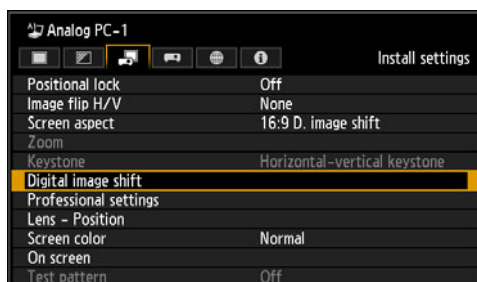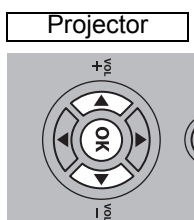

Step 4 Select an Aspect Ratio (Screen Aspect) Matching the Screen

- 4 Use the [▼] / [▲] buttons to move the image up or down.

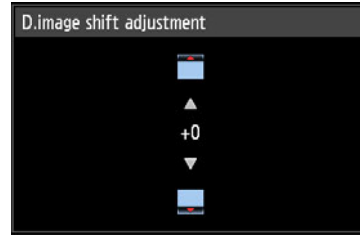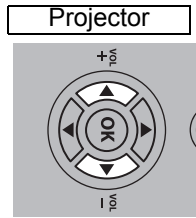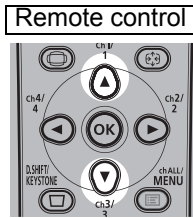

[▲] button:
Moves the image up.



Screen





[▼] button:
Moves the image down.



- 5 When the image fits the screen, press the OK button.

Moving Image with 4:3 D. Image Shift

- 1 When the screen aspect is [4:3 D. image shift], press either the MENU button or, on the remote control, the D.SHIFT/KEYSTONE button. If you pressed the D.SHIFT/KEYSTONE on the remote control, go to step 4.
- 2 Press the [◀] / [▶] buttons to select the [Install settings] tab.

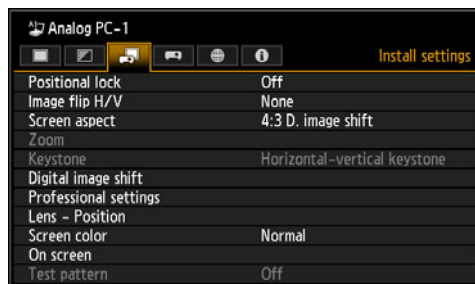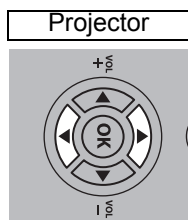


- 3 Use the [▲] / [▼] buttons to select [Digital image shift], then press the OK button.

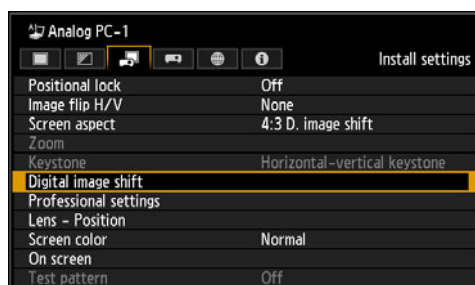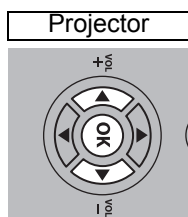

Step 4 Select an Aspect Ratio (Screen Aspect) Matching the Screen

4 Use the [◀] / [▶] buttons to move the image.

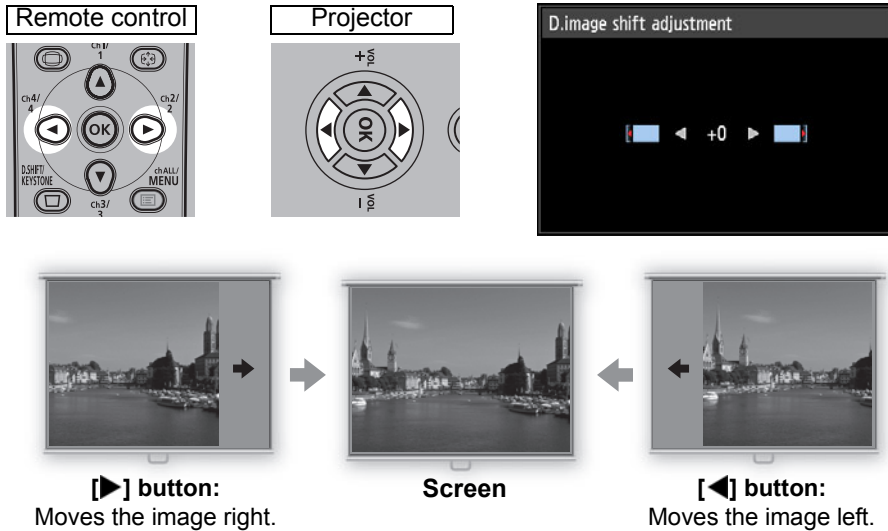

5 When the image fits the screen, press the OK button.

Resetting the Image Shift

Perform the following steps to reset the image shift adjustment. Access the [D. image shift adjustment] window and press the **D.SHIFT/KEYSTONE** button to display the [D. image shift reset] window. Next, select [OK] with the [◀] button, and then press the **OK** button.

Select the Aspect

Select [Aspect] based on the input signal type, aspect ratio of the screen and resolution. For more details about aspect ratios, refer to “Relationship between Aspect and Screen Aspect” on [page 209](#).

Types of Aspect Ratios

Auto

An image is projected at the aspect ratio of the input signal. Select this mode for normal image projection.

16:10

The image is projected using an input signal aspect ratio of 16:10. Select this if an image of 16:10 aspect ratio cannot be correctly projected in [Auto] mode.

16:9

The image is projected using an input signal aspect ratio of 16:9. Select this if an image of 16:9 aspect ratio cannot be correctly projected in [Auto] mode.

4:3

The image is projected using an input signal aspect ratio of 4:3. Select this if an image of 4:3 aspect ratio cannot be correctly projected in [Auto] mode.

Zoom

This cuts the upper/lower or left/right part of the screen according to the screen aspect and zooms in the center of the image. Select this if a letter box is displayed (black lines at the top/bottom of the screen) when watching video.



There may be some cases when this cannot be selected, depending on the input signal and/or resolution.

True size


The image is projected with the original resolution of the input signal. Select this option for clear projection of computer screens at up to maximum resolution.



There may be some cases when this cannot be selected, depending on the input signal and/or resolution.

Selecting an Aspect Ratio

Press the **ASPECT** button on the remote control and select an appropriate aspect ratio. Press the **ASPECT** button to change the aspect ratio type. For more details about aspect ratios, refer to “Relationship between Aspect and Screen Aspect” on [page 209](#).

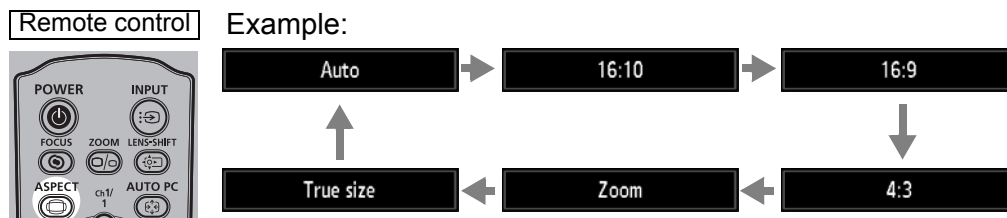

You can also select any aspect ratio from [Aspect] in the menu. ([P75](#))



Some aspect ratios may not appear depending on the type of input signal.

Step 5 Correct the Image Distortion

Adjusting Keystone Distortion

To correct keystone distortion, press the **D.SHIFT/KEYSTONE** button.

Use the remote control to correct keystone distortion.

Two types of correction are available: horizontal/vertical correction and corner correction.

Horizontal/vertical keystone correction adjusts image width and height, and corner correction adjusts the image relative to each corner.

For instructions on switching between the two types of keystone correction, refer to “Specifying Keystone Correction” (P144). Press the **D.SHIFT/KEYSTONE** button to correct distortion according to the selected keystone correction method.





- The result of keystone adjustment is stored in memory. If you place the projector in the same position, the keystone adjustment is not necessary.
- Signals are processed digitally when keystone distortion is corrected. The image may look different from the original one. In addition, the aspect ratio of the image may change.
- The digital image shift function is accessed when this button is pressed and the screen aspect is [4:3 D. image shift] or [16:9 D. image shift]. (P50, P51)

■ Horizontal/Vertical Keystone Correction




[Zoom] (P143) in the [Install settings] menu is not available during horizontal/vertical keystone correction.

- 1 Press the **D.SHIFT/KEYSTONE** button on the remote control to display the horizontal-vertical keystone adjustment window.

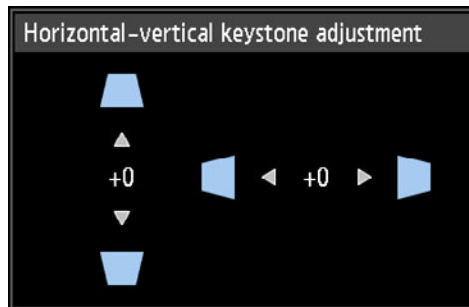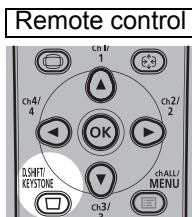


2 Press the pointer buttons to adjust the dimensions.

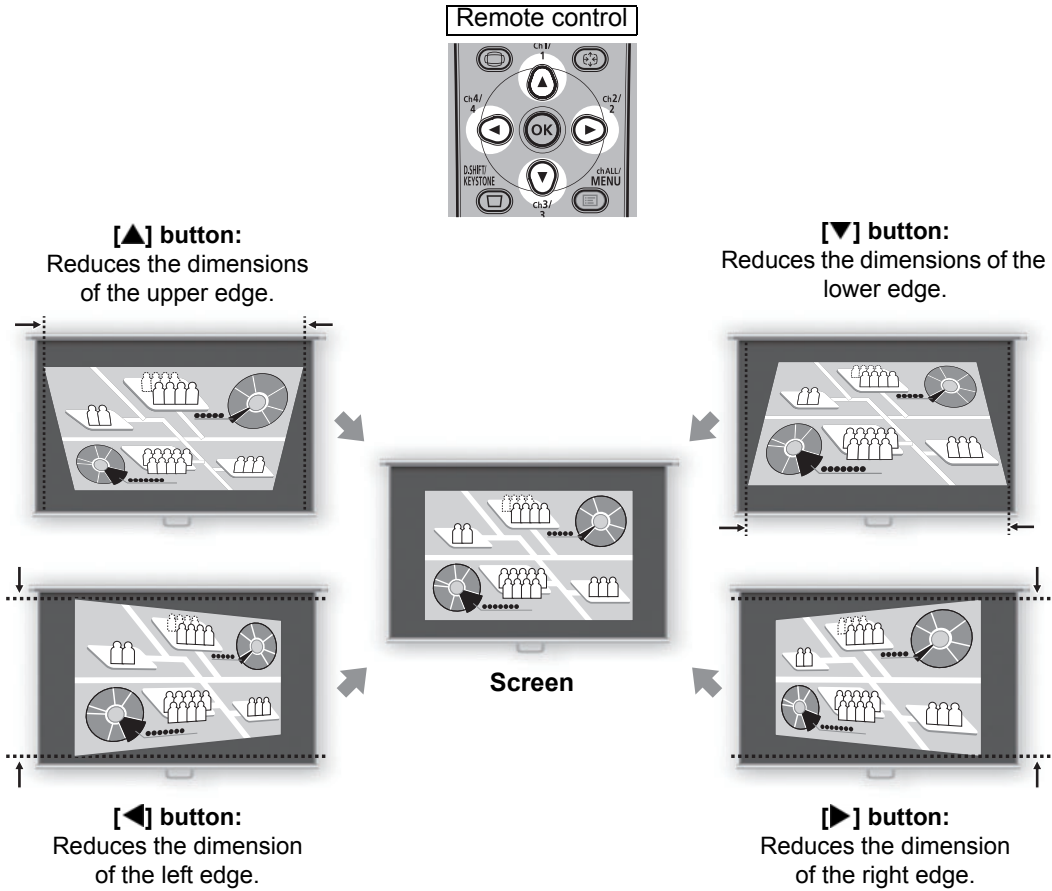

3 When keystone distortion has been corrected, press the OK button.



■ Corner Adjustment

1 Press the D.SHIFT/KEYSTONE button on the remote control to display the corner adjustment window.

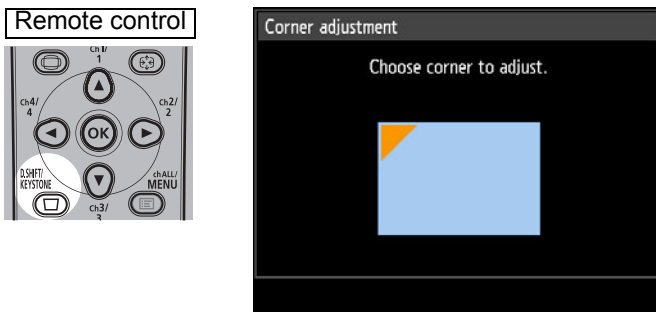


Step 5 Correct the Image Distortion

- 2 Press the pointer button of the corner for correction, and then press the OK button.

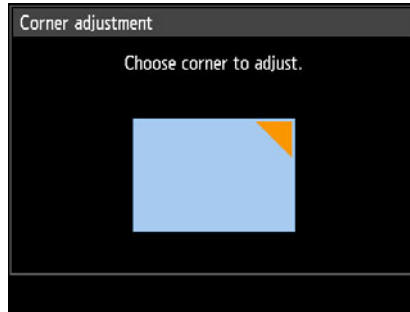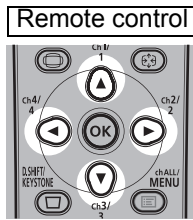

- 3 Press the pointer buttons to adjust the corner.

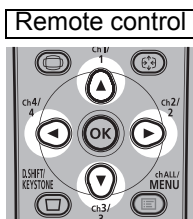

- 4 When you have finished correcting, press the OK button.




Corner adjustment settings will be cleared if you subsequently use [Zoom] (P143) in the [Install settings] menu.

■ Resetting the Keystone Adjustment

Perform the following steps to reset the keystone adjustment.

First, press the **D.SHIFT/KEYSTONE** button on the remote control twice to display the [Keystone reset] window. You can now reset the correction selected in the keystone setting.

Next, select [OK] with the [**◀**] button, and then press the **OK** button.

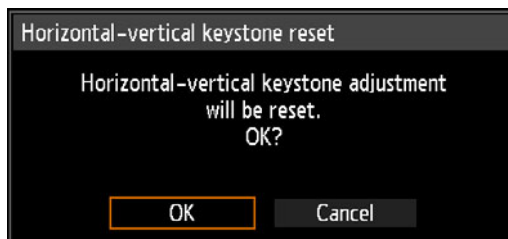

Step 6 Select the Image Quality (Image Mode)

You can select an image mode to suit the projected image.

In each image mode, you can further adjust the brightness, contrast, sharpness, gamma, color adjustment, advanced adjustment, and lamp mode. (P84)

Image Modes

Available image modes vary to some extent depending on the selected input signal and [HDMI In] (P108) setting (whether [Auto] or [Computer]).

Image mode	Compatible input signals		Explanation (1) Ambient Light in Room (2) Types of Images (3) Good For
	<ul style="list-style-type: none"> • Digital PC • Analog PC-1/2 • HDMI (when [HDMI In] is [Computer]) • LAN • USB 	<ul style="list-style-type: none"> • Component • HDMI (when [HDMI In] is [Auto]) 	
Standard	○	○	(1) Bright (2) Computer screens, or media played with video software (3) Whites and natural colors
Presentation	○	—	(1) Bright (2) Images mainly consisting of text (3) Keeps the screen bright
Dynamic	—	○	(1) Bright (2) Media played with video software (3) Keeps the screen bright
VividPhoto	○	—	(1) Somewhat dark (2) Digital photos (3) Produces vibrant colors
Photo/sRGB	○	○	(1) Somewhat dark (2) Digital photos from sRGB-compatible cameras (3) Conforms to the sRGB standard
Video	—	○	(1) Somewhat dark (2) Video from camcorders (3) Close to the color space of TVs
Cinema	—	○	(1) Dark (2) Movies (3) Designed especially for movies
User 1 – 5	○	○	Up to 5 user-selected combinations of image quality settings can be stored in the memory (P85). Stored settings can be selected as an image mode.


○: Compatible —: Not compatible

Step 6 Select the Image Quality (Image Mode)

■ Selecting an Image Mode

Press the **IMAGE** button on the remote control to select.

The image mode changes each time the **IMAGE** button is pressed. (The displayed image modes vary depending on the selected input signal.)

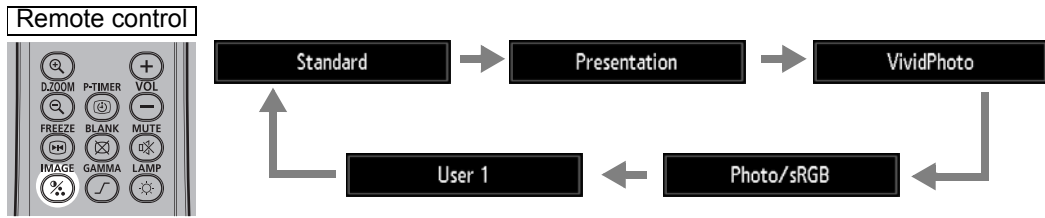

You can also select any image mode from the [Image mode] menu. (P84)

- User settings 1 - 5 are displayed when the desired image settings have been created and stored using the user memory function in the image adjustment menu. (P85)

Step 7 Set Power-Saving Settings




Next, complete power-saving settings as needed.

The following four settings are available. For details, refer to the page describing each function.

- **Lamp Mode (P95)**
Adjust lamp and fan power consumption in the image mode.
- **Power Management Mode (P98)**
Automatically turns off the lamp or projector after a certain period if the projector and remote control are idle and there is no video input signal.
- **Power Management Duration (P99)**
Automatically turns the power off after a certain period if the projector is idle without an input signal.
- **Network Standby Settings (P168)**
Specify whether network functions should be active in standby mode.

Step 8 Turn the Projector Off

1 Press the **POWER** button to display the window shown below.

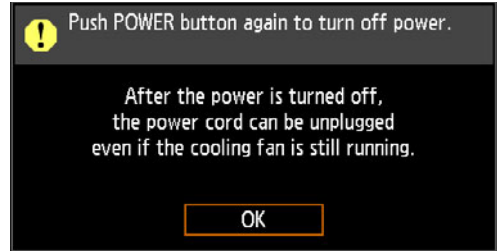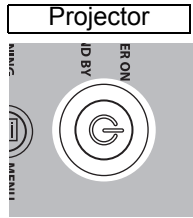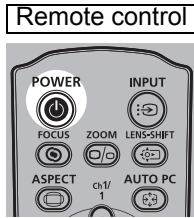

2 When this window is displayed, press the **POWER** button again to turn off the power.

After you turn the power off, the projector will enter standby mode once it cools down.



If you want to continue projecting without turning off the power, press a button other than **POWER**, or else wait until the confirmation message disappears.



- After turning off the projector, wait at least 5 minutes before turning it on again. It may shorten the lamp life if you turn on the projector immediately after turning it off.
- Using the projector for a long time may shorten the life of the lamp and internal optical components.
- Unplug the projector if it will not be used for an extended period.

Useful Functions Available During a Presentation

Table of Contents

Safety Instructions

Before Use

Operation

Projecting an Image

Useful Functions Available During a Presentation

Setting Functions from Menus

Installation and Maintenance

Installation

Connecting to a Network

Maintenance

Appendix

Other Information

Index

Useful Presentation Functions

Temporarily Blacking Out an Image

Useful when:

- You have finished the presentation.
- You want to divert attendees' attention from the screen.

Remote control



Press the **BLANK** button to black out the image.
Press the **BLANK** button again to show the image.

- You can set the screen state while blacking out the image in the menu. (P97)
- The lamp remains illuminated while the image is blacked out.

Freezing the Picture


Useful when:

- You want to perform a computer operation which is irrelevant to the proceedings of the presentation.
- You want to stop a moving image.

Remote control



Press the **FREEZE** button to freeze the moving image. The projector shows the following icon.

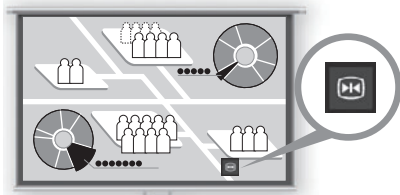

Screen

Press the **FREEZE** button again to return to the original display.

- It is also cancelled when the input signal is terminated.

Adjusting the Volume

Useful when:

- You want to adjust the volume level of the projector or external speakers.

Remote control



Press the **VOL** button. The following screen appears.



- You can also adjust the volume level with the [▲] / [▼] buttons of the projector.
- Adjust the volume or mute setting on the computer if the volume level is too low.
- You can also adjust the volume level of the speakers connected via the audio output terminal.

Muting the Sound


Useful when:

- You want to temporarily mute unnecessary sound.
- You want to immediately mute the sound.

Remote control



Press the **MUTE** button to mute the sound. The projector shows the following icon.

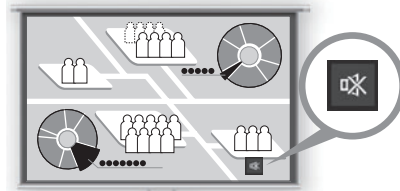

Screen


Press the **MUTE** button again to cancel the mute function.

- You can also mute the sound of the speakers connected via the audio output terminal.

Zooming Part of an Image


Useful when:

- Zooming in on an object such as a small graph during a presentation (up to 12x).
- Focusing on the current subject.



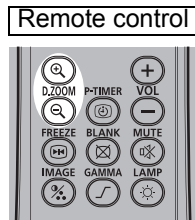


Press the **+ D.ZOOM** button to enlarge a part of the image. Press the **- D.ZOOM** button to reduce the image size.

- The magnification appears on the screen.

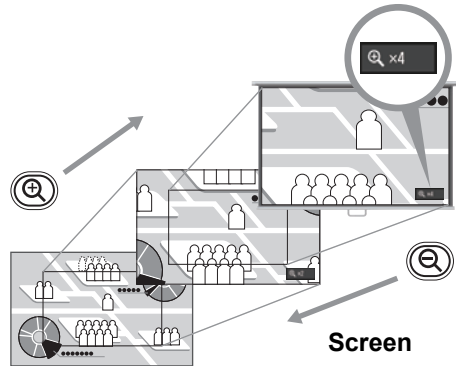

You can move the enlarged area by using the **[▲] / [▼] / [◀] / [▶]** buttons.

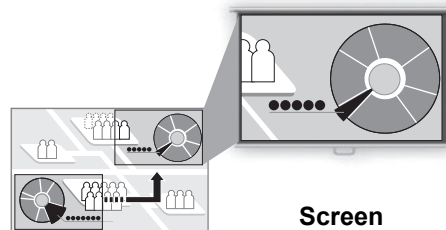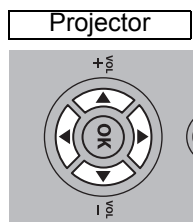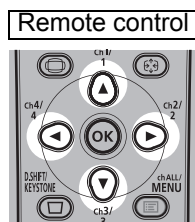

You can restore the original size of the image by pressing the **OK** button.




The **D.ZOOM** buttons work differently than [Zoom] in the [Install settings] menu (P143).

Projecting Images on a USB Flash Drive


Images stored on a USB flash drive in the projector can be projected as follows. You can select the images to project, or you can project images automatically, one after another. JPEG images up to 10912x8640 can be projected.



- USB flash drives with security features are not recognized by the projector and cannot be selected as the image source.
- If the projector cannot mount the file system, the drive name is grayed out and the following icon is displayed. In this case, the USB flash drive cannot be used.




 USB1 USB CARD1

1 Insert the USB flash drive in the USB port.

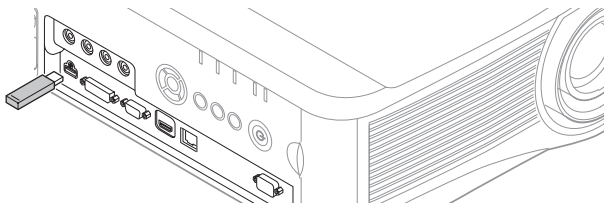


Insert the USB flash drive directly into the projector's USB port. The USB flash drive will not be recognized if you connect it via a hub.

2 Press the INPUT button.

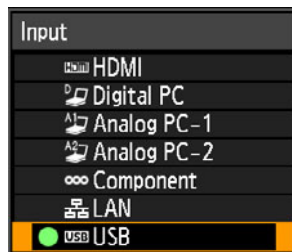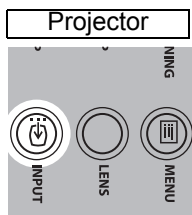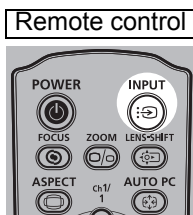


3 Press the INPUT button repeatedly to select [USB].

JPEG files on the USB flash drive are now listed.

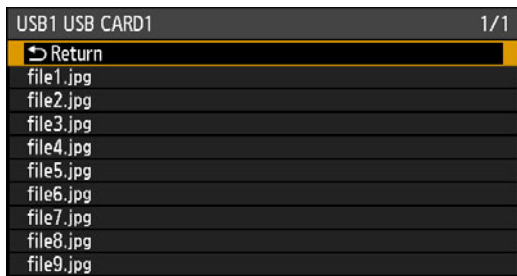

- If the USB flash drive contains multiple partitions, a screen is displayed for you to select the desired partition. Use the pointer buttons to select the partition, and then press the **OK** button. Files on the partition are now listed.
- Network input is not available when [USB] is selected as the other input signal in split-screen display.

- 4 Use the pointer buttons to select a file, and then press the OK button to project the image.**

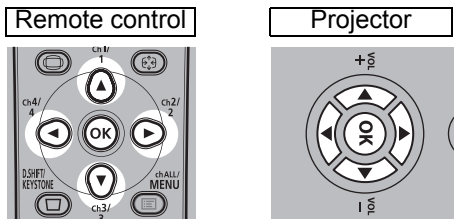

Press the [▲] / [▼] buttons to select a file.

To view another page, press the [◀] / [▶] buttons (if other pages are available).

To navigate to a higher or lower folder, select a folder and press the **OK** button.



Motion blur reduction is not available when projecting JPEG files on a USB flash drive. (P103)

- 5 Switch to other images as needed.**

To switch to the previous image, press the [▲] button.

To switch to the next image, press the [▼] button.

To rotate images left 90°, press the [◀] button.

To rotate images right 90°, press the [▶] button.

- 6 After projection is finished, remove the USB flash drive.**



The projector can also play a slideshow of images on a USB flash drive automatically. (P81)


Split-Screen Display

Two input images can be projected side by side. This is split-screen display. When you activate split-screen display, the current image is shown on the left side, and the new image is shown at right. You can change the source of images shown on each side by pressing the **INPUT** button. However, you cannot specify the same input signal (terminal) as the source for both sides.




- Network and USB input cannot be combined for split-screen display.
- [Zoom] (P143) in the [Install settings] menu is not available in split-screen mode.


- 1 Supply two signals to the projector.**
- 2 Press the MENU button and then the [◀] / [▶] buttons to select the [Input settings] tab.**

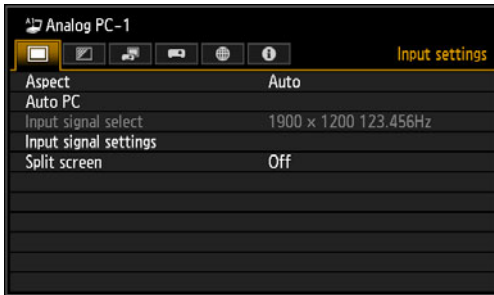

- 3 Use the [▲] / [▼] buttons to select [Split screen], and then press the OK button.**

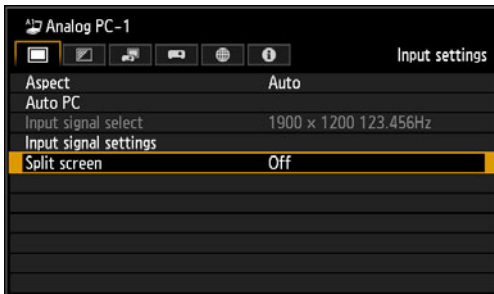


- 4** Use the [▲] / [▼] buttons to select [On], and then press the OK button.

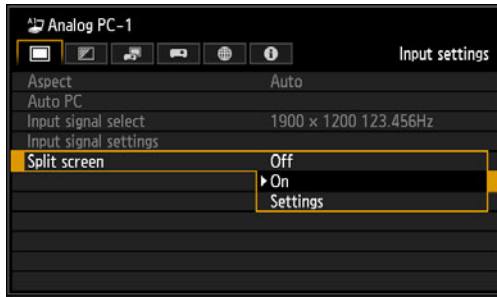


- A number is displayed in the center of one image area. When the image at left is selected, 1 is displayed on the left, and when the image at right is selected, 2 is displayed on the right. The image labeled with a number has “control rights,” and the sound for that image will be played. This is also the image with control rights if you adjust [Image priority]. (P83)
- These functions cannot be adjusted in this mode: sharpness (P87), dynamic gamma (P91), noise reduction (P90, P91), lamp control (P94), and motion blur reduction (P103).
- Some functions are not available, such as [Image flip H/V] (P141), [Screen aspect] (P142), [Keystone] (P144), [Zoom] (P143), and [Logo capture] (P96).
- Image mode colors differ somewhat from those in single-image mode.

- 5** If ▷ or ◁ is displayed in the center of the image area, you can switch control to the other side by pressing the [◀] / [▶] buttons on the remote control.

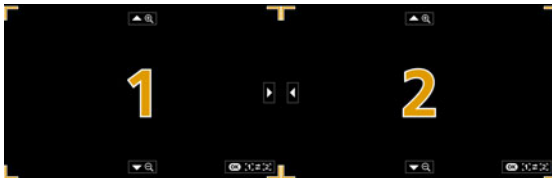

(Example of display in split-screen mode.)

- 6** Press the INPUT button, and then press the [▲] / [▼] buttons on the remote control to select the input signal for the side with control rights. The [Input] menu is displayed. To determine which side currently has control rights, check whether 1 or 2 is shown in orange in the upper right of the menu. As for input signals, the source used for the side with control rights is labeled with a green circle, and the source used for other side is labeled with a white circle. For details on selecting input signals, refer to “Selecting an Input Signal” (P40).

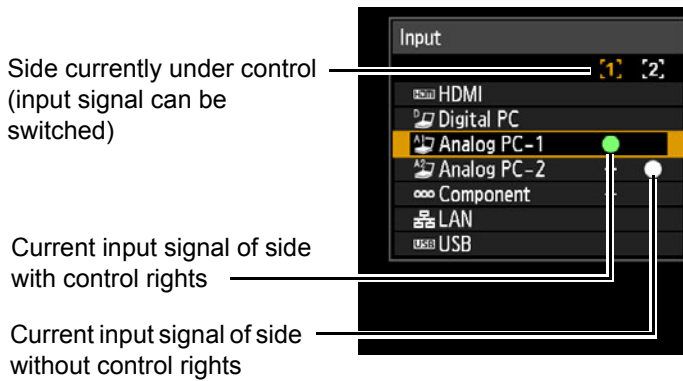

To exit split-screen display, select [Input settings] tab > [Split screen] > [Off].



- If you specify [LAN] or [USB] as an input signal, the screen width is evenly divided between the left and right areas. (P82)
- When projection resumes from standby or after the lamp is momentarily turned off in split-screen mode, display reverts to single-image mode, showing the input signal with display rights.

Setting Functions from Menus

Table of Contents

Safety Instructions

Before Use

Operation

Projecting an Image

Useful Functions Available
During a Presentation

**Setting Functions from
Menus**

Installation and Maintenance

Installation

Connecting to a Network

Maintenance

Appendix

Other Information

Index

Using Menus

Use the menus to set the operation of the projector in detail.

Menu Configuration

The menu screen is divided into 6 tabs as shown below.

[Install settings] tab
This setting is used when installing the projector.

[Image adjustment] tab
You can adjust the image quality and colors according to your preference.

[Input settings] tab
You can set the type of signal or the method of projection of the images input.

[System settings] tab
You can set the operation of the projector.

[Network settings] tab
These settings are for when using the projector from a PC via a network. For the network settings, refer to “Connecting to a Network” (P163).

[Information] tab
You can check information about the signal types of the images projected and other information.

The screenshot shows the 'Input settings' menu with two columns of options. The left column is labeled 'Contents of menu' and includes: Aspect, Auto PC, Input signal select, Input signal settings, and Split screen. The right column is labeled 'Menu items' and includes: Auto, 1900 x 1200 123.456Hz, and Off.

Input Signal Types for which a Menu Item is Displayed


Different menu items are displayed for different input signal types. In the following explanation of each menu item, the input signal type for which the menu item is displayed is indicated as follows:

- Input signal for which the menu item is displayed
- Input signal for which the menu item is not displayed


<input type="radio"/> HDMI	<input type="checkbox"/> Component	<input type="checkbox"/> LAN
<input type="checkbox"/> Digital PC	<input type="checkbox"/> Analog PC	<input type="checkbox"/> USB

Basic Menu Operations

- 1** Press the MENU button to display the menu window.

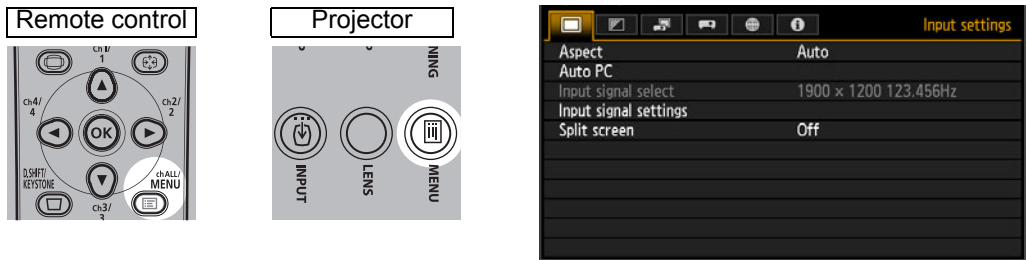


- 2** Press the [◀] / [▶] buttons to select a tab.

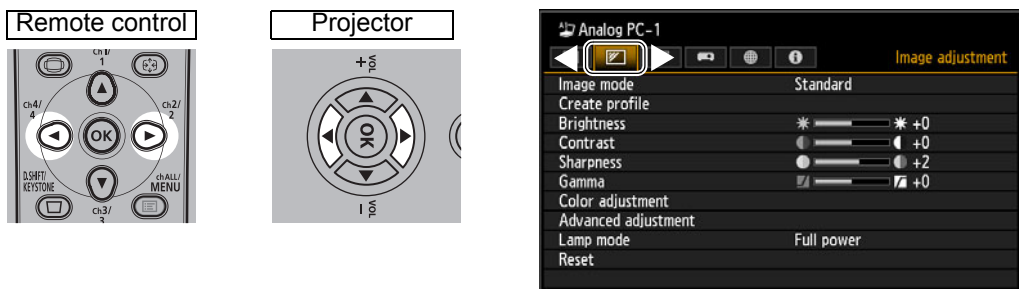

- If the tab position is not highlighted in orange, press the [▲] / [▼] buttons to move the current selection to the top.


- 3** Press the [▲] / [▼] buttons to select an item.

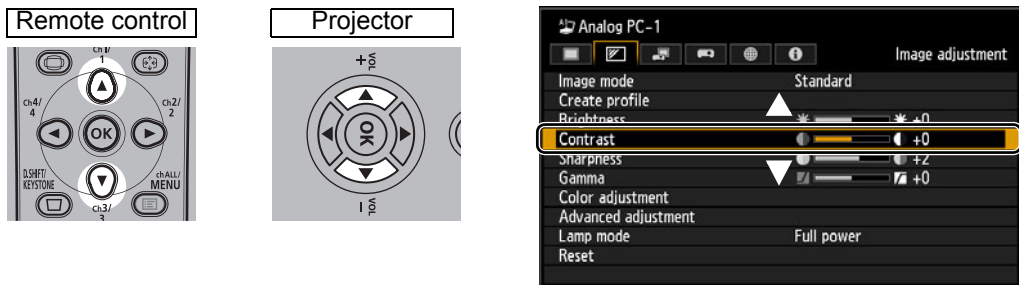

- 4** Select contents.


How to select the contents varies depending on the item.

Selecting from a list Example: Aspect (P75)

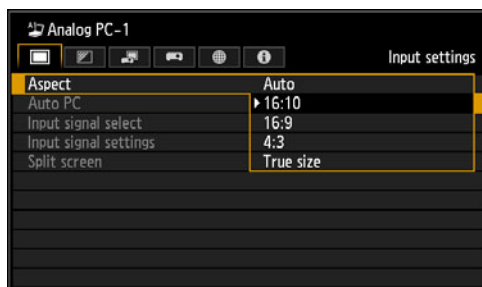


1. Select [Aspect].
2. Press the **OK** button or [▶] button to display a list of the contents.
3. Use the [▲] / [▼] buttons to select the desired contents.
4. When you have found the contents you desired, press the **OK** button or [▶].

Adjusting with the [◀] / [▶] buttons Example: Contrast (P86)

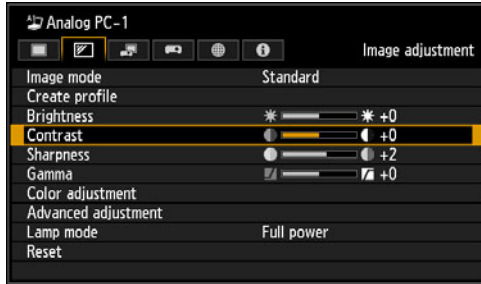


1. Select [Contrast].
2. Use the [◀] / [▶] buttons to adjust the setting.

Selecting from a different screen (1) Example: Menu position (P149)

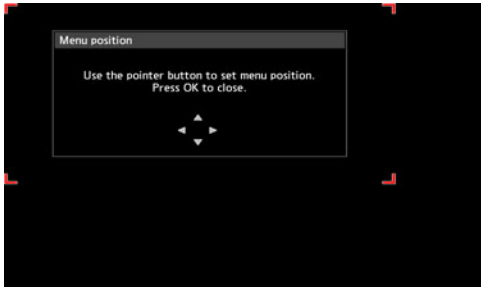

1. Select [Menu position].
2. Press the **OK** button to display a different screen.
3. Then follow the instruction on the screen.

Selecting from a different screen (2) Example: Tracking (P77)

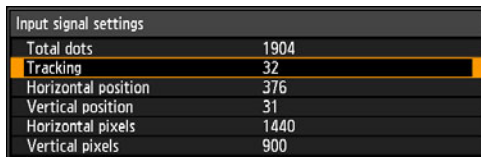

1. Select [Input signal settings].
2. Press the **OK** button to display a different screen.
3. Select [Tracking].
4. Use the [▲] / [▼] buttons to select the setting, then use the [◀] / [▶] buttons to select the value.
5. When you have completed the settings, press the **OK** button.

5 Pressing the MENU button causes the menu screen to disappear.


Setting Display Status (Input Settings)

Selecting the Aspect

 > [Input settings] > **[Aspect]**

- HDMI Component LAN
 Digital PC Analog PC USB

You can select a projection mode corresponding to the aspect ratio of the image. (P52)

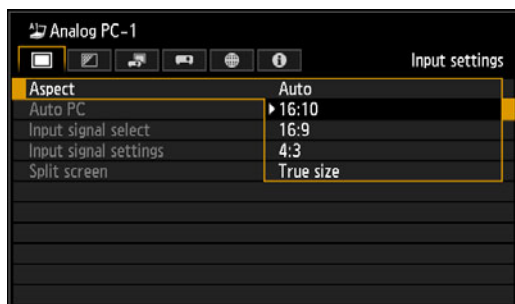

- For LAN and USB input, [Auto] is selected automatically.
- Different contents are displayed for different screen aspects or input signal types.
- The **ASPECT** button on the remote control can also be used to select the [Aspect] settings.

Auto An image is projected at the aspect ratio of the input signal. Select this mode for normal image projection.

16:10 The image is projected using an input signal aspect ratio of 16:10.



- There may be some cases when this cannot be selected, depending on the input signal and/or resolution.

16:9 The image is projected using an input signal aspect ratio of 16:9. Select this if an image of 16:9 aspect ratio cannot be correctly projected in [Auto] mode.

4:3 The image is projected using an input signal aspect ratio of 4:3. Select this if an image of 4:3 aspect ratio cannot be correctly projected in [Auto] mode.

Zoom This cuts the upper/lower or left/right part of the screen according to the screen aspect and zooms in or out of the center of the image. Select this if a letter box is displayed (black lines at the top/bottom of the screen) when watching video.



- There may be some cases when this cannot be selected, depending on the input signal and/or resolution.

True size The image is projected with the original resolution of the input signal.



- There may be some cases when this cannot be selected, depending on the input signal and/or resolution.


Press the **OK** button to accept your setting and then press the **MENU** button.

Setup Using Auto PC

MENU > [Input settings] > **[Auto PC]**

- HDMI – Component – LAN
- Digital PC ○ Analog PC – USB

Automatically adjusts display position misalignment and screen flickering. The adjusted result is stored in the memory.

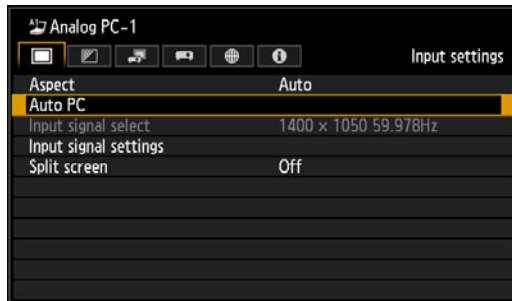

Press the **OK** button to accept your setting.



- If the Auto PC adjustment is insufficient, perform the following operations.
- Select the input signal that matches the resolution of the computer from [Input signal select]. (P76)
 - If adjustment is insufficient even when using the above operation, adjust [Total dots], [Tracking], [Horizontal/Vertical position] and [Horizontal/Vertical pixels] in [Input signal settings]. (P77, P78)
 - For the signal types supported by the projector, see the table on [page 214](#).


Selecting an Input Signal

(Analog PC Input)

MENU > [Input settings] > **[Input signal select]**

- HDMI – Component – LAN
- Digital PC ○ Analog PC – USB

You can select a suitable resolution if the auto PC adjustment function (P43) cannot project the correct image from a computer.

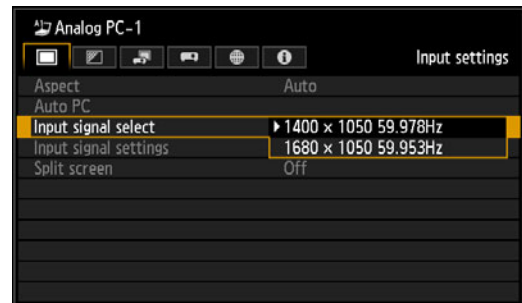

Select an input signal corresponding to the resolution of the computer.

Press the **OK** button to accept your setting and then press the **MENU** button.

- For the signal types supported by the projector, see the table on [page 214](#).

Adjusting the Input Signal



(Total dots)

 > [Input settings] > [Input signal settings] > **[Total dots]**

— HDMI — Component — LAN
— Digital PC ○ Analog PC — USB

You can adjust the total number of dots in the horizontal direction. Adjust it when stripes are displayed on the screen.

Input signal settings	
Total dots	1904
Tracking	32
Horizontal position	376
Vertical position	31
Horizontal pixels	1440
Vertical pixels	900


Use the [] / [] buttons to select a value.

When you have completed the adjustment, press the **OK** button to accept your setting and then press the **MENU** button.

- Perform this adjustment if the Auto PC function (P43) cannot adjust the projected image correctly.

Adjusting the Input Signal

(Tracking)



 > [Input settings] > [Input signal settings] > **[Tracking]**

— HDMI — Component — LAN
— Digital PC ○ Analog PC — USB

You can fine-tune the timing for generating an image from the image signal.

Adjusts the tracking when the image distorts or flickers.


Input signal settings	
Total dots	1904
Tracking	32
Horizontal position	376
Vertical position	31
Horizontal pixels	1440
Vertical pixels	900

Use the [] / [] buttons to select a value.

When you have completed the adjustment, press the **OK** button to accept your setting and then press the **MENU** button.

- Perform this adjustment if the Auto PC function (P43) cannot adjust the projected image correctly.

Adjusting the Input Signal (Horizontal / Vertical position)



 > [Input settings] > [Input signal settings] > [Horizontal position] / [Vertical position]


— HDMI — Component — LAN
— Digital PC ○ Analog PC — USB

You can adjust the horizontal or vertical position of the screen when the projected image is shifted in the horizontal or vertical direction.


Input signal settings	
Total dots	1904
Tracking	32
Horizontal position	376
Vertical position	31
Horizontal pixels	1440
Vertical pixels	900

Input signal settings	
Total dots	1904
Tracking	32
Horizontal position	376
Vertical position	31
Horizontal pixels	1440
Vertical pixels	900

Use the [] / [] buttons to select a value. As the value increases, the screen moves to the left or upward.

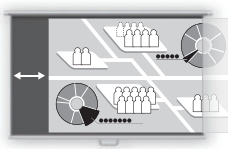

Screen

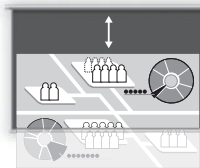


Screen

When you have completed the adjustment, press the **OK** button to accept your setting and then press the **MENU** button.

- Perform this adjustment if the Auto PC function (P43) cannot adjust the projected image correctly.

Adjusting the Input Signal (Horizontal / Vertical pixels)



 > [Input settings] > [Input signal settings] > [Horizontal pixels] / [Vertical pixels]


— HDMI — Component — LAN
— Digital PC ○ Analog PC — USB

You can adjust the number of the pixels in the horizontal or vertical direction if the length of the screen is too long or too short in the horizontal or vertical direction.


Input signal settings	
Total dots	1904
Tracking	32
Horizontal position	376
Vertical position	31
Horizontal pixels	1440
Vertical pixels	900

Input signal settings	
Total dots	1904
Tracking	32
Horizontal position	376
Vertical position	31
Horizontal pixels	1440
Vertical pixels	900

 Use the [] / [] buttons to select a value.

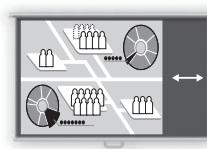

Screen

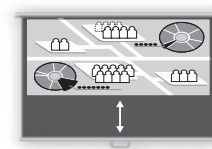

Screen

When you have completed the adjustment, press the **OK** button to accept your setting and then press the **MENU** button.


- Perform this adjustment if the Auto PC function (P43) cannot adjust the projected image correctly.

Adjusting HDMI Input Level

MENU > [Input settings] > **[HDMI input level]**

HDMI – Component – LAN
 – Digital PC – Analog PC – USB

You can select this as required when you project visual software using an HDMI signal.

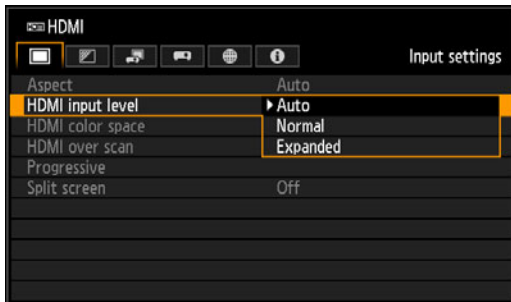

Auto	Automatically switches the input level based on the input signal.
Normal	Limits the input level to 16-235.
Expanded	Enables a full input level of 0-255.

Press the **OK** button to accept your setting and then press the **MENU** button.


- [Auto] is the factory default.
- You can select this only when the type of signal sent from AV equipment is RGB.
- The signal level is selected automatically in [Auto] mode. (Some AV equipment may not support this.)
- If the HDMI output of your AV equipment allows switching between [Normal] and [Expanded], we recommend you to set [Expanded]. The contrast of images will be improved and dark scenes will be rendered more realistically. In this case, select [Auto] or [Expanded] for [HDMI input level]. For more detailed information, refer to the user's manual for the AV equipment connected to the projector.

Setting the HDMI Color Format

MENU > [Input settings] > **[HDMI color space]**

HDMI – Component – LAN
 – Digital PC – Analog PC – USB

Select the color space for the HDMI signal.

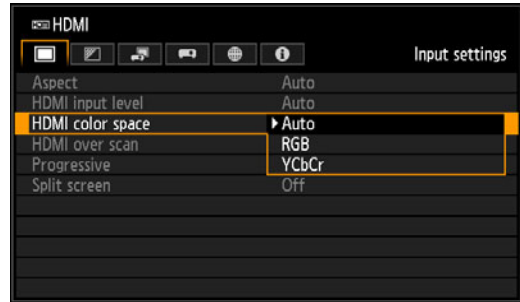

Auto	Selects the optimal color format for the input HDMI signal.
RGB	Forces the projector to handle the input signal as an RGB signal.
YCbCr	Forces the projector to handle the input signal as a color difference signal.

Press the **OK** button to accept your setting and then press the **MENU** button.


- [Auto] is the factory default.

Specifying HDMI Overscan

MENU > [Input settings] > **[HDMI over scan]**

- HDMI — Component — LAN
 Digital PC — Analog PC — USB

When projecting images in videos via HDMI, select this setting to trim distorted image edges.

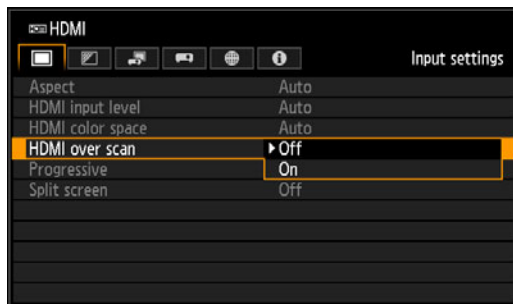

Off The entire input signal (100%) is projected.
The images projected may be smaller than the full projection screen.

On Images are projected with distortion at the peripheral section of images trimmed off. (The central 95% of the image is projected.)
Note that image edges are trimmed away, based on resolution. In such a case, select [Off].

Press the **OK** button to accept your setting and then press the **MENU** button.


- [Off] is the factory default.

Specifying Progressive Processing

MENU > [Input settings] > **[Progressive]**

- HDMI Component — LAN
 Digital PC — Analog PC — USB

Performs progressive processing optimized for still images in cinematic content or moving images in videos.

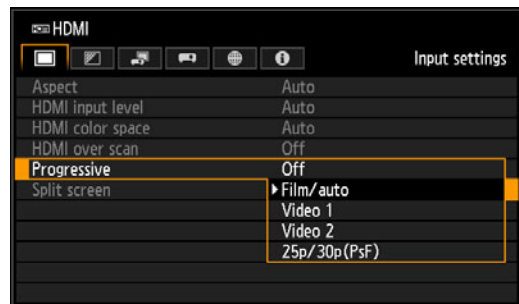

Off Does not perform progressive processing.

Film/auto Suitable for still images or typical moving images.
Performs progressive processing for video or cinematic content.

Video 1 Suitable for projecting video with high image quality and relatively slow movement.
Performs progressive processing optimized for HD video.

Video 2 Suitable for projecting video with faster movement.
Performs progressive processing optimized for fast-moving video.

**25p/
30p(PsF)** Performs progressive processing optimized for 1080PsF/25 or 1080PsF/30 video (25 or 30 fps, respectively).

Press the **OK** button to accept your setting and then press the **MENU** button.


- [Film/auto] is the factory default.
- Select [Off] when flickers and horizontal lines are noticeable in media that has a lot of fast-moving action.
- Not available during split-screen display.

Specifying the Slideshow Interval


MENU > [Input settings] > [**Slideshow Interval**]

HDMI Component LAN
 Digital PC Analog PC USB

You can project images on a USB flash drive automatically, one after another.

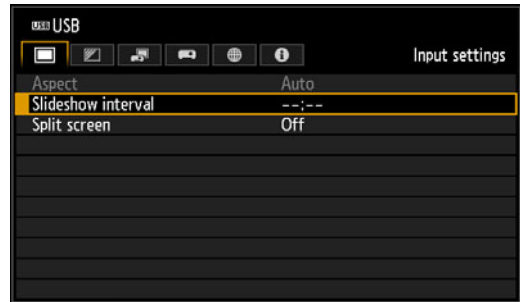

Use the [**◀**] / [**▶**] buttons to select the interval for switching images (min.:sec.).

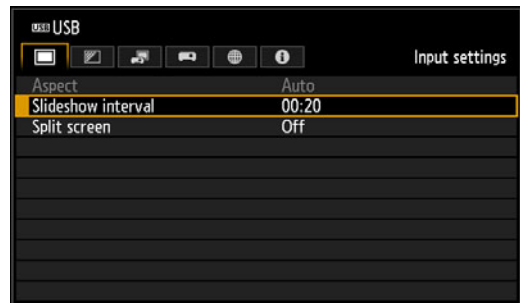

Press the **MENU** button.


- The factory default is [--:--], which does not switch images automatically.
- Can be set in a range of 1 second to 60 minutes.
- Switching the input signal to an option other than [USB] will stop any slideshow in progress. To resume the slideshow from the last image shown, return the input signal to [USB].
- During slideshows, digital zoom only applies to the current image.

Specifying Split-Screen Display

MENU > [Input settings] > **[Split screen]**


- HDMI Component LAN
- Digital PC Analog PC USB

You can project two input images side by side. (P67)

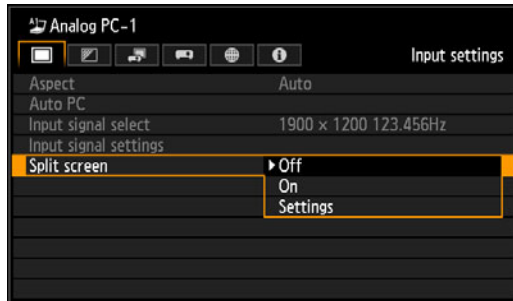

Off	Exit split-screen mode.
On	Activate split-screen mode.

 Settings



Split screen	Off	Exit split-screen mode.
	On	Activate split-screen mode.
Control rights	Left screen	Give control rights to the left side. "1" is displayed on the left.
	Right screen	Give control rights to the right side. "2" is displayed on the right.
Swap right-left		Switch the sides that images are projected on.
Layout	Mode 3-7	Use 30% of the screen width for the left side and 70% for the right.
	Mode 5-5	Divide the screen width evenly for the left and right side.
	Mode 7-3	Use 70% of the screen width for the left side and 30% for the right.

Press the **OK** button to accept your setting and then press the **MENU** button. The image with control rights is labeled "1" or "2."

- [Off] is the factory default.
- If ▷ or ◁ is displayed in the center of the image area, switch control to the other side by pressing the [◀] / [▶] buttons on the remote control.
- When you switch to split-screen display, the left and right signals and input status are shown in the input window.

! Network and USB input cannot be combined for split-screen display.


Adjusting Image Quality (Image Adjustment)

Specifying Image Priority in Split-Screen Mode

MENU > [Image adjustment] > **[Image priority]**

- HDMI Component LAN
 Digital PC Analog PC USB

Some image processing in split-screen mode is applied to both sides. Here, select which side to use as the primary side, which will be the basis for secondary-side processing.

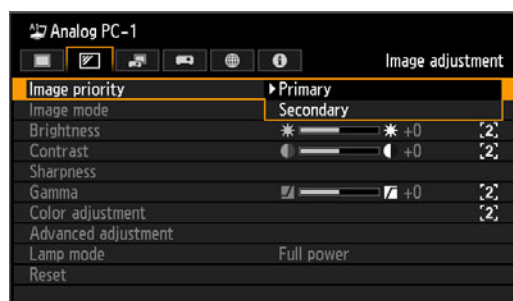

Primary Use the side with control rights as the [Primary] side. For image adjustment settings that are not configured separately, [Primary] side settings apply to both sides.

Secondary Cannot be selected directly. You can only switch from [Secondary] to [Primary]. To reverse the side used for image adjustment, switch control rights to the other side and select [Primary].

Press the **OK** button to accept your setting and then press the **MENU** button.

Can be independently configured

Brightness (P86), Contrast (P86), Gamma (P87), Color adjustment (P88), Fine-Tune Gamma (P93)

[Primary] setting also applies to [Secondary]


Image Mode (P84), Advanced adjustment (except Fine-Tune Gamma) (P89-P94), Lamp mode (P95)

Specifying the Image Mode

MENU > [Image adjustment] > **[Image mode]**

- HDMI Component LAN
 Digital PC Analog PC USB

You can select an image mode (P57) suitable for the projected image. You can also select it with the IMAGE button on the remote control. (P58)

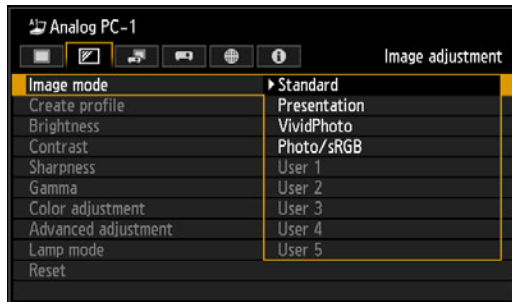

Standard

Ambient Light in Room: Bright
 Types of Images: Computer screens, or media played with video software
 Good For: Whites and natural colors

Presentation

Ambient Light in Room: Bright
 Types of Images: Images mainly consisting of text
 Good For: Keeps the screen bright

Dynamic

Ambient Light in Room: Bright
 Types of Images: Media played with video software
 Good For: Keeps the screen bright

VividPhoto

Ambient Light in Room: Somewhat dark
 Types of Images: Digital photos
 Good For: Produces vibrant colors

Photo/sRGB

Ambient Light in Room: Somewhat dark
 Types of Images: Digital photos from sRGB-compatible cameras
 Good For: Conforms to the sRGB standard

Video

Ambient Light in Room: Somewhat dark
 Types of Images: Video from camcorders
 Good For: Close to the color space of TVs

Cinema

Ambient Light in Room: Dark
 Types of Images: Movies
 Good For: Designed especially for movies


User 1 – 5

Up to 5 user-selected combinations of image quality settings can be stored in the memory. (P85)
 Stored settings can be selected as an image mode.

Press the **OK** button to accept your setting and then press the **MENU** button.


- [Standard] is the factory default.
- You can adjust the image quality by adjusting the following items in each image mode: [Brightness], [Contrast], [Sharpness], [Gamma], [Color adjustment], [Advanced adjustment] and [Lamp mode]
- The adjustment you have made is stored as each combination of input signals and an image mode.

Creating/Saving a User Profile

 > [Image adjustment] > **[Create profile]**

HDMI Component LAN
 Digital PC Analog PC USB

Up to 5 combinations of image quality settings can be stored. The stored image quality can be selected as an image mode.

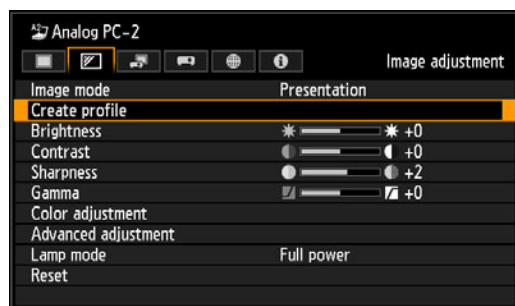


Use the [▲] / [▼] buttons to select a desired user setting 1–5. (Saved memories are indicated by checkmarks.)


When the desired save destination is selected, press the **OK** button to accept your setting and then press [Return].

- The saved settings consist of the brightness, contrast, sharpness, gamma, color adjustment, advanced adjustment, and lamp mode.
- The number of displayed user memories is 5, however it is possible to save different settings for when the connected equipment is a computer (ANALOG PC, DIGITAL PC or HDMI (when [HDMI In] (P108) is [Computer])) and when AV equipment is connected (COMPONENT, HDMI (when [HDMI In] (P108) is [Auto])). As a result, it is possible to save up to 10 settings.

- The image mode name which was the basis for the settings change is also saved in the user memory. When a user memory is selected as the image mode, the image mode that was the base for that user memory is displayed in the menu as [Baseline image mode].

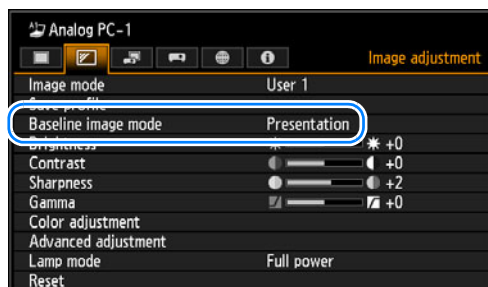



Adjusting Brightness


 > [Image adjustment] > **[Brightness]**

- HDMI
- Component
- LAN
- Digital PC
- Analog PC
- USB

You can adjust the brightness of images.

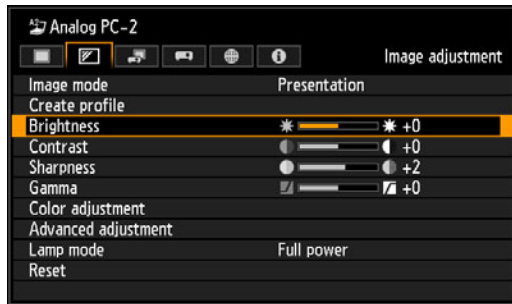


 Increases the brightness of an image.

 Decreases the brightness of an image.

When you have completed the adjustment, press the **MENU** button.

- The adjustments you have made are stored as adjusted values for the input signals and image mode of the current projection.


Adjusting Contrast


 > [Image adjustment] > **[Contrast]**


- HDMI
- Component
- LAN
- Digital PC
- Analog PC
- USB

You can adjust the contrast of images.

Adjust the difference between the light and dark parts of the image to produce an image with emphasized contrast or an image that is soft.

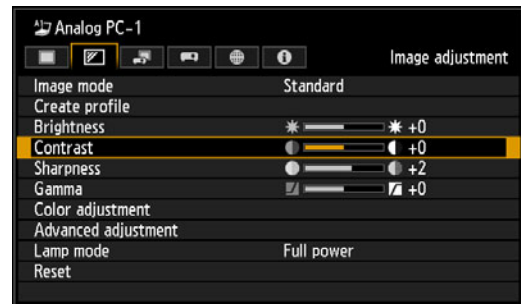

 Increases the contrast of an image. This emphasizes the darker and brighter parts of the image on the projected image.

 Decreases the contrast of an image. The image becomes less vivid.

When you have completed the adjustment, press the **MENU** button.


- The adjustments you have made are stored as adjusted values for the input signals and image mode of the current projection.

Adjusting Sharpness

MENU > [Image adjustment] > **[Sharpness]**

- HDMI Component LAN
 Digital PC Analog PC USB

You can adjust the sharpness of images.

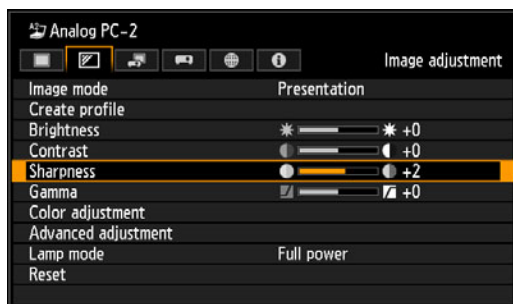

[▶] Increases the sharpness of an image.

[◀] Decreases the sharpness of an image.

When you have completed the adjustment, press the **MENU** button.

- The adjustments you have made are stored as adjusted values for the input signals and image mode of the current projection.


Correcting Gamma

MENU > [Image adjustment] > **[Gamma]**

- HDMI Component LAN
 Digital PC Analog PC USB

You can correct portions of an image that are difficult to see because they are too dark or bright.

Gamma can be corrected using the **GAMMA** button on the remote control.

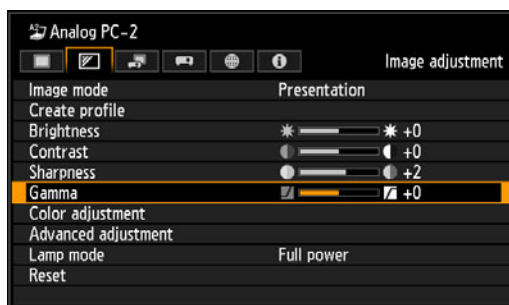

[▶] Brightens the dark portion.

[◀] Darkens the bright portion.

When you have completed the adjustment, press the **MENU** button.


- The adjustments you have made are stored as adjusted values for the input signals and image mode of the current projection.
- More detailed adjustment is possible by using the detailed gamma correction (P93).

Adjusting Colors

MENU > [Image adjustment] > [Color adjustment]

- HDMI Component LAN
 Digital PC Analog PC USB

You can adjust the color depth and hue of images for each primary color, red, green and blue. The color temperature can also be adjusted.

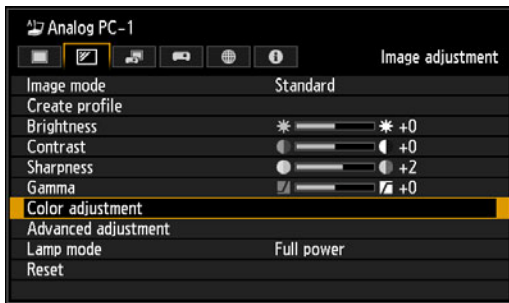

Color level Adjusts the intensity of colors.
 [▶] Increases the intensity of color.
 [◀] Decreases the intensity of color.

Color balance Adjusts the color balance of a purplish or greenish image.
 [▶] Corrects a purplish image.
 [◀] Corrects a greenish image.

Color temperature Adjusts the white color temperature.
 [▶] Changes to a bluish color (cold color).
 [◀] Changes to a reddish color (warm color).

R / G / B Gain Adjust the gain of each color.
 [▶] Increases the gain.
 [◀] Decreases the gain.

R / G / B Offset Adjusts the color offset of each color.
 [▶] Increases the offset.
 [◀] Decreases the offset.

When you have completed the adjustment, press the **MENU** button.


- The adjustments you have made are stored as adjusted values for the input signals and image mode of the current projection.

Adjusting to the Ambient Light (Ambient Light)

MENU > [Image adjustment] > [Advanced adjustment] > **[Ambient light]**

- HDMI Component LAN
- Digital PC Analog PC USB

You can compensate for ambient light on the screen. The **[Ambient light]** setting is available in Photo/sRGB image mode (P84).

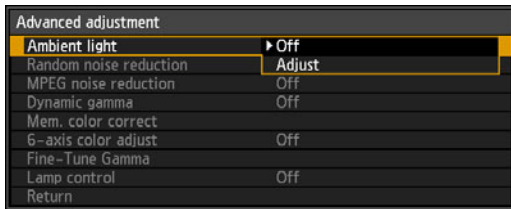


Off Projects an image with no correction.

Adjust

- Type** Tungsten
 Select this if the ambient light source is a light bulb or bulb color fluorescent.
- Fluorescent
 Select this if the ambient light source is a day white fluorescent.



 - Level** L Select this if the ambient light is normal.
- H Select this if the ambient light is high (bright).



Examples of Ambient Light Level Settings


Level	Example Location
L	Projection room, sports bar, etc.
H	Conference room, lecture room

Press the **OK** button to accept your setting and then press the **MENU** button.

- [Off] is the factory default.


Reducing Image Noise

(Random noise reduction)

 > [Image adjustment] > [Advanced adjustment] > **[Random noise reduction]**

- HDMI Component — LAN
 Digital PC Analog PC — USB

You can reduce random image noise.

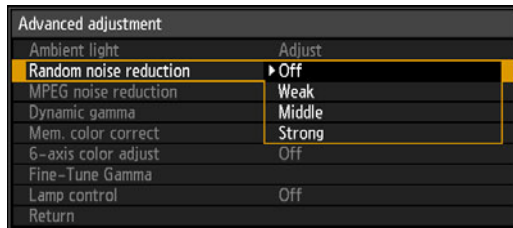


Off	Disables random noise reduction.
Weak	Specifies the intensity of the random noise reduction in three steps.
Middle	
Strong	

Press the **OK** button to accept your setting and then press the **MENU** button.

- [Off] is the factory default.
- Image resolution may seem lower when noise reduction is applied.
- Select [Weak] for fast-moving images. Select [Strong] for slow-moving images.
- The adjustment you have made is stored as adjusted values for the input signals and image mode of the current projection.
- This setting is not displayed for LAN or USB input.


Reducing Image Noise

(MPEG noise reduction)

 > [Image adjustment] > [Advanced adjustment] > **[MPEG noise reduction]**

- HDMI Component — LAN
 Digital PC Analog PC — USB

You can reduce MPEG image noise.

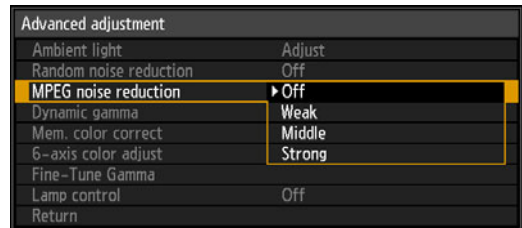


Off	Disables MPEG noise reduction.
Weak	Specifies the intensity of the MPEG noise reduction in three steps.
Middle	
Strong	

Press the **OK** button to accept your setting and then press the **MENU** button.

- [Off] is the factory default.
- Image resolution may seem lower when noise reduction is applied.
- The adjustment you have made is stored as adjusted values for the input signals and image mode of the current projection.
- This setting is not displayed for LAN or USB input.


Reducing Image Noise

(Mosquito noise reduction)

 > [Image adjustment] > [Advanced adjustment] > **[Mosquito noise reduction]**

- HDMI Component LAN
 Digital PC Analog PC USB

You can reduce mosquito noise.

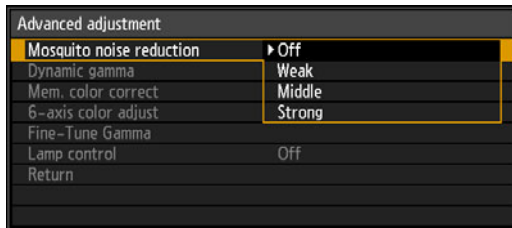


Off	Disables mosquito noise reduction.
Weak	Specifies the intensity of the
Middle	mosquito noise reduction in three
Strong	steps.

Press the **OK** button to accept your setting and then press the **MENU** button.


- [Off] is the factory default.
- Image resolution may seem lower when noise reduction is applied.
- The adjustment you have made is stored as adjusted values for the input signals and image mode of the current projection.
- This setting is not displayed for the following input: HDMI, Digital PC, Analog PC-1, Analog PC-2, or Component.

Dynamic Gamma Adjustment

 > [Image adjustment] > [Advanced adjustment] > **[Dynamic gamma]**

- HDMI Component LAN
 Digital PC Analog PC USB

You can adjust the gradation representation of light and dark portions of an image automatically.

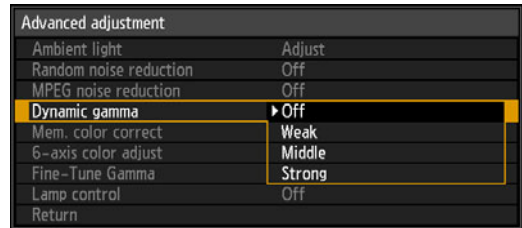

Off	Dynamic gamma is disabled.
Weak	Specifies the intensity of the
Middle	dynamic gamma in three steps.
Strong	

Press the **OK** button to accept your setting and then press the **MENU** button.



- The factory default settings are as follows.
 - For HDMI (when [HDMI In] (P108) is [Computer]), Digital PC or Analog PC, USB, or LAN, the factory default is [Off].
 - For HDMI (when [HDMI In] (P108) is set to [Auto]) and Component, the default setting is [Weak].
- The adjustments you have made are stored as adjusted values for the input signals and image mode of the current projection.

Correcting Memory Color

MENU > [Image adjustment] > [Advanced adjustment] > **[Mem. color correct]**

- HDMI Component LAN
- Digital PC Analog PC USB

Enhances skin tones, blue skies, and greens, so that these colors are more consistent with people's remembered impressions.

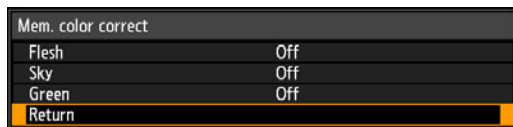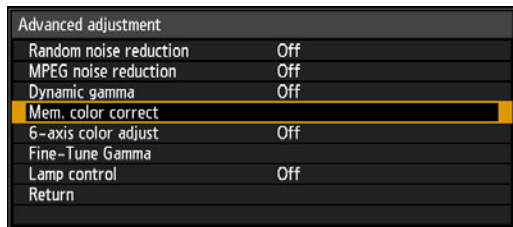

Flesh Specifies the intensity of enhancement: [Off], [Weak], [Middle], or [Strong]. Set to [Off] to disable enhancement.

Sky

Green

Press the **OK** button to accept your setting and then press the **MENU** button.


- The factory default settings are as follows.
 - For HDMI (when [HDMI In] (P108) is [Computer]), Digital PC or Analog PC, USB, or LAN, the factory default is [Off] in image modes other than [VividPhoto]. In [VividPhoto] mode, the factory default is [Middle].
 - For HDMI (when [HDMI In] (P108) is set to [Auto]) and Component, the default setting is [Weak], regardless of the image mode.
- The adjustments you have made are stored as adjusted values for the input signals and image mode of the current projection.

Fine-Tuning Colors (6-axis Color Adjustment)

MENU > [Image adjustment] > [Advanced adjustment] > **[6-axis color adjust]**


- HDMI Component LAN
- Digital PC Analog PC USB

You can make fine adjustments to the image colors with RGB (red, green, blue) and CMY (cyan, magenta, yellow).

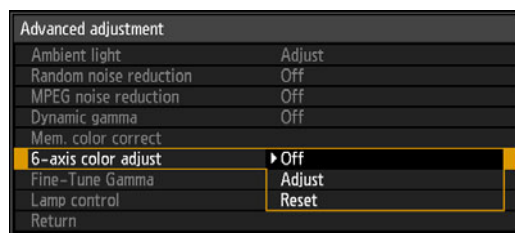

Off Disables 6-axis color adjustment. If you select [Adjust], the previous setting of 6-axis color adjustment becomes active again.

Adjust Enables 6-axis color adjustment.

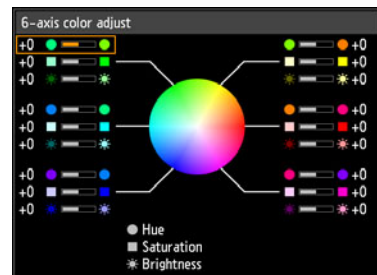

Use the **[▲]** / **[▼]** buttons to select **[○Hue]**, **[□Saturation]**, or **[* Brightness]**, then adjust them with the **[◀]** / **[▶]** buttons. When color adjustments are completed, press the **OK** button.

Reset Returns all adjustment values to zero.

When you have completed the adjustment, press the **OK** button to accept your setting and then press the **MENU** button.


- [Off] is the factory default.
- The adjustments you have made are stored as adjusted values for the input signals and image mode of the current projection.
- Adjustments are not applied to the displayed menu screen itself.

Fine-Tuning Gamma


 > [Image adjustment] > [Advanced adjustment] > **[Fine-Tune Gamma]**

- | | | |
|----------------------------------|---------------------------------|---------------------------|
| <input type="radio"/> HDMI | <input type="radio"/> Component | <input type="radio"/> LAN |
| <input type="radio"/> Digital PC | <input type="radio"/> Analog PC | <input type="radio"/> USB |

The four gamma curves (white, red, green, blue) can be adjusted. Red, green, and blue can be adjusted separately. Adjustments to white are also applied to the three other colors. Note that adjusting any color will overwrite previous adjustments.

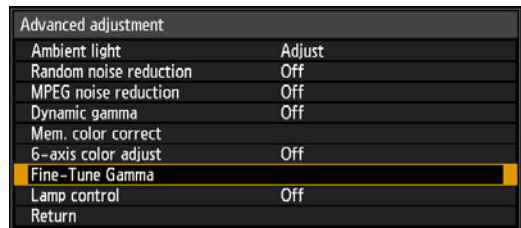


Select [Fine-Tune Gamma] then press the **OK** button. The following [Fine-Tune Gamma] screen for confirmation appears.

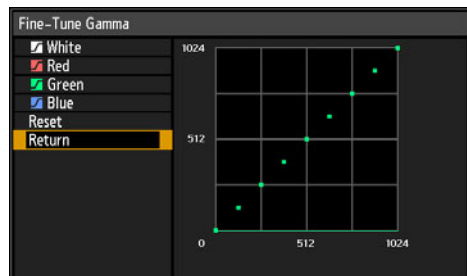

Use the [**▲**] / [**▼**] buttons to select the color, then press the **OK** button. Next, use the [**◀**] / [**▶**] buttons to select a point on the gamma curve, and use the [**▲**] / [**▼**] buttons to adjust the position of the point. When you have completed the adjustment, press the **OK** button to accept your setting and then press the **MENU** button.


- The adjustments you have made are stored as adjusted values for the input signals and image mode of the current projection.
- For details of gamma correction, refer to [page 87](#).
- Adjustment is not applied to the projected menu itself. Perform adjustment using input signals or a built-in test pattern.

Specifying Lamp Control

 > [Image adjustment] > [Advanced adjustment] > **[Lamp control]**

- HDMI Component LAN
 Digital PC Analog PC USB

Dims the lamp automatically when the input signal is completely black.

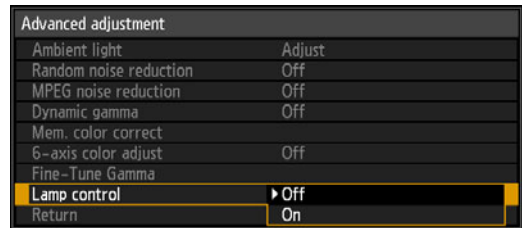

Off	No lamp control.
On	Lamp control. Dims the lamp in response to fully black input signals. Normal brightness is restored once the input signal changes from fully black.

Press the **OK** button to accept your setting and then press the **MENU** button.


- [Off] is the factory default.
- The projector automatically enters standby mode if the lamp is dimmed (that is, if the input signal is fully black) for more than one hour. A countdown window is displayed 10 minutes before entering standby.
- The lamp is not dimmed when projection is blanked, when no signals are supplied, or when black is projected during gamma restore.
- Lamp control is not available for the following settings:
 - In split-screen mode
 - During test pattern projection
 - When [Lamp mode] is set to [Power saver]
 - When [Vertical projection] is set to [Upward] or [Downward]
 - When [Fan mode] is set to [High altitude]
- No lamp control is performed in the first 20 minutes after the projector is turned on.

Specifying the Lamp Mode

MENU > [Image adjustment] > **[Lamp mode]**

- HDMI Component LAN
 Digital PC Analog PC USB

Reducing the lamp brightness reduces power consumption and cooling fan noise.

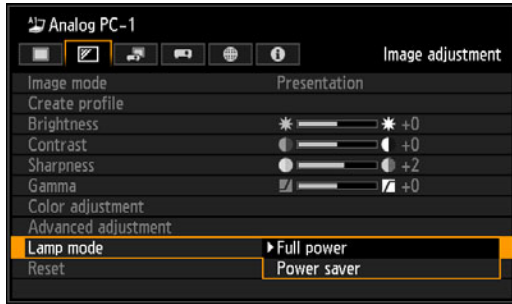

Full power	Projects images at full brightness.
Power saver	Reduces lamp brightness to save energy.

Press the **OK** button to accept your setting and then press the **MENU** button.

- The factory default is [Full power].
- The adjustment you have made is stored as adjusted values for the input signals and image mode of the current projection.

❗ Note Regarding [Full power]



- The lamp mode will automatically switch from [Full power] to [Power saver] when the room temperature exceeds approximately 35°C (95°F). Similarly, the lamp mode will automatically switch from [Power saver] to [Full power] when the room temperature falls below approximately 32°C (90°F). However, even if the lamp mode switches to [Power saver] in this case, it will still be displayed as [Full power] in the menu.
- There may be some inconsistency in the measurement of room temperature.

Resetting Image Adjustment Settings

MENU > [Image adjustment] > **[Reset]**

- HDMI Component LAN
 Digital PC Analog PC USB

You can reset the current image adjustment settings to the default settings. If reset is performed when user setting 1–5 is selected for [Image mode], the settings are returned to the settings that were saved in [User 1–5].

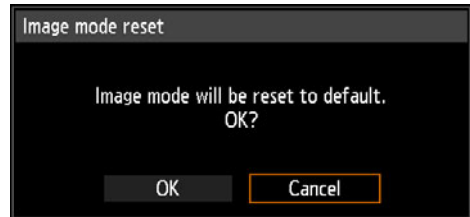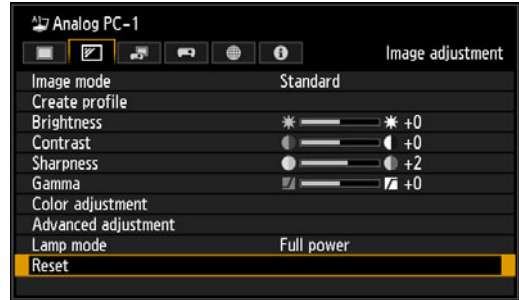

OK Resets the image adjustment settings.

Cancel Cancels resetting of the image adjustment settings.



- Only the setting for the combination of input signal and image mode for the current projection is reset.

Registering User Logos

 > [System settings] > [User screen settings] > **[Logo capture]**

- HDMI Component LAN
 Digital PC Analog PC USB

Registers the current image as a user logo. Registered user logos can be shown when no signal is received, when the **BLANK** button is pressed, or as the startup image.

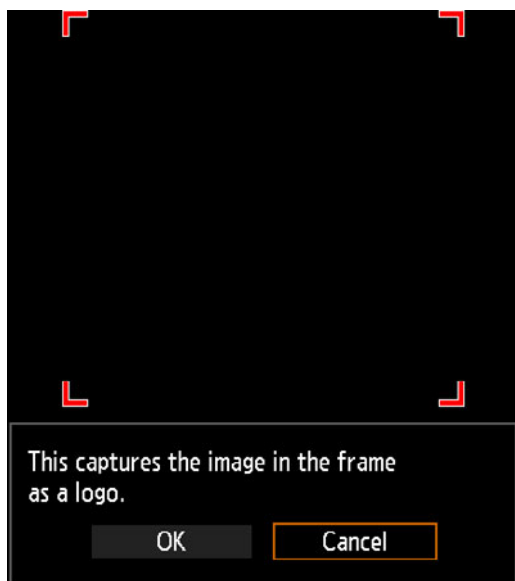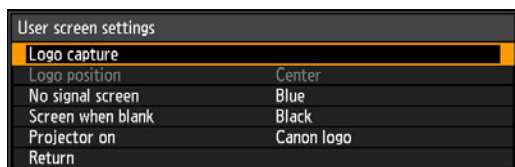

OK Display the image for logo registration. Align the image with the red boundary lines indicating the portion that will be stored, and then press the **OK** button. The portion of the image within the boundary lines is now registered.

Cancel Cancels logo registration.

Press the **OK** button to accept your setting and then press the **MENU** button.


- Only images with an aspect of 16:10 can be registered as user logos.

Positioning User Logos

 > [System settings] > [User screen settings] > **[Logo position]**

- HDMI Component LAN
 Digital PC Analog PC USB

Specify the position of registered user logos as follows.

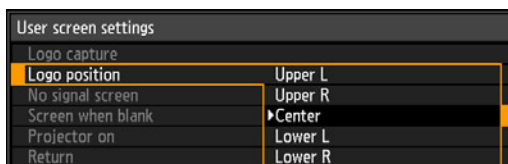

Upper L

Upper R


Center Indicates the display position for user logos.

Lower L

Lower R


- The factory default is [Center].
- You can specify the position after a logo has been registered.

No Signal Screen

 > [System settings] > [User screen settings] > **[No signal screen]**

- HDMI Component LAN
 Digital PC Analog PC USB

As the image projected when there is no input signal, you can choose a black, blue, or registered user screen.

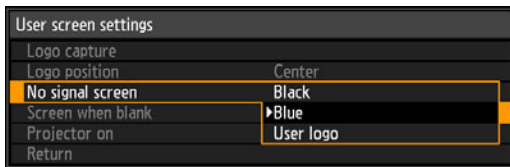

Black	The screen is all black.
Blue	The screen is all blue.
User logo	The user logo is projected.

Press the **OK** button to accept your setting and then press the **MENU** button.


- [Blue] is the factory default.

Screen When Blank

 > [System settings] > [User screen settings] > **[Screen when blank]**

- HDMI Component LAN
 Digital PC Analog PC USB

You can project a black, blue, or registered user screen to blank out projection temporarily by pressing the **BLANK** button on the remote control.

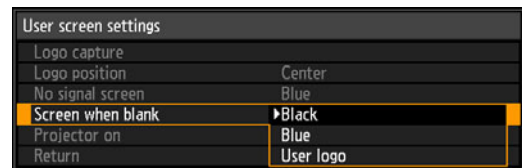

Black	The screen is all black.
Blue	The screen is all blue.
User logo	The user logo is projected.

Press the **OK** button to accept your setting and then press the **MENU** button.


- [Black] is the factory default.

Selecting a Logo at Startup

 > [System settings] > [User screen settings] > **[Projector on]**

- HDMI Component LAN
 Digital PC Analog PC USB

You can display a specified logo on the screen from the moment the projector is turned on to the moment it is ready for projection.

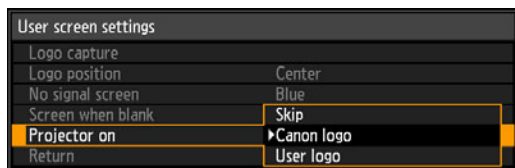


Skip	Projects an input signal immediately after turning on the projector.
Canon logo	Displays the Canon logo that was registered in advance at the factory.
User logo	The user logo is projected.

Press the **OK** button to accept your setting and then press the **MENU** button.


- [Canon logo] is the factory default.

Specifying Power Management Mode

 > [System settings] > **[Power management mode]**

- HDMI Component LAN
 Digital PC Analog PC USB

You can specify to turn off the lamp or projector automatically after a certain period if the projector and remote control are not used and there is no input signal.

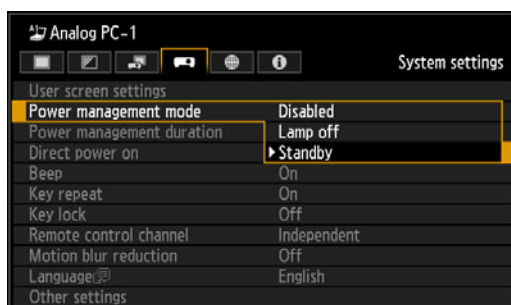


Disabled	Disable power management mode.
Lamp off	Only turns the lamp off.
Standby	Turns the projector off and puts it in standby.



Press the **OK** button to accept your setting and then press the **MENU** button.


- [Standby] is the factory default.
- After the lamp is turned off, projection resumes when the same input signal is restored, or when the remote control or projector is operated.
- After the projector enters standby, restoring projection requires the same steps as when turning the projector on normally.
- When [Disabled] is selected, [Direct power on] (P99) is not available.

Specifying Power Management Duration

 > [System settings] > [Power management duration]

- HDMI Component LAN
 Digital PC Analog PC USB

Specify how long before the lamp is turned off or the projector enters standby, depending on the [Power management mode] setting.

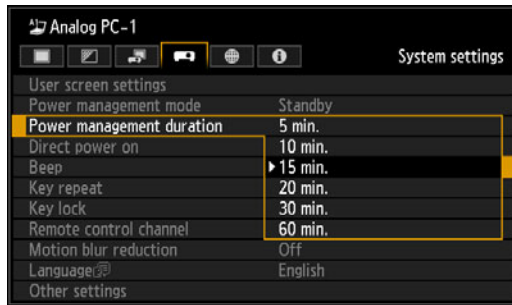


- | | |
|-------------------------|---|
| 5 min. - 60 min. | <p>After 30 seconds without an input signal when the projector is idle, the projector starts displaying a countdown of the selected time.</p> <p>Once this time elapses without an input signal and while the projector remains idle, the lamp is turned off or the projector enters standby. (P98)</p> |
|-------------------------|---|

Press the **OK** button to accept your setting and then press the **MENU** button.


- [15 min.] is the factory default.
- If conditions that would start countdown are met while you are blanking projection, blanking is canceled.
- Once countdown begins, audio output stops.

Specifying Direct Power-On

 > [System settings] > [Direct power on]

- HDMI Component LAN
 Digital PC Analog PC USB


You can turn on the projector by connecting the power cable without pressing the **POWER** button.

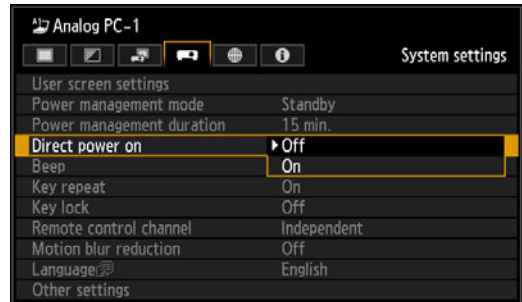

- | | |
|------------|---|
| Off | You need to press the POWER button to turn on the projector. |
| On | You can turn on the projector by connecting the power cable only. |

Press the **OK** button to accept your setting and then press the **MENU** button.

- [Off] is the factory default.

 • Before enabling direct power on, be sure to set [Power management mode] to an option other than [Disabled]. When [Disabled] is selected, [Direct power on] is not available.


• After turning off the projector, wait at least 5 minutes before turning it on again. It may shorten the lamp life if you turn on the projector immediately after turning it off.

Specifying Silence or Operating Tones

MENU > [System settings] > **[Beep]**

- HDMI Component LAN
 Digital PC Analog PC USB

You can select whether a beep sounds or not when you operate the projector.

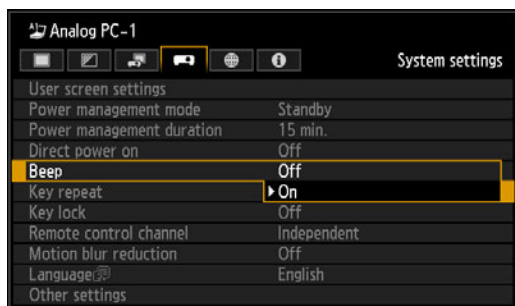

Off Disables the beep.

On Enables the beep.

Press the **OK** button to accept your setting and then press the **MENU** button.

- The factory default is [On].
- The beep will not sound if you mute the projector sound with the **MUTE** button on the remote control.

Specifying Key Repeat Operation

MENU > [System settings] > **[Key repeat]**

- HDMI Component LAN
 Digital PC Analog PC USB

By pressing and holding the button on the projector or the remote control you can operate Key repeat in the same way as when the button is pressed repeatedly.



Off Key repeat is not enabled.

On Key repeat is enabled.

Press the **OK** button to accept your setting and then press the **MENU** button.


- The factory default is [On].

Locking Projector or Remote Buttons

 > [System settings] > [Key lock]

- HDMI Component LAN
 Digital PC Analog PC USB

You can lock the projector to prevent its operation from either the main unit or remote control.

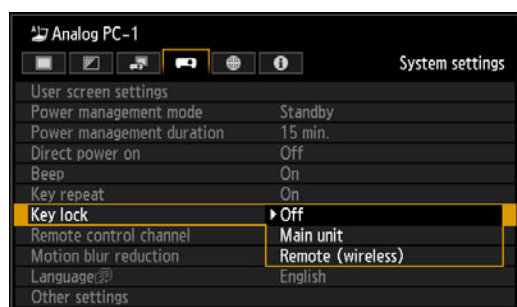

Off	Disables the key lock.
Main unit	Operation is not possible using the main unit. Use the remote control.
Remote (wireless)	Disables infrared remote control operations (P30). Use buttons on the main unit. Alternatively, use the optional remote control (RS-RC05), connected to the projector via a cable.

Press the **OK** button to accept your setting and then press the **MENU** button.

- [Off] is the factory default.



When you use the key lock function, you cannot select [Main unit] using the main unit and also cannot select [Remote (wireless)] using the remote control.

To Unlock Key Lock Function

Turn off the projector and unplug the power plug. Hold down the **OK** button on the main unit and plug in the power cord, as you continue to hold down the **OK** button. In a moment, a beep will sound, and the controls will be unlocked.

Assigning a Channel for Remote Control

MENU > [System settings] > [**Remote control channel**]

- HDMI Component LAN
 Digital PC Analog PC USB

When using multiple projectors at the same time (maximum 4), you can assign a different channel to each remote control so that each operates independently.

Selecting the Projector Channel



- Ch1** Select the remote control channel to use with this projector.
Ch2
Ch3
Ch4

Independent Remote controls set to any channel can be used.

Press the **OK** button to accept your setting and then press the **MENU** button.

- The factory default is [Independent] for both projector and remote control.
- After changing the channel on the menu, be sure to change the channel of the remote control too.
- If an optional wired remote control (RS-RC05) is used, there is no need to set the remote control channel.

Selecting a Channel on the Remote control

You can change the channel on the remote control as follows.


- | | |
|--------------------|---|
| Ch1 | Press and hold the OK button and [▲] button at the same time for 3 seconds. |
| Ch2 | Press and hold the OK button and [▶] button at the same time for 3 seconds. |
| Ch3 | Press and hold the OK button and [▼] button at the same time for 3 seconds. |
| Ch4 | Press and hold the OK button and [◀] button at the same time for 3 seconds. |
| Independent | Press and hold the OK button and MENU button at the same time for 3 seconds. |

Reducing Motion Blur

MENU > [System settings] > [**Motion blur reduction**]

- HDMI Component - LAN
 Digital PC Analog PC - USB

Motion blur is blurring that occurs during video playback. Motion blur reduction can make this blurring less noticeable.

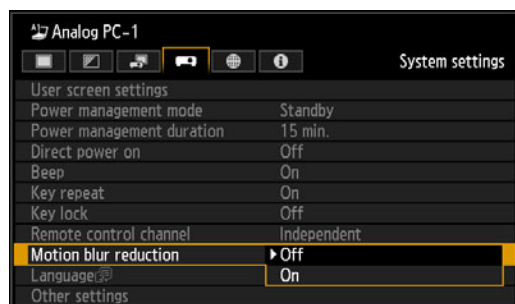

- | | |
|------------|---|
| Off | Motion blur reduction is not performed. |
| On | Motion blur reduction is performed. |

Press the **OK** button to accept your setting and then press the **MENU** button.


- [Off] is the factory default.
- If motion blur reduction generates distracting image noise, select [Off].
- Effects of motion blur reduction cannot be checked during menu display.
- Especially effective for motion of computer graphics and similar high-resolution images.

Selecting a Display Language

MENU > [System settings] > [**Language**]

- HDMI Component LAN
 Digital PC Analog PC USB

You can select the language in which the menus are displayed.

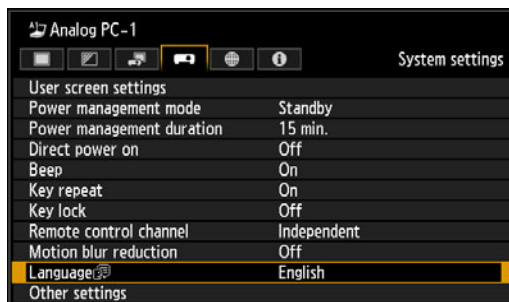


Use the [**▲**] / [**▼**] / [**▶**] / [**◀**] buttons to select the menu language, then press the **OK** button.

English	English
German	Deutsch
French	Français
Italian	Italiano
Spanish	Español
Portuguese	Português
Swedish	Svenska
Russian	Русский
Dutch	Nederlands
Finnish	Suomi
Norwegian	Norsk
Turkish	Türkçe
Polish	Polski
Hungarian	Magyar
Czech	Čeština
Danish	Dansk
Arabic	إنجليزي
Chinese (Simplified)	中文简体
Chinese (Traditional)	中文繁體
Korean	한국어
Japanese	日本語


Press the **MENU** button.

Requiring a Password for Operation

 > [System settings] > [Other settings] > [Password settings]

- HDMI Component LAN
 Digital PC Analog PC USB

Disables the projector unless the correct password is entered.

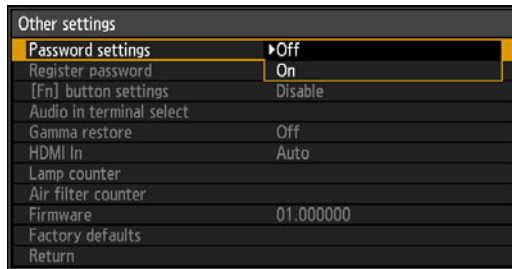

Off The projector can be used even if no password is entered.

On The projector cannot be used unless you enter your password.

Press the **OK** button to accept your setting and then press the **MENU** button.

- [Off] is the factory default.
- You cannot set [On] unless you have completed [Register password].

Once you set a password, the password entry screen appears at power-on.

Enter a 4 digit password.

Enter the password using the [▲] / [▶] / [▼] / [◀] buttons.


If the password is valid, the projection starts. If you enter a wrong password three times, the power will be turned off.

- The power is also turned off if no password is input for 3 minutes.

To Cancel the Password


- **Cancellation on the Projector**
Turn off the projector and unplug the power plug.
Hold down the **MENU** button on the side control and connect the power plug. Make sure to keep holding down the **MENU** button until a beep sounds. When the beep sounds, the password is canceled. (The entered password is also reset.)
- **Cancellation on the Remote Control**
To forcibly cancel the password from the remote control, in standby state press the **MENU** button 3 times, then press the **POWER** button.

Setting a Password


 > [System settings] > [Other settings] > [Register password]

- HDMI Component LAN
 Digital PC Analog PC USB

You can register a password for starting projection.

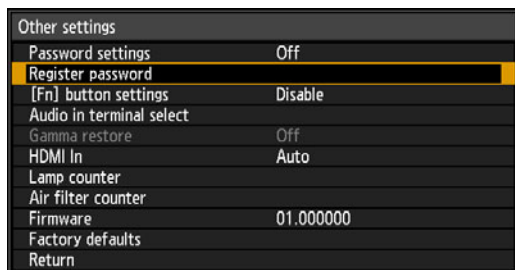


Press the **OK** button after selecting [Register password], and the following screen for registering a password appears.

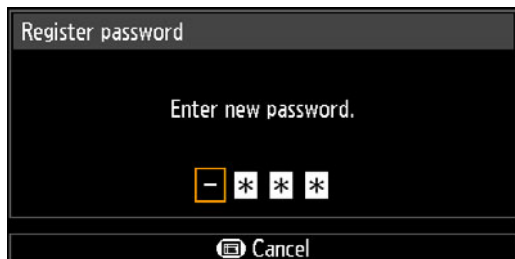

Enter a 4 digit password.
 Enter the password using the [▲] (1) / [▶] (2) / [▼] (3) / [◀] (4) buttons.
 The 4-digit password is entered from the left to right digits. When the final digit is entered, the password is automatically registered.


Press the **MENU** button to abort the registration.


Using the Remote Control [Fn] Button

 > [System settings] > [Other settings] > [[Fn] button settings]

- HDMI Component LAN
 Digital PC Analog PC USB

You can select a function to be assigned to the [Fn] button on a remote control.

 The included remote control (RS-RC04) does not include a [Fn] button. To use this feature, purchase the optional RS-RC05 remote control.

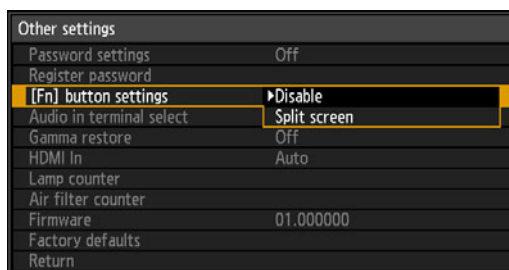


Disable Disables assigning a function to the [Fn] button on the remote control.

Split screen Enables split-screen mode toggling using the [Fn] button on the remote control.

Press the **OK** button to accept your setting and then press the **MENU** button.



- [Disable] is the factory default.

Selecting Audio Input

 > [System settings] > [Other settings] > **[Audio in terminal select]**

- HDMI Component LAN
 Digital PC Analog PC USB

You can select the audio input terminal to use for each type of input signal.

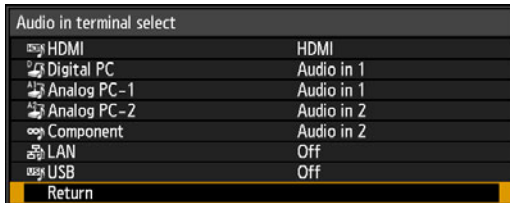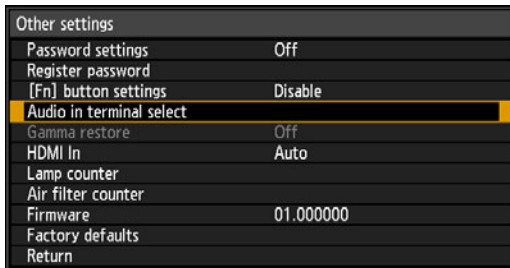


Off	No audio is output.
Audio in 1	Use audio signals from AUDIO IN 1 for audio output.
Audio in 2	Use audio signals from AUDIO IN 2 for audio output.
HDMI	Use HDMI audio signals for audio output. (Only for HDMI.)
LAN	Use LAN audio signals for audio output. (Only for LAN.) Audio is transferred by the NMPJ application.

Press the **OK** button to accept your setting and then press the **MENU** button.


- The factory defaults are as follows.
[HDMI]: HDMI
[Audio in 1]: Digital PC, Analog PC-1, USB
[Audio in 2]: Analog PC-2, Component
[LAN]: LAN

Restoring Original Gamma Settings

 > [System settings] > [Other settings] > [Gamma restore]


- HDMI Component LAN
 Digital PC Analog PC USB

This function is used when changing and turning of the tone characteristics and achromatic color is noticed over a long period of time. Gamma restore can only be used when the lamp has been on for approximately 30 minutes or longer.

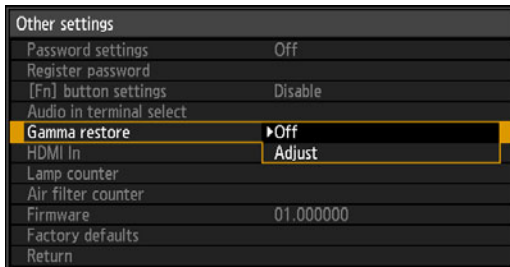

Off Returns to the factory default without performing Gamma restore.

Adjust Performs Gamma restore and applies the result.

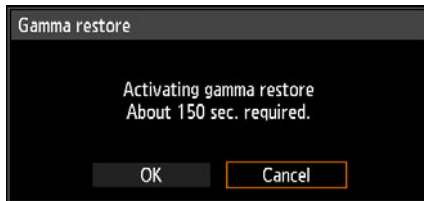

OK Gamma restore is performed.

Cancel Gamma restore is not performed.

- If Gamma restore is performed, the adjustment screen will be projected for approximately 150 seconds.
- To stop Gamma restore, press the **POWER** button.




If Gamma restore is performed, the tone characteristics and achromatic color will be restored as close as possible to the condition when the projector was purchased, however it is not possible to restore it completely to the original condition. So the changing and turning color cannot be eliminated completely.

Specifying HDMI Input

 > [System settings] > [HDMI In]

- HDMI Component LAN
 Digital PC Analog PC USB

Set the type of equipment which is connected to the HDMI port. Note that to some extent, the [HDMI In] setting determines which image modes are available. (P57)

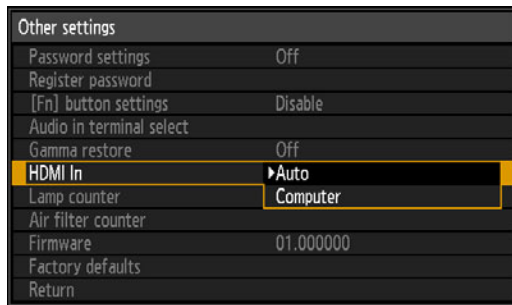


- | | |
|-----------------|---|
| Auto | Select when AV equipment will be connected. Image processing, menu displays, and other elements are adjusted for video equipment. |
| Computer | Select when a computer will be connected. Image processing, menu displays, and other elements are adjusted for a computer. |

Press the **OK** button to accept your setting and then press the **MENU** button.


- [Auto] is the factory default.


Resetting the Lamp Counter


 > [System settings] > [Other settings] > [Lamp counter]

- HDMI Component LAN
 Digital PC Analog PC USB


You can reset the lamp counter that indicates the time for lamp replacement.

 **Do not reset the lamp counter except when you have replaced the lamp. Otherwise, the lamp counter cannot indicate the correct timing for replacing the lamp.**


 For details of lamp replacement, refer to [page 197](#).

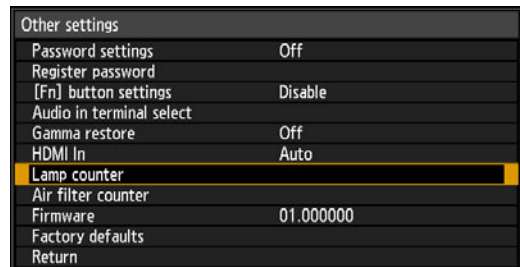

Select [Lamp counter] and press the **OK** button to display the lamp counter.

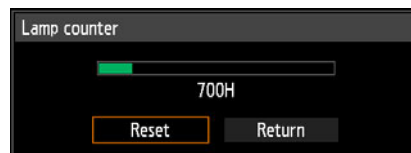

Select [Reset] and press the **OK** button.

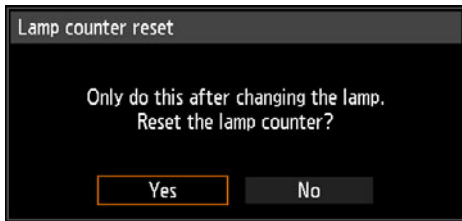

Select [Yes] on the screen for confirmation and press the **OK** button to reset the lamp counter. Press the **MENU** button.

■ About the Display of the Lamp Counter

The lamp counter display is as follows.


Less than 2,700 hours

Displayed as a **green** bar.



2,700 hours to less than 3,000 hours

Displayed as a **green and yellow** bar.

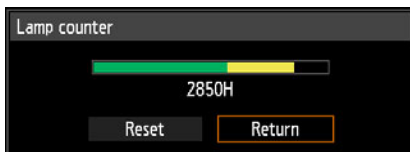


When the lamp hours are 2,700 hours to less than 3,000 hours, the message "Obtain a new lamp." appears when power is turned on.




Over 3,000 hours

Displayed as a **green, yellow and red** bar.

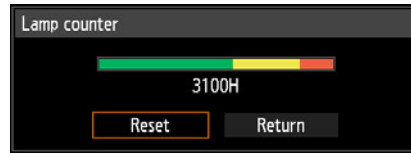

 
The message "Replace with the new lamp." appears when power is turned on.




- The lamp counter provides an estimate of the time remaining until the lamp must be replaced. This value is based on the hours in use and the present load on the lamp.
- The number of hours indicated is equivalent to use under these conditions: [Vertical projection] (P147) set to [Off], and [Lamp mode] (P95) set to [Full power].


Resetting the Air Filter Counter

 > [System settings] > [Other settings] > **[Air filter counter]**

- HDMI Component LAN
 Digital PC Analog PC USB

This resets the counter which reminds you of the time for cleaning and replacing the air filter.


 For details about how to replace or clean the filter, refer to [page 196](#).

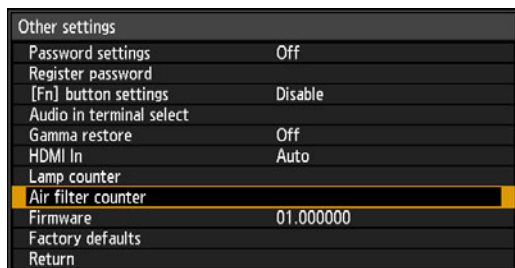

To view the air filter counter, press the **OK** button when [Air filter counter] is selected.




Select [Reset] and press the **OK** button.

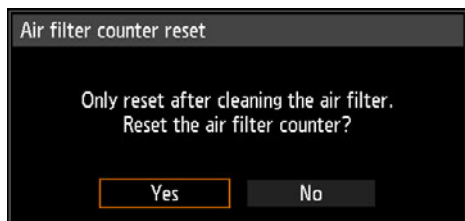


To reset the air filter counter, select [Yes] on the confirmation screen and press the **OK** button. Press the **MENU** button.


Updating the Firmware

 > [System settings] > [Other settings] > **[Firmware]**


- HDMI Component LAN
 Digital PC Analog PC USB


Update the projector firmware as follows. Save firmware updates from the Canon website to the root directory on a USB flash drive.

 In some cases, it may not be possible to download updates. For details, contact the Canon Customer Support Center.

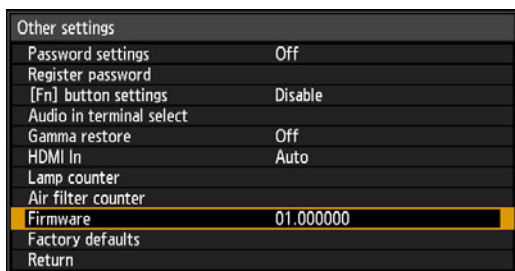


Select [Firmware], press the **OK** button, and check the firmware version displayed. Selecting [OK] will display an update confirmation screen. To update the firmware, select [Yes].

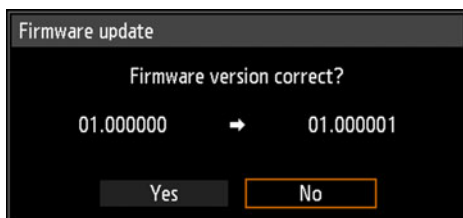

 Firmware versions shown here are for illustration only and differ from actual versions.


Firmware updating takes a few minutes. During the update, the LED indicator will flash in red. Do not turn off the projector while the LED is flashing. After the update, the projector will automatically turn itself off and enter standby mode.

Resetting to the Default Setting


 > [System settings] > [Other settings] > [Factory defaults]

- HDMI Component LAN
 Digital PC Analog PC USB

You can reset the menu item settings and restore the system settings to the factory defaults.

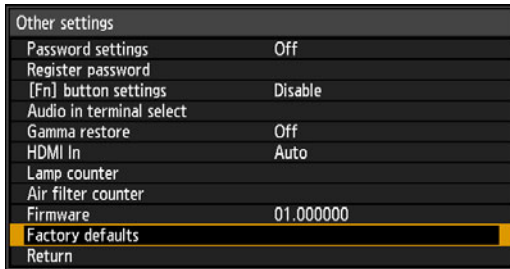

Select [Factory defaults] and press the **OK** button. The following screen for confirmation appears.

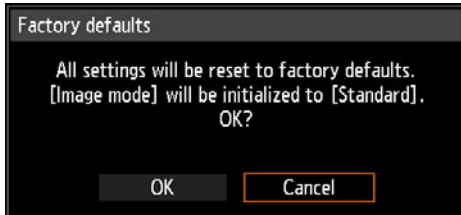

OK Settings are reset to default.

Cancel Settings are not reset to default.

To dismiss the menu, press the **MENU** button.

- This function does not reset the following values.
 - [Lamp counter]
 - [Language]
 - [Remote control channel]
 - [Input signal settings]
 - [Network settings]
 - [Air filter counter]
 - [Micro-digital image shift]
 - [Registration]
 - [Fan mode]
 - [Vertical projection]

- [Create profile]
- For factory defaults settings, refer to [P228 - P235](#).
- The contents of the user memory return to the conditions at the time it was saved. ([P85](#))

Checking Projector Information

MENU > [Information]

- HDMI Component LAN
 Digital PC Analog PC USB

You can check information about the signal types of the images projected and other information.



Information shown

Item	Explanation
Model name	WUX6000
Input signal	Details of the input signal currently selected Information such as the type, resolution, and frequency of the signal is displayed.
Firmware	Current firmware version
Serial no.	Serial number unique to this projector
IP address*	IP address used when connected to a network.
E-mail sender address*	Sender e-mail address used for sending error mails (P183)
E-mail recipient address*	Displays [Already set] or [Not set] to show whether a recipient e-mail address has been set for receiving error mails. (P183)
Projector name*	Name which identifies this projector on the network
Comments*	Comments such as the location in which the projector is installed are displayed. (P186)
System information ID	System information. Normally this is not displayed.

* The values are not displayed when network functions are [Off].
To dismiss the information window, press the **MENU** button.

Installation

Table of Contents

Safety Instructions

Before Use

Operation

Projecting an Image

Useful Functions Available
During a Presentation

Setting Functions from
Menus

Installation and Maintenance

Installation

Connecting to a Network

Maintenance

Appendix

Other Information

Index

Before Installation

Precautions When Carrying/Shipping the Projector

Prepare the projector as described below before carrying it.



Caution

- Disconnect the cables connected to the projector. Carrying the projector with the cables attached may cause an accident.
- Retract the adjustable feet.
- When carrying or holding up the projector after attaching the lens unit, be sure not to hold the lens. Doing so may cause damage to the projector.
- Do not reuse any packaging or shock-absorbent materials that were supplied with the projector at the time of purchase for transporting or shipping the projector. Protection of the projector cannot be guaranteed if used packaging or shock-absorbent materials are reused. Fragments from shock-absorbent material may also enter the interior of the projector which could cause a malfunction.
- If transportation is necessary, the lens unit should be removed before transporting the projector. If the projector is subjected to excessive impacts during transportation, the lens unit may be damaged. Removal and installation of the lens unit should not be performed by the user. Be sure to have the procedure performed by a qualified technician or contact the Canon Customer Support Center.


Precautions for Installation

Be sure to read “Safety Instructions” and “For Safe Use” (P10 – P23). Also take the following precautions during installation.



Caution

- Do not strike the projector or subject it to impact. Doing so may cause a malfunction.
- Do not install the projector so that it is inclined or standing vertically. The projector may tip over, causing a malfunction.
- Do not block the air intake or exhaust vents of the cooling fan. If the intake or exhaust vent is blocked, heat may accumulate inside the projector, causing a malfunction.

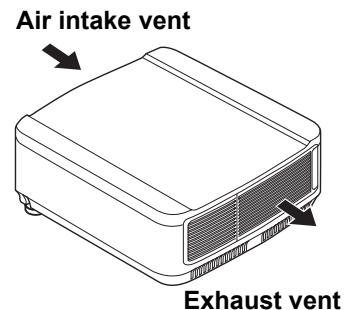

Do Not Use in the Following Environments

- **Locations with excessive humidity, dust, oily smoke or tobacco smoke**
Optical parts such as lenses or mirrors may become cloudy, reducing image quality.
- **Near high-voltage power lines or sources of electrical power**
This may cause malfunction.
- **On soft surfaces such as carpets or cushioned mats**
Heat may build up inside the projector and damage it.
- **Locations with excessive temperature or humidity**
This may damage the projector. Acceptable ranges for operating and storage temperature and humidity are as follows.

Operating temperature	Operating humidity	Storage temperature
0°C (32°F) – 40°C (104°F)	Up to 85%	-30°C (-22°F) – 60°C (140°F)

Do Not Touch the Lens with Bare Hands



Do not touch the lens with bare hands. Doing so may adversely affect picture quality.

Install at a Sufficient Distance from Walls and Other Obstructions



Caution

If the air intake or exhaust vent is blocked, heat will accumulate inside the projector, possibly resulting in a shortened projector lifetime or a malfunction. Do not install in a closet, on a bookshelf, or in other narrow spaces with poor ventilation. Install in a well-ventilated location. (Ensure a minimum clearance of 50 cm (1.6 ft.) above, on both sides, and behind the projector.)

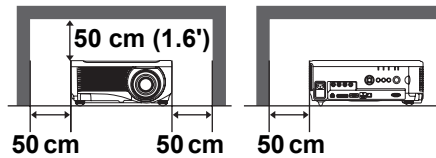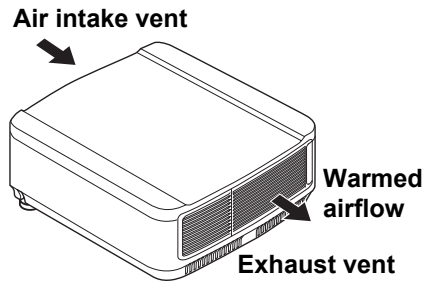

■ Be Careful of Condensation

If the temperature of the room rises suddenly, moisture in the air may condense on the projector lens and mirror, causing the image to become blurred. Wait until the condensation has evaporated for the image projected to return to normal.


■ At Altitudes above 2,300 m (7,545.8'), Adjust the Settings

Projector settings must be adjusted when using the projector at altitudes of 2,300 m (7,545.8') or higher. Specifically, refer to instructions for [Fan mode] (P146) in the [Install settings] menu.

■ When Using Mounted on the Ceiling



When the projector is used mounted on the ceiling or installed in a high location, it is necessary to periodically clean the air intake and exhaust vents, and the area around the air filter. If dust accumulates in the intake or exhaust vents, cooling performance will deteriorate, causing the internal temperature to rise and possibly resulting in a malfunction or fire. Use a vacuum cleaner or similar means to remove dust from the intake vent and exhaust vent.

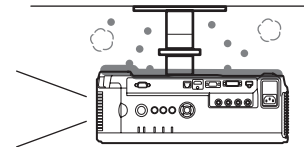


■ Install Facing in the Correct Direction



Caution

- The projector can be installed facing any direction*¹, as shown below. However, projection upward or downward may shorten the useful life of the lamp. [Install settings] of the projector must also be adjusted. Specifically, for upward or downward projection, refer to instructions for [Vertical projection] (P147) in the [Install settings] menu.
- Do not attempt to install the projector for upward or downward projection by yourself. Always request installation by a qualified technician or the Canon Customer Support Center.

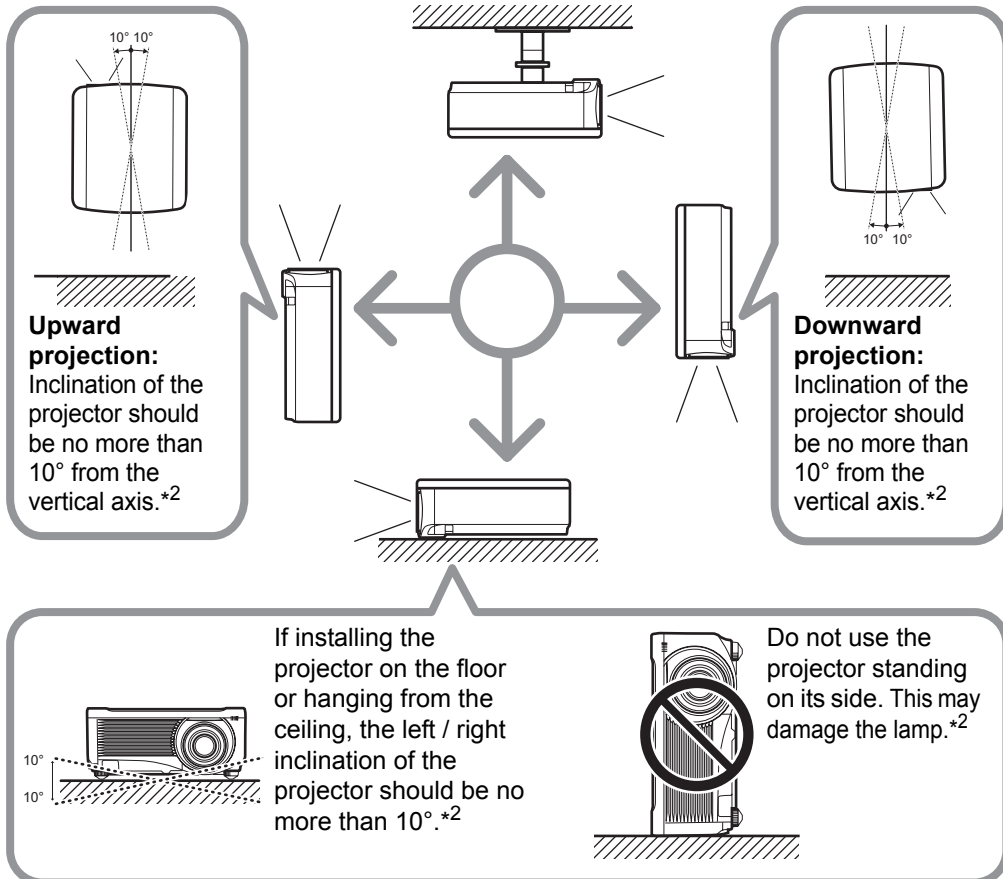

*1 No optional accessories are available for installing the projector in ways other than ceiling installation (P119, P227).

*2 An inclination of more than 10 degrees may damage the lamp.



When installing the projector facing upward or downward, specify which way the projector is facing in [Install settings] > [Professional settings] > [Vertical projection]. (P147)

Installation Procedure


Setting Up the Projector

■ Positioning the Projector in Front of the Screen

Place the projector in front of the screen.




- To avoid keystone distortion, install the projector so that it is at right angles to the screen.
- The screen must not be exposed to direct sunlight or light from lighting equipment. In a bright room, it is recommended that lights be turned off, curtains be drawn, and other steps taken to make the screen easier to see.

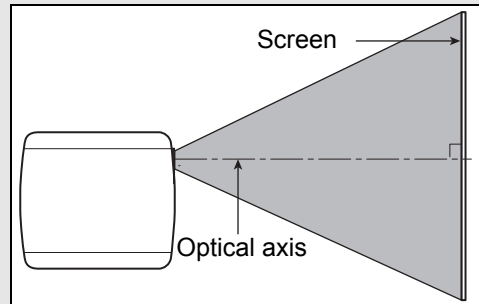


■ Floor Installation

To adjust the projection position when the projector is installed on the floor, use the lens shift function (P46, P129) to adjust up / down / left / right. You can also use the adjustable feet to incline the projector upward by up to 6°.

For information about the relationship between screen size and projection distance, refer to [page 125](#).

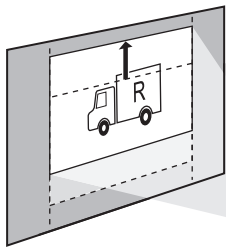

Lens shift

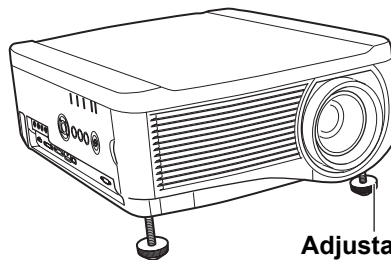


Adjustable feet

■ Installing the Projector in an Inclined Position


To correct keystone distortion when the projector is tilted upward (using adjustable feet, for example), perform keystone correction (P144) or corner adjustment (P144).

■ Ceiling Mounting or Rear Projection

You can mount the projector on the ceiling (ceiling mounting) with it turned upside down or place it behind the screen (rear projection) if you use a translucent screen.

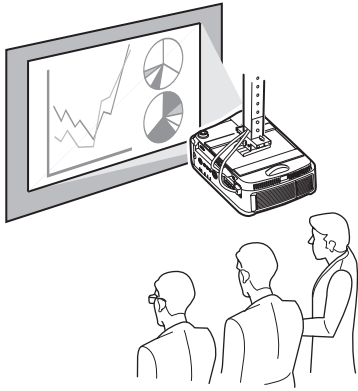

Ceiling mounting

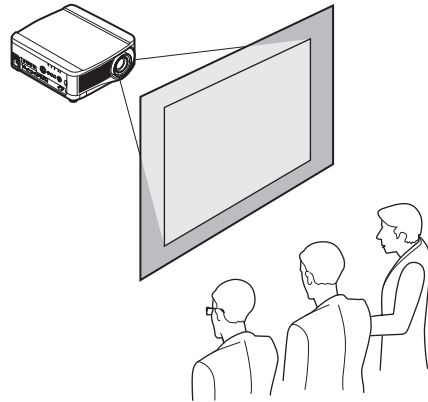

Rear projection

Make sure to use the optional ceiling attachment. For the ceiling attachment, refer to “Option” (P227). For details, refer to the assembly and installation manual provided with the ceiling attachment.

Mounting the Projector on the Ceiling

You can mount the projector on the ceiling.

The ceiling attachment (part No.: RS-CL11) is required in order to mount the projector on the ceiling. Depending on the installation environment, an extension pipe (part No.: RS-CL08 or RS-CL09) may also be required. Contact the Canon Customer Support Center for more detailed information.




Caution

- **Make sure to use the optional ceiling attachment.**
- **You should never install the ceiling attachment by yourself.**



If you mount the projector on the ceiling, you have to invert the projected image by selecting [Image flip H/V] from the menu. (P141)

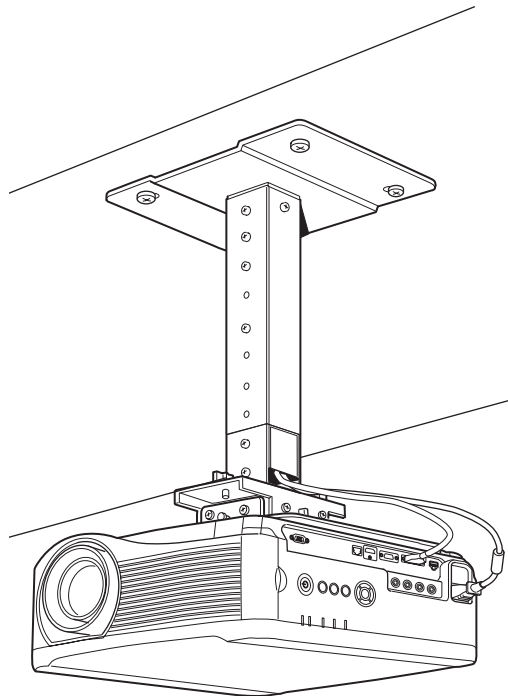

Installing / Removing the Lens Unit

■ Installing the Lens Unit



Before installing or removing the lens unit, be sure to disconnect the power plug or connector. Failure to do so may result in fire, electric shock, or injury.



- Before replacing the lens unit, make sure to turn off the projector, wait at least 1 hour to allow the projector to cool thoroughly. Failure to do so may result in burns or other injuries.

- Do not touch the lens when the lens is moving (the lens is shifting) to adjust the projected image after installation. There is the risk of injury.

- When hanging the projector from a ceiling, put the projector down on the floor or a workbench before attaching or replacing the lens unit. Failure to do so could result in parts falling off the projector and may cause an accident or personal injury.

- Do not attempt to install or remove the lens unit yourself. Be sure to request this service from a qualified technician or contact the Canon Customer Support Center.

- When installing and removing the lens unit, be sure not to touch the surface of the lens with your hands or scratch it.

- Do not apply force to parts (e.g. lead wires) that are connected to the lens unit or lens motor. Doing so may cause a malfunction.

- Do not replace the lens unit in a dusty location. If any dust or dirt enters the projector, this may adversely affect picture quality.


- For details about which devices the projector is compatible with, contact the Canon Customer Support Center.



Caution


1 Use a Phillips-head screwdriver and loosen the lamp cover screw, then open the lamp cover.

The lamp cover screw is attached to the lamp cover and designed to prevent it from falling off.

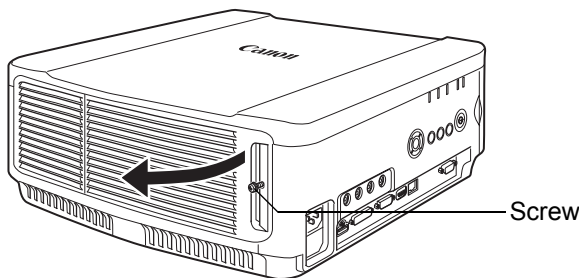


- 2 Loosen the cosmetic panel screw, then slide the cosmetic panel toward the rear to remove it.**

The cosmetic panel screw is attached to the cosmetic panel and designed to prevent it from falling off.

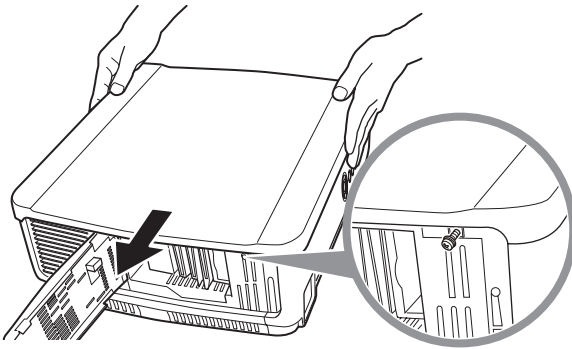


- 3 In order to prevent damage, close the lamp cover and temporarily fasten the screw.**

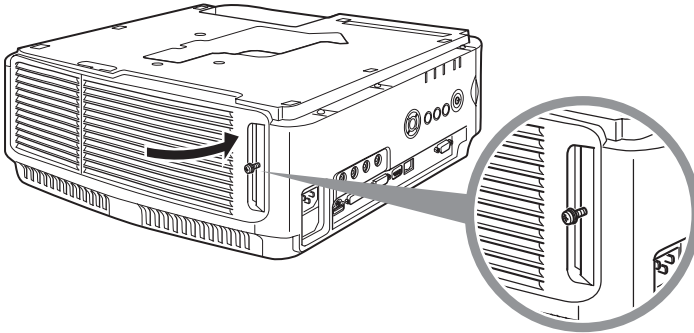


- 4 Remove the sleeve screws (2 on top and 2 on bottom).**


After the 2 screws on top are removed, turn the projector upside down on a flat desk or similar location and remove the 2 screws from the bottom.

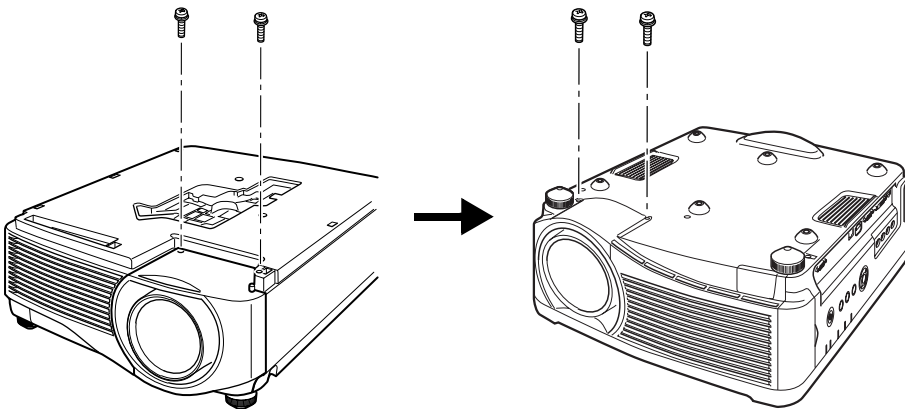


- 5** Then turn the projector back over and remove the sleeve.

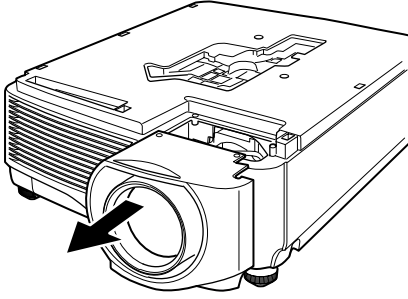


- 6** Referring to the following illustration, insert the lens connector of the lens unit into the front right side of the projector slowly until it contacts the end. At this time, pull out the lens cable shown in the illustration and fix it.

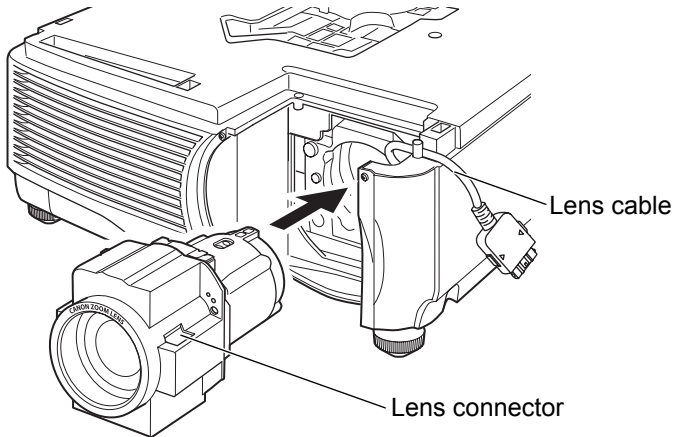

- 7** Tighten the 4 screws to fasten the lens unit in place.
The 4 lens unit screws are attached to the lens unit and cannot be removed.

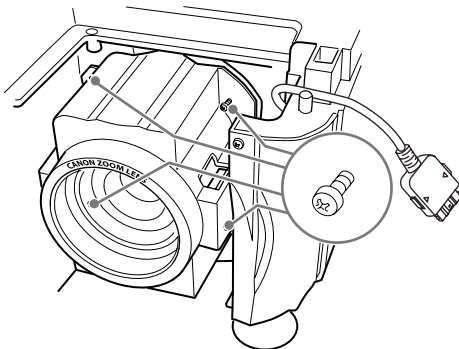

- 8** Insert the projector lens cable into the connector until a click sound is heard.

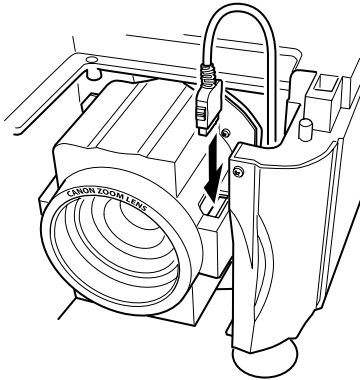

- 9** Reinstall the sleeve, cosmetic panel, and lamp cover in their original positions.

⚠ When the power is first turned on after the lens unit has been installed or replaced, lens shift initialization operation will be performed. It will take approximately 1 minute for the initialization operation to start up. However, if the lens has been replaced with a lens of the same model number, initialization operation will not be performed. The position will be the same as before the lens was replaced.




The lens shift initialization operation uses the motor to move the lens up / down / left / right. Do not touch the lens. Doing so could result in an injury.



Caution


When installing and removing the lens unit, be sure to fix the lens cable as shown in the illustration. When inserting the lens unit, it is possible to damage the lens cable between the lens unit and projector.

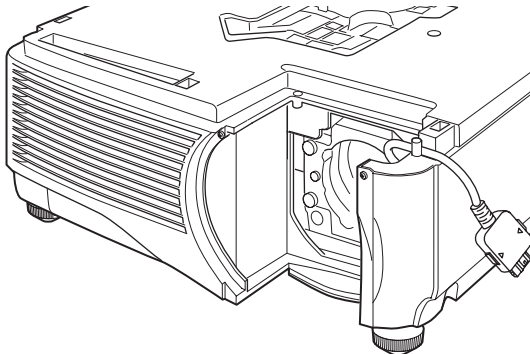

■ Removing the Lens Unit


- 1** Perform steps 1 to 5 of “Installing the Lens Unit” (P120 – P122) to remove the sleeve.
- 2** Disconnect the lens cable from the lens connector.

⚠ When pulling out (disconnecting) the lens cable, press the buttons on both sides of the lens cable connector while pulling out the cable.

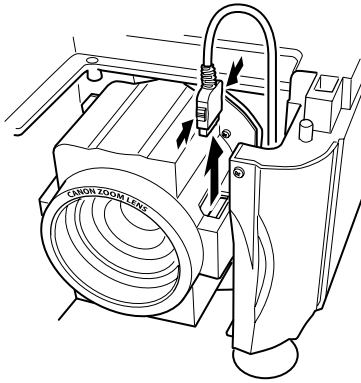


- 3** Fix the lens cable as shown in the illustration and loosen the 4 screws to remove the lens unit.

The 4 lens unit screws are attached to the lens unit and cannot be removed.

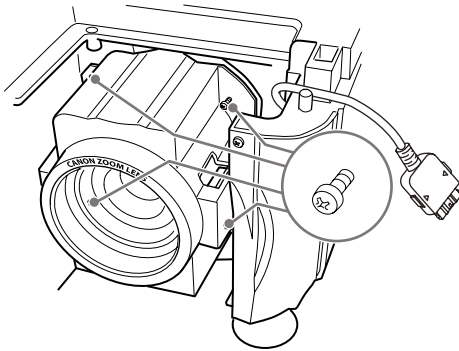

Relationship Between Image Size and Projecting Distance

The projected image size is determined by the distance between the projector and the screen (projection distance) as well as the zoom. Refer to the following table and decide the distance between the projector and screen.

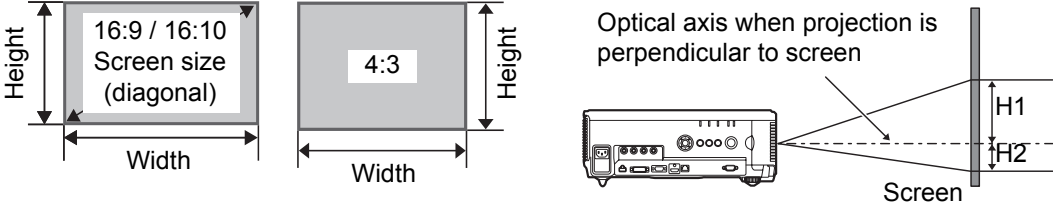

- H1 and H2 are the distances when lens shift is the default value below.
- Standard Zoom Lens / Long Zoom Lens / Ultra Long Zoom Lens / Wide Zoom Lens: +50% (up / down), 0% (left / right)
- Short Fixed Lens: 0% (up / down / left / right)

WUX6000

Lens unit	Diagonal when 16:10	Image size (cm)						Projection distance m (feet)		Distance from optical axis when projection is perpendicular to screen (cm)	
		16:10		16:9		4:3		16:10		H1	H2
		Width	Height	Width	Height	Width	Height	Wide limit	Tele limit		
Standard Zoom Lens RS-IL01ST	40	86	54	86	48	72	54	1.3 (4.3)	1.9 (6.2)	54	0
	60	129	81	129	73	108	81	1.9 (6.2)	2.9 (9.5)	81	0
	80	172	108	172	97	144	108	2.6 (8.5)	3.9 (12.8)	108	0
	100	215	135	215	121	179	135	3.2 (10.5)	4.8 (15.7)	135	0
	150	323	202	323	182	269	202	4.8 (15.7)	7.2 (23.6)	202	0
	200	431	269	431	242	359	269	6.4 (21.0)	9.6 (31.5)	269	0
	250	538	337	538	303	449	337	8.0 (26.2)	12.1 (39.7)	337	0
	300	646	404	646	363	538	404	9.6 (31.5)	14.5 (47.6)	404	0
	350	754	471	754	424	628	471	11.3 (37.1)	16.9 (55.4)	471	0
	400	862	538	862	484	718	538	12.9 (42.3)	19.3 (63.3)	538	0
	450	969	606	969	544	808	606	14.5 (47.6)	21.7 (71.2)	606	0
	500	1077	673	1077	605	898	673	16.1 (52.8)	24.1 (79.1)	673	0
550	1185	740	1185	666	987	740	17.7 (58.1)	26.6 (87.3)	740	0	
600	1292	808	1292	726	1076	808	19.3 (63.3)	29.0 (95.1)	808	0	

Installation Procedure

Lens unit	Diagonal when 16:10	Image size (cm)						Projection distance m (feet)		Distance from optical axis when projection is perpendicular to screen (cm)	
		16:10		16:9		4:3		16:10		H1	H2
		Width	Height	Width	Height	Width	Height	Wide limit	Tele limit		
Long Zoom Lens RS-IL02LZ	40	86	54	86	48	72	54	1.9 (6.2)	3.2 (10.5)	54	0
	60	129	81	129	73	108	81	2.8 (9.2)	4.8 (15.7)	81	0
	80	172	108	172	97	144	108	3.8 (12.5)	6.4 (21.0)	108	0
	100	215	135	215	121	179	135	4.7 (15.4)	8.0 (26.2)	135	0
	150	323	202	323	182	269	202	7.1 (23.3)	12.1 (39.7)	202	0
	200	431	269	431	242	359	269	9.5 (31.2)	16.1 (52.8)	269	0
	250	538	337	538	303	449	337	11.9 (39.0)	20.2 (66.3)	337	0
	300	646	404	646	363	538	404	14.2 (46.6)	24.2 (79.4)	404	0
	350	754	471	754	424	628	471	16.6 (54.5)	28.3 (92.8)	471	0
	400	862	538	862	484	718	538	19.0 (62.3)	32.3 (106.0)	538	0
	450	969	606	969	544	808	606	20.9 (68.6)	35.6 (116.8)	606	0
	500	1077	673	1077	605	898	673	23.8 (78.1)	40.4 (132.5)	673	0
	550	1185	740	1185	666	987	740	26.1 (85.6)	44.5 (146.0)	740	0
	600	1292	808	1292	726	1076	808	28.5 (93.5)	48.5 (159.1)	808	0
Short Fixed Lens RS-IL03WF	40	86	54	86	48	72	54	0.7 (2.3)		27	27
	60	129	81	129	73	108	81	1.0 (3.3)		41	41
	80	172	108	172	97	144	108	1.4 (4.6)		54	54
	100	215	135	215	121	179	135	1.7 (5.6)		68	68
	150	323	202	323	182	269	202	2.6 (8.5)		101	101
	200	431	269	431	242	359	269	3.4 (11.2)		135	135
	250	538	337	538	303	449	337	4.3 (14.1)		168	168
	300	646	404	646	363	538	404	5.2 (17.1)		202	202

Lens unit	Diagonal when 16:10	Image size (cm)						Projection distance m (feet)		Distance from optical axis when projection is perpendicular to screen (cm)	
		16:10		16:9		4:3		16:10		H1	H2
		Width	Height	Width	Height	Width	Height	Wide limit	Tele limit		
Ultra Long Zoom Lens RS-IL04UL	60	129	81	129	73	108	81	4.6 (15.1)	9.0 (29.5)	81	0
	80	172	108	172	97	144	108	6.1 (20.0)	12.0 (39.4)	108	0
	100	215	135	215	121	179	135	7.6 (24.9)	14.9 (50.2)	135	0
	150	323	202	323	182	269	202	11.4 (37.4)	22.3 (77.3)	202	0
	200	431	269	431	242	359	269	15.2 (49.7)	29.8 (97.8)	269	0
	250	538	337	538	303	449	337	18.9 (62.0)	37.2 (122.0)	337	0
	300	646	404	646	363	538	404	22.7 (74.5)	44.6 (146.3)	404	0
	350	754	471	754	424	628	471	26.4 (86.6)	52.0 (170.6)	471	0
	400	862	538	862	484	718	538	30.2 (99.1)	59.4 (194.9)	538	0
	450	969	606	969	544	808	606	34.0 (111.5)	66.8 (219.2)	606	0
	500	1077	673	1077	605	898	673	37.7 (123.7)	74.2 (243.4)	673	0
	550	1185	740	1185	666	987	740	41.5 (136.2)	81.6 (267.7)	740	0
	600	1292	808	1292	726	1076	808	45.2 (148.3)	89.0 (292.0)	808	0

Installation Procedure

Lens unit	Diagonal when 16:10	Image size (cm)						Projection distance m (feet)		Distance from optical axis when projection is perpendicular to screen (cm)	
		16:10		16:9		4:3		16:10		H1	H2
		Width	Height	Width	Height	Width	Height	Wide limit	Tele limit		
Wide Zoom Lens RS-IL05WZ	40	86	54	89	50	81	61	0.9 (3.0)	1.3 (4.3)	54	0
	60	129	81	133	75	122	91	1.3 (4.3)	1.9 (6.2)	81	0
	80	172	108	177	100	163	122	1.7 (5.6)	2.6 (8.5)	108	0
	100	215	135	221	125	203	152	2.2 (7.2)	3.2 (10.5)	135	0
	150	323	202	332	187	305	229	3.2 (10.5)	4.9 (16.1)	202	0
	200	431	269	443	249	406	305	4.3 (14.1)	6.5 (21.3)	269	0
	250	538	337	553	311	508	381	5.4 (17.7)	8.1 (26.6)	337	0
	300	646	404	664	374	610	457	6.5 (21.3)	9.7 (31.8)	404	0
	350	754	471	775	436	711	533	7.5 (24.6)	11.4 (37.4)	471	0
	400	862	538	886	498	813	610	8.6 (28.2)	13.0 (42.7)	538	0
	450	969	606	996	560	914	686	9.7 (31.8)	14.6 (47.9)	606	0
	500	1077	673	1107	623	1016	762	10.8 (35.4)	16.3 (53.5)	673	0
	550	1185	740	1218	685	1118	838	11.8 (38.7)	17.9 (58.7)	740	0
	600	1292	808	1328	747	1219	914	12.9 (42.3)	19.5 (64.0)	808	0



Lens Shift Function

The projector includes a lens shift function. Operation of the buttons slides the lens up, down, left, and right, moving the image position. For instructions, refer to "Adjusting the Image Position" (P46).

The amount of lens shift is indicated as a percentage relative to the image height and width.


The table below shows the lens shift for each lens.

Lens unit	WUX6000
Standard Zoom Lens (RS-IL01ST)	Up (1): +55% Down (2): -15% Left / right (3): ±10%
Long Zoom Lens (RS-IL02LZ)	
Ultra Long Zoom Lens (RS-IL04UL)	
Wide Zoom Lens (RS-IL05WZ)	
Short Fixed Lens (RS-IL03WF)	Up (1): +5% Down (2): -5% Left / right (3): ±2%

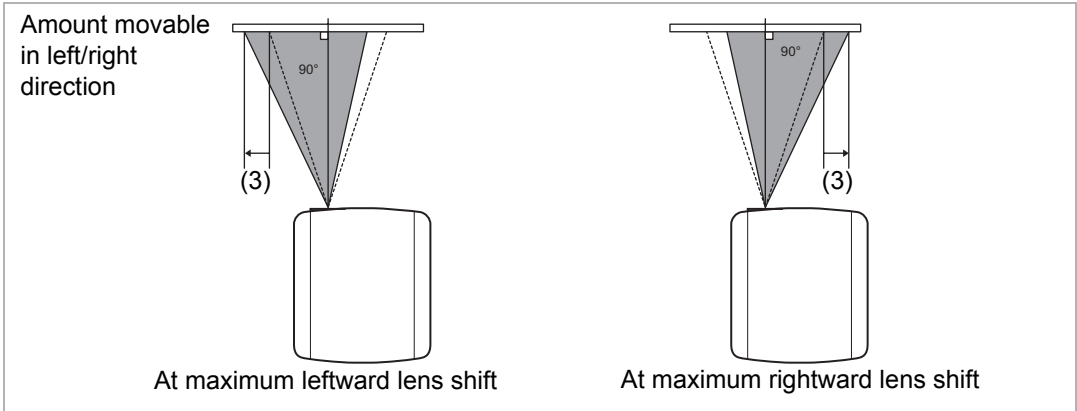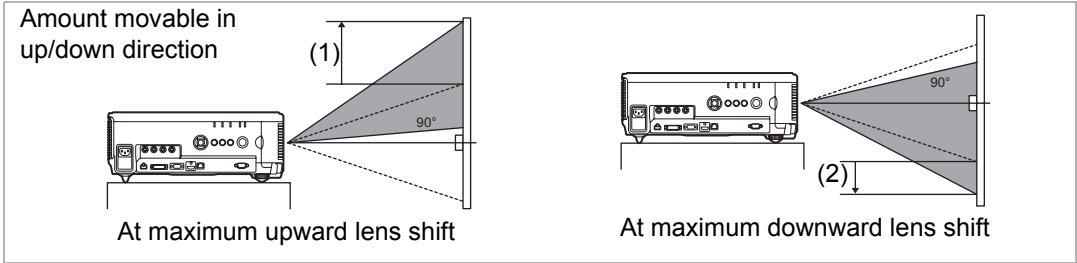


Area Outside the Lens Shift Range

With the Standard Zoom Lens, Long Zoom Lens, Ultra Long Zoom Lens, and Wide Zoom Lens, when the shift exceeds 44% in the upward direction, the amount of available shift in the left / right directions decreases. When the lens is shifted upward to the maximum (1), the amount of available shift in the left / right direction is $\pm 2\%$.

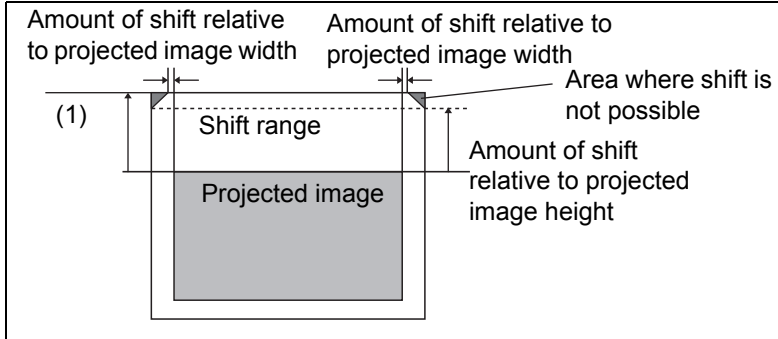


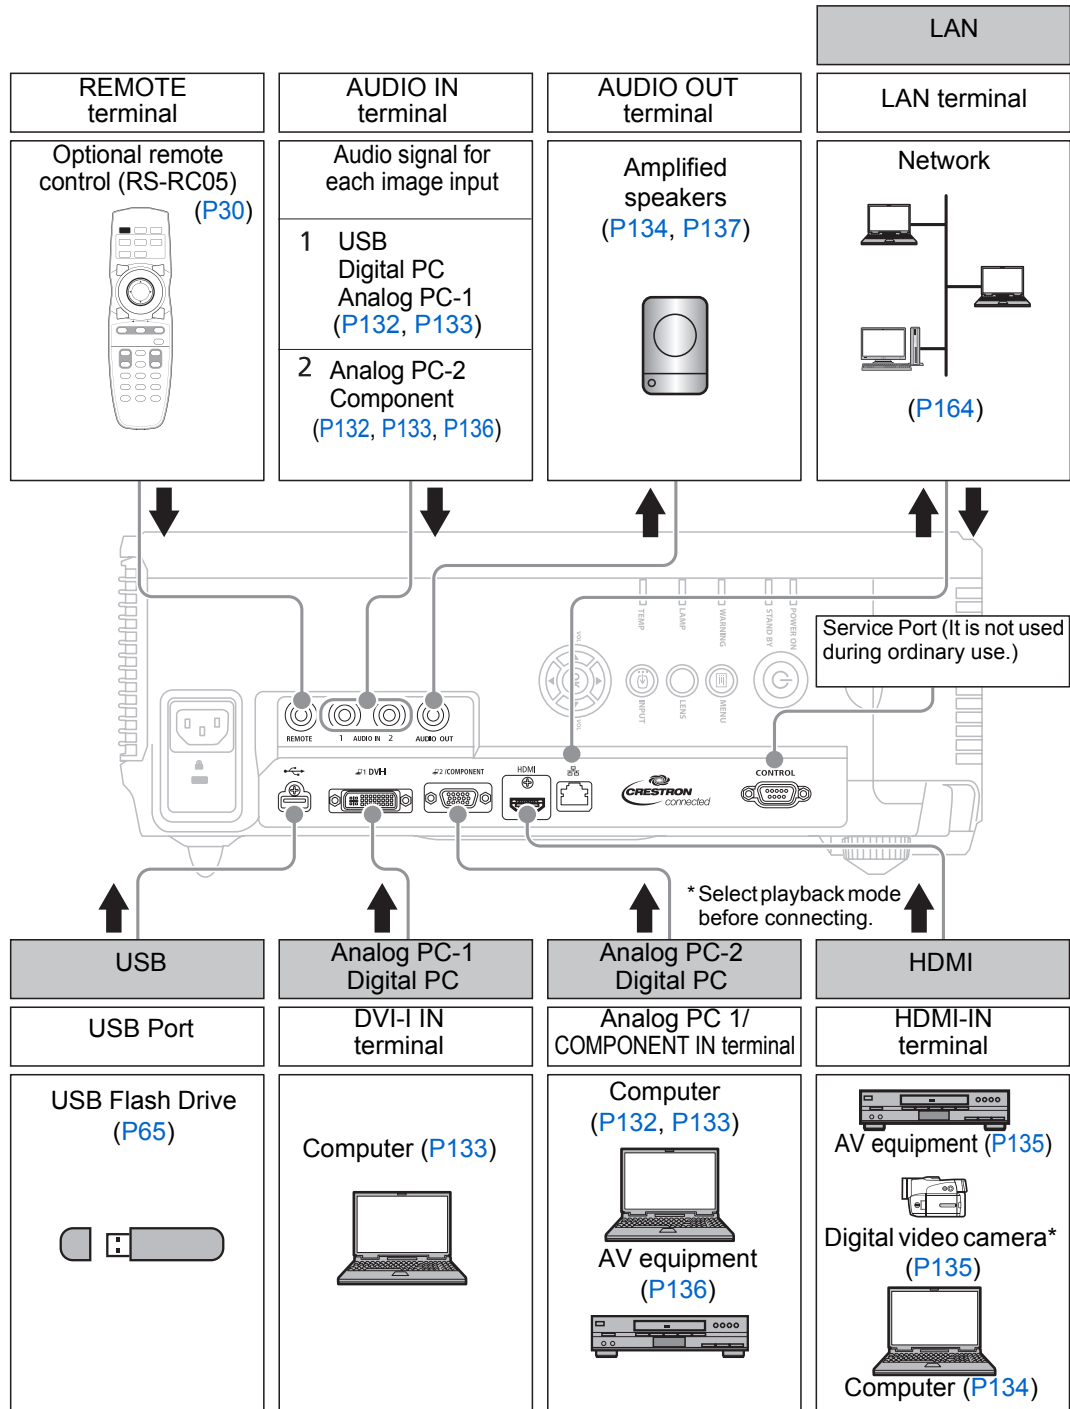
The more you shift the Short Fixed Lens up or down, the less you can shift it left or right. At the position of maximum lens shift upward or downward, the lens cannot be shifted left or right.

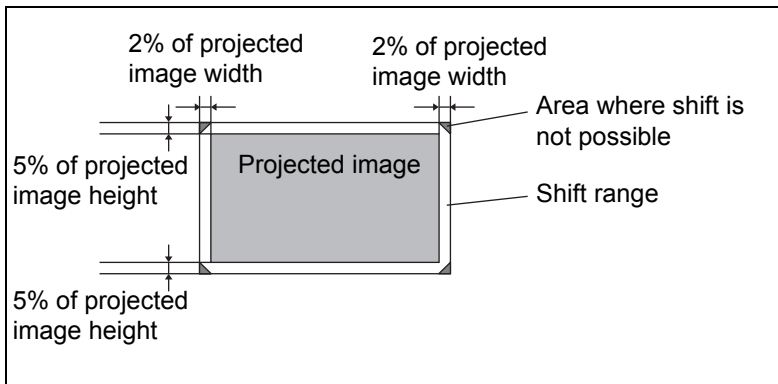

Connection Procedure

Connectable Equipment and Input Terminals

HDMI	Use this name to select the image input.	 Direction of signal and data flow (Pxxx) indicates the page(s) to refer to.
HDMI-IN terminal	The name of the terminal to which to connect equipment	



Connecting a Computer

Connect the projector to the computer.


A digital connection (P133) is recommended when projecting an image in high quality.

When using a computer with an HDMI output terminal, a digital connection (P134) can be made using an HDMI cable.


! Before connecting the cables, turn off both the projector and computer.
Caution

■ Connecting to RGB Monitor Output Terminal (Analog Connection)

Connecting with a computer cable (Input signal type: [Analog PC-2] P39)

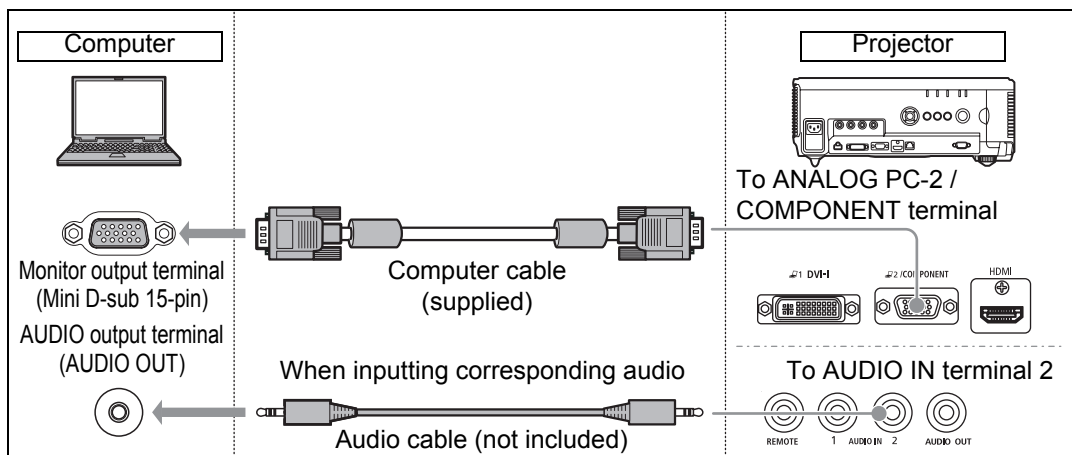


Connecting with DVI-D-sub 15 cable (Input signal type: [Analog PC-1] P39)

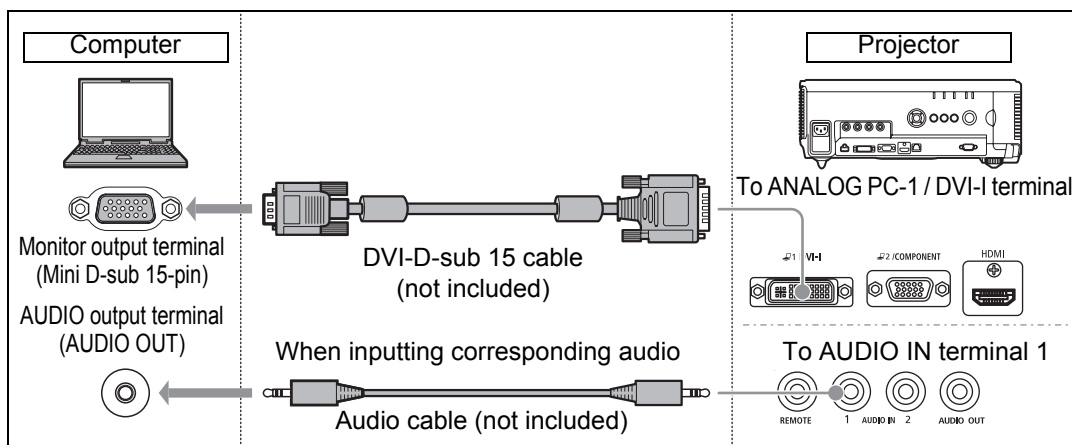

- Use a DVI-D-sub 15 cable in which all pins are connected. If the cable is a type in which all pins are not connected, the image may not be correctly displayed.
- Use an audio cable without a built-in resistor. Using an audio cable with a built-in resistor will reduce the audio volume.
- The AUDIO IN terminal can be changed in the Audio in terminal select screen (P106).


Connecting with a BNC cable (Input signal type: [Analog PC-2] P39)

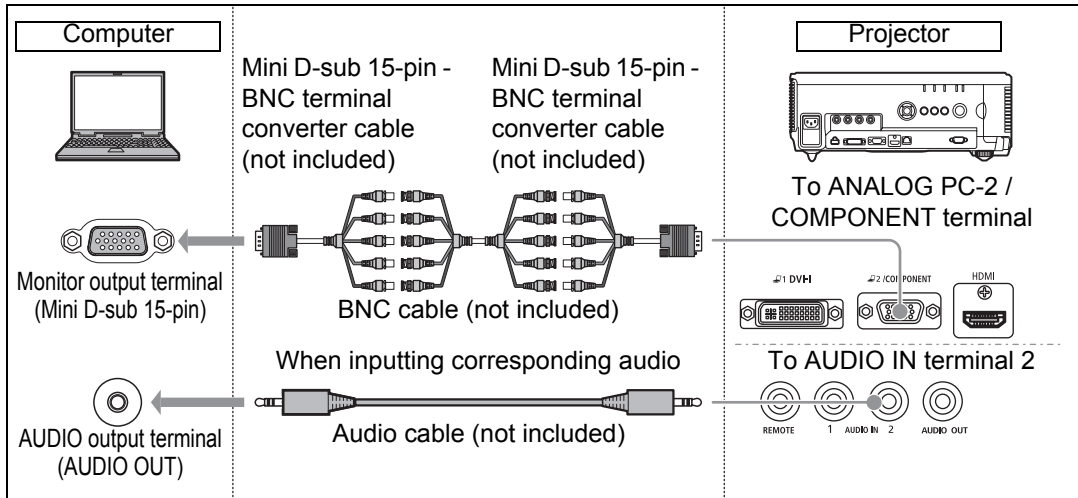

- A signal with a dot clock higher than 162 MHz cannot be projected.
- Use an audio cable without a built-in resistor. Using an audio cable with a built-in resistor will reduce the audio volume.
- The AUDIO IN terminal can be changed in the Audio in terminal select screen (P106).

■ Connecting to DVI Monitor Output Terminal (Digital Connection)

Connecting with a DVI cable (Input signal type: [Digital PC] P39)

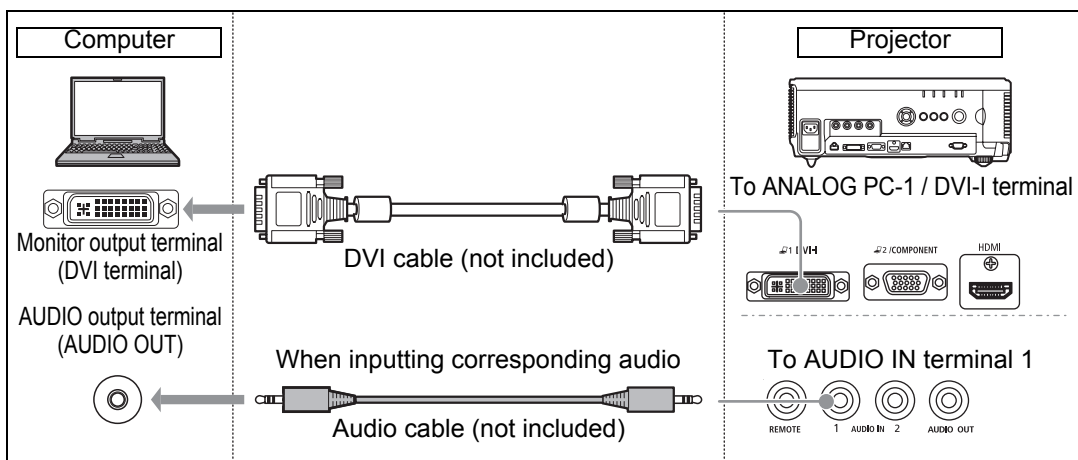


Connection Procedure




- Use an audio cable without a built-in resistor. Using an audio cable with a built-in resistor will reduce the audio volume.
- The AUDIO IN terminal can be changed in the Audio in terminal select screen (P106).

■ Connecting with an HDMI cable (Input signal type: [HDMI] P39)

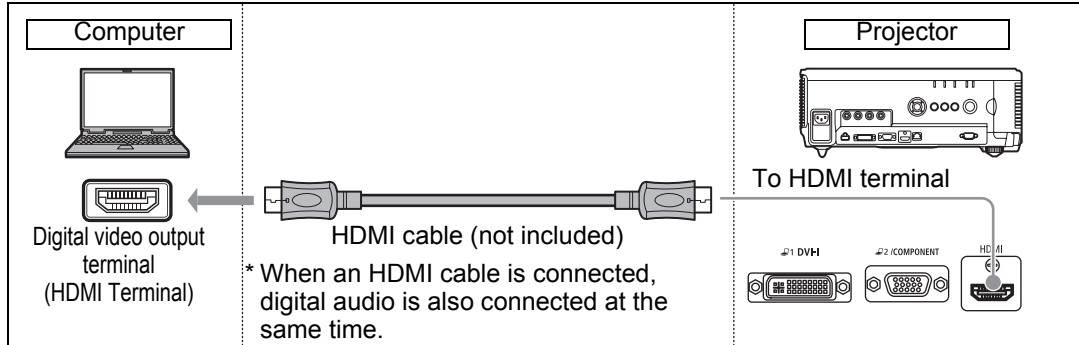

■ Outputting Audio to Speakers

It is possible to output audio from the projected images to amplified speakers.

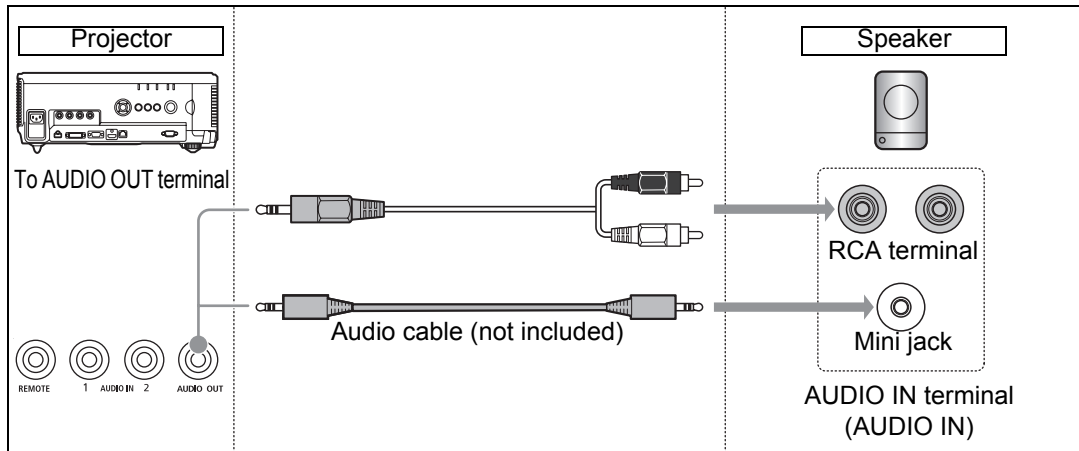

- Use an audio cable without a built-in resistor. Using an audio cable with a built-in resistor will reduce the audio volume.


Connecting AV Equipment

Connect the projector and AV equipment.
The description provided here is one example. For more detailed information, refer to the manual for the connected AV equipment.

! Before connecting the cables, turn off both the projector and AV equipment.
Caution

■ Connecting to Digital Video Output Terminal (Digital Connection)

Connecting with an HDMI cable (Input signal type: [HDMI] P39)

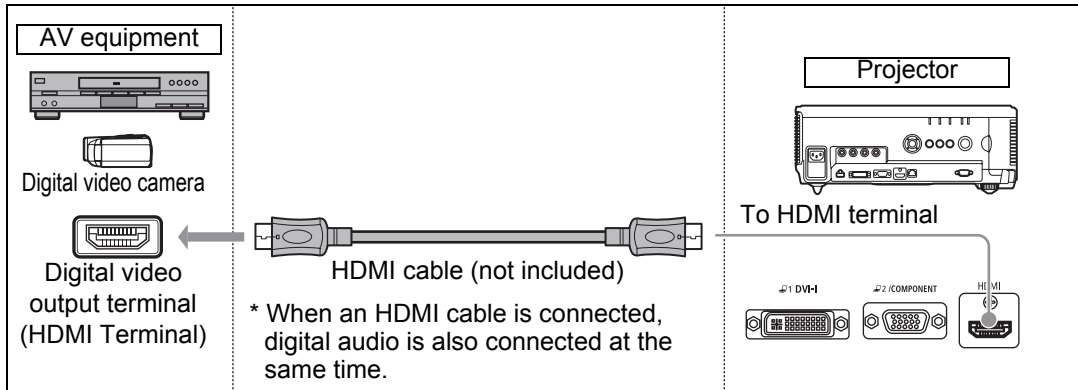


■ Connecting to Analog Video Output Terminal (Analog Connection)

Connecting with a component cable (Input signal type: [Component] P39)

Component video signals from AV equipment can be supplied to the projector by connecting the component cable to the projector's COMPONENT terminal.


Use a commercially available component cable (not included) that fits the terminal type of the AV equipment to create a relay connection.

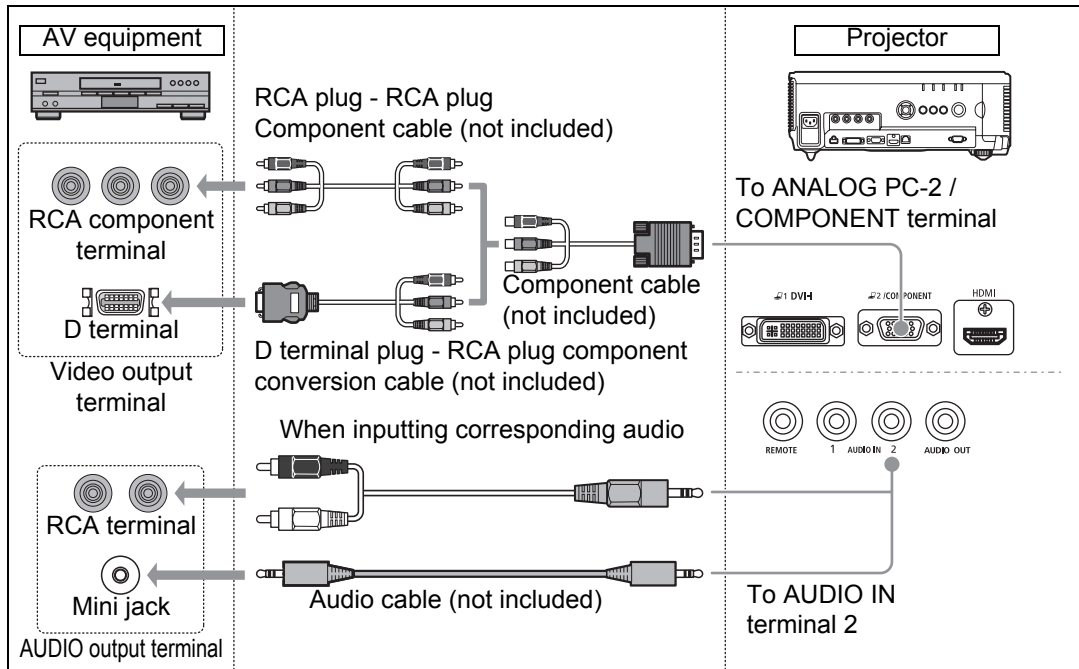

- Use an audio cable without a built-in resistor. Using an audio cable with a built-in resistor will reduce the audio volume.
- The AUDIO IN terminal can be changed in the Audio in terminal select screen (P106).

■ Outputting Audio to Speakers


It is possible to output audio from the projected images to AV equipment or amplified speakers.

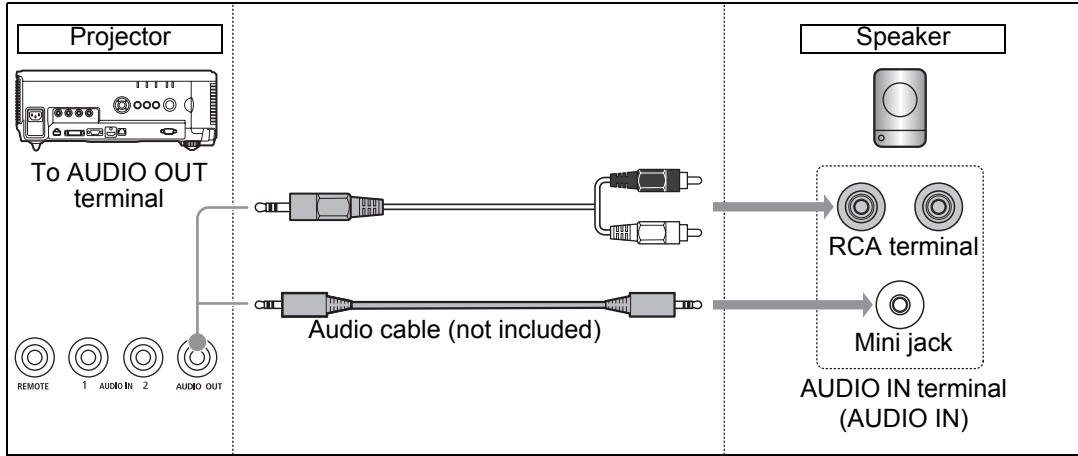

Use an audio cable without a built-in resistor. Using an audio cable with a built-in resistor will reduce the audio volume.

Plugging the Projector In

Connect the power cord to the projector and plug it in.

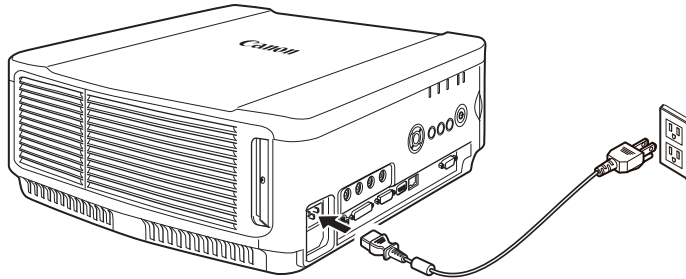

Connect the ground terminal on the power plug to ground. Not doing so could result in an electric shock. Additionally, it may cause computers to be affected by electromagnetic interference and impair TV and radio reception.



- Fully insert the power cord plug into the socket.
- After turning off the projector, wait at least 5 minutes before turning it on again. It may shorten the lamp life if you turn on the projector immediately after turning it off.




Unplug the power cord when the projector is not in use.

Starting Projection

Starting and Stopping Projection


■ Starting Projection

Press the **POWER** button on the remote control or on the projector.
The [POWER ON] indicator initially flashes green, after which it remains lit.

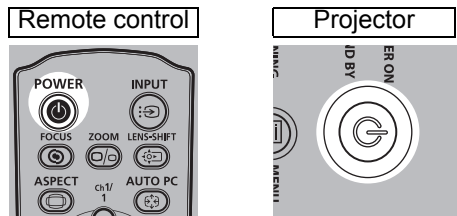

■ Stopping Projection

Press the **POWER** button on the remote control or on the projector twice.

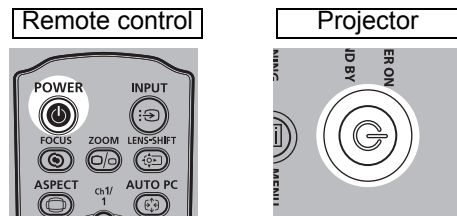


■ When the Language Selection Screen Appears

A screen appears when the projector is turned on for the first time. You can select a language to be used by the projector for displaying menus and messages in the window. Select the desired language with the pointer buttons and press the **OK** button.

You can change the language from the menu at a later time. (P103)

If the language selection screen is out of focus, adjust the focus. (P44)

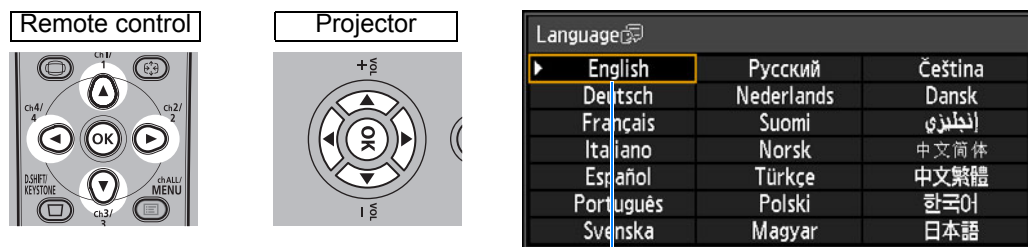

An item highlighted in orange will be selected.

■ When the Password Input Screen Appears

If you have set a password, the password input screen appears. Enter your password. (P104)

■ When “No signal” Appears

With a notebook computer, the user must turn on the external monitor output. (P140)
Press the **INPUT** button to select the input signal. (P40)

■ When Notebook Computer Screen Does Not Appear

Set your notebook computer to output signals to an external monitor. For more details, refer to “Changing Notebook Computer Screen Output” below.

■ Adjusting Image

- Set the display resolution of the computer to the highest resolution or the resolution closest to that setting. (P41)
- Use the auto PC function to adjust shift in computer image or the flickering of the screen. (P43)
- Adjust the size of projected images by zooming. For the Standard Zoom Lens, Long Zoom Lens, Ultra Long Zoom Lens, and Wide Zoom Lens, use optical zoom (P45). For the Short Fixed Lens, use digital zoom (P143).
- Correct any keystone distortion by pressing the **D.SHIFT/KEystone** button. (P54)
- Select the aspect ratio of the projected image (screen aspect) or a screen mode (aspect) according to the aspect ratio of the screen, type of input image signal etc. (P48 – P53)
- Select an image mode depending on the projected image. (P57)



The image can also be adjusted by projecting a test pattern (P153).

Changing Notebook Computer Screen Output


For projection from a notebook computer, the computer settings must be adjusted to switch display output.

This operation is not required for a desktop computer.

■ Turning on External Monitor Output

You can turn on the external monitor output via keyboard operation.

To turn on the external monitor output with most computers, press the function key ([F1] to [F12]) which is marked with the external monitor icon while holding down the [Fn] key.

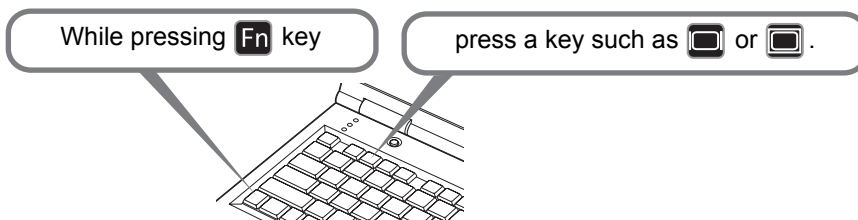

- The function key you use and the method used to turn on the external monitor output vary depending on the model. For details, see the manual for your notebook computer.
- With Windows 8.1, Windows 8 or Windows 7, you can turn on image output by holding down the Windows logo key and pressing the [P] key.


Installation-Related Menu Settings

Locking Installation Settings

MENU > [Install settings] > [**Positional lock**]

- HDMI Component LAN
 Digital PC Analog PC USB

Operation of installation related functions can be prohibited.

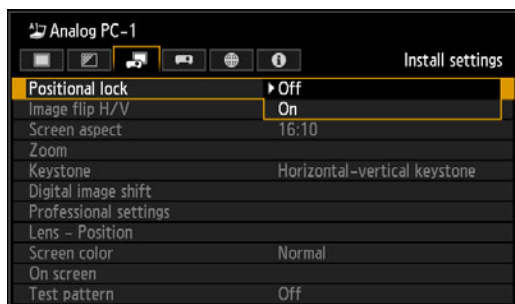

-
- | | |
|------------|--|
| Off | The positional lock is not used. |
| On | Prevents adjustment of installation-related functions. |
-

Press the **OK** button to accept your setting and then press the **MENU** button.


- The factory default is [Off].
- Locking applies to the following settings:
 - Image flip H/V
 - Screen aspect
 - Zoom
 - Keystone
 - Digital image shift
 - Professional settings
 - Save position or Lens shift reset in Lens - Position

Flipping Image Display

MENU > [Install settings] > [**Image flip H/V**]

- HDMI Component LAN
 Digital PC Analog PC USB

Select this setting if you want to hang the projector from the ceiling or project an image from behind the screen.

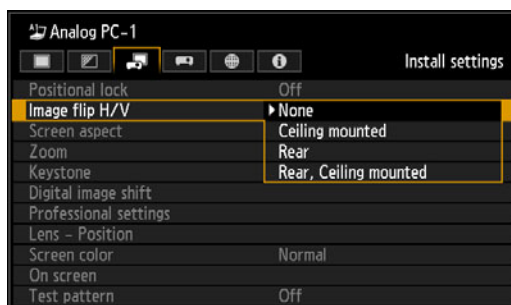


-
- | | |
|------------------------------|--|
| None | Select this to project an image normally. |
| Ceiling mounted | Select this to project an image with the projector hung from the ceiling.
The projected image is inverted in both vertical and horizontal directions. |
| Rear | Select this to project an image from behind the screen.
The projected image is inverted in the horizontal direction. |
| Rear, Ceiling mounted | Select this to project an image from behind the screen with the projector hung from the ceiling.
The projected image is inverted in the vertical direction. |
-


Press the **OK** button to accept your setting and then press the **MENU** button.

- [None] is the factory default.


Normal (None)

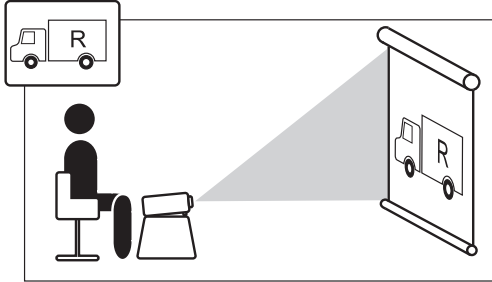


Ceiling Mounting

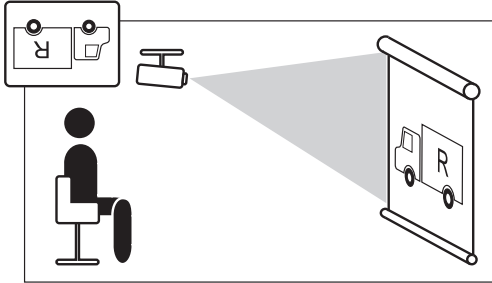

Rear projection

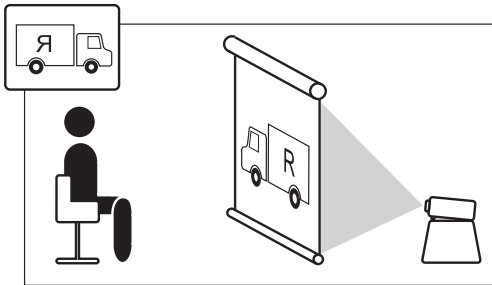

Rear, Ceiling Mounting

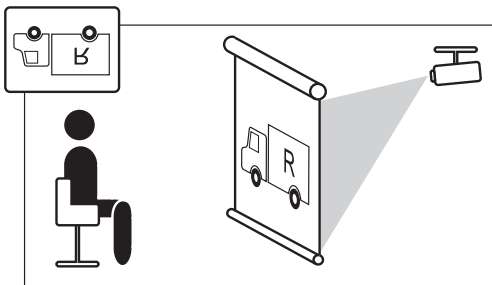

- To hang the projector from the ceiling, use the optional bracket. Contact the Canon Customer Support Center for more detailed information.
- If you flip the image, the keystone distortion adjustment will be reset. Perform the adjustment again.

Specifying the Screen Aspect

MENU > [Install settings] > [Screen aspect]

- HDMI Component LAN
 Digital PC Analog PC USB

Select according to the aspect ratio of the projection screen. (P48)



16:10 Select this when you use a screen with an aspect ratio of 16:10.

16:9 Select this when you use a screen with an aspect ratio of 16:9.

4:3 Select this when you use a screen with an aspect ratio of 4:3.

16:9 D. image shift Select this when you use a screen with an aspect ratio of 16:9. Keystone correction cannot be performed in this mode. However, it is possible to move the image up / down when projecting level. For details about how to move the image, refer to [page 50](#).

4:3 D. image shift Select this when you use a screen with an aspect ratio of 4:3. Keystone correction cannot be performed in this mode. However, it is possible to move the image left / right when projecting level. For details about how to move the image, refer to [page 51](#).

Press the **OK** button to accept your setting and then press the **MENU** button.


- [16:10] is the factory default.
- Changing the screen aspect will reset any keystone or digital image shift setting.
- [Auto] may be automatically selected for the aspect depending on the screen aspect setting.

Adjusting the Size of Projected Images

MENU > [Install settings] > **[Zoom]**

- HDMI Component LAN
- Digital PC Analog PC USB

With the Short Fixed Lens, projected images that do not fit on the screen can be projected at a digitally reduced size.

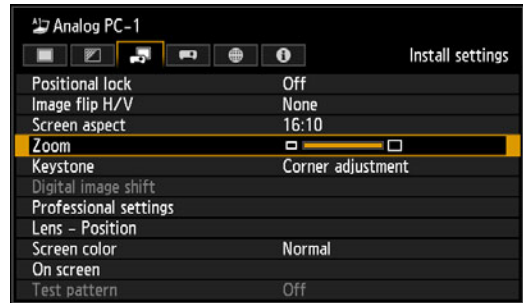

Press the [**◀**] button on the remote control to project images at a reduced size, and press the [**▶**] button to enlarge images to full size. Images can be projected at 75-100% of the original size.

- The factory default is 100%. Switch keystone adjustment ([P144](#)) to [Corner adjustment].

⚠ D.ZOOM buttons on the remote control cannot be used for this [Zoom] function.




- [Zoom] is not available when the following features are used.
 - Horizontal/vertical keystone correction (P54)
 - Split-screen mode (P67)
- Using [Zoom] after specifying corner adjustment (P55) will clear corner adjustment settings and apply the zoom setting. Instead, use [Zoom] before fine-tuning the image position with corner adjustment.
- If images still extend off the screen even after you use [Zoom], you can use corner adjustment (P55) to fine-tune the position of image corners, so that images fit on the screen.
- Switching to lenses other than the Short Fixed Lens will reset the setting to 100%.

Specifying Keystone Correction

MENU > [Install settings] > [Keystone]

- HDMI
- Component
- LAN
- Digital PC
- Analog PC
- USB

Two types of keystone correction are available: horizontal-vertical keystone and corner adjustment. Keystone correction can also be reset. Keystone correction can be applied by pressing the D.SHIFT/KEYSTONE button. (P54)

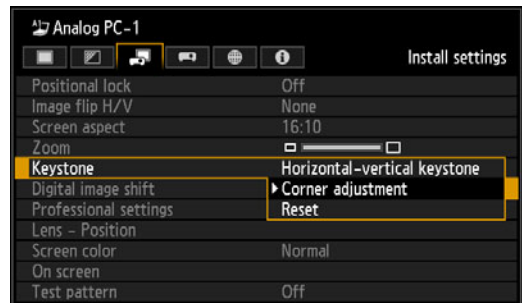

Horizontal-vertical keystone Performs horizontal-vertical keystone correction when the **D.SHIFT/KEYSTONE** button is pressed.

Corner adjustment Performs corner adjustment when the **D.SHIFT/KEYSTONE** button is pressed.

Reset Resets the specified keystone value.

If you press the **D.SHIFT/KEYSTONE** button when the screen aspect is [16:9 D. image shift] or [4:3 D. image shift], you can perform the digital image shift setting.


- Resetting the keystone value will also reset the zoom setting for the Short Fixed Lens (RS-IL03WF).

Specifying Digital Image Shift


MENU > [Install settings] > **[Digital image shift]**

- HDMI Component LAN
 Digital PC Analog PC USB

Moves the position of the projected image.

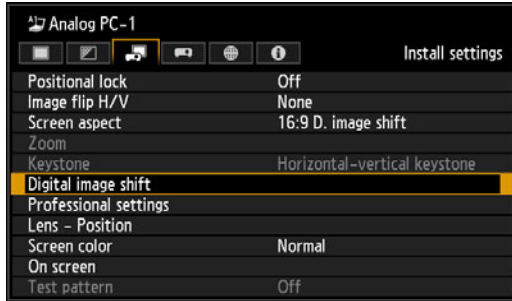

Press the **OK** button or **[▶]** button to display the D. image shift adjustment screen.

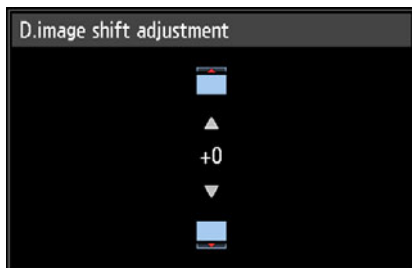

Correct using the **[▲]** / **[▼]** buttons (for 16:9 D. Image Shift) or **[◀]** / **[▶]** buttons (for 4:3 D. Image Shift).

When you have finished correcting, press the **OK** button.


- This cannot be selected when the screen aspect is 16:9, 16:10 or 4:3.
- Vertical image adjustment is available with a screen aspect of [16:9 D. image shift] and horizontal with [4:3 D. image shift].

Specifying Micro Digital Image Shift

MENU > [Install settings] > [Professional settings] > **[Micro-digital image shift]**


- HDMI Component LAN
 Digital PC Analog PC USB

Use this setting to fine-tune the position of the projected image.

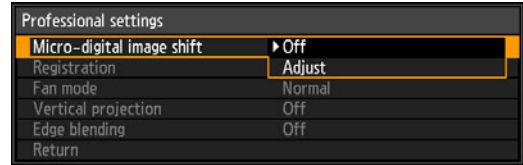

Off Does not perform micro digital image shift.

Adjust Displays the micro digital image shift screen.

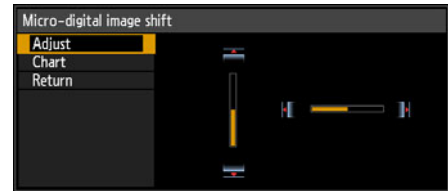

Adjust Fine-tune the projection position. Use the **[▲]** / **[▼]** buttons for vertical shift. Use the **[◀]** / **[▶]** buttons for horizontal shift. When you have completed the adjustment, press the **OK** button.


Chart Displays a chart to assist in adjustment. Watch the chart as you fine-tune the position with this function.

Return When finished, press **OK** to dismiss the chart.

When you have completed the adjustment, press the **MENU** button.


- [Off] is the factory default.

Adjusting Image Registration

 > [Install settings] > [Professional settings] > **[Registration]**

- HDMI Component LAN
 Digital PC Analog PC USB

Adjusts colors that are out of alignment. You can adjust red, green and blue registration independently.

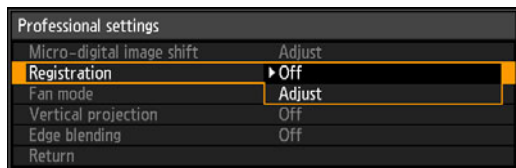

Off Does not perform image registration.

Adjust

Displays the image registration screen.



Red, Green, Blue

Correct misalignment of the corresponding colors. Use the [▲] / [▼] buttons for vertical adjustment. Use the [◀] / [▶] buttons for horizontal adjustment. When you have completed the adjustment, press the **OK** button.

Chart

Displays a chart to assist in adjustment. Watch the chart as you adjust the colors with this function.


Return

When finished, press **OK** to dismiss the chart.

When you have completed the adjustment, press the **MENU** button.

- [Off] is the factory default.

Specifying the Fan Mode

 > [Install settings] > [Professional settings] > **[Fan mode]**

- HDMI Component LAN
 Digital PC Analog PC USB

Enable suitable cooling by switching the fan mode to the setting for low- or high-altitude (above 2,300 m (7,545.8')) operation.




Normal Setting for use in altitudes lower than 2,300 m (7,545.8').

High altitude Setting for use in altitudes of 2,300 m (7,545.8') or higher.

When the setting is completed, press the **OK** button to accept your setting and then press the **MENU** button.

- [Normal] is the factory default.

 Incorrect settings may shorten the useful life of the lamp or other parts.

Specifying Vertical Projection

MENU > [Install settings] > [Professional settings] > **[Vertical projection]**

- HDMI Component LAN
 Digital PC Analog PC USB

You can ensure adequate cooling by switching the fan mode to suit upward- or downward-facing installations.

For precautions, see “Install Facing in the Correct Direction” on [page 117](#).



Off	Does not alter the fan mode.
Upward	Setting for use when the projector faces upward
Downward	Setting for use when the projector faces downward

When the setting is completed, press the **OK** button to accept your setting and then press the **MENU** button.

- [Off] is the factory default.




- Be sure to perform this setting to use vertical projection.
- Even if you complete this setting, vertical projection will result in a shorter useful life of the lamp and other parts than horizontal projection.

Saving and Restoring Lens Positions


MENU > [Install settings] > **[Lens - Position]**

- HDMI Component LAN
 Digital PC Analog PC USB

The projector can save information about the lens position in memory. Up to three sets of lens information (including focus, zoom, and lens shift settings) can be saved, and the lens can be restored to these positions.

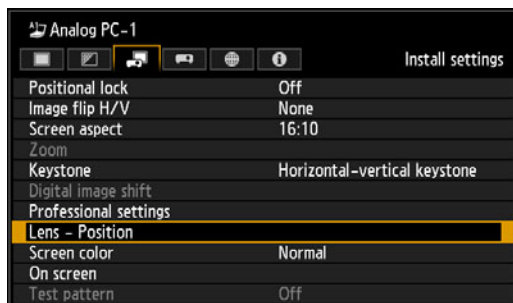

If the **OK** button or **[▶]** button is pressed, the [Lens - Position] screen is displayed.

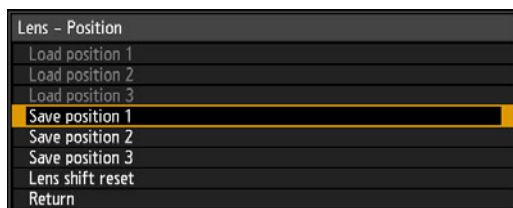

Select using the **[▲]** / **[▼]** buttons. The following options are available on the [Lens - Position] screen.


Load position 1-3	Restores the lens to the positions saved using Save position 1-3.
Save position 1-3	Saves the lens position as positions 1-3.
Lens shift reset	Restores the lens to the original position.

Press the **OK** button to accept your setting and then press the **MENU** button.

- To lock (protect) the saved position, set [Positional lock] (P141) to [On].
- [Load position] is not available unless you perform [Save position] once.
- The values of the following settings are saved in addition to the lens position information:
 - Horizontal/vertical keystone / corner adjustment
 - Screen color
 - Screen aspect
 - Zoom
 - Digital image shift
- The original lens position varies depending on the type of lens used.

- When saved lens positions are restored, images may be projected in a slightly different position than the saved position.
- Specifying a somewhat smaller image size than the screen size (image area) enables you to switch among multiple lens positions without having the image extend off the screen.
- When precise positioning is needed, use lens shift, zoom, and focus functions for fine adjustment.

Screen Color Adjustment

 > [Install settings] > [Screen color]

- HDMI Component LAN
 Digital PC Analog PC USB

 
You can adjust the color quality of the images projected according to the color of the projection screen.



Normal Select this if a standard type of projection screen is used. The images are projected in a light quality similar to that of natural light.

Greenboard Select this if a greenboard (dark green color) is used for the projection screen. The color quality similar to [Normal] is obtained on the greenboard.

Adjust Select this to make detailed adjustment. The following popup screen will appear.



Press the [▲] / [▼] buttons to select a color.

[▶] makes the color selected darker.

[◀] makes the color selected lighter.

Press the **OK** button to accept your setting and then press the **MENU** button.

- [Normal] is the factory default.

Specifying a Menu Position


 > [Install settings] > [On screen] > **[Menu position]**

- HDMI Component LAN
 Digital PC Analog PC USB

You can change the position of menus displayed.


On screen	
Menu position	
Guide	On
Show input status	On
Overheat warning display	Off
Menu display time	Normal
Lamp warning display	On
Air filter warning display	On
Split screen ID display	On
Return	

Use the [▲] / [◀] / [▼] / [▶] buttons to move the menu to the desired position.

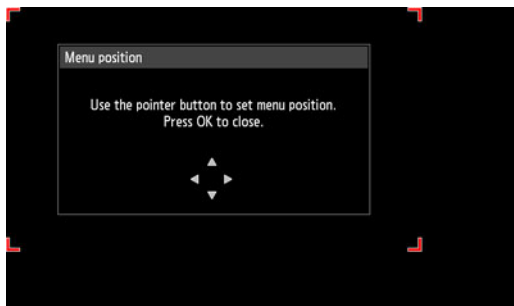

After you have moved the menu to the desired position, press the **OK** button to accept your setting, and then press the **MENU** button.

Showing/Hiding the Guide Screen

 > [Install settings] > [On screen] > **[Guide]**

- HDMI Component LAN
 Digital PC Analog PC USB

You can select whether to show or hide the guide screen which explains operations.

On screen	
Menu position	
Guide	Off
Show input status	▶ On
Overheat warning display	Off
Menu display time	Normal
Lamp warning display	On
Air filter warning display	On
Split screen ID display	On
Return	


Off Hides the guide screen.

On Shows the guide screen.

Press the **OK** button to accept your setting and then press the **MENU** button.


- The factory default is [On].
- The guide screen is shown at the following times.
 - When no input signal can be detected. (P140)
 - When an invalid button is pressed in the [BLANK], [FREEZE] or [D.ZOOM] mode. (P62, P64)
 - When the positional lock is set to [On]. (P141)
 - When the projector is already on and the **POWER** button is pressed.

Showing/Hiding Input Status

 > [Install settings] > [On screen] > [Show input status]

- HDMI Component LAN
 Digital PC Analog PC USB

You can select whether the signal status is displayed on the screen when there is no signal or when making signal settings.

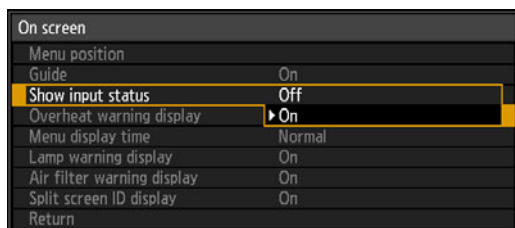


Off The input status is not displayed.

On The input status is displayed.

Press the **OK** button to accept your setting and then press the **MENU** button.


- The factory default is [On].

Showing/Hiding Overheat Warnings

 > [Install settings] > [On screen] > [Overheat warning display]

- HDMI Component LAN
 Digital PC Analog PC USB

You can select whether or not to display the [High temperature warning] icon when the temperature inside the projector has increased and is approaching the overheat temperature.

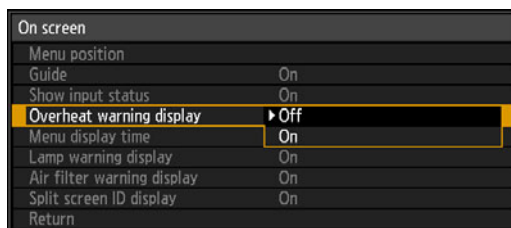


Off The [High temperature warning] icon is not displayed.

On The [High temperature warning] icon is displayed.

Press the **OK** button to accept your setting and then press the **MENU** button.

When [On] is set, the [High temperature warning] icon shown below will be displayed when the temperature inside the projector is abnormally high.

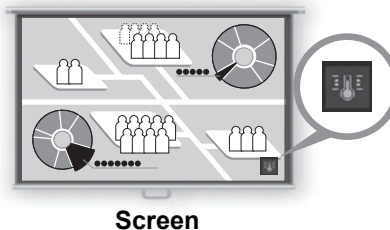


- [Off] is the factory default.

Specifying the Menu Display Time

 > [Install settings] > [On screen] > [Menu display time]

- HDMI Component LAN
 Digital PC Analog PC USB

The setting for the menu display time can be extended from the normal 10 or 30 seconds to 3 minutes.

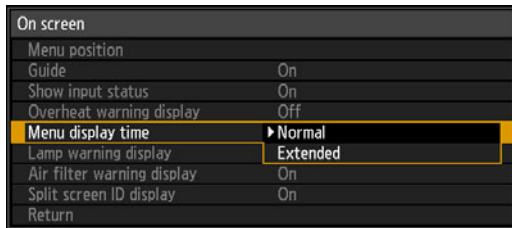

Normal The menu is displayed for 10 or 30 seconds.

Extended The menu is displayed for 3 minutes.

Press the **OK** button to accept your setting and then press the **MENU** button.

- [Normal] is the factory default.
- The following display times are also changed.

Item	[Normal]	[Extended]
-MENU screen	30 seconds	3 minutes
-Input (P40) -Keystone adjustment (P54) -Keystone reset (P56) -Focus adjustment (P44) -Zoom adjustment (P45) -Lens shift adjustment (P46) -Lens shift reset (P147) -D.image shift adjustment (P50, P51) -D.image shift reset (P52) -Aspect (P53) -Image Mode (P57) -Volume adjustment (P63) -Gamma correction (P87)	10 seconds	3 minutes

Showing/Hiding Lamp Replacement Warnings

 > [Install settings] > [On screen] > [Lamp warning display]


- HDMI Component LAN
 Digital PC Analog PC USB

A message that advises you to change the lamp can be set to display when the lamp has been used for the specified period of time.



Off The prepare lamp message and the lamp warning are not displayed.


On The prepare lamp message and the lamp warning are displayed.

 When it is time to replace the lamp, the LAMP indicator on the projector will flash, and lamp replacement (P199) is recommended at this time.

Press the **OK** button to accept your setting and then press the **MENU** button.

- The factory default is [On].

Showing/Hiding Filter Cleaning Warnings

 > [Install settings] > [On screen] > **[Air filter warning display]**

- HDMI Component LAN
 Digital PC Analog PC USB

A message advising you to perform cleaning can be set to display when the filter needs cleaning.




Off The air filter warning is not displayed.

On The air filter warning is displayed.

Press the **OK** button to accept your setting and then press the **MENU** button.

- The factory default is [On].

 Setting [Air filter warning display] to [Off] will disable the warning about cleaning the air filter. We recommend checking the air filter counter (P110) occasionally to determine when to replace the filter. When the counter passes 300 hours, clean the filter (P194).

Showing/Hiding Split-Screen ID

 > [Install settings] > [On screen] > **[Split screen ID display]**

- HDMI Component LAN
 Digital PC Analog PC USB

Specify whether to show or hide the digit (1 or 2) that identifies screens in split-screen mode. Note that even if you select [Off], a marker will be displayed in the corner of the screen to identify the screen that has control rights.




Off Hides the screen ID.

On Shows the screen ID.

When you have completed the adjustment, press the **OK** button to accept your setting and then press the **MENU** button.


- The factory default is [On].

Displaying Test Patterns

MENU  > [Install settings] > [**Test pattern**]

- HDMI Component LAN
 Digital PC Analog PC USB

You can project a test pattern (**P213**) to check resolution, color, and other details even without supplying an input signal.

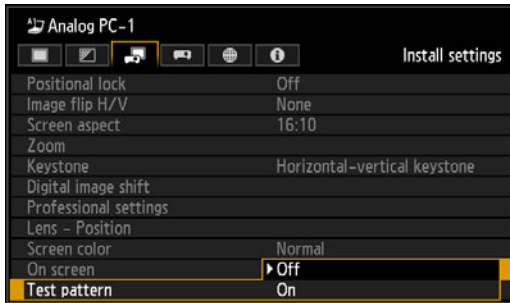


Off Stop displaying the test pattern.

On Display the test pattern.

Press the **OK** button to accept your setting and then press the **MENU** button.


- [Off] is the factory default.
- During test pattern display, you can use the **[▲]** / **[▼]** buttons to switch test patterns. Additionally, if a test pattern has option settings, you can change the settings using the **[◀]** / **[▶]** buttons. (**P213**)

Projecting from Multiple Projectors at Once (Edge Blending)

 > [Install settings] > [Professional settings] > **[Edge blending]**


- HDMI Component LAN
- Digital PC Analog PC USB

Overlapping edges of images from multiple projectors used together can be blended to make the overall image more seamless.

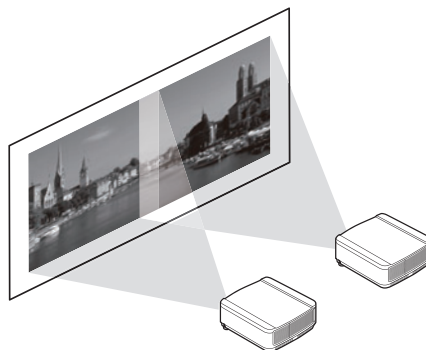

■ Basic Instructions

Follow these steps when using two projectors side by side.


-  • To simplify adjustment, use the same lens shift position and image mode (ideally, [Photo/sRGB]) on each projector.
- For optimum edge-blending results, perform the following adjustments.
 - (1) Black level, white level, and color temperature (P88) by adjusting brightness (P86), contrast (P86), R/G/B gain and offset
 - (2) Color adjustment by using 6-axis color adjustment (P92)
 - (3) Gamma adjustment by fine-tuning gamma (P93)

1 In the [Install settings] menu, select [Professional settings] > [Edge blending].

2 Select [Adjust].



The edge blending window is displayed.

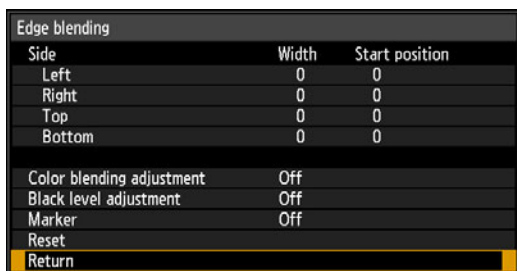

Here, you can use the following settings in the edge blending menu.

Off		Do not blend overlapping areas.
Adjust		Display the menu for blending overlapping areas.
Side		
	Left, Right, Top, Bottom	Width
		Start position
		Specify the width between the start and end markers.
		Moves the start position marker.
Color blending adjustment	Off	Do not adjust colors of blended images.
	Adjust	Adjust the color of overlapping area. (P157)
Black level adjustment	Off	Do not adjust the black level.
	Adjust	Adjust the black level of non-overlapping image areas. (P158)
Marker	Off	Hide the markers.
	On	Display markers showing the adjustable blending area, with a red line at the beginning and a green line at the end.
Reset		Reset the marker settings.



- If you have already completed edge blending settings, selecting [Adjust] will apply them.
- To restore the default settings before adjustment, select [Reset].

3 Set [Marker] to [On].


Marker lines are projected on the images. The red marker indicates the start position for adjustment, and the green marker, the end position.



- By default, the green and red markers are displayed in the same position, so only the red marker is visible.

4 Select the position where the images overlap.

When you are adjusting the left image, this area is along the right edge of the image. In the edge blending window, select [Side] > [Right].

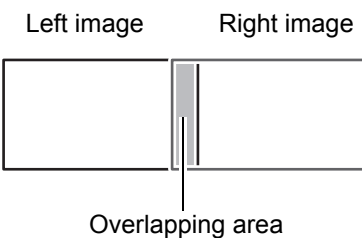

5 Use the remote control's [▶] button to select [Start position], and use the [▲] / [▼] buttons to move the marker to the right edge where the images overlap.

6 Use the remote control's [◀] button to select [Width], and use the [▲] / [▼] buttons to move the marker to the overlapping area.

The area between the starting and ending markers is called the blending area. Brightness of this area is automatically adjusted to match the brightness of other image areas. After you complete settings for the left image, do the same thing for the right image, to specify the blending area along the left edge. Adjust the area so that the blending area for the left and right images is the same.


⚠ Specifying a large blending area may cause dialog boxes for input signal selection or status to be covered by the blending area. In this case, momentarily switch edge blending from [Adjust] to [Off], check the display, and then return the setting to [Adjust].



Although the starting marker is normally aligned with the image edge, it can also be aligned more toward the center of the image. In this case, the black blending area will lie outside of the starting marker.

7 Set [Marker] to [Off].

Edge Blending with Four Projectors

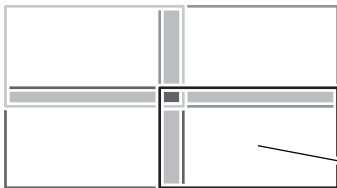

Images from four projectors can also be blended, as shown at left.

Specify the blending area where each image overlaps with others.


Example: When specifying the blending area for the lower-right image, configure the settings for blending areas along the top and left image edges.

Complete the settings for the other three images the same way for the edges that overlap.

■ Advanced Instructions: Color Adjustment

In overlapping projection, portions of images in the overlapping area that pick up other colors or are miscolored may be more noticeable. You can make this overlapping area appear less distracting by performing [Color blending adjustment].

- 1 On the edge blending screen of step 2 in “Basic Instructions” (P154), select [Color blending adjustment] > [Adjust].

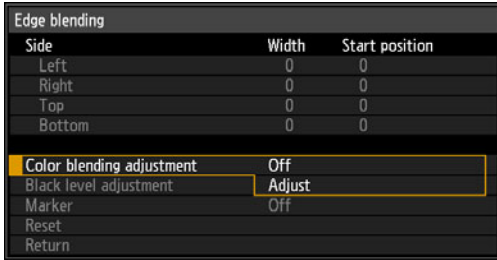

The color blending adjustment window is displayed. Here, you can use the following settings in the edge blending menu.

Color blending adjustment	Adjust the color of overlapping area.
Off	
Adjust	
White	Adjust the white level.
Red	Adjust the red level.
Green	Adjust the green level.
Blue	Adjust the blue level.

- 2 Select [White] and use the remote control’s [◀] / [▶] buttons to adjust the value for white.




As you watch the image, adjust the value to eliminate unwanted colors in the overlapping area.

First adjust red, green, and blue together by changing the [White] value, and then adjust [Red], [Green], and [Blue] values individually.

- 3 Repeat this adjustment on all projectors.

■ Advanced Instructions: Black Level Adjustment

In overlapping projection, dark colors are projected with less intensity than other colors in the overlapping area. For this reason, overlapping image areas might be more noticeable when the images themselves are dark. You can make this overlapping area less distracting by adjusting the black level of non-overlapping image areas.

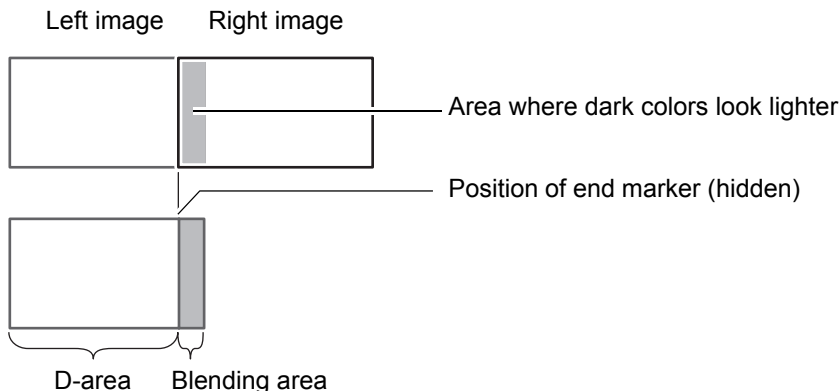


Here, the non-overlapping image area (from the end marker toward the center of the image) is called area “D.”

Normally, three areas are identified in the context of end markers: A, B, and C. In the following instructions, only area D is adjusted, and the widths of A, B, and C are left at the default value of 0.



To prepare for adjustment, set [No signal screen] to [Black], start projection with no input signal, and turn off the room lights, so that you can check dark image areas. (P97)

- 1 On the edge blending screen of step 2 in “Basic Instructions” (P154), select [Black level adjustment] > [Adjust].

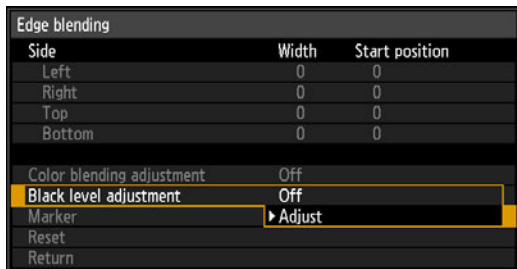


The black level adjustment window is displayed.


Here, you can use the following settings in the edge blending menu.

Black level adjustment	Adjust the black level of non-overlapping image areas.	
Off		
Adjust		
	Adjustment type	Black level
	D-area base	Adjust the area D black level.
	D-area red	Adjust the red component of the area D black level.
	D-area green	Adjust the green component of the area D black level.
	D-area blue	Adjust the blue component of the area D black level.

2 Select [Adjustment type] > [Black level].

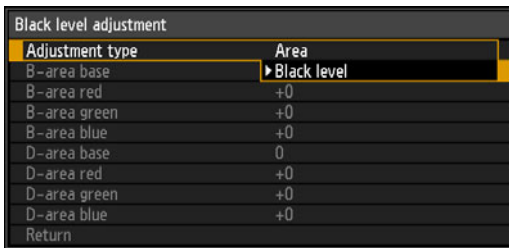

3 Select [D-area base], and use the remote's [◀] [▶] buttons to adjust the values for area D.

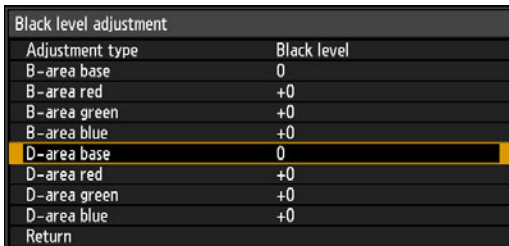


As you watch the image, adjust the values so that the brightness and colors of the blending area and area D match. Adjust [D-area base] to lighten the black level, and adjust [Red], [Green], and [Blue] to obtain an optimal black level color tone, as needed.

4 Repeat this adjustment on all projectors.

■ Advanced Instructions: Smoother Overlapping Areas

Adjustments to areas A, B, and C may make the black level along the right edge of area D (that is, the edge bordering the blending area) more noticeable than that of surrounding areas.

To compensate, adjust each area as follows.

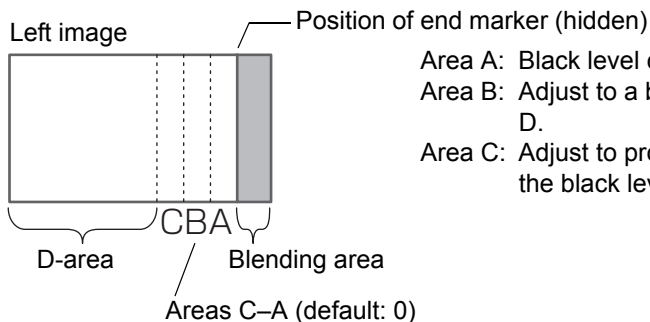

Area A: Black level cannot be adjusted.

Area B: Adjust to a black level different from that of area D.

Area C: Adjust to provide a smooth transition relative to the black levels of areas B and D.

Black level adjustment	Adjust the black level of non-overlapping image areas.	
	Off	
	Adjust	
	Adjustment type	Area
	Side	On the image for adjustment, select the edge to adjust (left/right/top/bottom).
	A-Width	Adjust the width of area A.
	B-Width	Adjust the width of area B.
	C-Width	Adjust the width of area C.

When there are multiple blending areas relative to the projected image (on all edges), you must adjust the width of areas A, B, and C.

In this example, instructions are given for adjusting area B.

- 1 In the window of step 2 in “Advanced Instructions: Black Level Adjustment” (P158), select [Adjustment type] > [Area] > [Side] > [Right].**



2 Select [B-width], and use the remote's [◀] [▶] buttons to specify the width of area B.

This will make the width of area D narrower.

Black level adjustment	
Adjustment type	Area
Side	Right
A-width	0
B-width	0
C-width	0
Return	

3 Adjust the width of area B to roughly match the area where the black level is noticeable, and then use the following edge-blending settings to adjust the black level of area B.

Adjust the black level of area B the same way as you adjusted it for area D.

Black level	
B-area base	Adjust the area B black level.
B-area red	Adjust the red component of the area B black level.
B-area green	Adjust the green component of the area B black level.
B-area blue	Adjust the blue component of the area B black level.

For adjustment instructions, see “Advanced Instructions: Black Level Adjustment” (P158), step 3.



Results of adjusting the black level of area B are applied to all sides.

4 Fine-tune the position and width of area B.

5 As you watch the image, adjust the width of areas A, B, and C.

6 Readjust the black level of area B, as needed.

7 When you have completed the adjustment, press the MENU button.

- [Off] is the factory default.
- To reduce distracting colors and colors that are out of alignment in areas where the images overlap, perform [Color blending adjustment] targeting the main tone in the envisaged projected image.



If you perform adjustments using [Color blending adjustment] or other menus, that may not eliminate the distracting colors and differences in brightness in areas where the images overlap.

Connecting to a Network

Table of Contents

Safety Instructions

Before Use

Operation

Projecting an Image

Useful Functions Available During a Presentation

Setting Functions from Menus

Installation and Maintenance

Installation

Connecting to a Network

Maintenance

Appendix

Other Information

Index


Network Connection Overview

Connecting the projector to a network enables you to control the projector from a computer and receive notification of projector errors via email. Settings related to the network connection can be made from either the projector side (P165) or computer side. (P173)

Depending on the method of network connection, preparation on the computer side may be necessary. The following is an explanation of preparation on the computer side.

Connection Methods

Connect the projector to the computer via LAN.

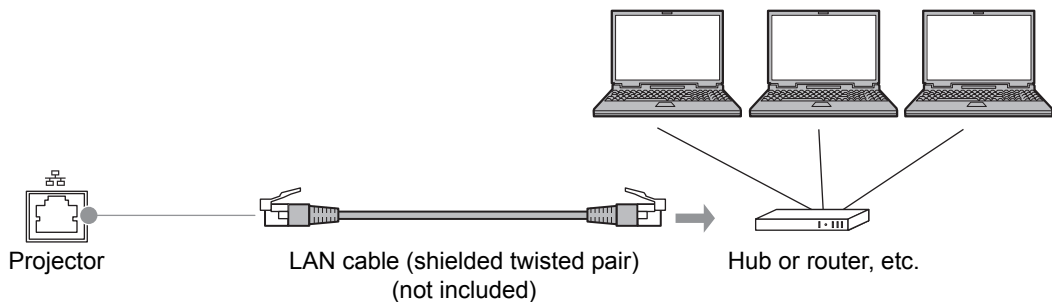

- When the [Network function] setting of the projector is set to [Off] (Network Connections is disabled), switch it to [On] to enable it. (P168)
- Referring to “Checking Projector Information” (P112), check that the projector IP address does not overlap with other computers that are on the same LAN. To set a projector IP address, follow the instructions in “Completing Computer Settings” (P173) and use the web screen, or use projector TCP/IP settings. (P169)
- When you connect the computer to the network for the first time, it is also necessary to perform settings on the computer. In this case, consult the network administrator regarding the necessary settings.




In a network environment where a DHCP server is operating, choose [On] on the projector [DHCP] screen to enable the DHCP function and connect it. (P169)


Completing Projector Settings

From the projector menu screen, network settings can be configured in the [Network Setting] tab. For instructions on menu operations, refer to “Using Menus”. (P72)

Locking/Unlocking Network Settings

 > [Network Settings] > [Network settings lock]

You can lock/unlock the network settings so that they cannot be changed.

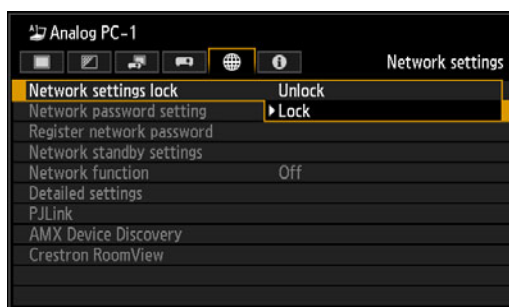

Unlock Cancels the lock and allows other network settings to be changed. The password must be entered in order to cancel the lock. Selecting [Unlock] will display the following window. Use the [▲] / [▼] / [◀] / [▶] buttons to enter the 4-digit password.



Lock Lock the settings.


Press the **OK** button to accept your setting, and then press the **MENU** button to close the window. The settings are now locked again. If you change the network settings, be sure to continue operating without closing the window.

- To keep the lock canceled, set [Network password setting] to [Off].


Forcibly canceling the network lock

On the Network password input screen, press the buttons in the following order to unlock the settings: [▲] [OK] [▶] [OK] [▼] [OK]. This will reset the network password to [▲] [▲] [▲] [▲].

Specifying the Network Password

 > [Network settings] > [Network password setting]

You can set whether or not a password is required in order to change the projector network settings.

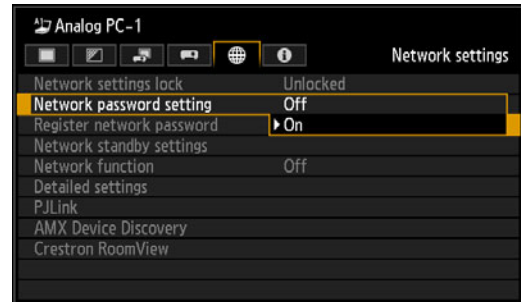

Off A network password is not used.

On A network password is used.


Press the **OK** button to accept your setting and then press the **MENU** button.

- The factory default is [On].

Registering a Network Password

MENU > [Network settings] > [**Register network password**]

Register the projector network password.

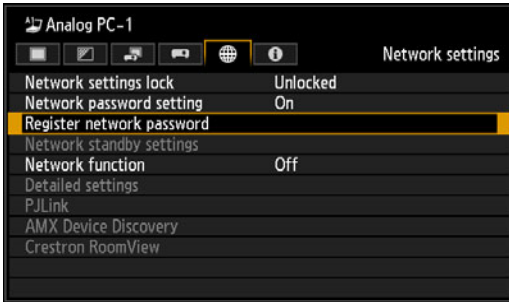

When [Register network password] is selected, the window shown below appears.

Enter a 4-digit password.

Enter the password using the [▼] / [▲] / [◀] / [▶] buttons on the remote control.




Press the **OK** button to accept your setting and then press the **MENU** button.

- If you forget the password, press [▲] [OK] [▶] [OK] [▼] [OK] to restore the factory default setting.
- The factory default is [▲] [▲] [▲] [▲].

Specifying Standby Power Consumption

MENU > [Network settings] > [**Network standby settings**]

Specify network function operating status in standby mode as follows.

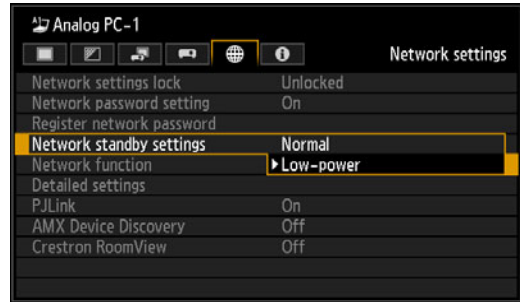

Normal All network functions are available even in standby mode, including the web screen, control over the network, and PJLink.

Low-power All network functions are available even in standby mode. However, the projector may be less responsive than usual when some functions are initially used.


Press the **OK** button to accept your setting and then press the **MENU** button.

- [Low-power] is the factory default.
- [Low-power] may delay access over the network for some functions. For faster access, select [Normal].
- Power consumption when [Network function (wired)] is [On] varies depending on whether [Network standby settings] is set to [Normal] or [Low-power].

Specifying the Network Function

MENU > [Network settings] > [Network function]

You can turn the projector network function on or off. Power can be saved by turning the function [Off].

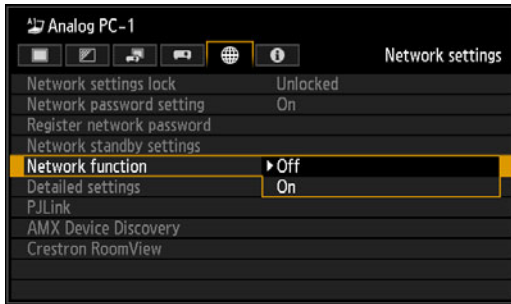

Off Disables the network function.

On Enables the network function.

Press the **OK** button to accept your setting and then press the **MENU** button.

- [Off] is the factory default.

Viewing the IP Address, Gateway Address, and MAC Address

MENU > [Network settings] > [Detailed settings] > [IP address]

View the projector's IP address as follows.

Note that the information can only be displayed, not changed.


To change the settings, access the DHCP or TCP/IP settings.

MENU > [Network settings] > [Detailed settings] > [Gateway address]

View the projector's gateway address as follows.

Note that the information can only be displayed, not changed.


MENU > [Network settings] > [Detailed settings] > [MAC address]

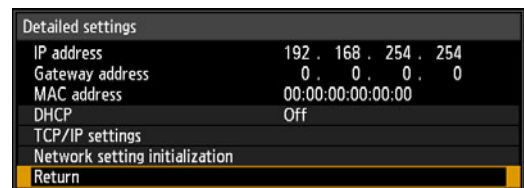

Specifying DHCP

 > [Network settings] > [Detailed settings] > [DHCP]

You can enable or disable the DHCP function of the projector.

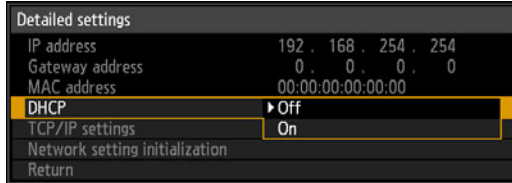


Off Disables the DHCP function. TCP/IP settings are possible.

On Enables the DHCP function. Searches the DHCP server. Because the IP address is acquired from the DHCP server, it is not necessary to enter the TCP/IP settings (IP address, subnet mask, gateway address).


Press the **OK** button to accept your setting and then press the **MENU** button.

- [Off] is the factory default.

Specifying TCP/IP Settings


 > [Network settings] > [Detailed settings] > [TCP/IP setting]

Configure the projector TCP/IP settings.

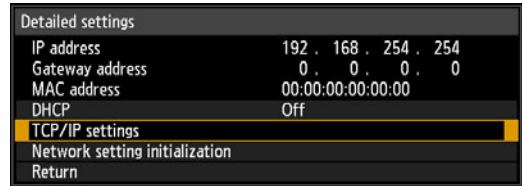

When [TCP/IP setting] is selected, the window shown below appears. Use the [**▲**] / [**▼**] buttons to select the IP address, then press the **OK** button. Next, use the [**◀**] / [**▶**] buttons to select the digit and the [**▲**] / [**▼**] buttons to change the value.

Press the **OK** button, then set the subnet mask and gateway address in the same way. Finally, select [Enter].

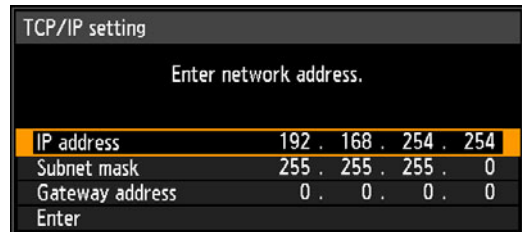


- The factory default settings are as follows.
IP address: 192.168.254.254
Subnet mask: 255.255.255.0
Gateway address: 0.0.0.0
- Settings cannot be made when [DHCP] (P169) is [On].
- If an invalid value is entered, the message “Invalid entry” appears. If this occurs, enter a valid value.


Initializing Network Settings

MENU > [Network settings] > [Detailed settings] > **[Network setting initialization]**

You can initialize the projector network settings.

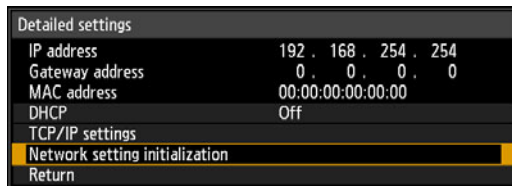

When [Network setting initialization] is selected, the window shown below appears. Select [Yes] then press the **OK** button.

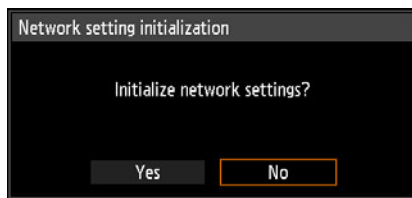


- The following items are initialized.
 - Settings used for web login, such as the network setting screen, user name, password, and other settings
 - Network password setting
 - Network function
 - Network standby settings
 - Register network password
 - PJLink
 - DHCP
 - IP address
 - Subnet mask
 - Gateway address
 - E-mail sender address
 - E-mail recipient address
 - Projector name
 - Comments
 - AMX Device Discovery settings
 - Crestron RoomView settings

Specifying PJLink Settings

MENU > [Network settings] > **[PJLink]**

You can enable or disable the PJLink network function of the projector. When the function is turned on, control is possible via the LAN using commands that meet PJLink standards.

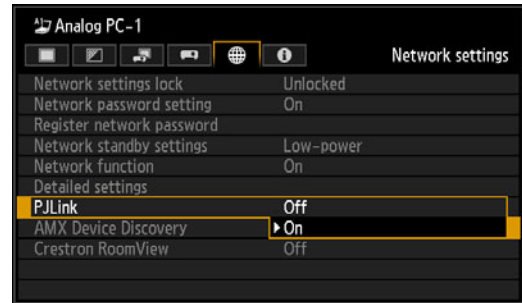

Off Disables the PJLink function.

On Enables the PJLink function.

Press the **OK** button to accept your setting and then press the **MENU** button.

- [On] is the factory default.
- This projector conforms to Class 1 as defined in the PJLink standards of the JBMIA (Japan Business Machine and Information System Industries Association). This projector supports all commands that are defined by PJLink Class 1, and has been verified as conforming to the PJLink standard Class 1 definition.
- For information about using PJLink, refer to “Setting PJLink [PJLink]” (P187).

What is PJLink?

In September 2003, the PJLink Working Group was established under the Data Projector Committee. During the first year, this PJLink Working Group standardized PJLink as a new interface specification for projectors.

PJLink is a unified standard for operation and control of projectors. It allows centralized control of projectors and operation from a controller for all projectors regardless of manufacturer.

The objective is for JBMIA to improve convenience for users and expand the use of projectors through early systemization for network monitoring and control of projectors, which will become the mainstream in the future.

Class 1: Standardization of control and monitoring specifications for basic projector functions
 Basic projector control: Power control, input selection, etc.

Acquisition of projector information and status: Power status, input selection status, error status, lamp use time, etc.

JBMIA: Japan Business Machine and Information System Industries Association.
 The JBMIA is an organization which was launched in 1960 and changed its name on April 1, 2002.

PJLink website:
<http://pjlink.jbmia.or.jp/english/>




PJLink is a registered trademark of JBMIA and pending trademark in some countries.

Specifying AMX Device Discovery

 > [Network settings] > [AMX Device Discovery]

In a network environment, AMX Device Discovery can be used to enable other equipment to discover the projector. For networks without AMX Device Discovery, select [Off].

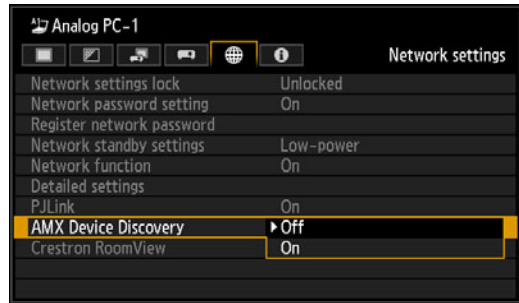

Off Disables AMX Device Discovery.


On Enables AMX Device Discovery. The projector will periodically send out AMX beacon packets over the network.

- [Off] is the factory default.




For details on AMX Device Discovery, visit the AMX website.
<http://www.amx.com/>

Specifying Crestron RoomView

 > [Network settings] > [Crestron RoomView]

Crestron RoomView enables centralized management of multiple projectors over a network. For example, projectors can be remotely controlled to troubleshoot issues, check the useful life of lamps, or turn the projectors on or off. Specify whether or not to use Crestron RoomView as follows.

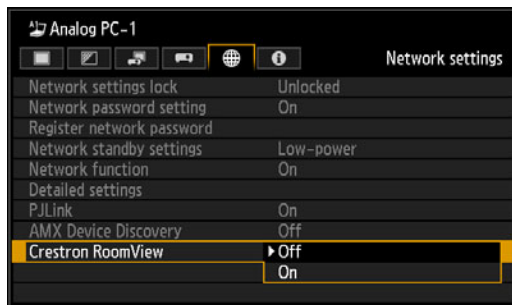

Off Disables Crestron RoomView.

On Enables Crestron RoomView. A port for RoomView will be opened, and the projector will respond to CIP packets. This enables communication via the RoomView Express/Server application or via Crestron Controller. (P187)

- [Off] is the factory default.



For details on Crestron RoomView, visit the Crestron® website.
<http://www.crestron.com/>

Specifying an IP Address

Following is an explanation of how to set the PC IP address for each operating system.

■ Windows 8

- 1 Right-click on the start screen background and click [All Apps] in the lower right.**
 - Windows 8.1 Users:
Click the down arrow in the lower left of the start screen.
- 2 Click [Control Panel].**
 - From the Desktop:
Press Win+X.
In the shortcut menu displayed in the lower left, click [Control Panel].
- 3 Click [View network status and tasks].**
 - In Icon View:
Click [Network and Sharing Center].
- 4 Click [Change adapter settings].**
- 5 Right-click [Ethernet], and then click [Properties].**
- 6 In the [This connection uses the following items] list, select [Internet Protocol Version 4 (TCP/IPv4)] and click the [Properties] button. Make a note of the original network settings (IP address, subnet mask, default gateway, etc).**
- 7 Select [Use the following IP address] and set the IP address and subnet mask.**


The factory default IP address for the projector is “192.168.254.254”. Set an IP address which is different from this.

Completing Computer Settings

Example

IP address: 192.168.254.1

Subnet mask: 255.255.255.0

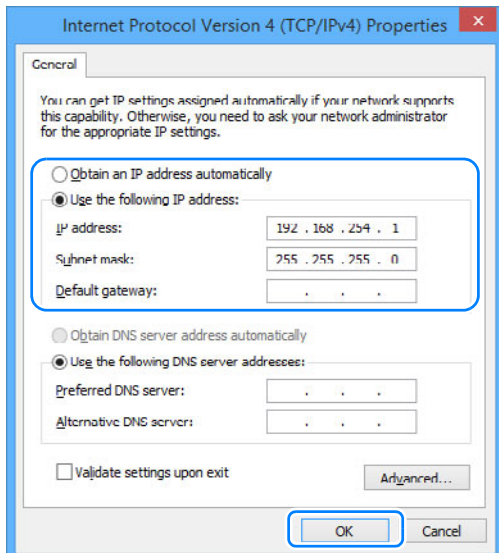

- 8 When finished, click the [OK] button, and then click the [Close] button in the [Ethernet Properties] window to close it.


■ Windows 7

- 1 From the PC [Start] menu, select [Control Panel].
- 2 Click on [Network and Internet], then click on [View network status and tasks].
- 3 From the menu on the left side of the window, click on [Change adapter settings].
- 4 Right-click [Local Area Connection], and open [Properties].
- 5 Select [Internet Protocol Version 4 (TCP/IPv4)] and click the [Properties] button. Make a note of the original network settings (IP address, subnet mask, default gateway, etc).
- 6 Select [Use the following IP address] and set the IP address and subnet mask.
The factory default IP address for the projector is "192.168.254.254". Set an IP address which is different from this.

Example

IP address: 192.168.254.1

Subnet mask: 255.255.255.0

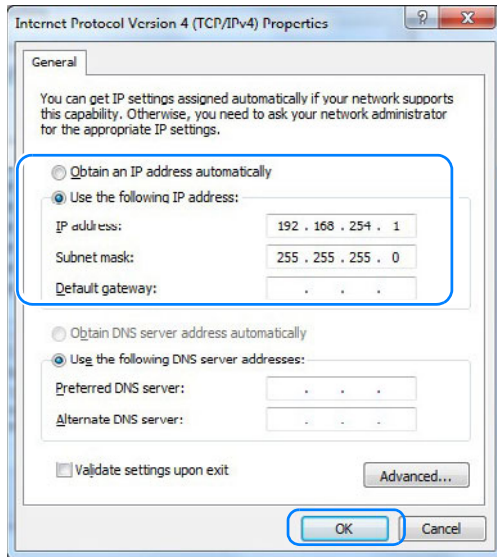

7 When the settings are completed, click the [OK] button and then click the [OK] button on the [Local Area Connection Properties] window to close it.

■ **Windows Vista**

- 1** From the PC [Start] menu, select [Control Panel].
- 2** Click on [View network status and tasks].
- 3** From the menu on the left side of the window, click on [Manage network connections].
- 4** Right-click [Local Area Connection], and open [Properties].
- 5** Select [Internet Protocol Version 4 (TCP/IPv4)] and click the [Properties] button. Make a note of the original network settings (IP address, subnet mask, default gateway, etc).


6 Select [Use the following IP address] and set the IP address and subnet mask.
 The factory default IP address for the projector is “192.168.254.254”. Set an IP address which is different from this.

Completing Computer Settings

Example

IP address: 192.168.254.1

Subnet mask: 255.255.255.0

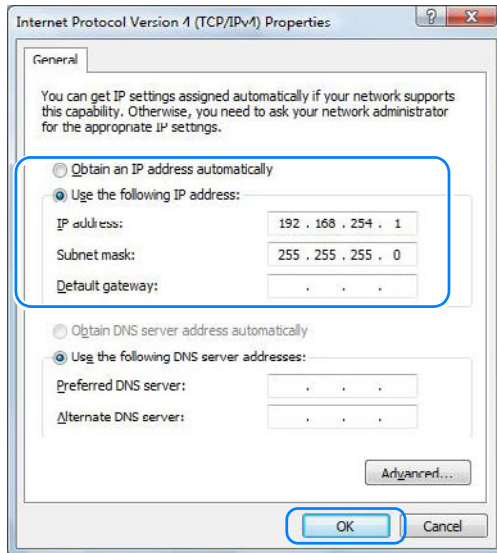

- 7 When the settings are completed, click the [OK] button and then click the [OK] button on the [Local Area Connection Properties] window to close it.


■ Mac OS X

- 1 Open the Apple Menu and select [System Preferences].
- 2 In the System Preferences window, click [Network] to display the Network window.
- 3 Select [Built-in Ethernet] and click the [TCP/IP] tab. Make a note of the original network settings (IP address, subnet mask, router, DNS server, etc.).
- 4 Create a new network environment and set the IP address and subnet mask.
The factory default IP address for the projector is "192.168.254.254". Set an IP address which is different from this.

Example

IP address: 192.168.254.1

Subnet mask: 255.255.255.0

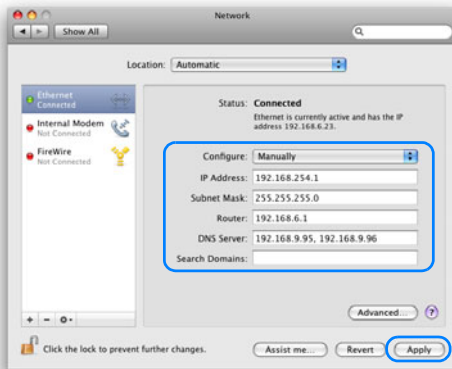

5 Click [Apply] to close the network preference window.

■ Resetting the IP Address Setting of the Computer

Follow the same procedure as for changing the IP address and reset the values to the original values based on the notes taken before the change.

Setting Up the Network

■ Displaying the Network Configuration Screen

1 Turn on the computer and projector.



Network functions are not available for the first 40 seconds after projector startup.

2 Launch a web browser, enter “http://(projector IP address)” in the address bar, and press the Enter key.

The projector web screen appears.



Completing Computer Settings

The following information is displayed.

Network Multiple Projection Download	For downloading the Networked Multi-Projection (NMPJ) program.*
Projector control	Displays the projector control screen.
Settings	Shows the settings screen.
Projector name	The name of the projector on the network
Comment	Relevant notes, such as where the projector is installed
MAC address	The MAC address of the projector
IP address	The IP address of the projector
PowerStatus	The power status of the projector
LampModeFullPower	Lamp operating time in [Full power] lamp mode
LampModePowerSaver	Lamp operating time in [Power saver] lamp mode
LampTimeConverted	Lamp operating time (converted value)
FilterTime	Air filter operating time
Alert	Error message (if an error has occurred) Temperature abnormality Faulty lamp Faulty cooling fan Faulty air filter unit Faulty power supply Faulty lens connector Unknown error

* For details on downloading the Networked Multi-Projection (NMPJ) application, refer to the separate user's manual.



The factory default IP address is "192.168.254.254". If DHCP settings are used, ask the network administrator for the projector IP address. It is possible to check the IP address from the projector menu. (P112)


3 Click [Settings] on the web screen.

The password input window appears.

4 Enter the user name and password on the password input window, then click [OK].

The factory default user name is "root" and the password is "system".


The projector settings screen is displayed in the web browser.

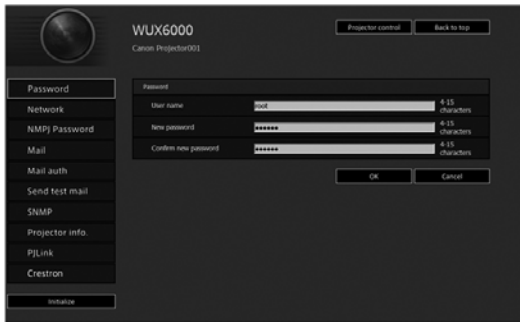

To operate the projector from the computer, click [Projector control]. (P191)

■ Network Setting

- 1 To access the settings screen, click [Settings] on the web screen in step 3 of “Displaying the Network Configuration Screen” (P177).

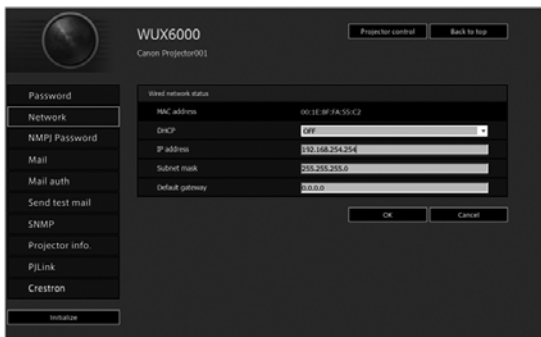


- 2 Select the function to set from the menu (1), then enter the setting in the displayed field (2) and click [OK] (3).




Completing Computer Settings

- 3** A confirmation window appears. Check the contents and if they are correct, click [Apply].

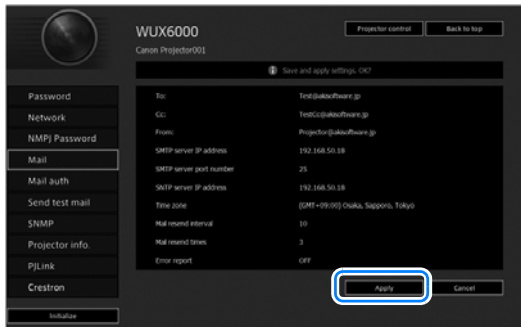


The settings are applied to the projector. Selecting [Network] or [Password] in the menu will cause this message to be displayed: “Save completed. Please change setting and reconnect.”

If you select functions other than [Network], “Save completed” is displayed. Click [Back to top] to return to the top page of the web screen.

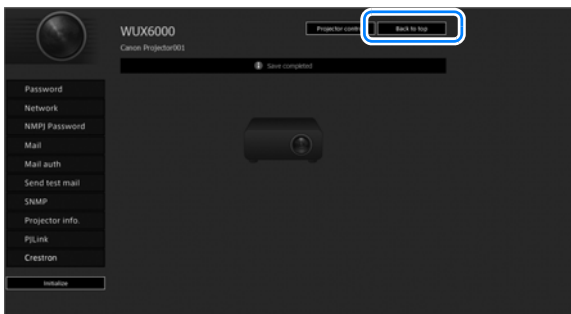

Setting a Password [Password]


From [Password] in the settings screen, you can set a user name and password for web screen login. For the setting procedure, refer to “Network Setting” (P179).

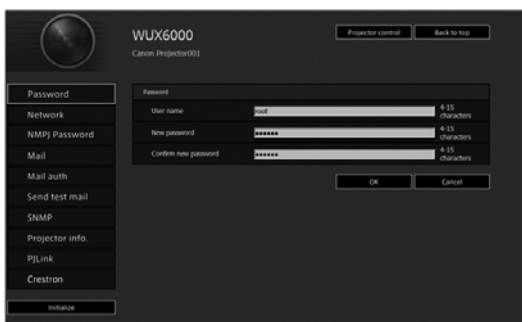

Item	Explanation	Factory default setting
User name	When logging into the web screen, enter the user name in 1-byte alphanumeric characters and symbols (4 - 15 characters).	root
New password	When logging into the web screen, enter the password in 1-byte alphanumeric characters and symbols (4 - 15 characters).	system
Confirm new password	For confirmation, enter the same password that you entered in [New password].	system

Setting Basic Information [Network]

From [Network] in the settings screen, you can log into the web screen and set basic network information. For the setting procedure, refer to “Network Setting” (P179).

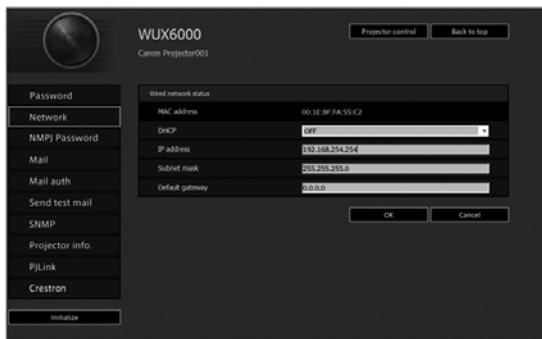

Item	Explanation	Factory default setting
MAC address	Shows the projector's MAC address.	The MAC address of the projector
DHCP	Select whether to turn the DHCP function on or off. If the function is on, because the IP address is acquired from the server, it is not possible to enter the [IP address], [Subnet mask], and [Default gateway].	OFF
IP address	Enter the IP address of the projector in 1-byte numbers.	192.168.254.254
Subnet mask	Enter the subnet mask in 1-byte numbers.	255.255.255.0
Default gateway	Enter the default gateway IP address in 1-byte numbers.	0.0.0.0

Completing Computer Settings




If settings related to TCP/IP were changed, it is necessary to disconnect and reconnect to the network.

If the network subnet mask was changed, select [Subnet mask] in the above screen and set the new subnet mask.

Specifying Networked Multi-Projection Settings: [NMPJ Password]

From [NMPJ Password] in the settings screen, you can specify the items needed for NMPJ authentication. For the setting procedure, refer to “Network Setting” (P179).

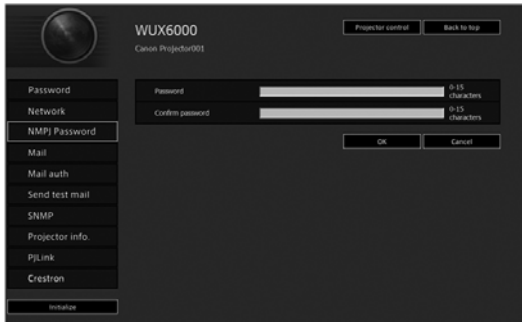


Item	Explanation	Factory default setting
Password	Enter the password required for a networked multi-projection connection in single-byte alphanumeric characters (0-15 characters).	<Blank>
Confirm password	For confirmation, enter the same password as you entered in [Password].	<Blank>



For details on Networked Multi-Projection (NMPJ), refer to the separate user's manual.

Setting Up Email [Mail]

From [Mail] in the settings screen, you can set the items necessary to send error mails and test mails. For the setting procedure, refer to “Network Setting” (P179).

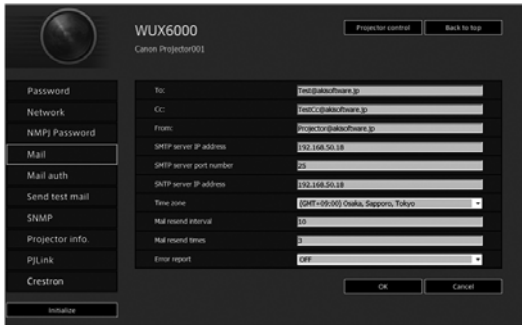


Item	Explanation	Factory default setting
To:	Enter the recipient address for error mails in 1-byte alphanumeric characters and symbols (1 - 63 characters).	MailUserAccount
Cc:	Enter the CC address for error mails in 1-byte alphanumeric characters and symbols (1 - 63 characters).	<Blank>
From:	Enter the sender address for error mails in 1-byte alphanumeric characters and symbols (1 - 63 characters).	Projector@canon.co.jp
SMTP server IP address	Enter the SMTP server IP address in 1-byte numbers.	0.0.0.0
SMTP server port number	Enter the SMTP server port number in 1-byte numbers (1 - 65535).	25
SNTP server IP address	Enter the SNTP server IP address in 1-byte numbers.	0.0.0.0
Time zone	Select the time zone where the projector is used.	(GMT) Dublin, Lisbon, London
Mail resend interval*	Enter the interval for resending mail when an error occurred (units: seconds) within the range of 0 - 59 seconds using 1-byte numbers.	10
Mail resend times	Enter the number of times to resend mail when an error occurred within the range of 0 - 255 using 1-byte numbers.	3
Error report	Select whether to turn the error mail sending function on or off.	OFF

* If you set 0 seconds, the mail will be sent repeatedly with no intervals.

Mail Authentication Settings [Mail auth]


From [Mail auth] in the settings screen, you can configure the settings for authentication of mail that is sent when an error occurs. For the setting procedure, refer to “Network Setting” (P179).

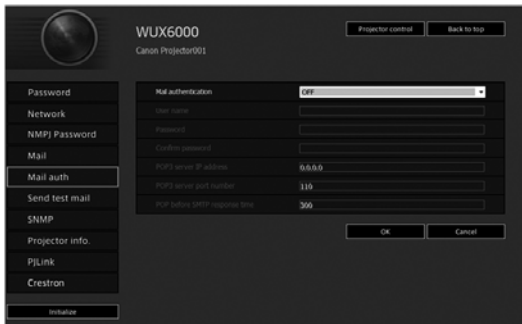

Item	Explanation	Factory default setting
Mail authentication	Select the mail authentication method. If OFF is selected, the other mail authentication settings cannot be changed.	OFF
User name	Enter the user name to use for mail authentication in 1-byte alphanumeric characters and symbols (1 - 63 characters).	<Blank>
Password	Enter the password for mail authentication in 1-byte alphanumeric characters and symbols (1 - 63 characters).	<Blank>
Confirm password	For confirmation, enter the same password as you entered in [Password].	<Blank>
POP3 server IP address	Enter the POP3 server IP address in 1-byte numbers.	0.0.0.0
POP3 server port number	Enter the POP3 server port number in 1-byte numbers (1 - 65535).	110
POP before SMTP response time	Enter the SMTP authentication timeout period after POP3 authentication (units: milliseconds) using 1-byte numbers (0 - 9999 milliseconds).	300

Sending a Test Mail [Send test mail]


From [Send test mail] in the settings screen, you can send a test mail to the mail address that was set in [Mail]. The settings cannot be changed from this screen.

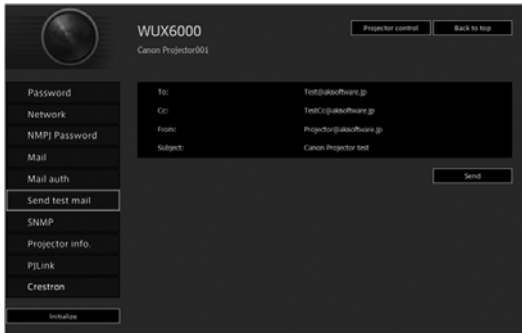

Item	Explanation
To:	The recipient address which was set from [Mail] in the settings screen (P183) is displayed.
Cc:	The CC address which was set from [Mail] in the settings screen (P183) is displayed.
From:	The sender address which was set from [Mail] in the settings screen (P183) is displayed.
Subject:	The predetermined mail title “Canon Projector test” is displayed.

SNMP Settings [SNMP]

From [SNMP] in the settings screen, you can configure the settings related to control of projectors which use SNMP (Simple Network Management Protocol). For the setting procedure, refer to “Network Setting” (P179).

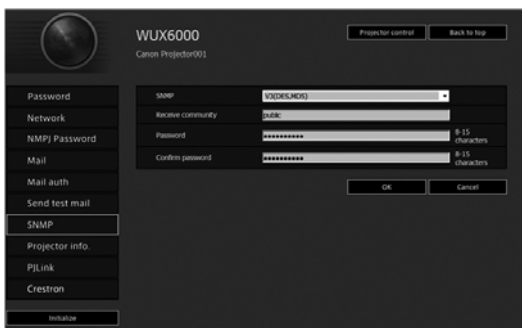


Completing Computer Settings

Item	Explanation	Factory default setting
SNMP	Select the SNMP function version. If OFF is selected, the SNMP function will be turned off and the other settings in this screen cannot be changed.	OFF
Receive community	Enter the community name which will receive projector information in 1-byte alphanumeric characters and symbols (1 - 15 characters).	<Blank>
Password	Enter the community settings password in 1-byte alphanumeric characters and symbols (8 - 15 characters). It can be set only when the SNMP version is V3.	<Blank>
Confirm password	For confirmation, enter the same password as you entered in [Password].	<Blank>

Setting Projector Information [Projector info.]

From [Projector info.] in the settings screen, you can enter relevant comments such as projector names and locations where projectors are installed so that the information can be used to identify projectors when multiple projectors are installed on the network. For the setting procedure, refer to “Network Setting” (P179).

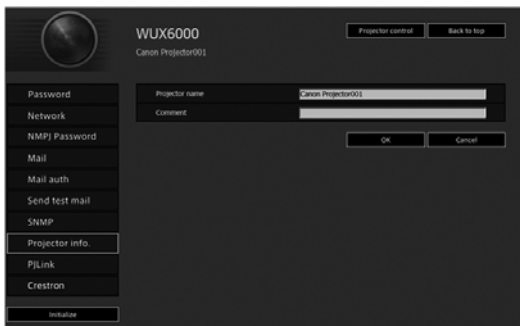


Item	Explanation	Factory default setting
Projector name	Enter the projector name in 1-byte alphanumeric characters and symbols (1 - 63 characters).	Canon Projector001
Comment	Enter any relevant notes, such as where the projector is installed.	<Blank>



Some characters such as # cannot be used for [Projector name] and [Comment].

Setting PJLink [PJLink]

From [PJLink] in the settings screen, you can set the PJLink functions which are the standard for projector management on a network. For the setting procedure, refer to “Network Setting” (P179). For information about PJLink, refer to “What is PJLink?” (P171).

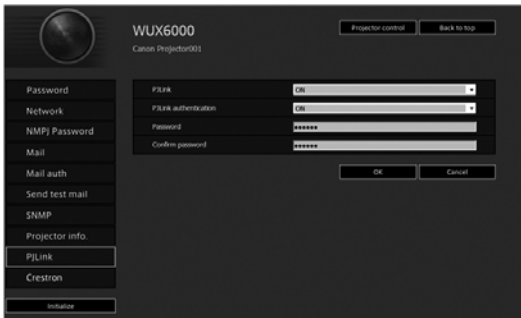


Item	Explanation	Factory default setting
PJLink	Turn the PJLink function on or off. If OFF is selected, the PJLink function will be turned off and the other settings in this screen cannot be changed.	ON
PJLink authentication	Select whether to turn the PJLink authentication function on or off. If OFF is selected, [Password] and [Confirm password] cannot be changed.	ON
Password	Enter the PJLink authentication password in 1-byte alphanumeric characters (1 - 32 characters).	system
Confirm password	For confirmation, enter the same password that you entered in [Password].	system

Setting Up a Controller Manufactured by Crestron Electronics [Crestron Controller]

The [Crestron e-Control] screen will open. For details on the Crestron Controller, visit the Crestron website.
<http://www.crestron.com/>

Setting Errors

When a setting-related error occurs, the error name is displayed on the screen, and a “!” mark is displayed next to the input field which caused the error.

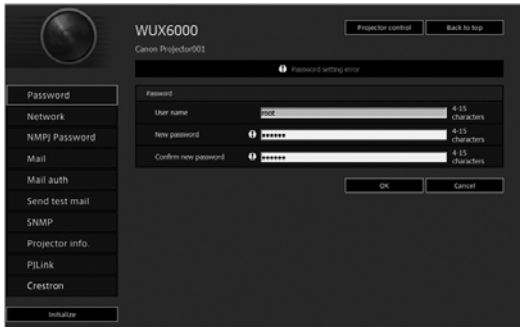

The error meanings are as shown below.

Error	Meaning
Input error	A setting outside the valid range was set on the settings screen.
Password setting error	The set password and confirmation password did not match.
Invalid SMTP	The SMTP server IP address has not been set.
System failed to connect SMTP server.	Failed to connect to the SMTP server when sending a test mail.
System failed to connect POP3 server.	Failed to connect to the POP3 server attempting to send a test mail.
System doesn't support this auth type.	An authentication type was set which is not supported by the server.
System failed to authenticate.	Authentication failed attempting to send a test mail.
The system failed to send the test mail.	Sending of test mail failed due to a connection failure with the SMTP server or an error which does not ordinarily occur.
Unknown error	Unknown error

Resetting Network Settings to the Default Settings

- 1 Perform steps 1 - 3 on “Displaying the Network Configuration Screen” (P177) to display the settings screen.
- 2 Click [Initialize].



- 3 A confirmation window appears. Click [OK].

■ Error Notification Mails

The messages shown in the following error list are sent when an error occurs in the projector.

Error list

Errors related to temperature	Error name	Temperature abnormality
	Text	The temperature inside the projector is too high for some reason or the outside air temperature is higher than the specified one. If the problem is inside the projector, check whether the projector is installed and operated normally, turn off the projector to cool its inside, and retry projection. If the same warning occurs again, the projector may be defective. Contact your dealer.
Errors related to the lamp	Error name	Faulty lamp
	Text	The lamp has burnt out. Replace the lamp with a new one. If the same warning occurs again, the lamp drive circuit may be defective. Contact your dealer.
Errors related to the fan	Error name	Faulty cooling fan
	Text	The cooling fan or another component may be defective. Contact your dealer.
Errors related to the air filter	Error name	Faulty air filter unit
	Text	The air filter unit is not installed properly. Check whether the air filter unit is installed properly. If it is installed properly, the air filter unit detection switch may be defective. Contact your dealer.

Completing Computer Settings

Errors related to the power	Error name	Faulty power supply
	Text	The voltage of part of the power supply is abnormally high or any other problem has occurred in the power supply. Contact your dealer.
Errors related to the lens connector	Error name	Faulty lens connector
	Text	The lens cable is not connected to the lens unit. Check whether the lens cable is connected to the lens unit properly. If it is connected properly, the lens connector or cable may be defective. Contact your dealer.

Control via the Web Screen

When the projector is connected to a network, it is possible to control the projector from a computer via the network.


- 1 Turn on the computer and projector.**
- 2 Launch a web browser, enter “http://(projector IP address)” in the address bar, and press the Enter key.**

The projector web screen appears.

! The factory default IP address is “192.168.254.254”. If DHCP settings are used, ask the network administrator for the projector IP address. It is possible to check the IP address from the projector menu.

- 3 Click [Projector control] on the web screen.**
The password input window appears.
- 4 Enter the user name and password on the password input window, then click [OK].**

The factory default user name is “root” and the password is “system”.
[Projector control] screen appears.

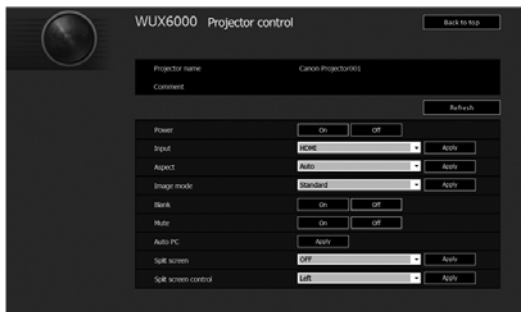

The projector control screen appears. The projector can be controlled from this screen.

Completing Computer Settings

Item	Explanation
Projector name	The name of the connected projector is displayed. (P186)
Comment	Shows notes, such as where the projector is installed. (P186)
Refresh	Refreshes the displayed contents with the most recent information.
Power	Turns projector power on or off.
Input	Select an input signal and click [Apply] to change to that input signal. (P39)
Aspect	Select an aspect and click [Apply] to change to that aspect. (P52)
Image mode	Select an image mode and click [Apply] to change to that image mode. (P57)
Blank	Switches the blank setting on or off. (P62)
Mute	Switches the mute setting on or off. (P63)
Auto PC	Click [Apply] to perform Auto PC adjustment. (P43)
Split screen	Select the setting for split-screen mode and click [Apply] to switch to split-screen projection.
Split screen control	Select the control rights setting for split-screen mode and click [Apply] to switch the side currently under control.
Information	The control results and control error information are displayed at the top of the screen.

- 5** When the operations are finished, click [Back to top] to return the initial web screen.



Maintenance

Table of Contents

Safety Instructions

Before Use

Operation

Projecting an Image

Useful Functions Available
During a Presentation

Setting Functions from
Menus

Installation and Maintenance

Installation

Connecting to a Network

Maintenance

Appendix

Other Information

Index

Cleaning the Projector and the Air Filter

Clean the projector frequently to prevent dust from settling on the surface. A dirty lens may ruin the quality of the projected image.




Caution

When cleaning the projector, make sure to turn off the projector, wait until the cooling fan stops, disconnect the power plug from the electrical outlet, and let the projector stand for at least 1 hour. Otherwise, you may get burned because the main unit is very hot immediately after the projector is turned off.

Wipe the projector's main unit softly with a soft cloth. If the projector is heavily soiled, soak the cloth in water with a small amount of detergent in it, squeeze the cloth thoroughly, and then wipe the projector with it. After cleaning, wipe the projector with a dry cloth.



- Never use volatile cleaning liquid or benzene, as these may damage the finish of the projector.
- When using a chemical dust cloth, make sure to read the instructions thoroughly.
- When cleaning the projector's lens, use a commonly available air blower or lens cleaning paper. The lens surface is easily damaged, so do not use a hard cloth or tissues.

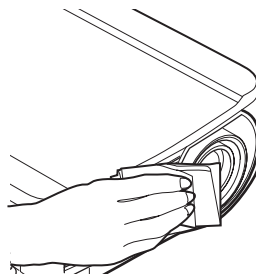

Cleaning the Air Filter

The air filter protects the lens and mirror inside the projector from dust and dirt. Should the air filter become clogged with dust, the projector may be damaged since it will block the air flow into the projector and raise the internal temperature of the projector. The following screen is displayed when turning on the projector if the air filter needs to be cleaned (after approx. 300 hours). Clean the air filter if it is displayed.



Air filter cleaning

Clean the air filter.
After cleaning air filter, select "Yes".
This message will no longer be displayed.

Yes

No

- Only the [◀], [▶], **OK** and **POWER** buttons are available while this screen is displayed. (When you press the **POWER** button, the "Push POWER button again to turn off power." message appears.)
- When this screen has disappeared after being displayed for 10 seconds, all buttons become operable.

- Turn the power of the projector off and pull out the power plug.
- Hook your finger around the air filter handle on the front of the projector and remove the air filter.

Cleaning the Projector and the Air Filter


- If the air filter cleaning screen is displayed when turning on the projector after cleaning the air filter, select [Yes] and press the **OK** button. The air filter counter is reset, and the message is no longer displayed.
- This screen is not displayed when [Air filter warning display] is set to [Off]. (P152)
Reset the air filter counter manually. (P110)

Replacing the Air Filter


Follow the procedure below when replacing the air filter.

1 Turn off the projector power and remove the power plug.


2 Hook your finger around the air filter frame handle on the side of the projector, and pull the air filter out to remove it.

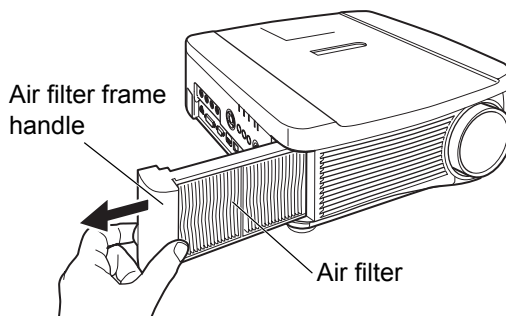


3 Remove the filter from the air filter frame. First disengage the tab on the inside, then remove the entire air filter from the frame.

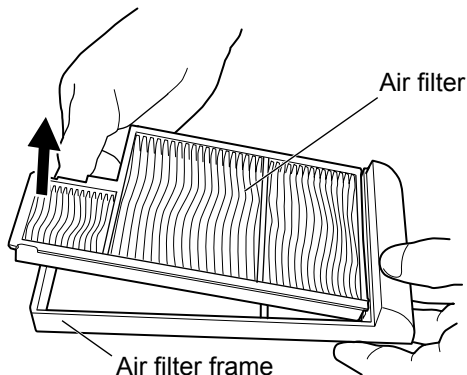

4 Install a new air filter into the frame. First insert the air filter tab into the groove on the handle side of the frame, then press the air filter into the frame.

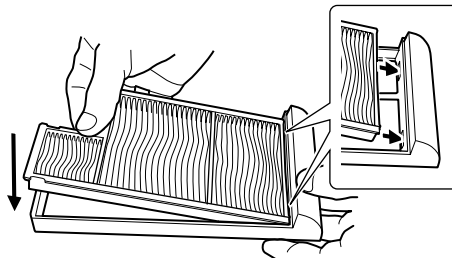

5 Securely insert the frame holding the air filter, all the way into the projector.

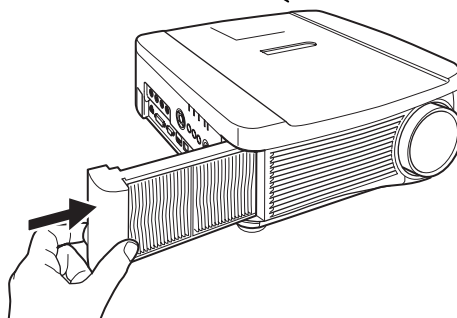


- Handle the air filter carefully. If damaged, the air filter will not work properly.
- When the lamp is replaced, it is recommended that you also replace the air filter.
- Contact the Canon Customer Support Center for further information.
- Replacement air filter part no.: RS-FL01
- This can also be purchased from the Canon website.

Replacing the Lamp

When the usage time of the lamp exceeds a certain amount of time, the following message (two types) is displayed for 10 seconds every time the projector is turned on.


2,700 hours or less than 3,000 hours

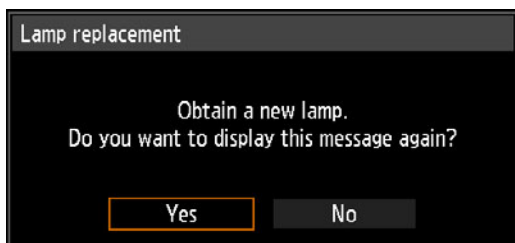

Prepare a new lamp when this screen is displayed.

- Only the [◀], [▶], **OK** and **POWER** buttons are available while this screen is displayed.
- When you press the **POWER** button, “Push POWER button again to turn off power.” message appears.
- After this screen has been displayed for 10 seconds and disappeared, all buttons become operable.
- This message will not be displayed again if you select [No] in response to the message “Do you want to display this message again?”.

3,000 hours or more

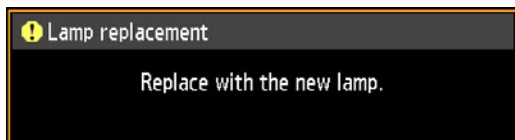

If a lamp replacement message is displayed, refer to “Replacing the Lamp” (P199, P200).

- Only the **POWER** button is available while this screen is displayed.
- When you press the **POWER** button, the “Push POWER button again to turn off power.” message appears.
- When this screen has disappeared after being displayed for 10 seconds, all buttons become operable.
- You can check the usage time of the lamp in [Lamp counter] in the [System settings] menu. (P108)
- This screen is not displayed when [Lamp warning display] is set to [Off]. (P151)

Replacement Lamp

This projector uses the following lamps.

Lamp part no.: RS-LP09

Contact the Canon Customer Support Center when purchasing a replacement lamp.

Precautions when replacing lamps that stop working

If the illumination suddenly stops when the projector is in use or after you turn it on, the lamp may be broken. In this case, never attempt to replace the lamp by yourself. Always request service from the Canon Customer Support Center. Additionally, with ceiling-mounted projectors, the lamp may fall out when you open the lamp cover or while you are attempting to replace it. During replacement, stand to the side of the lamp cover, not directly under it. If the lamp breaks and any glass shards or other pieces get in your eyes or mouth, consult a doctor immediately.



When replacing the lamp, turn off the projector, wait until the cooling fan stops, disconnect the power plug from the electrical outlet, and let the projector stand for at least 1 hour. Otherwise, you may get burned because the main unit is very hot immediately after the projector is turned off.




- Be sure to use the specified lamp.
- Contact the Canon Customer Support Center for further information. This can also be purchased from the Canon website.
- Do not touch the inner glass surface when you replace the lamp. Doing so may cause deterioration to the projector's performance.
- Handle lamps with care. Impact or abrasion may cause lamps to rupture while they are in use. If a lamp ruptures, contact the Canon Customer Support Center and follow the instructions in "Precautions when replacing lamps that stop working" (P20).
- When replacing the lamp, do not remove any screws other than those specified.




Replacing the Lamp



- 1 Turn off the projector power and remove the power plug.
- 2 Loosen one screw and open the lamp cover in the direction of the arrow.
The lamp cover screw is attached to the lamp cover and designed to prevent it from falling off.

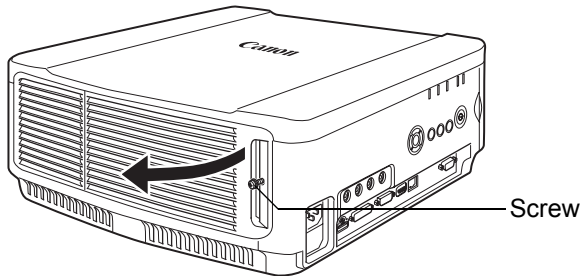

- 3 Loosen the 3 screws on the inside of the lamp unit, then slowly pull out the lamp unit in the direction of the arrow.
Even when the screws are loosened, they will not fall off the lamp unit.

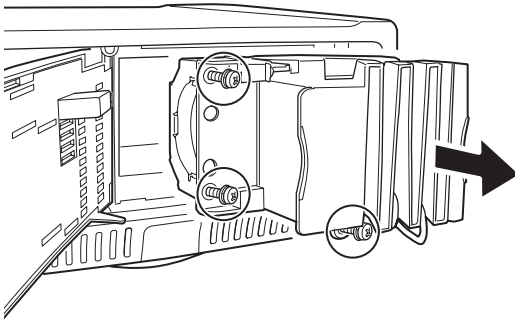


- 4 Fully insert a new lamp unit and secure it with the 3 screws.
- 5 Close the lamp cover and tighten the screws.
- 6 Turn on the power. Bring up the menu and select [System settings] > [Other settings] > [Lamp counter].

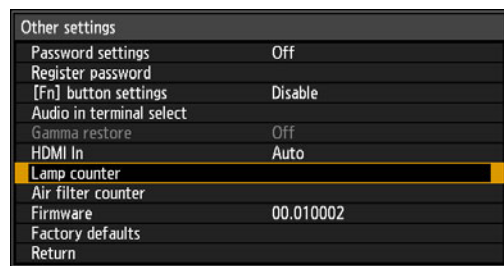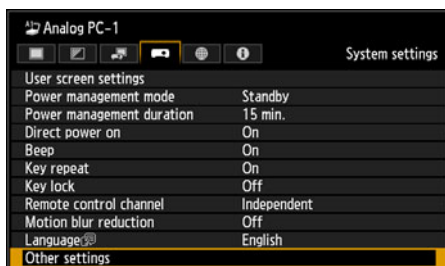

Replacing the Lamp

7 Select [Reset] > [Yes] to reset the lamp counter.

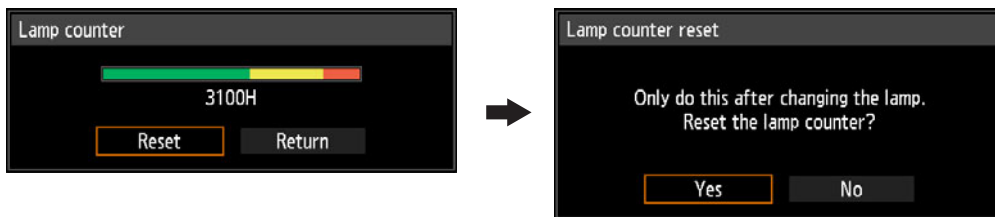

- ◆ It is recommended that you also replace the air filter when you replace the lamp.
- Contact the Canon Customer Support Center for further information.
- Replacement air filter part no.: RS-FL01

Appendix

Table of Contents

Safety Instructions

Before Use

Operation

Projecting an Image

Useful Functions Available
During a Presentation

Setting Functions from
Menus

Installation and Maintenance

Installation

Connecting to a Network

Maintenance

Appendix

Other Information

Index

LED Indicator Meanings

When there is a problem with the projector, the LED indicator on the side of the projector illuminates or flashes continuously after the projector is turned off.

- Wait until the cooling fan stops and disconnect the power plug from the electrical outlet before dealing with the problem.

LED indicator status	Meaning	Countermeasure
WARNING and TEMP are lit.	Temperature abnormality	The temperature inside the projector is too high for some reason or the outside air temperature is higher than the operating range. If the problem is inside the projector, check whether the projector is installed and operating normally, unplug the projector from the power outlet to cool down the projector interior and then restart projection. If the air intake or exhaust vent is blocked, remove the obstacle. If the air filter is clogged, clean or replace it. (P194, P196) If the same warning occurs again, there may be a malfunction in the projector. Contact the Canon Customer Support Center.
WARNING and LAMP are lit.	Faulty lamp	The lamp does not illuminate. Turn the power off and then back on and check whether or not the lamp illuminates. Also, check whether the air intake or exhaust vent is blocked, and whether the air filter is clogged with dust. The warning may indicate if the air flow in and out of the projector is blocked, or if the internal temperature of the projector rises. If the air filter is clogged, clean or replace the air filter. (P194, P196) If the lamp does not illuminate, replace it. If the same warning occurs again, there may be a malfunction in the lamp drive circuit. Contact the Canon Customer Support Center.
WARNING flashes 3 times, LAMP is lit.	Faulty lamp cover	The lamp cover is open. Unplug the projector from the power outlet, then install the lamp cover correctly and turn on the projector again. If the lamp cover has been installed properly, there may be a malfunction in the lamp cover detection switch. Contact the Canon Customer Support Center.
WARNING (only) flashes 4 times repeatedly.	Faulty cooling fan	There may be a malfunction in the cooling fan or another component. Unplug the projector from the electrical outlet, then plug it back into the outlet and turn on the projector again. Contact the Canon Customer Support Center if the same warning occurs again.

LED indicator status	Meaning	Countermeasure
WARNING (only) flashes 5 times repeatedly.	Faulty power supply	Abnormal voltage is applied to some parts in the power supply or another failure may have occurred. Unplug the projector from the electrical outlet, then plug it back into the outlet and turn on the projector again. Contact the Canon Customer Support Center if the same warning occurs again.
WARNING (only) flashes 3 times repeatedly.	Filter error	The air filter is not installed. Check whether or not the air filter is installed correctly. Contact the Canon Customer Support Center if the same warning occurs again.
WARNING (only) flashes 6 times repeatedly.	Faulty lens connector	The lens cable is not connected to the lens unit correctly. Unplug the projector, connect the lens cable to the lens unit correctly, and then plug the projector in again. Contact the Canon Customer Support Center if the same warning occurs again.

Symptoms and Solutions

■ You Cannot Turn on the Projector

Cause	Countermeasure
The power cord is not connected correctly.	Check whether the power cord is connected correctly. (P138)
The power cord has just been connected.	Wait at least one second after plugging the projector in until you press the POWER button. You cannot turn the projector on immediately after plugging it in. (P38)
The lamp cover is open.	Unplug the projector from the power outlet, then install the lamp cover correctly and turn on the projector again.
The safety device is activated because the air intake or the exhaust vent is blocked and the internal temperature of the projector has increased.	When the safety device is active, the [POWER ON] indicator does not turn on when you connect the power cord. You cannot disable this safety device. Remove any obstacle that is blocking the air intake or exhaust vent and contact the Canon Customer Support Center.

The lens connector is not attached correctly.	The lens cable is not connected to the lens unit correctly. Unplug the projector, connect the lens cable to the lens unit correctly, and then plug the projector in again. Contact the Canon Customer Support Center if the same warning occurs again.
The air filter is not installed correctly.	Check whether the air filter is installed correctly. (P196)
Key lock is enabled.	Check that Key lock (P101) is not enabled for the projector or the remote control.

■ You Cannot Project an Image from the Projector

Cause	Countermeasure
A cable is not connected correctly.	Check whether the projector is connected to the computer or AV equipment correctly. (P132, P135)
20 seconds have not elapsed since the projector was turned on.	When the projector is turned on, the opening window is displayed for approximately 20 seconds. To project an image immediately, press the OK button on the remote control or side control. (P38)
No image is sent from the AV equipment.	Check whether an image is played on the connected video camcorder, DVD, etc.
Connection with the input terminal has not been performed correctly.	Check whether the AV equipment is connected to the projector input terminal correctly. (P131)
No input signal type has been selected for the connected AV equipment.	Check that the same input signal has been correctly selected for the connected AV equipment from the [INPUT] menu. (P40)
The input signal type is incorrect.	Check whether the selected input signal type is correct. (P76, P214)
The BLANK function has been selected.	Press the BLANK button on the remote control. (P62)
No image is projected due to a problem with the computer.	Turn first the projector and then the computer off and then back on again.

Cause	Countermeasure
The external monitor output is not set on the notebook computer correctly.	Turn on the external monitor output on the notebook computer. To turn on the external monitor output, press the [LCD] or [VGA] function key or a key with an icon for the external monitor, while holding down the [Fn] key on the keyboard of the notebook computer. With Windows 7, you can turn on image output by holding down the Windows logo key and pressing the [P] key. (P140) The combination of keys used to perform this operation varies depending on the model of notebook computer. For more detailed information, refer to the manual that came with your computer.
The displayed image is not the same as that displayed on the computer.	Check whether the dual screen (multi-display) mode is selected on the computer. If dual screen mode is selected, change the computer display output to mirroring mode. The output setting method varies among computer manufacturers. For more detailed information, refer to the manual that came with your computer.
Images on a USB flash drive cannot be projected.	Projection from USB flash drives requires JPEG images with a resolution not exceeding 10912x8640, single-byte alphanumeric file names, and a FAT-formatted drive.
The LAN cable (shielded twisted pair) is not connected correctly.	Check whether the LAN cable (shielded twisted pair) is connected to the projector correctly. (P164)
A network connection cannot be established.	Network connections are not available until about 40 seconds after startup. (P177)

■ There is no Sound

Cause	Countermeasure
The audio cable is not connected correctly.	Check the audio cable connection. (P131)
The MUTE function is enabled.	Press the MUTE button on the remote control. (P63)
The volume level is adjusted to the minimum.	Press the VOL button on the remote control or the VOL+ button on the side control to adjust the volume level. (P63)
An audio cable with a built-in resistor is used.	Use an audio cable without a built-in resistor.
Audio in terminal select is [Off].	Change the Audio In terminal to the appropriate setting. (P106)

■ The Projected Image Is Blurred

Cause	Countermeasure
The image is out of focus.	Adjust the focus. (P44)
The distance to the screen is too short.	Check whether the distance to the screen is appropriate. (P118)
The projector is not placed straight in front of the screen.	Check whether the projector is placed obliquely to the screen. A slight error in the projection angle can be corrected through the keystone adjustment function. (P54)
The projector has been moved to a place where the temperature varies a lot.	When the projector is moved from a location where the temperature is low to a location where the temperature is high, condensation may form on the lens. The condensation will evaporate after a period of time and the projector will be able to project a normal image.
The lens is stained.	Clean the lens. (P194)
The tracking is bad.	Adjust the tracking with the [Auto PC] or [Tracking] function. (P43, P77)
Video is blurred.	Activate motion blur reduction. (P103)
Motion blur reduction is not available.	Motion blur reduction is not available in projection using USB flash drives or networked multi-projection.
The sharpness setting is not available.	Sharpness cannot be adjusted during split-screen display.

■ You Cannot Project an Image Appropriately

Cause	Countermeasure
The projected image is inverted in the vertical or horizontal direction.	The ceiling mounted / rear projection setting is incorrect. Check the [Image flip H/V] setting in the [Install settings] menu. (P141)
The dot clock of the input signal is higher than 162 MHz with a BNC cable.	Set the signal dot clock to 162 MHz or less on your computer.
A computer cable is used in which some pins are not connected.	Use a computer cable in which all pins are connected.

■ The Projector Power Turns Off

Cause	Countermeasure
The air intake or exhaust vent is blocked.	Check whether the air intake or exhaust vent is blocked. If the air intake or exhaust vent is blocked, the temperature inside the projector will increase and the power is automatically turned off to protect the projector. (The [WARNING] indicator and [TEMP] indicator are lit.) Wait until the projector temperature drops, then make sure that the intake and exhaust vents are not blocked and turn on the projector. (P31, P38)
The air filter is dirty.	Check whether the air filter is clogged with dust. If the air filter is clogged, clean or replace the air filter. (P196)
The lamp has ruptured (or there is a lamp malfunction).	If the lamp has ruptured, follow the instructions in “Precautions when replacing lamps that stop working” (P20).
The operating temperature is inappropriate.	Check whether the operating temperature is between 0°C (32°F) and 40°C (104°F). (P24) Projector settings must be adjusted when using the projector at altitudes of 2,300 m (7,545.8') or higher. In the [Install settings] menu, set [Fan mode] under [Professional settings] to [High altitude]. (P146)

■ You Cannot Operate the Remote Control


Cause	Countermeasure
Batteries are not installed properly or they have run out.	Check whether batteries are installed correctly. If batteries are installed correctly, replace them with new batteries. (P29)
You are operating the remote control from the outside of the remote control operating range.	Check whether you are operating the remote control within the remote control operating range of the main unit of the projector. (P30)
There is an obstacle between the projector and the remote control.	Remove the obstacle between the infrared remote receiver of the main unit of the projector and the remote control or point the remote control in an obstacle-free path.
You are operating the remote control in an unsuitable operating environment.	Check whether the infrared remote receiver of the main unit of the projector is exposed to direct sunlight or strong light of lighting apparatus. (P30)
The channel setting of the remote control does not match the setting of the projector.	Check whether the channel setting of the remote control has been changed. You can check the [Remote control channel] setting in the [System settings] menu. (P102)
The key lock function is preventing operation of the remote control.	Check whether [Key lock] is enabled to disable the remote control operation. In the [System settings] menu, set [Key lock] to [Off]. (P101)

Relationship between Aspect and Screen Aspect

This section describes the relationship between screen aspect (P48) and aspect (P52).

Select an optimum aspect ratio of the projected image (screen aspect) or an optimum screen mode (aspect) according to the aspect ratio of the screen, type of input image signal and so on for the projection to make best use of the screen size.

- If a computer image with an aspect ratio of 16:9 is not projected correctly when the setting is [Auto], select [16:9] as the screen aspect.
- For a 16:9 image with black borders at the top and bottom, such as a terrestrial broadcast movie, you can project the 16:9 image area so that it is projected on the entire screen by selecting [Zoom] in [Aspect].

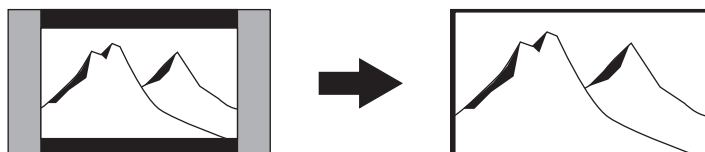




There may be some cases that [Zoom] cannot be selected depending on the input signal and/or resolution.

- For keystone correction (P54), select an option other than [4:3 D. image shift] or [16:9 D. image shift] for [Screen aspect].




■ When the image is projected on a 16:10 screen

Aspect ratio of connected device	Screen aspect setting (P48)	Aspect setting (P52)	Screen image
(16:10) 1920 x 1200 1440 x 900 1280 x 800	[16:10]	[16:10] [Auto]	
(16:9) 1920 x 1080 1280 x 720		[16:10]	
(4:3) 1600 x 1200 1400 x 1050 640 x 480		[16:10]	

 
 
 
■ When the image is projected on a 16:9 screen

Aspect ratio of connected device	Screen aspect setting (P48)	Aspect setting (P52)	Screen image
(16:10) 1920 x 1200 1440 x 900 1280 x 800	[16:9] [16:9] D. image shift]	[16:9]	
(16:9) 1920 x 1080 1280 x 720		[16:9] [Auto]	
(4:3) 1600 x 1200 1400 x 1050 640 x 480		[16:9]	




■ When the image is projected on a 4:3 screen

Aspect ratio of connected device	Screen aspect setting (P48)	Aspect setting (P52)	Screen image
(16:10) 1920 x 1200 1440 x 900 1280 x 800	[4:3] [4:3] D. image shift]	[4:3]	
(16:9) 1920 x 1080 1280 x 720		[4:3]	
(4:3) 1600 x 1200 1400 x 1050 640 x 480		[4:3] [Auto]	

 
 
 
■ When projecting on a 16:10 screen in the aspect ratio of the connected device

Aspect ratio of connected device	Screen aspect setting (P48)	Aspect setting (P52)	Screen image
(16:10) 1920 x 1200 1440 x 900 1280 x 800	[16:10]	[16:10] [Auto]	
(16:9) 1920 x 1080 1280 x 720		[16:9] [Auto]	
(4:3) 1600 x 1200 1400 x 1050 640 x 480		[4:3] [Auto]	

   ■ When projecting on a 16:9 screen in the aspect ratio of the connected device

Aspect ratio of connected device	Screen aspect setting (P48)	Aspect setting (P52)	Screen image
(16:10) 1920 x 1200 1440 x 900 1280 x 800	[16:9] [16:9 D. image shift]	[Auto]	
(16:9) 1920 x 1080 1280 x 720		[16:9] [Auto]	
(4:3) 1600 x 1200 1400 x 1050 640 x 480		[4:3] [Auto]	

   ■ When projecting on a 4:3 screen in the aspect ratio of the connected device

Aspect ratio of connected device	Screen aspect setting (P48)	Aspect setting (P52)	Screen image
(16:10) 1920 x 1200 1440 x 900 1280 x 800	[4:3] [4:3 D. image shift]	[Auto]	
(16:9) 1920 x 1080 1280 x 720		[16:9] [Auto]	
(4:3) 1600 x 1200 1400 x 1050 640 x 480		[4:3] [Auto]	

Displayed Test Patterns


To access the test pattern menu, from the [Install settings] menu, select [Test pattern] > [On].

While the test pattern is displayed, you can use the [▲] / [▼] buttons to switch patterns. Also, if there is an option pattern available, you can use the [◀] / [▶] buttons to switch pattern. A dialog box is shown during test pattern display that identifies the current test pattern and provides operating instructions.

The following test patterns can be displayed.

Use [▲] / [▼] to switch patterns

Use [◀] / [▶] to switch option patterns

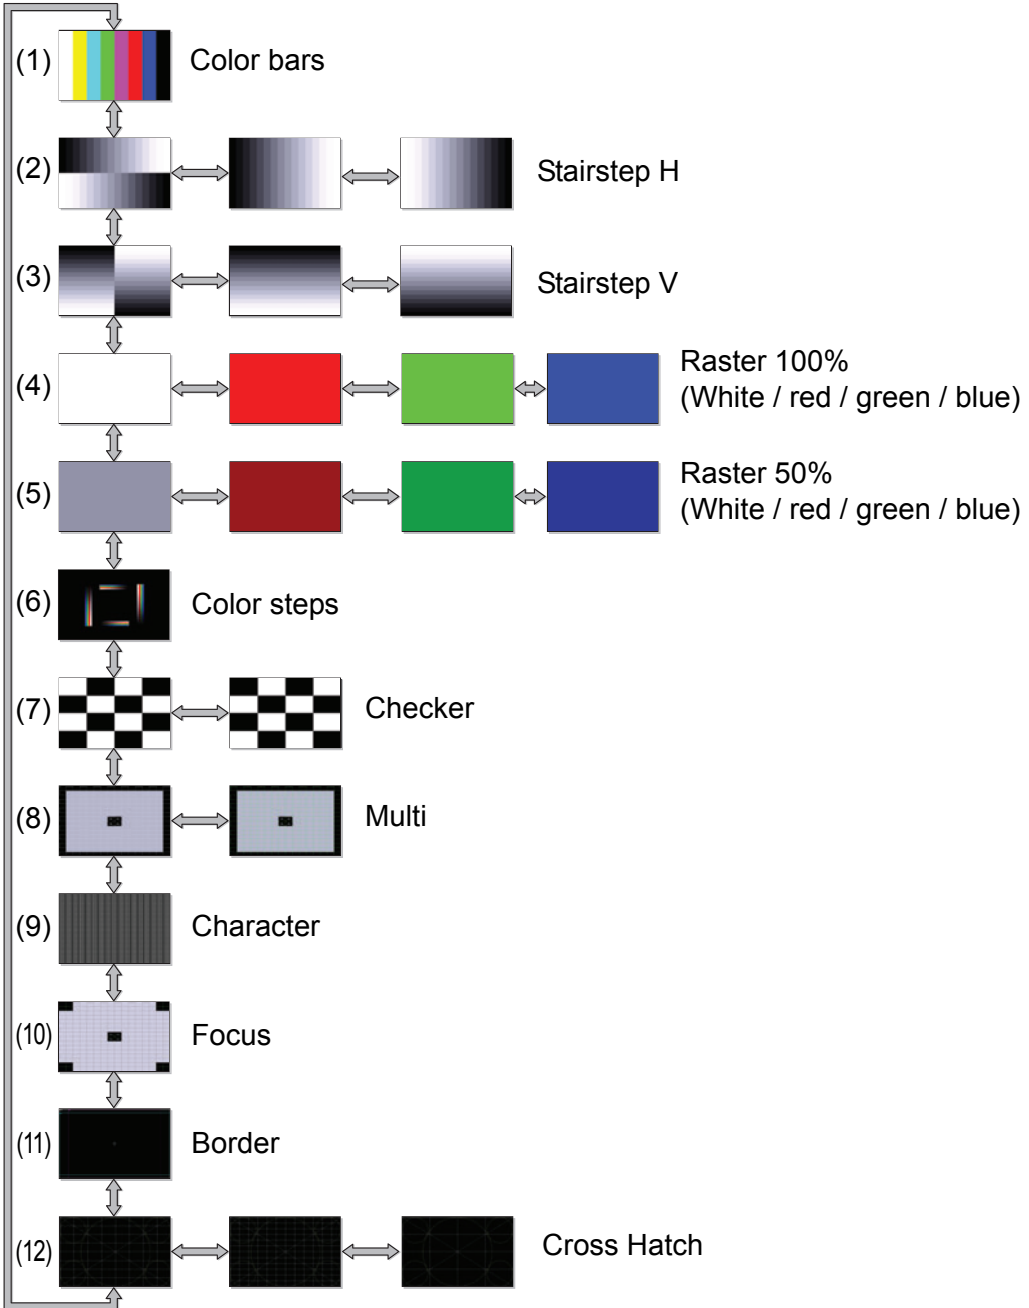

Supported Signal Types

This projector supports the following signal types.

If your computer or AV equipment is compatible with any one of these signal types, the projector's Auto PC function selects the input signal type to project an image appropriately.

Analog PC

Resolution (dots)	Signal type	Horizontal frequency (kHz)	Vertical frequency (Hz)
640 x 480	VGA	31.469	59.940
720 x 480	–	31.469	59.940
720 x 576	–	31.250	50.000
800 x 600	SVGA	37.879	60.317
848 x 480	–	31.020	60.000
1024 x 768	XGA	48.363	60.004
1280 x 768	WXGA	47.776	59.870
		47.396	59.995
49.702		59.810	
49.306		59.910	
1280 x 800	–	60.000	60.000
1280 x 960	–	60.000	60.000
1280 x 1024	SXGA	63.981	60.020
1366 x 768	–	47.712	59.790
1400 x 1050	SXGA+	64.744	59.948
		65.317	59.978
1440 x 900	WXGA+	55.935	59.887
		55.469	59.901
1600 x 900	–	60.000	60.000
1600 x 1200	UXGA	75.000	60.000
1680 x 1050	WSXGA+	64.674	59.883
		65.290	59.954
1920 x 1080	–	56.250	50.000
		67.500	60.000
1920 x 1200	WUXGA	74.038	59.950

Digital PC

Resolution (dots)	Signal type	Horizontal frequency (kHz)	Vertical frequency (Hz)
640 x 480	D-VGA	31.469	59.940
720 x 480	–	31.469	59.940
720 x 576	–	31.250	50.000
800 x 600	D-SVGA	37.879	60.317
1024 x 768	D-XGA	48.363	60.004
1280 x 720	–	37.500	50.000
		45.000	60.000
1280 x 800	D-WXGA	49.702	59.810
		49.306	59.910
1280 x 1024	D-SXGA	63.981	60.020
1366 x 768	–	47.712	59.790
1400 x 1050	D-SXGA+	64.744	59.948
		65.317	59.978
1440 x 900	D-WXGA+	55.935	59.887
		55.469	59.901
1600 x 900	–	60.000	60.000
1600 x 1200	D-UXGA	75.000	60.000
1680 x 1050	D-WSXGA+	64.674	59.883
		65.290	59.954
1920 x 1080	–	27.000	24.000
		56.250	50.000
		67.500	60.000

Resolution (dots)	Signal type	Horizontal frequency (kHz)	Vertical frequency (Hz)
1080PsF (1920 x 1080i)	-	27.000	24.000
		28.125	25.000
		33.750	30.000
1920 x 1200	D-WUXGA	74.038	59.950

HDMI

Connecting to a computer

Resolution (dots)	Signal type	Horizontal frequency (kHz)	Vertical frequency (Hz)
640 x 480	VGA	31.469	59.940
800 x 600	SVGA	37.879	60.317
1024 x 768	XGA	48.363	60.004
1280 x 800	WXGA	49.702	59.810
		49.306	59.910
1280 x 1024	SXGA	63.981	60.020
1366 x 768	-	47.712	59.790
1400 x 1050	SXGA+	64.744	59.948
		65.317	59.978
1440 x 900	WXGA+	55.935	59.887
		55.469	59.901
1600 x 900	-	60.000	60.000
1600 x 1200	UXGA	75.000	60.000
1680 x 1050	WSXGA+	64.674	59.883
		65.290	59.954
1920 x 1200	WUXGA	74.038	59.950

Connecting with AV equipment

Signal type	Horizontal frequency (kHz)	Vertical frequency (Hz)
480p	31.469	59.940
576p	31.250	50.000
720p	37.500	50.000
	45.000	60.000
1080i	28.125	50.000
	33.750	60.000
1080p	27.000	24.000
	56.250	50.000
	67.500	60.000

Component

Signal type	Horizontal frequency (kHz)	Vertical frequency (Hz)
480i	15.734	59.940
480p	31.469	59.940
576i	15.625	50.000
576p	31.250	50.000
720p	37.500	50.000
	45.000	60.000
1080i	28.125	50.000
	33.750	60.000
1080p	56.250	50.000
	67.500	60.000
1080PsF	27.000	24.000
	28.125	25.000
	33.750	30.000

- * The specifications in the table above are subject to change without notice.
- * This projector does not support any computer output signal with a dot clock of higher than 162 MHz.
- * Use a computer cable in which all pins are connected. If the cable is a type in which all pins are not connected, the image may not be correctly displayed.

Product Specifications

■ Projector

Model name		WUX6000
Display system		RGB liquid crystal system
Optical system		Color separation by dichroic mirror / polarizing beam splitter and color composition by prism
Display device	Type	Reflective liquid crystal panel
	Size / Aspect ratio	0.71" X3 / 16:10
	Drive system	Active matrix system
	Number dots / Total number dots	2,304,000 (1920 x 1200) x 3 panels / 6,912,000
Projection lens (*1)	Zoom ratio / Focal length / F value	1.5x / f = 23.0 to 34.5 mm / F1.89 to F2.65
	Zooming / Focusing system	Electric / Electric
	Lens shift (*1)	V: -15% to +55%, H: ±10% Electric
Light source (lamp mode: Full power / Power saver)		340-NSHA 340W / 264W
Image size (projection distance) (*1)		Size 40 to 600 (1.3 m / 4.6' to 29.0 m / 95.1')
Number of colors		16,770,000 colors (full color)
Brightness (*1) (*2) (*3)		6,000 lumen (in presentation mode)
Contrast ratio (*3)		2000:1 (Fully white : fully black, presentation mode, lamp control [On])
Ratio of brightness at periphery to center (*1) (*3)		88%
Speaker		5W monaural x 1
Maximum input resolution		1920 x 1200 dots
Video signals	Analog PC input	WUXGA, UXGA, WSXGA+, SXGA+, WXGA+, SXGA, WXGA, XGA, SVGA, VGA (Scan frequency: Horizontal 15 to 75 kHz, Vertical 50 to 85 Hz)
	Digital PC input	WUXGA, UXGA, WSXGA+, SXGA+, WXGA+, SXGA, WXGA, XGA, SVGA, VGA
	Component video input	1080p, 1080i, 720p, 576i, 576p, 480i, 480p
	Digital video input	1080p, 1080i, 720p, 576p, 480p
Input terminal	DVI-I IN terminal	Analog PC, Digital PC input (29-pin DVI connector)
	HDMI IN terminal	HDMI (deep color)
	ANALOG PC / COMPONENT IN terminal	Analog PC, Component (mini D-sub 15-pin)
	CONTROL terminal	RS-232C (D-sub 9-pin)
	AUDIO IN terminal	Audio signal (3.5Ø stereo mini jack x 2)
AUDIO OUT terminal		Audio signal (3.5Ø stereo mini jack)
USB port		JPEG images (USB Mass Storage Class)
REMOTE terminal		Wired remote control (3.5Ø stereo mini jack)
LAN terminal		Networked multi-projection (RJ-45)
CONTROL terminal		RS-232C (D-sub 9-pin)

Model name		WUX6000
Input signal	Digital PC	TMDS (Transition Minimized Differential Signaling)
	Analog PC	0.7Vp-p, positive polarity, impedance = 75Ω Horizontal / vertical synchronization: TTL level, negative or positive polarity Composite synchronization in G signal: 0.3Vp-p, negative polarity, impedance = 75Ω
	Component video	COMPONENT: Separate Y Cb/Pb Cr/Pr signal Y: 1Vp-p, negative synchronization, impedance = 75Ω Cb/Pb: 0.7Vp-p, impedance = 75Ω Cr/Pr: 0.7Vp-p, impedance = 75Ω
	Audio	Impedance = 47kΩ or more
Noise (lamp mode: Full power / Power saver)		40dB / 36dB
Operating temperature		0°C (32°F) to 40°C (104°F)
Power supply		AC100V to 240V 50 / 60Hz
Power consumption (Full power / Power saver / Low-power standby with LAN on / standby with LAN off)		455W / 360W / 0.7W / 0.3W
Dimensions		380 mm (W) x 170 mm (H) x 430 mm (D) / 15.0 (W) x 6.7 (H) x 16.9 (D) in (including the projection)
Weight		8.5 kg / 18.7 lbs (not including projection lens unit)
Accessories		Remote control, remote control dry-cell batteries, power cord, PC cable, User's Manual (this manual), Supplement NMPJ Ver. 1.1 User's Manual (CD-ROM), Important Information and Warranty Card

*1 When using a Standard Zoom Lens (RS-IL01ST). Varies depending on the type of lens unit.

*2 When lamp mode is set to [Full power].

*3 Compliance with ISO21118-2012



* 99.99% or more of the LCD panel pixels are effective. During projection, 0.01% or less of pixels may stay lit or unlit due to the characteristics of the LCD panel.

* Using the projector continuously for an extended period of time may accelerate the deterioration of optical parts.



■ Remote control


Type	RS-RC04	RS-RC05 (Option)
Power supply	DC 3.0V, using two AAA-size batteries	DC 3.0V, using two AA-size batteries
Operating range	Approx. 8 m± 25° horizontal and vertical (to infrared remote receiver)	
Dimensions	43 mm (W) x 23 mm (H) x 135 mm (D) / 1.7 (W) x 0.9 (H) x 5.3 (D) in.	51 mm (W) x 28 mm (H) x 176 mm (D) / 2.0 (W) x 1.1 (H) x 6.9 (D) in.
Weight	56 g / 2.0 oz	100 g / 3.5 oz

■ Specification of Each Lens Unit (Option)

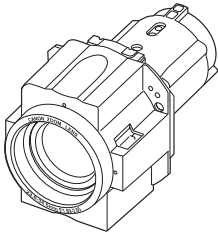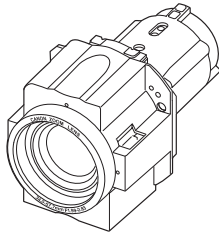Name	Standard Zoom Lens	Long Zoom Lens
Model number	RS-IL01ST	RS-IL02LZ
External View		
Focal length	23.0 - 34.5 mm (0.9 - 1.4")	34.0 - 57.7 mm (1.3 - 2.3")
F number	1.89 - 2.65	1.99 - 2.83
Width	97.4 mm (3.8")	97.4 mm (3.8")
Height	106.5 mm (4.2")	106.5 mm (4.2")
Length	173.4 mm (6.8")	173.4 mm (6.8")
Weight	550 g (1.2 lbs)	755 g (1.7 lbs)
Zoom ratio	1.5x	1.7x
Projection distance	1.3 - 29.0 m (4.3 - 95.1')	1.9 - 48.5 m (6.2 - 159.1')
Size 100 projection distance	3.2 - 4.8 m (10.5 - 15.7')	4.7 - 8.0 m (15.4 - 26.2')


For details about the amount of lens shift, refer to "Lens Shift Function" on [page 129](#).

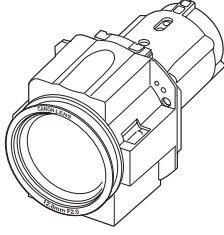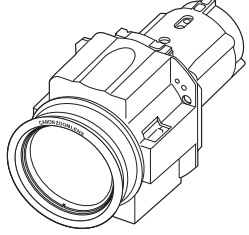Name	Short Fixed Lens	Ultra Long Zoom Lens
Model number	RS-IL03WF	RS-IL04UL
External View		
Focal length	12.8 mm (0.5")	53.6 - 105.6 mm (2.1 - 4.2")
F number	2.0	2.34 - 2.81
Width	97.4 mm (3.8")	97.4 mm (3.8")
Height	106.5 mm (4.2")	106.5 mm (4.2")
Length	175.2 mm (6.9")	184.2 mm (7.3")
Weight	910 g (2.0 lbs)	940 g (2.1 lbs)
Zoom ratio	–	1.95x
Projection distance	0.7 - 5.2 m (2.3 - 17.1')	4.6 - 89.0 m (15.1 - 292.0')
Size 100 projection distance	1.7 m (5.6')	7.6 - 14.9 m (24.9 - 48.9')

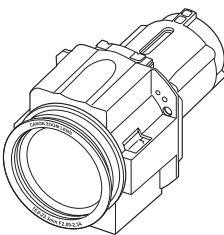Name	Wide Zoom Lens
Model number	RS-IL05WZ
External View	
Focal length	15.6 - 23.3 mm (6.0 - 9.0")
F number	2.09 - 2.34
Width	97.4 mm (3.8")
Height	106.5 mm (4.2")
Length	180.3 mm (7.1")
Weight	905 g (2.0 lbs)
Zoom ratio	1.5x
Projection distance	0.9 - 19.5 m (3.0 - 64.0')
Size 100 projection distance	2.2 - 3.2 m (7.2 - 10.5')

For details about the amount of lens shift, refer to “Lens Shift Function” on [page 129](#).

■ External View

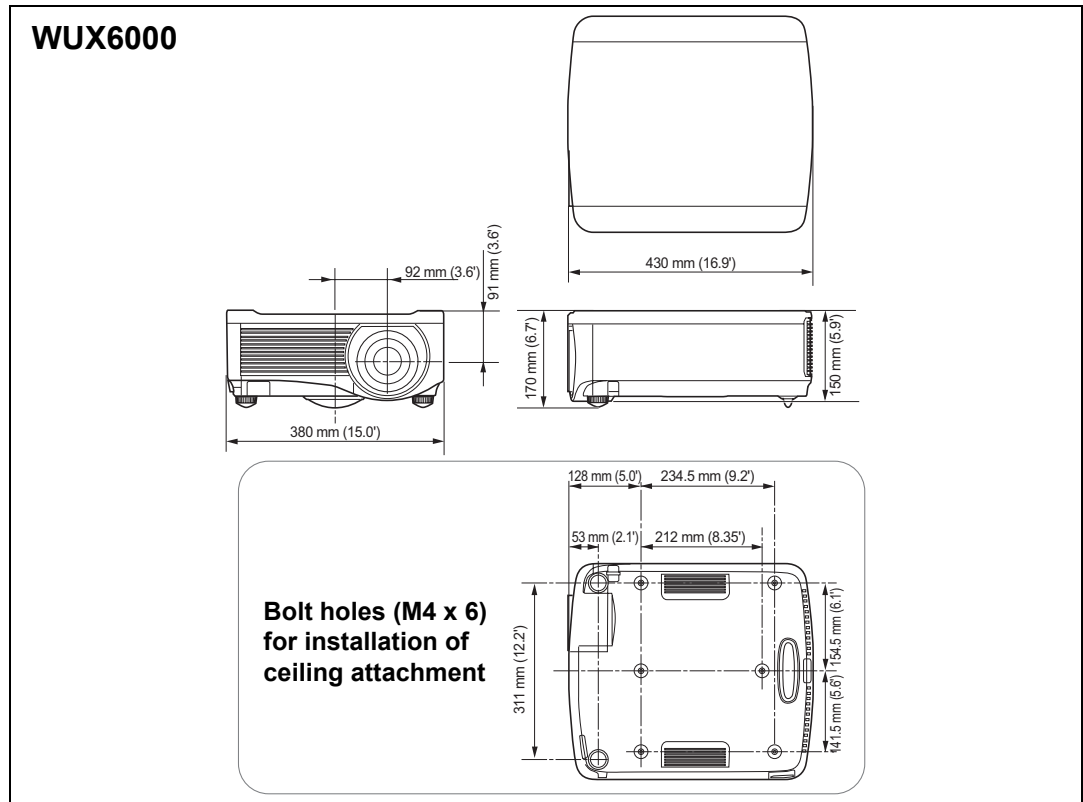


■ ANALOG PC-2 / COMPONENT terminal

This terminal is used as a computer ANALOG PC input or COMPONENT input terminal. Use a D-sub computer cable.

The terminal specifications for the ANALOG PC input and COMPONENT input are the same.


Mini D-sub 15-pin

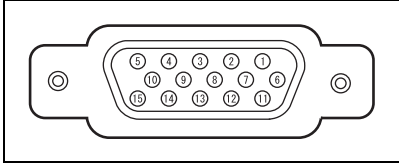

Pin No.	Signal	Pin No.	Signal
1	R	9	+5 V power
2	G	10	Ground (Vertical sync.)
3	B	11	Ground
4	OPEN	12	DDC data
5	Ground (Horizontal sync.)	13	Horizontal sync.
6	Ground (R)	14	Vertical sync.
7	Ground (G)	15	DDC clock
8	Ground (B)		

■ Service Port (CONTROL)

Pin assignment

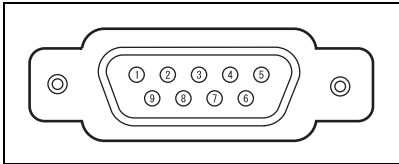

Pin No.	Signal
1	OPEN
2	RxD
3	TxD
4	OPEN
5	GND
6	OPEN
7	Internal pull-up
8	OPEN
9	OPEN

Communication format

Communication mode : RS-232C, asynchronous, half-duplex communication

Communication speed : 19200bps

Character length : 8 bits

Stop bits : 2 bits

Parity : None

Flow control : None

Control commands

Commands		ASCII representation	Binary representation
Power supply	Power on	POWER=ON<CR>	50h 4Fh 57h 45h 52h 3Dh 4Fh 4Eh 0Dh
	Power off	POWER=OFF<CR>	50h 4Fh 57h 45h 52h 3Dh 4Fh 46h 46h 0Dh
Power status acquisition		GET=POWER<CR>	47h 45h 54h 3Dh 50h 4Fh 57h 45h 52h 0Dh
Input source	HDMI	INPUT=HDMI<CR>	49h 4Eh 50h 55h 54h 3Dh 48h 44h 4Dh 49h 0Dh
	Digital PC	INPUT=D-RGB<CR>	49h 4Eh 50h 55h 54h 3Dh 44h 2Dh 52h 47h 42h 0Dh
	Analog PC-1	INPUT=A-RGB1<CR>	49h 4Eh 50h 55h 54h 3Dh 41h 2Dh 52h 47h 42h 31h 0Dh
	Analog PC-2	INPUT=A-RGB2<CR>	49h 4Eh 50h 55h 54h 3Dh 41h 2Dh 52h 47h 42h 32h 0Dh
	Component	INPUT=COMP<CR>	49h 4Eh 50h 55h 54h 3Dh 43h 4Fh 4Dh 50h 0Dh
	LAN	INPUT=LAN<CR>	49h 4Eh 50h 55h 54h 3Dh 4Ch 41h 4Eh 0Dh
	USB	INPUT=USB<CR>	49h 4Eh 50h 55h 54h 3Dh 55h 53h 42h 0Dh
Input source acquisition		GET=INPUT<CR>	47h 45h 54h 3Dh 49h 4Eh 50h 55h 54h 0Dh
Image Mode	Standard	IMAGE=STANDARD<CR>	49h 4Dh 41h 47h 45h 3Dh 53h 54h 41h 4Eh 44h 41h 52h 44h 0Dh
	Presentation	IMAGE=PRESENTATION<CR>	49h 4Dh 41h 47h 45h 3Dh 50h 52h 45h 53h 45h 4Eh 54h 41h 54h 49h 4Fh 4Eh 0Dh
	VividPhoto	IMAGE=VIVID_PHOTO<CR>	49h 4Dh 41h 47h 45h 3Dh 56h 49h 56h 49h 44h 5Fh 50h 48h 4Fh 54h 4Fh 0Dh
	Photo/sRGB	IMAGE=PHOTO_SRGB<CR>	49h 4Dh 41h 47h 45h 3Dh 50h 48h 4Fh 54h 4Fh 5Fh 53h 52h 47h 42h 0Dh
	Dynamic	IMAGE=DYNAMIC<CR>	49h 4Dh 41h 47h 45h 3Dh 44h 59h 4Eh 41h 4Dh 49h 43h 0Dh
	Video	IMAGE=VIDEO<CR>	49h 4Dh 41h 47h 45h 3Dh 56h 49h 44h 45h 4Fh 0Dh
	Cinema	IMAGE=CINEMA<CR>	49h 4Dh 41h 47h 45h 3Dh 43h 49h 4Eh 45h 4Dh 41h 0Dh
	User 1	IMAGE=USER_1<CR>	49h 4Dh 41h 47h 45h 3Dh 55h 53h 45h 52h 5Fh 31h 0Dh
	User 2	IMAGE=USER_2<CR>	49h 4Dh 41h 47h 45h 3Dh 55h 53h 45h 52h 5Fh 32h 0Dh
	User 3	IMAGE=USER_3<CR>	49h 4Dh 41h 47h 45h 3Dh 55h 53h 45h 52h 5Fh 33h 0Dh
	User 4	IMAGE=USER_4<CR>	49h 4Dh 41h 47h 45h 3Dh 55h 53h 45h 52h 5Fh 34h 0Dh
	User 5	IMAGE=USER_5<CR>	49h 4Dh 41h 47h 45h 3Dh 55h 53h 45h 52h 5Fh 35h 0Dh
Image mode acquisition		GET=IMAGE<CR>	47h 45h 54h 3Dh 49h 4Dh 41h 47h 45h 0Dh
Brightness	Brightness value setting	BRI=<value>CR	42h 52h 49h 3Dh <numeric code> 0Dh

Commands		ASCII representation	Binary representation
Brightness acquisition		GET=BRI<CR>	47h 45h 54h 3Dh 42h 52h 49h 0Dh
Sharpness	Sharpness value setting	SHARP=<value><CR>	53h 48h 41h 52h 50h 3Dh <numeric code> 0Dh
Sharpness acquisition		GET=SHARP<CR>	47h 45h 54h 3Dh 53h 48h 41h 52h 50h 0Dh
Contrast	Contrast value setting	CONT=<value><CR>	43h 4Fh 4Eh 54h 3Dh <numeric code> 0Dh
Contrast acquisition		GET=CONT<CR>	47h 45h 54h 3Dh 43h 4Fh 4Eh 54h 0Dh
Aspect	Auto	ASPECT=AUTO<CR>	41h 53h 50h 45h 43h 54h 3Dh 41h 55h 54h 4Fh 0Dh
	4:3	ASPECT=4:3<CR>	41h 53h 50h 45h 43h 54h 3Dh 34h 3Ah 33h 0Dh
	16:9	ASPECT=16:9<CR>	41h 53h 50h 45h 43h 54h 3Dh 31h 36h 3Ah 39h 0Dh
	16:10	ASPECT=16:10<CR>	41h 53h 50h 45h 43h 54h 3Dh 31h 36h 3Ah 31h 30h 0Dh
	Zoom	ASPECT=ZOOM<CR>	41h 53h 50h 45h 43h 54h 3Dh 5Ah 4Fh 4Fh 4Dh 0Dh
	True size	ASPECT=TRUE<CR>	41h 53h 50h 45h 43h 54h 3Dh 54h 52h 55h 45h 0Dh
Aspect value acquisition		GET=ASPECT<CR>	47h 45h 54h 3Dh 41h 53h 50h 45h 43h 54h 0Dh
Lamp mode	Full power	LAMP=FULL<CR>	4Ch 41h 4Dh 50h 3Dh 46h 55h 4Ch 4Ch 0Dh
	Power saver	LAMP=ECO<CR>	4Ch 41h 4Dh 50h 3Dh 45h 43h 4Fh 0Dh
Lamp mode value acquisition		GET=LAMP<CR>	47h 45h 54h 3Dh 4Ch 41h 4Dh 50h 0Dh
Blank	Blank On	BLANK=ON<CR>	42h 4Ch 41h 4Eh 4Bh 3Dh 4Fh 4Eh 0Dh
	Blank Off	BLANK=OFF<CR>	42h 4Ch 41h 4Eh 4Bh 3Dh 4Fh 46h 46h 0Dh
Blank acquisition		GET=BLANK<CR>	47h 45h 54h 3Dh 42h 4Ch 41h 4Eh 4Bh 0Dh

Numerics

6-axis color adjust 92

A

Adjusting keystone distortion 54

Adjusting the volume..... 63

Air filter..... 196

Ambient light 89

Analog PC..... 39, 132, 133

Analog PC-1..... 132

ANALOG PC-1 / DVI-I input
terminal..... 39, 132, 133

Analog PC-2..... 132, 133

ANALOG PC-2 / COMPONENT
terminal..... 39, 132, 133

ASPECT..... 53

Aspect..... 52, 209

AUDIO IN terminal
..... 36, 106, 132, 133, 136

AUDIO OUT terminal 36, 134, 137

Auto (Aspect) 52

AUTO PC 43

Auto PC..... 43

B

Beep..... 100

BLANK 62

Brightness 86

C

Ceiling mounted 141

Component 39, 136

Connection to computer..... 132

Contrast 86

Corner adjustment 144

Customizing system operation..... 96

D

D. ZOOM..... 64

DHCP 169

Digital image shift..... 50

Digital PC 39, 133

Digital zoom..... 33

Direct power on 99

Display resolution (Preparing the
computer) 41

Displaying logo..... 98

DVI 39, 133

DVI-I 132, 133

DVI-I input terminal 36

Dynamic gamma 91

E

Edge blending 154

Electronic zoom..... 143

F

Factory defaults..... 111

FREEZE 62

G

Gamma 87

Guide..... 149

H

HDMI 39, 134, 135

HDMI color space..... 79

HDMI IN terminal..... 36, 134, 135

HDMI input level..... 79

HDMI over scan 80

Horizontal pixels..... 78

Horizontal position..... 78

Horizontal-vertical keystone 144

I

IMAGE..... 58

Image adjustment menu..... 72

- Image flip H/V (Ceiling mounted / Rear projection)..... 141
- Image mode (Image quality) 57
- Information 72, 112
- INPUT 40
- Input signal select 39
- Input terminal 36
- Connecting to AV equipment 135
- Connection to computer 132
- K**
- Key lock 101
- KEYSTONE 54
- Keystone 54
- L**
- Lamp counter 108
- Lamp mode 95
- Lamp replacement
..... 108, 151, 197, 199
- LAN port..... 36
- Language 103
- LED indicator 35, 202
- Lens position..... 147
- M**
- Memory color correction 92
- Menu 72
- Menu display time 151
- Menu position..... 149
- Motion blur reduction 103
- MUTE 63
- Muting 63
- N**
- Network function 168
- Network password setting 166
- Network setting initialization..... 170
- Network settings 72
- Network settings lock 165
- O**
- OK 33
- Optical zoom 45
- P**
- Password settings 104
- Performing Gamma Correction 87
- PJLink 170
- Positional lock 141
- POWER..... 38, 60
- Power saver settings 59
- Power-saving 59
- Progressive 80
- Projector on 98
- R**
- Rear projection 141
- Register network password 167
- Register password..... 105
- Registration 146
- Remote control 29, 32, 102
- Reset 95, 111
- S**
- Screen aspect 48, 142, 209
- Screen color 148
- Screen when blank..... 97
- Selecting a language..... 103, 139
- Setting display status 75
- Sharpness 87
- Side control 34
- Signal type 214
- Slideshows 81
- Split-screen display 67
- System settings menu 72

T

TCP/IP settings 169
Test pattern 153, 213
Total dots..... 77
Tracking 77
True size (Aspect)..... 53
Turning on external monitor output
(preparing the notebook computer)
..... 140

U

USB..... 65
USB Port..... 36

V

Vertical pixels 78
Vertical position..... 78
VOL..... 63

W

WARNING indicator 34, 202

Z

Zooming an Image 64

Option

- Lamp
Part No.: RS-LP09
- Ceiling attachment
Part No.: RS-CL11
- Ceiling-mount pipe
(400 - 600 mm / 15.7 - 23.6 in)
Part No.: RS-CL08*
- Ceiling-mount pipe
(600 - 1000 mm / 23.6 - 39.4 in)
Part No.: RS-CL09*
- Air filter
Part No.: RS-FL01
- Remote control
Part No.: RS-RC04
- Remote control
Part No.: RS-RC05

* Use the above materials to hang the projector from the ceiling. For details, refer to the assembly and installation manual provided with the ceiling attachment RS-CL11.

Menu Configuration

Input Settings Menu

*: Factory defaults (setting after reset)

Aspect	Digital PC / Analog PC-1/2 / HDMI (when [HDMI In] is [Computer]) Auto* 16:10 16:9 4:3 True size HDMI (when [HDMI In] is [Auto]) / Component Auto* 16:9 4:3 Zoom True size USB / LAN Auto	P75
Auto PC	Analog PC-1 / 2	P76
Input signal select	Analog PC-1 / 2 640 x 480 : 1920 x 1200	P76
Input signal settings	Analog PC-1 / 2 Total dots Tracking Horizontal position Vertical position Horizontal pixels Vertical pixels	P77 P77 P78 P78 P78 P78
HDMI input level	HDMI Auto* Normal Expanded	P79
HDMI color space	HDMI Auto* RGB YCbCr	P79
HDMI over scan	HDMI Off* On	P80
Progressive	Component / HDMI Off Film/auto* Video 1 Video 2 25p/30p(PsF)	P80


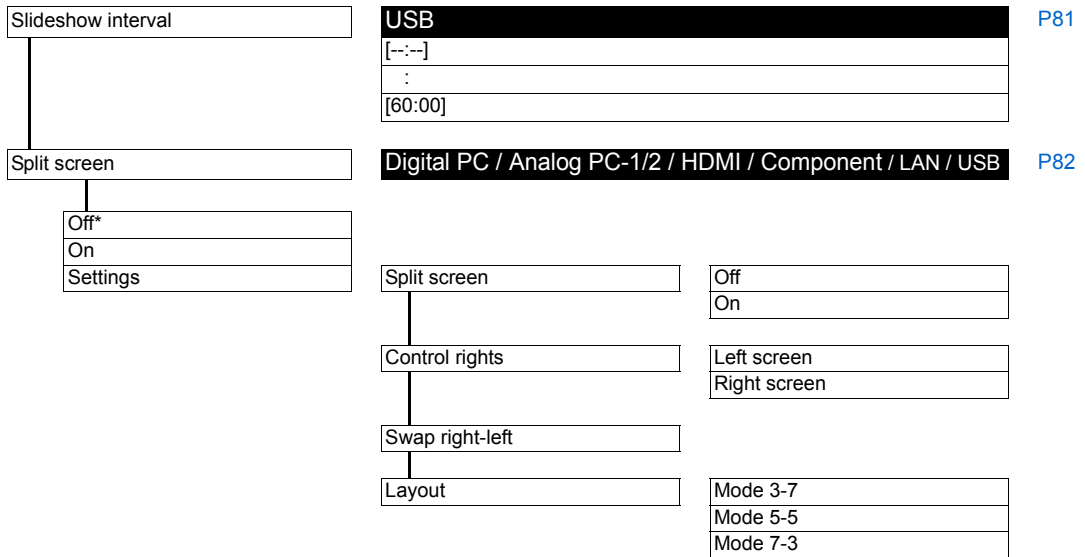


Image Adjustment Menu

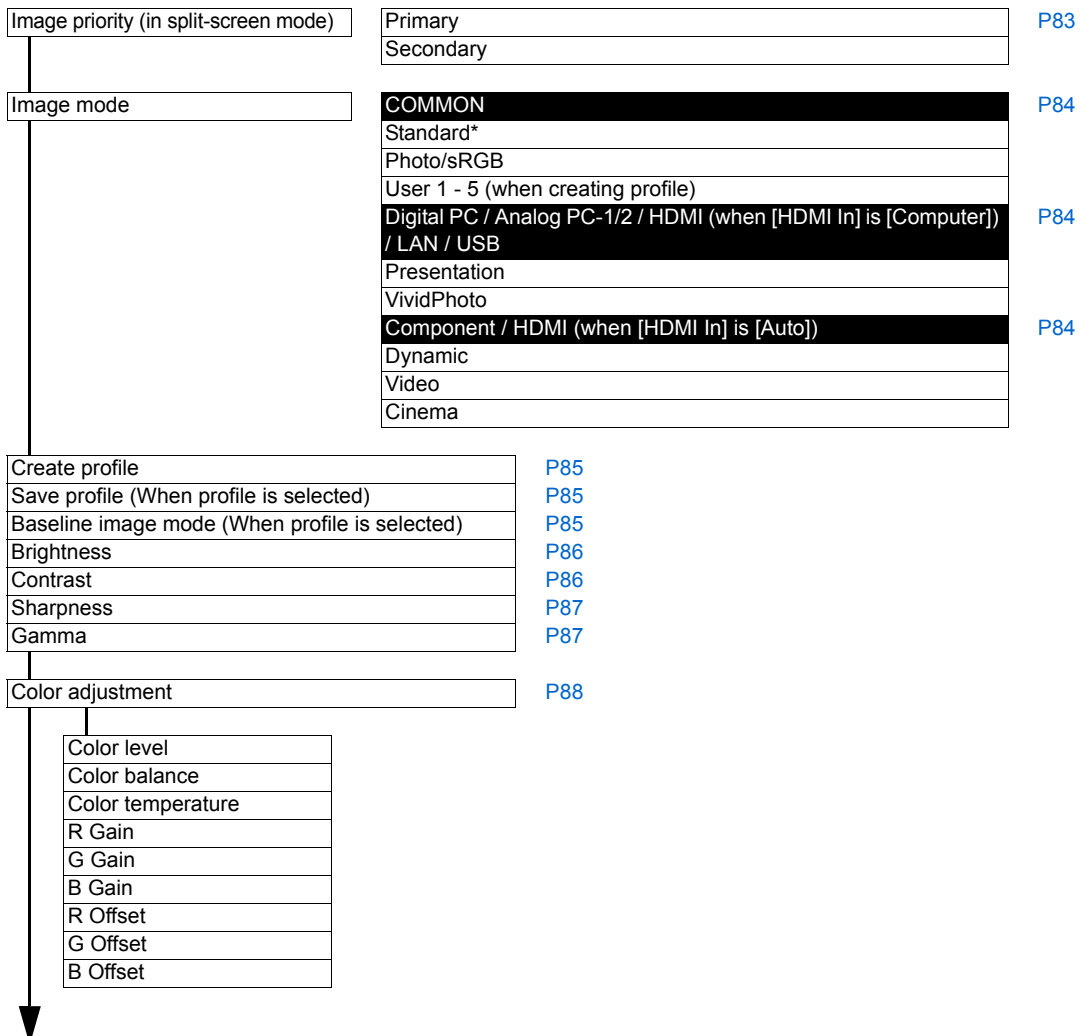

*: Factory defaults (setting after reset)

Menu Configuration

Advanced adjustment			
Ambient light (when Photo/sRGB is selected)	Off* Adjust		P89
	Type	Tungsten Fluorescent	
	Level	L H	
Random noise reduction	Digital PC / Analog PC-1/2 / HDMI / Component Off* Weak Middle Strong		P90
MPEG noise reduction	Digital PC / Analog PC-1/2 / HDMI / Component Off* Weak Middle Strong		P90
Mosquito noise reduction	USB / LAN Off* Weak Middle Strong		P91
Dynamic gamma*1	Off Weak Middle Strong		P91
Mem. color correct*2	Flesh Sky Green	Off Weak Middle Strong	P92
6-axis color adjust	Off* Adjust Reset	Hue / Saturation / Brightness	P92
Fine-Tune Gamma			P93
Lamp control	Off* On		P94
Lamp mode	Full power* Power saver		P95
Reset	OK / Cancel		P95

Factory default settings are set according to the following conditions.

- *1 • [Off] by default when HDMI ([HDMI In]) is [Computer], or for Digital PC, Analog PC (1 or 2), USB, or LAN.
- HDMI (when [HDMI In] is [Auto]) or Component: Weak
- *2 • For HDMI (when [HDMI In] is [Computer]), Digital PC, Analog PC (1 or 2), USB, or LAN, the factory default is [Off] in image modes other than [VividPhoto]. Default in [VividPhoto] mode: [Middle].
- For HDMI (when [HDMI In] is [Auto]) or Component, the factory default is [Weak], regardless of the image mode.

*: Factory defaults (setting after reset)

Install Settings Menu

Positional lock	Off* On	P141
Image flip H/V	None* Ceiling mounted Rear Rear, Ceiling mounted	P141
Screen aspect	16:10* 16:9 4:3 16:9 D. image shift 4:3 D. image shift	P142
Zoom (Short Fixed Lens)		P143
Keystone	Horizontal-vertical keystone* Corner adjustment Reset	P144
Digital image shift	D.image shift adjustment	P145
Professional settings		
Micro-digital image shift	Off* Adjust	P145
Registration	Off* Adjust	P146
Fan mode	Normal* High altitude	P146
Vertical projection	Off* Upward Downward	P147
Edge Blending	Off* Adjust	P154
	Side	Left Right Top Bottom
	Color blending adjustment Black level adjustment Marker	

*: Factory defaults (setting after reset)

Menu Configuration

Lens - Position	Load position 1 - 3 Save position 1 - 3 Lens shift reset	P147
Screen color	Normal* Greenboard Adjust	P148
On screen		
Menu position		P149
Guide	Off On*	P149
Show input status	Off On*	P150
Overheat warning display	Off* On	P150
Menu display time	Normal* Extended	P151
Lamp warning display	Off On*	P151
Air filter warning display	Off On*	P152
Split screen ID display	Off On*	P152
Test pattern	Off* On	P153

System Settings Menu

User screen settings		
Logo capture	OK Cancel*	P96
Logo position	Upper L Upper R Center* Lower L Lower R	P96
No signal screen	Black Blue* User logo	P97
Screen when blank	Black* Blue User logo	P97
Projector on	Skip Canon logo* User logo	P98

*: Factory defaults (setting after reset)

Power management mode	Disabled Lamp off Standby*	P98																						
Power management duration	5 min. 10 min. 15 min.* 20 min. 30 min. 60 min.	P99																						
Direct power on	Off* On	P99																						
Beep	Off On*	P100																						
Key repeat	Off On*	P100																						
Key lock	Off* Main unit Remote (wireless)	P101																						
Remote control channel	Ch1 Ch2 Ch3 Ch4 Independent*	P102																						
Motion blur reduction	Off* On	P103																						
Language	<table border="1"> <tr> <td>English</td> <td>Turkish</td> </tr> <tr> <td>German</td> <td>Polish</td> </tr> <tr> <td>French</td> <td>Hungarian</td> </tr> <tr> <td>Italian</td> <td>Czech</td> </tr> <tr> <td>Spanish</td> <td>Danish</td> </tr> <tr> <td>Portuguese</td> <td>Arabic</td> </tr> <tr> <td>Swedish</td> <td>Chinese (Simplified)</td> </tr> <tr> <td>Russian</td> <td>Chinese (Traditional)</td> </tr> <tr> <td>Dutch</td> <td>Korean</td> </tr> <tr> <td>Finnish</td> <td>Japanese</td> </tr> <tr> <td>Norwegian</td> <td></td> </tr> </table>	English	Turkish	German	Polish	French	Hungarian	Italian	Czech	Spanish	Danish	Portuguese	Arabic	Swedish	Chinese (Simplified)	Russian	Chinese (Traditional)	Dutch	Korean	Finnish	Japanese	Norwegian		P103
English	Turkish																							
German	Polish																							
French	Hungarian																							
Italian	Czech																							
Spanish	Danish																							
Portuguese	Arabic																							
Swedish	Chinese (Simplified)																							
Russian	Chinese (Traditional)																							
Dutch	Korean																							
Finnish	Japanese																							
Norwegian																								
Other settings																								
Password settings	Off* On	P104																						
Register password	Password input	P105																						
[Fn] button settings	Disable Split screen	P105																						

*: Factory defaults (setting after reset)

Menu Configuration

Audio in terminal select		
HDMI	Off Audio in 1 Audio in 2 HDMI*	P106
Digital PC	Off Audio in 1* Audio in 2	P106
Analog PC-1	Off Audio in 1* Audio in 2	P106
Analog PC-2	Off Audio in 1 Audio in 2*	P106
Component	Off Audio in 1 Audio in 2*	P106
LAN	Off Audio in 1 Audio in 2 LAN*	P106
USB	Off Audio in 1* Audio in 2	P106
Gamma restore	Off* Adjust	P107
HDMI In	Auto* Computer	P108
Lamp counter	Return Reset (Yes / No)	P108
Air filter counter	Return Reset (Yes / No)	P110
Firmware		P110
Factory defaults	OK / Cancel	P111

Network Settings Menu

Network settings lock	Unlock Lock*	P165
Network password setting	Off On*	P166
Register network password	Password input	P167
Network standby settings	Normal Low-power*	P167



*: Factory defaults (setting after reset)

Network function	Off*	P168
	On	
Detailed settings		
IP address		P168
Gateway address		P168
MAC address		P168
DHCP	Off*	P169
	On	
TCP/IP settings	IP address	P169
	Subnet mask	
	Gateway address	
	Enter	
Network setting initialization	Yes / No	P170
PJLink	Off	P170
	On*	
AMX Device Discovery	Off*	P171
	On	
Crestron RoomView	Off*	P172
	On	

Information

Model name	P112
Input signal	
Firmware	
Serial no.	
IP address	
E-mail sender address	
E-mail recipient address	
Projector name	
Comments	
System information ID	

*: Factory defaults (setting after reset)

**CANON INC.**

30-2, Shimomaruko 3-chome, Ohta-ku, Tokyo
146-8501, Japan

U.S.A.

CANON U.S.A. INC.

One Canon Park, Melville, New York 11747,
U.S.A.

For all inquires concerning this product, call toll
free in the U.S. 1-800-OK-CANON

CANADA

CANON CANADA INC. HEADQUARTERS

6390 Dixie Road, Mississauga, Ontario L5T
1P7, Canada

**CANON CANADA INC. MONTREAL
BRANCH**

5990, Côte-de-Liesse, Montréal Québec H4T
1V7, Canada

CANON CANADA INC. CALGARY OFFICE

2828, 16th Street, N.E. Calgary, Alberta T2E
7K7, Canada

For all inquiries concerning this product, call
toll free in Canada
1-800-OK-CANON

EUROPE, AFRICA & MIDDLE EAST

CANON EUROPE LTD.

3 The Square, Stockley Park, Uxbridge,
Middlesex, UB11 1ET United Kingdom

CANON EUROPA N.V.

Bovenkerkerweg 59, 1185 XB Amstelveen,
The Netherlands

CANON FRANCE S.A.S

17, quai du President Paul Doumer, 92414
Courbevoie Cedex, France

CANON UK LTD.

Woodhatch Reigate Surrey RH2 8BF, United
Kingdom

CANON DEUTSCHLAND GmbH

Europark Fichtenhain A10, 47807 Krefeld,
Germany

CANON ITALIA S.p.A.

Via Milano 8 I-20097 San Donato Milanese,
Milano, Italy

CANON Schweiz AG

Geschäftsbereich Wiederverkauf,
Industriestrasse 12, CH-8305 Dietlikon,
Switzerland

CANON GMBH

Zetschegasse 11, A-1230 Wien, Austria

CANON España, S.A.

Av. De Europa, 6 Alcobendas 28108 Madrid,
Spain

CANON PORTUGAL S.A.

Rua Alfredo da Silva, 14 Alfragide 2610-016
Amadora, Portugal

CANON Belgium N.V. / S.A.

Berkenlaan 3, 1831 Diegem (Mechelen),
Belgium

CANON Netherland NV

Neptunusstraat 1, 2132 JA Hoofddorp, The
Netherlands

CANON LUXEMBOURG S.A.

Rue des Joncs 21, L-1818 Howald,
Luxembourg

CANON DANMARK A / S

Knud Hoejgaards Vej 1 DK-2860 Soeborg,
Danmark

CANON OY

Huopalahdentie 24 PL 1 00351 Helsinki,
Finland

CANON SVENSKA AB

Gustav III:s Boulevard 26 169 88 Solna,
Sweden

CANON NORGE as

Hallagerbakken 110, Postboks 33, Holmlia,
1201 Oslo, Norway

CENTRAL & SOUTH AMERICA

CANON LATIN AMERICA, INC.

703 Waterford Way, Ste. 400 Miami, FL 33126,
U.S.A.

ASIA

CANON (China) Co., Ltd.

15F Jinbao Building No.89 Jinbao Street,
Dongcheng District, Beijing 100005, China

CANON HONGKONG CO., LTD.

19 / F., The Metropolis Tower, 10 Metropolis
Drive, Hunghom, Kowloon, Hong Kong

CANON SINGAPORE PTE. LTD.

1 HarbourFront Avenue, #04-01 Keppel Bay
Tower, Singapore 098632

CANON KOREA CONSUMER IMAGING INC.

607, Teheran-ro, Gangnam-gu, Seoul,
Rep. of KOREA

OCEANIA

CANON AUSTRALIA PTY. LTD.

Building A, The Park Estate, 5 Talavera Road,
Macquarie Park, NSW 2113, Australia

CANON NEW ZEALAND LTD.

Akoranga Business Park, Akoranga Drive,
Northcote, Auckland, New Zealand