



P320 EXTENDED SLIDE RELEASE INSTALL/REMOVAL INSTRUCTIONS

REMOVAL -

- ENSURE THE PISTOL IS UNLOADED AND SAFE. PLEASE READ YOUR CURRENT SIG SAUER® P320 OWNER'S MANUAL PRIOR TO PERFORMING THE FOLLOWING PROCEDURE.
- REMOVE THE FRAME ASSEMBLY PER SIG SAUER® P320 OWNER'S MANUAL.
- REMOVE THE SLIDE CATCH RELEASE PIN FROM THE LEFT SIDE OF THE FRAME.
- LIFT THE SLIDE RELEASE, SLIDE RELEASE SPRING AND POST FROM THE FRAME ASSEMBLY.

INSTALLATION -

- SET THE NEW SLIDE RELEASE UPSIDE DOWN ON A FLAT SURFACE.
- INSERT THE POST INTO THE SLIDE RELEASE AND SET THE SPRING ON TOP OF THE POST.
- SET THE FRAME ASSEMBLY OVER THE SLIDE RELEASE AND LIFT UP THE SLIDE RELEASE AND FRAME ASSEMBLY.
- WHILE HOLDING THE ASSEMBLY, RE-INSERT THE SLIDE RELEASE PIN BACK THROUGH THE FRAME.
- REFER TO YOUR SIG SAUER® P320 OWNER'S MANUAL AND RE-ASSEMBLE THE PISTOL.