



## **EXTRACTOR REMOVAL/CLEANING INSTRUCTIONS**

- 1. IT IS ADVISED TO REMOVE AND CLEAN THE EXTRACTOR EVERY 6,000 RDS OR IF YOU HAVE ANY FAILURES TO EXTRACT. THE EDC X9 EXTRACTOR IS HELD IN BY A THREADED PIN THAT IS ALSO RETAINED WITH THREADLOCKER. THE FIRST TIME YOU REMOVE THE EXTRACTOR PIN, HEAT MAY BE REQUIRED TO BREAK THE ADHESIVE BOND.**
- 2. TO REMOVE EXTRACTOR, ENSURE PISTOL IS UNLOADED.**
- 3. REMOVE SLIDE FROM PISTOL AND SET ASIDE RECOIL SPRING ASSEMBLY AND BARREL.**
- 4. APPLY HEAT TO THE BOTTOM OF THE EXTRACTOR PIN AREA OF THE SLIDE WITH A TORCH OR SOLDERING IRON TO BREAK THE THREADLOCKER ADHESIVE BOND.**
- 5. USING THE SUPPLIED .050" HEX WRENCH TURN THE THREADED EXTRACTOR PIN COUNTERCLOCKWISE TO REMOVE IT FROM THE SLIDE.**
- 6. RETAIN THE EXTRACTOR WITH YOUR HAND WHILE REMOVING THE PIN.**
- 7. CLEAN EXTRACTOR AND EXTRACTOR POCKET THOROUGHLY.**
- 8. IT IS RECOMMENDED TO REPLACE THE EXTRACTOR SPRING WITH A NEW SPRING/BUFFER AT THIS TIME. CLEAN THE EXTRACTOR AND POCKET THOROUGHLY OF CARBON DEPOSITS. DO NOT LEAVE EXCESSIVE OIL OR LUBRICANT UNDER THE EXTRACTOR POCKET WHEN REASSEMBLING.**
- 9. REASSEMBLE IN REVERSE ORDER.**
- 10. TEST YOUR EXTRACTOR BY PLACING A DUMMY ROUND UNDER YOUR EXTRACTOR HOOK.**

### **NOTE:**

***ALWAYS WEAR HIGH-QUALITY SAFETY GLASSES WHEN INSTALLING OR FITTING ANY SPRING TO PREVENT EYE INJURY.  
HIGH-QUALITY SAFETY EYEGLASSES SHOULD BE USED WHEN SHOOTING ANY FIREARM. DO NOT USE AMMUNITION  
EXCEEDING STANDARD FACTORY PRESSURE LEVELS.***

### **WARNING**

***FAILURE TO FOLLOW THESE PROCEDURES MAY RESULT IN ACCIDENTAL DISCHARGE, FIREARM DAMAGE AND SERIOUS  
BODILY INJURY. ALWAYS BE CERTAIN YOUR FIREARM IS FUNCTIONING PROPERLY BEFORE USE.***