




The Swimsuit Dryer Company
Manufacturing The Next Generation Swimsuit Dryer


RCD and Motor Trip Reset

The first thing to try if basket stops spinning completely when lid is pressed:

Located at the **base of the unit** is an accessible RCD and a motor trip reset button, pictured below:

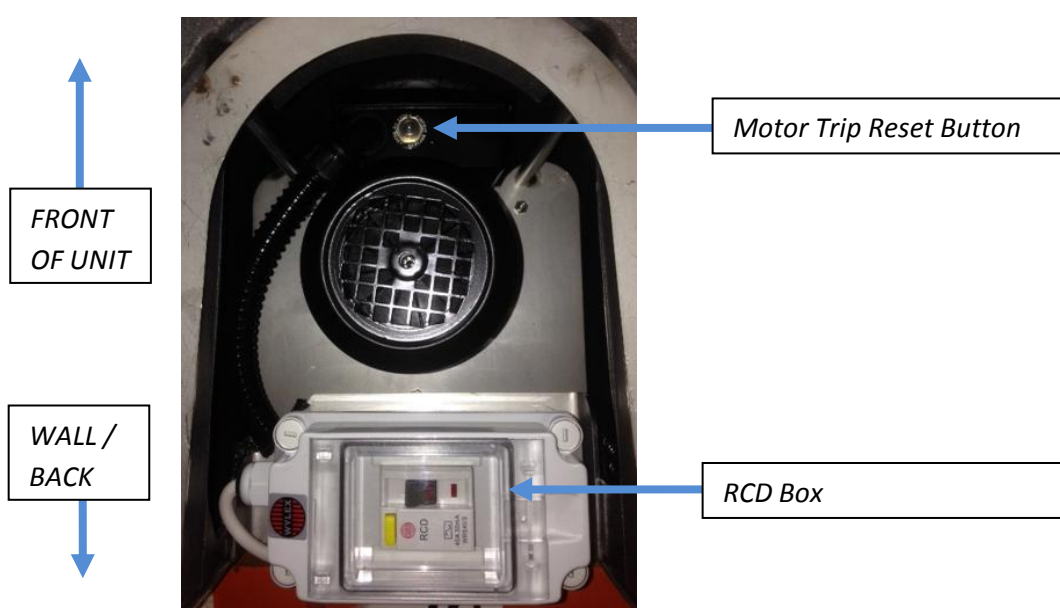

- **Does the unit light up when lid is pressed?** No – Make sure the RCD switch is set to the **ON** position, (switch is accessible by lifting the plastic cover – please re-close to keep water out). Check that power is going to the unit.
- **Is the RCD set to ON but the hub does not spin?** Firmly press the Motor Trip Reset button (illustrated below-right) found within the clear housing.

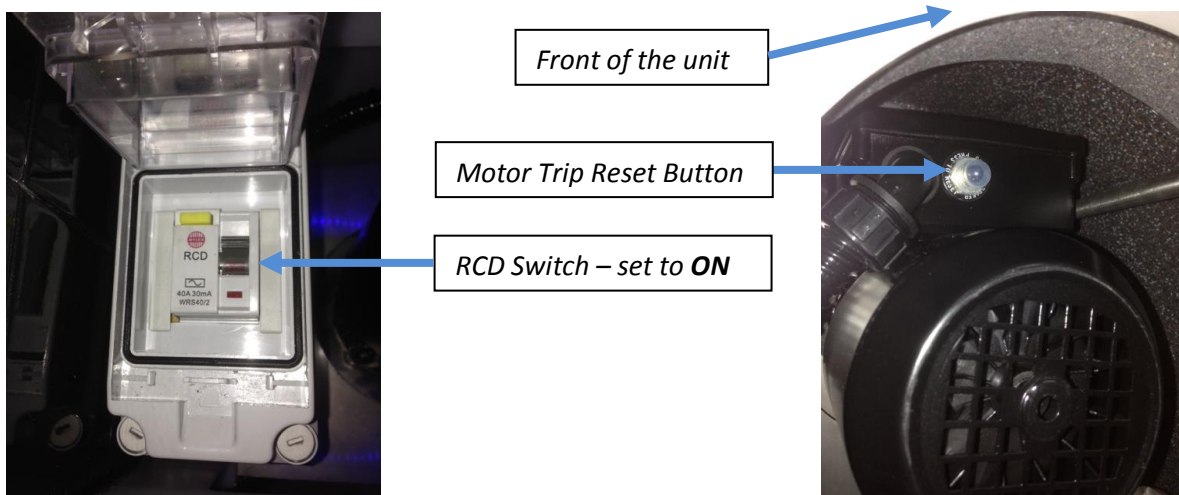

Please contact your supplier if this does not resolve the issue.