

SOTF Switch Installation

2011-2016 6.7L Power Stroke

- Locate the appropriate sensor (pictured below) near the factory upper fuel filter housing.
- Unplug the sensor and cut back approximately 1.5" of the protective wire sheathing.
- Tap the SOTF switch into the **green** and **green/white** wires (polarity does not matter).
- Leave the sensor unplugged from the factory location. Tape the end of the plug if desired.
- Ensure that a proper SOTF profile/calibration is installed. If a SOTF profile/calibration is installed without a switch, the ECM will default to position 1 (lowest power).

