 


C310 Quick Setup Guide

1. Download App

1. Download “Doby” from App store for iPhone or Play store for Android phone.

- Make sure your smartphone is connected to the Wi-Fi router.
- Register to create an account and log in.
- Open the app and “Click “+” button on the bottom right corner to add camera.”

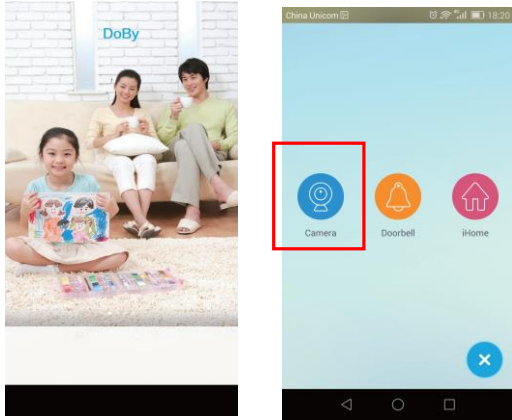

2. Turn on the Power

2. Turn on the power switch after removing the safety cover.

 
- Blue LED light should be blinking.
- If not, press and hold the WiFi key for about 5 seconds until the WiFi indicator blue light is blinking.



3. One Key WiFi Setup

3. While WiFi LED is blinking.


- Tap [Yes] to enter WiFi setup page.
- Tap on the searched camera.
- Enter WIFI Password.

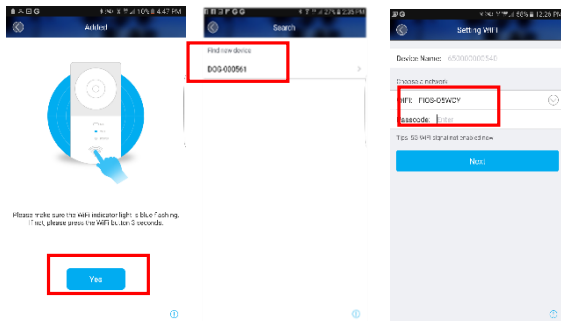

4. Live View

4. Tap on the camera from the list.

 - Tap to play live view.
- Tap on Protection for alarm setting
- Tap on Playback to see recorded video.

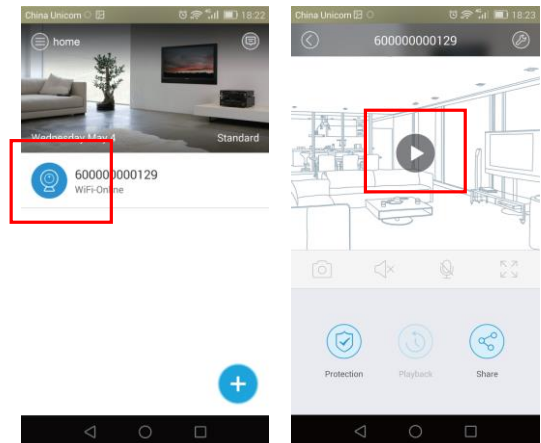

Additional Wire Free Cameras



Model
C330

Wire-Free WiFi
Cube Camera

Features

Two Way Audio

MSRP

\$129.99



C300

Wire-Free WiFi
Desktop Camera

Desk top or
Wall mount
One way audio

\$149.99



C310

Wire-Free WiFi
Solar Camera

Outdoor housing
Solar Panel
One way Audio

\$249.99



C500

Wire-Free WiFi
Panning Camera

Panning
Two Way Audio

\$199.99




DB100

Wire-Free WiFi
Doorbell Camera

Doorbell Camera
Rechargeable
Battery or 24VAC

 \$179.99

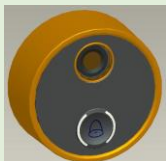

D110

Wire-Free WiFi
Peephole Camera

Replace peephole
Motion Alert
Two way audio

\$179.99



D120

Wire-Free WiFi
Door Bell Camera

Separate Doorbell
Motion Alert
Two way audio

\$179.99