

2.24.2017

Sold By:
TangleTree MZC Resurrection
779 SE 11th Street
North Bend, WA 98045
206-851-5885

Sold To:
Customer

Re: Purchase of Rebuilt MZC88-0078577

Thanks for your purchase of MZC88-78577 and your payment of \$XXX through PayPal. This document serves as receipt for the replacement MZC.

Connections:

Make all of the source connections identical to your old unit. This means you are using inputs on Source 3, 4, 5, and 6. Source numbering matches the keypad layout per the following list (button numbers refer to the keypad layout in the graphic on the next page):

- Source1 = Tuner1 (TNR1 button)
- Source2 = Tuner2 (TNR2 button)
- Source3 = SAT (Button 3)
- Source4 = DVD (Button 4)
- Source5 = SAT2 (Button 5)
- Source6 = iPOD (Button 6)
- Source7 = unused
- Source8 = unused

Connect the zone speaker connections the same as the older unit:


- Zone 1 = Utility
- Zone 2 = Back/Side Door
- Zone 3 = Kitchen
- Zone 4 = Back Porch
- Zone 5 = Bedroom
- Zone 6 = Master Bath
- Zone 7 = Master Bed
- Zone 8 = unused (but configured to be used later with the addition of speakers and a standard keypad like that in the Utility room, etc.)

Verify connections for the ipod Base and Mode adapter:

- Connect the white RJ45 cable (looks like a network cable from the black mode base box) from the port marked "Expansion" to the port on the MZC-88 marked "Expansion".
- Connect the RJ45 cable on the ipod dock to the port on the mode base (small black box) marked "iPOD Base".
- Make sure the "Address dial on the bottom of the white ipod base is pointing to 1.

- Make sure the audio cable from the black mode adapter (small black box) connects from it's "Line Out" port to Source 6 input on the MZC-88.

Keypad Button Assignments:

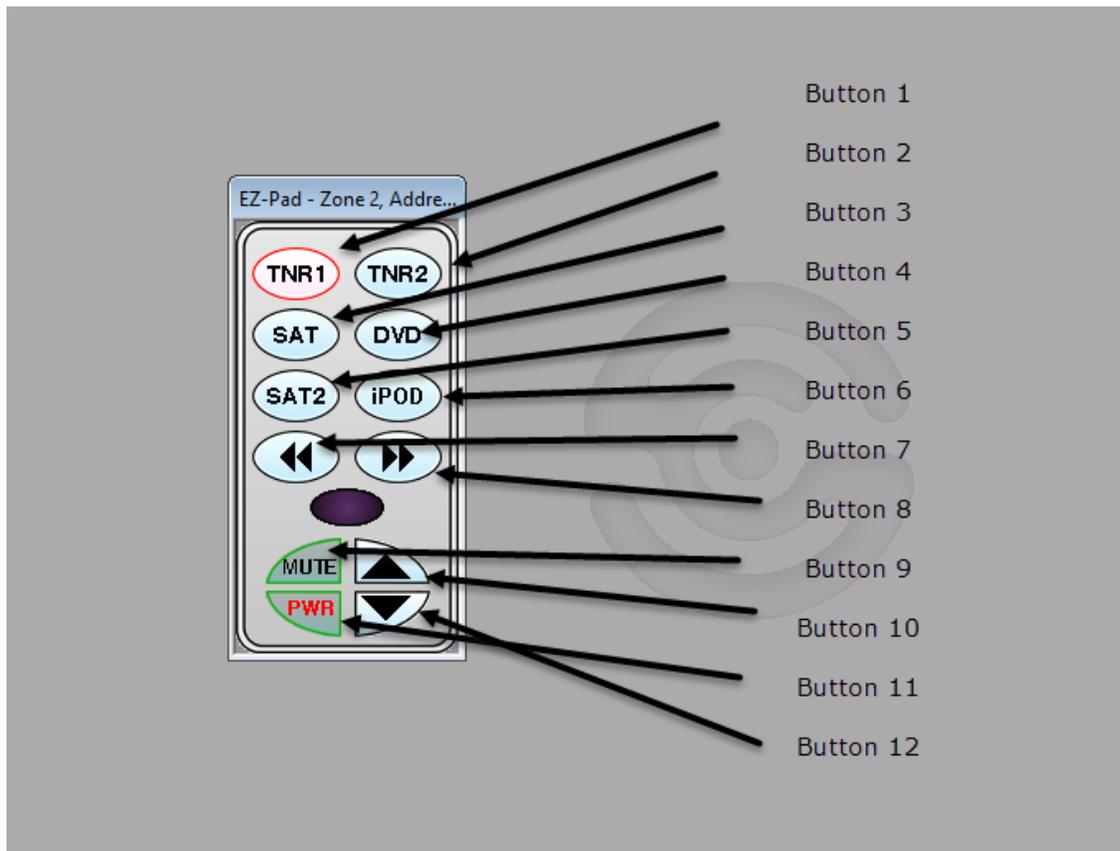


Using buttons 1-6 are the same as before. Press the button to play that corresponding source in the zone. However, buttons 7 and 8 may be different, and they will behave differently depending on which zone is active:

When this source is playing:	Then when you press this button:	This happens:
TNR1, TNR2	Button 7	Press once to go to the previous stored station
	Button 8	Press once to go the next stored station
SAT, DVD, SAT2	Button 7	Bass adjust...press the button once and the source light will flash. Adjust bass up or down using the volume controls. Then press the flashing source button one more time to lock the bass adjustment.
	Button 8	Treble adjust...behaves identically to the bass adjustment.
IPOD	Button 7	Press once to go backwards one song on the IPOD
	Button 8	Press once to go forward one song on the IPOD

The Mode keypads in zones 3 and 4 are a little more self explanatory, and they have more control of the iPod and Tuners by default.

Another comment on connections is about address settings on the back of the Mode keypads in zone 3 or 4. If the display lights up but nothing displays, check the address wheel on the back...it should be set to '0'. The button keypads also have a similar address wheel, and they each should be '0'. Yours are probably already set to those values, but it is worth checking if the zone doesn't respond when you power up. Note...the address settings on the pads should not be changed while the MZC-88 is turned on.

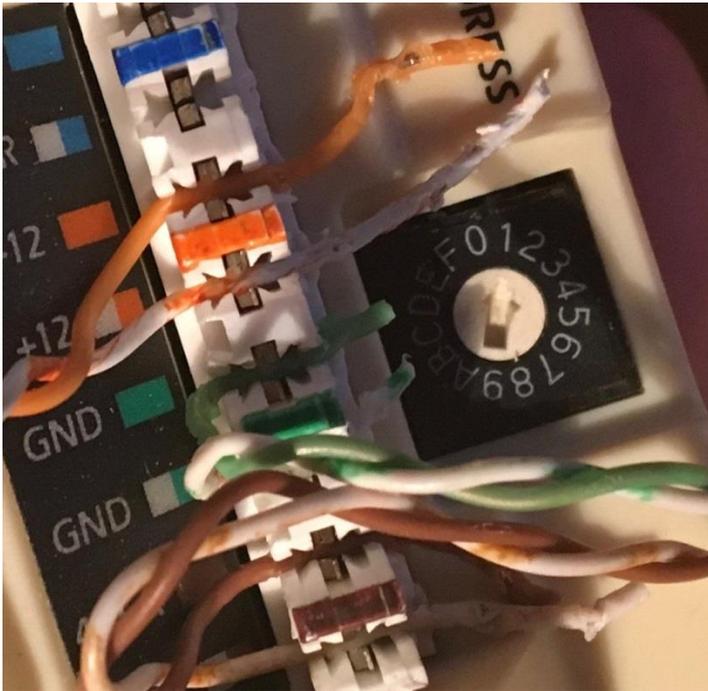

Exchanging Your Old MZC

1. Contact me when you are ready to crate up your old MZC. I will quickly email you a shipping label that you can tape to the box you rec'd the new MZC in.
2. Box it up tightly & ship it!

Service

If something happens to the new replacement MZC in the first 90 days, I will repair it at my cost, and I will pay shipping both ways. Exceptions to the warranty are acts of negligence or natural disaster. Please contact me about the issue you are having and we can make arrangements. If the failure is outside of the 90 day period, still contact me. My repair rates are reasonable @\$45/hr.

Don't hesitate to contact me with any questions. Please don't forget to provide feedback via eBay!

Rich Andrews

206-851-5885

TangleTree MZC

www.tangletreemzc.com