


### Basic Wiring

Basic wiring will work with any trap. Be sure to hook the the black wire to the battery's negative terminal and the red wire to the battery's positive terminal. The green and white wires go to the trap release.

### For All 110 Volt or 240 Volt Trap Machines

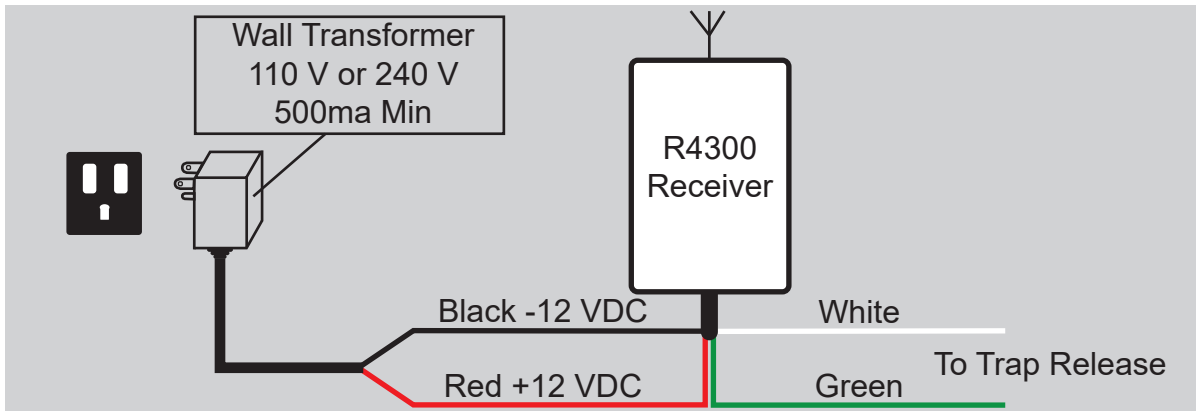


**DO NOT CONNECT 110 or 240 VOLTS DIRECTLY TO THE RECEIVER**

### Positively Fired Machines

Follow the diagram to attach the receiver directly to the specific trap's plug.


#### G.P. Traps

3 Pin Lagrand Male

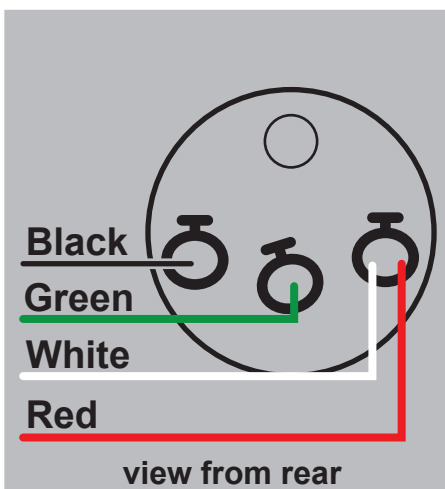


#### LaPorte

Male Harding Plug

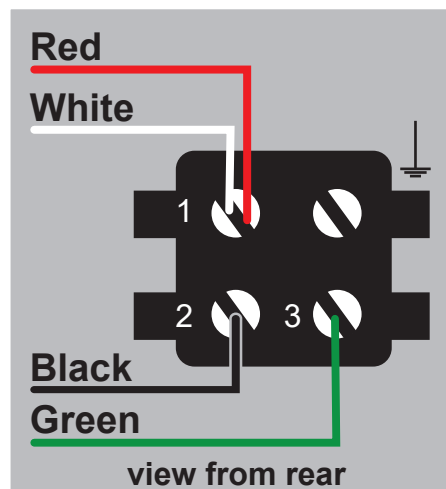

#### Lincoln


3 Pin Male

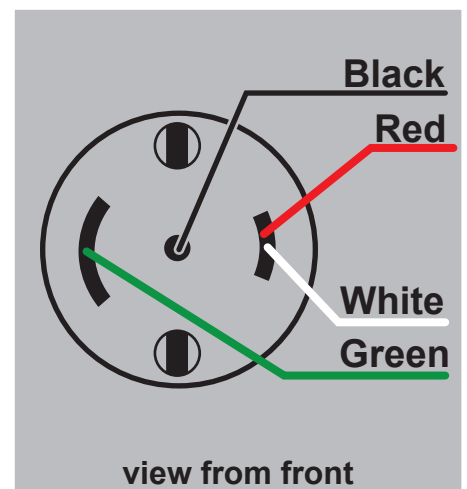


# Negatively Fired Machines

Follow the diagram to attach the receiver directly to the specific trap's plug.


**Atlas**  
3 Pin Male

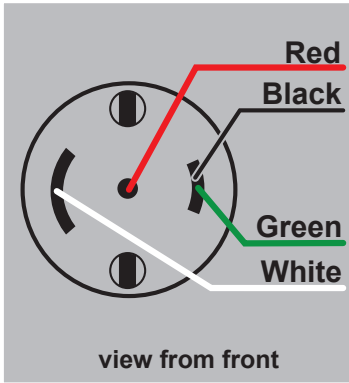


**Atlas**  
Male Phono

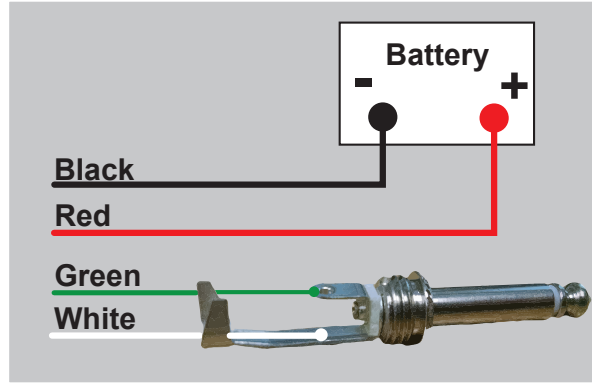


**Atlas**  
Wireless Remote 4 Wire  
3 Pin XLR Male

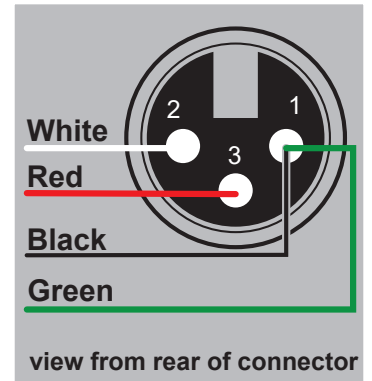


**Autosporter**  
3 Pin XLR Male

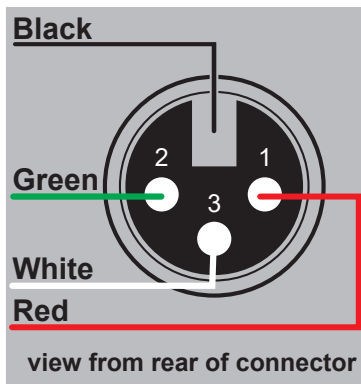


**Autosporter**  
4 Pin Female Mic Connector

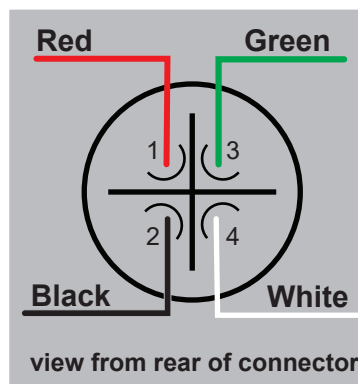


**Due Matic**  
Male Harding Plug

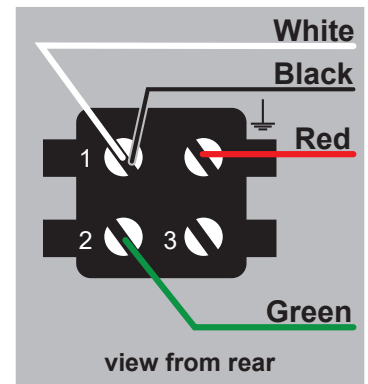


**LaPorte Doubles Rabbit**  
Male Harding Plug

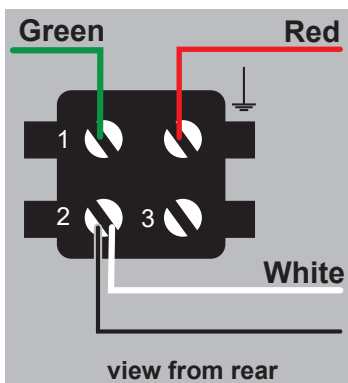


**MEC**  
110V Male Plug

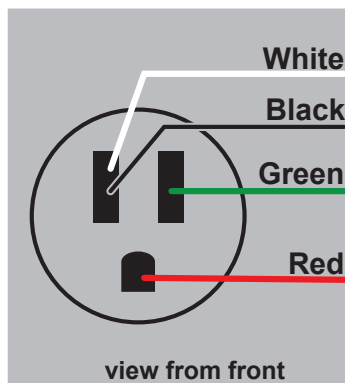


**MEC Wobble Trap**  
6-Pin Hirschman Male

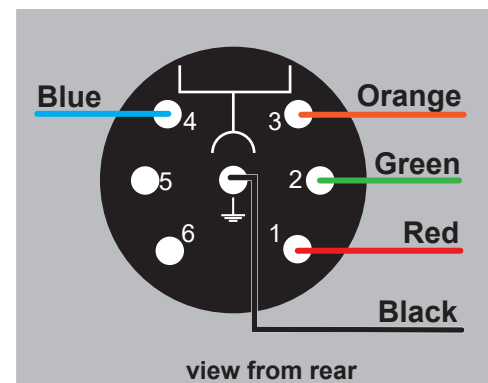

**Promatic Duraplug**

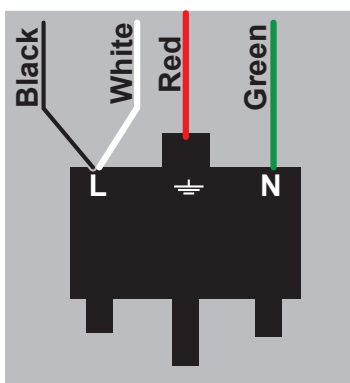

**Promatic New Style**  
Hirschman Male

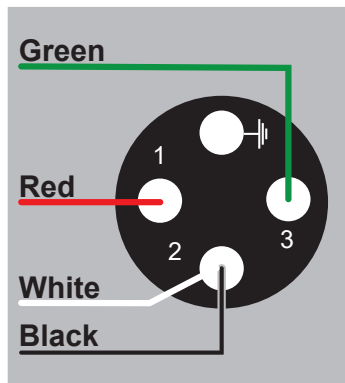

**R.L. Torresdal**  
4 Pin XLR Male

