 



T4300A

DIP SWITCH SETTINGS

For use with the **T4300A** three button transmitters and **R4300** receivers



 When the switch is pressed flush **TOWARD** the number, it is ON. When the switch is pressed flush **AWAY** from the number, it is OFF.



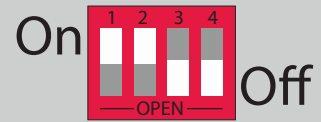


T4300A




Trap 1 Receiver

Trap 2 Receiver

 
 
 
Ch.1
Trap 1
Trap 2

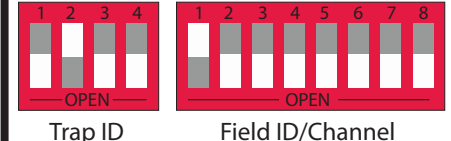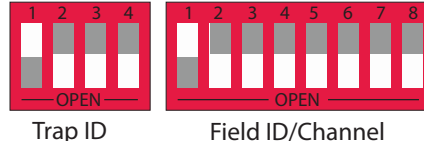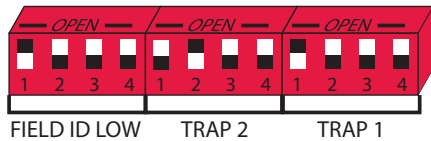




Ch.2
Trap 1
Trap 2

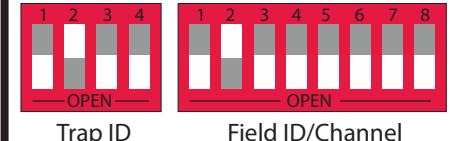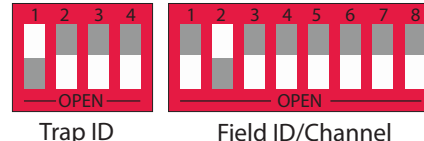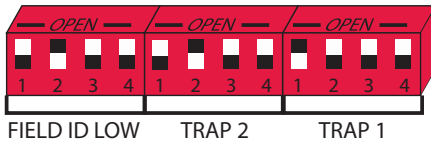   




Ch.3
Trap 1
Trap 2

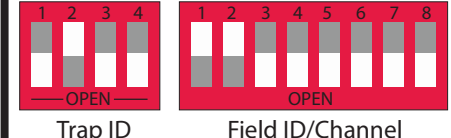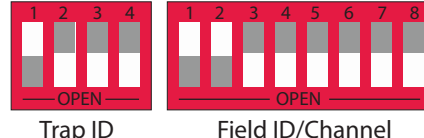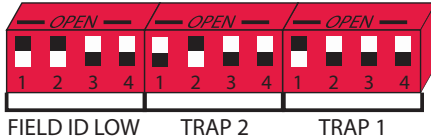   




Ch.4
Trap 1
Trap 2

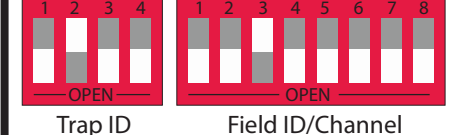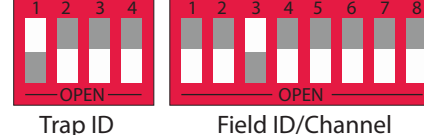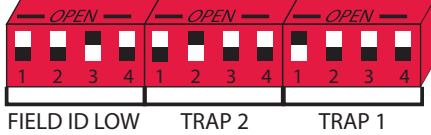   




Ch.5
Trap 1
Trap 2

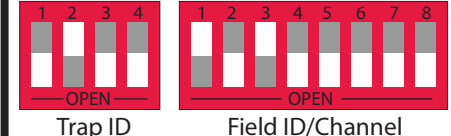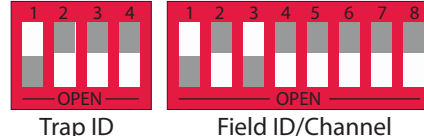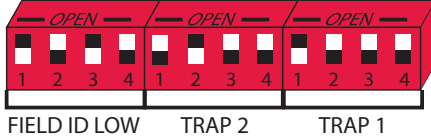   



Ch.6
Trap 1
Trap 2

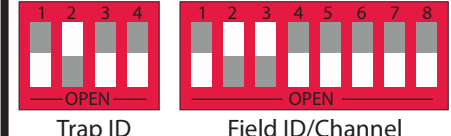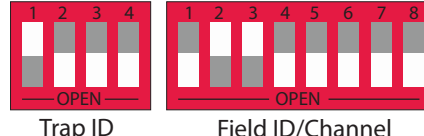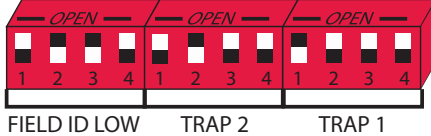   

Ch.7
Trap 1
Trap 2

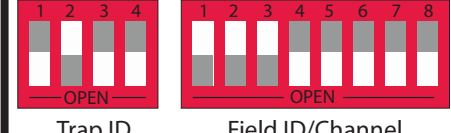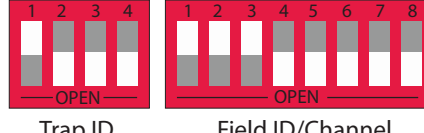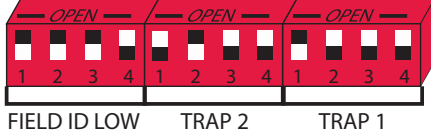   

Ch.8
Trap 1
Trap 2


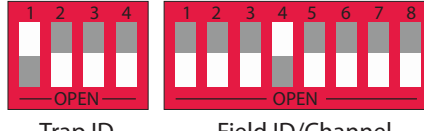 
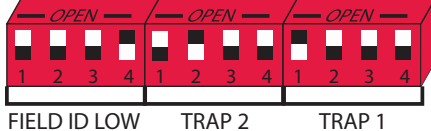 


T4300A




Trap 1 Receiver

Trap 2 Receiver

 
 
 
Ch.9
Trap 1
Trap 2

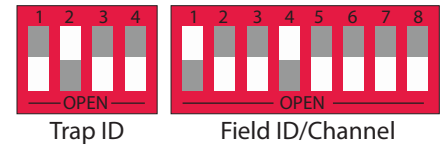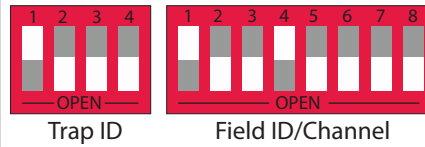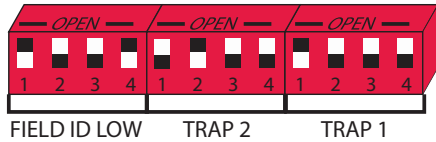




Ch.10
Trap 1
Trap 2

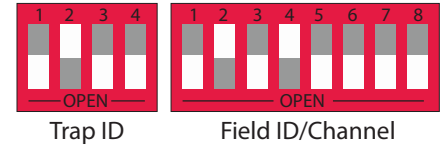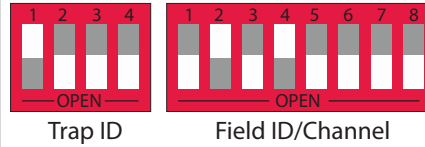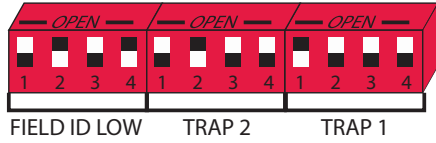   




Ch.11
Trap 1
Trap 2

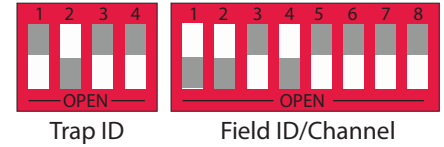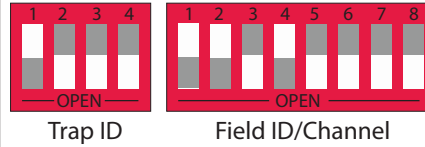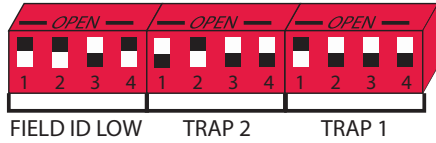   




Ch.12
Trap 1
Trap 2

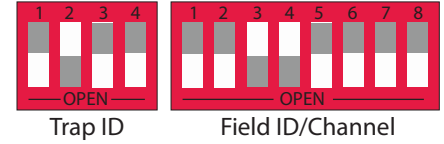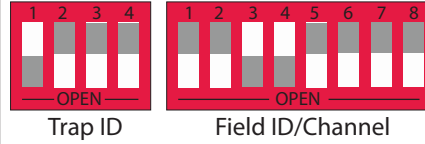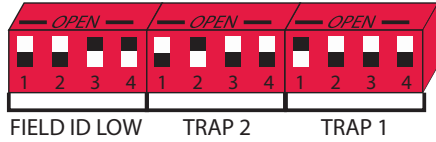   




Ch.13
Trap 1
Trap 2

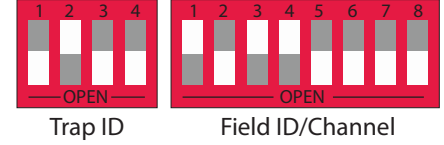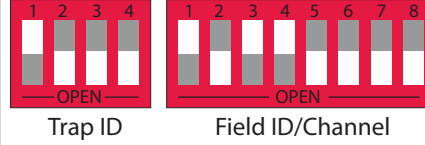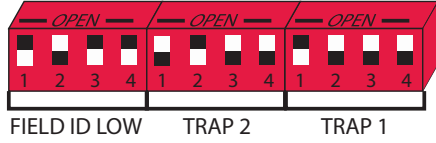   

Ch.14
Trap 1
Trap 2


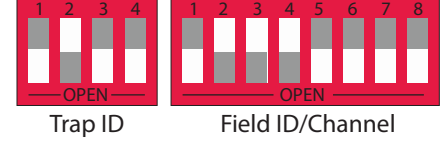 
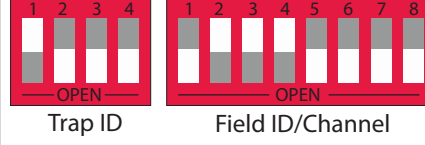 
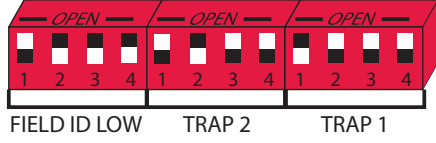 


Ch.15
Trap 1
Trap 2


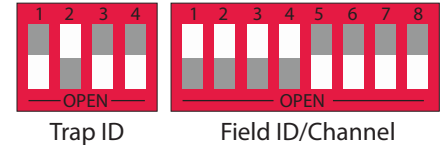 
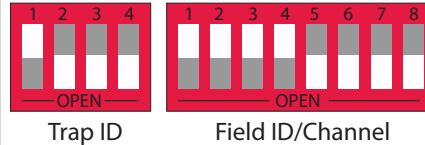 
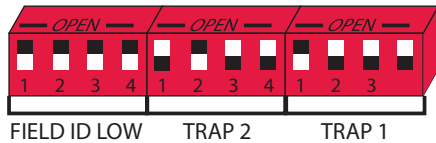 


WARNING: To access channels 16 and above, you must remove the 4 screws from the transmitter and remove the back half of the transmitter to expose a fourth bank of 4 dip switches.

    Ch.16
Trap 1
Trap 2

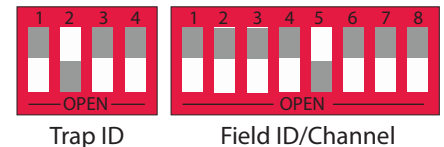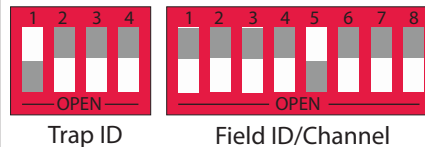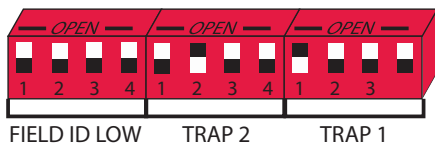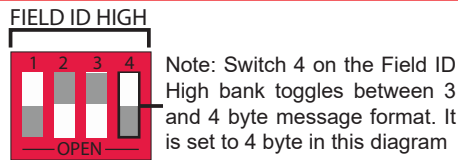

Ch.17
Trap 1
Trap 2

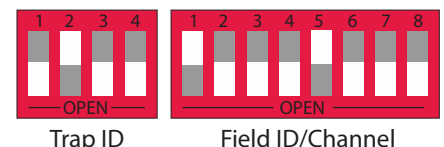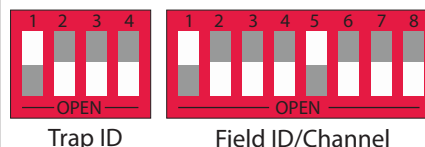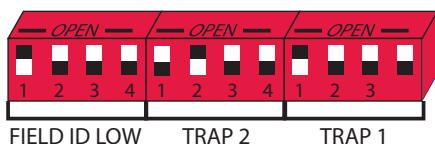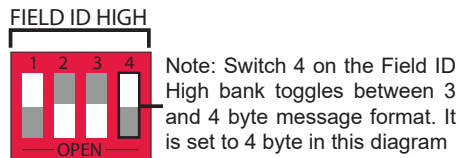    




T4300A

Trap 1 Receiver




Trap 2 Receiver

WARNING: To access channels 16 and above, you must remove the 4 screws from the transmitter and remove the back half of the transmitter to expose a fourth bank of 4 dip switches.

 
 
 
Ch.18
Trap 1
Trap 2

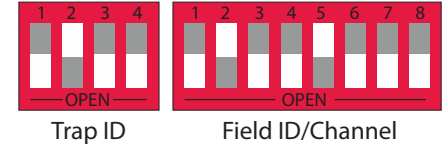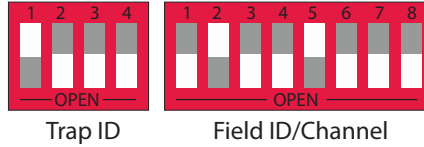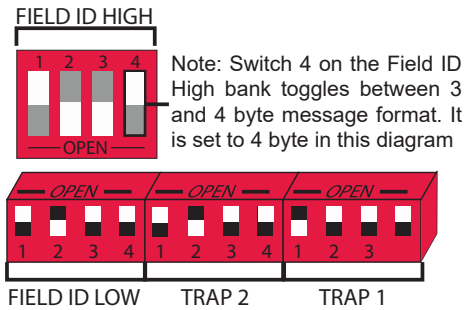




Ch.19
Trap 1
Trap 2

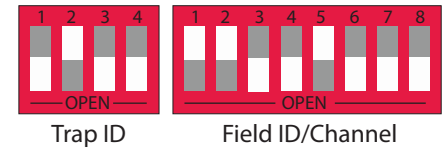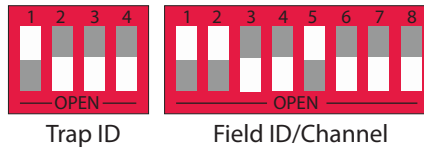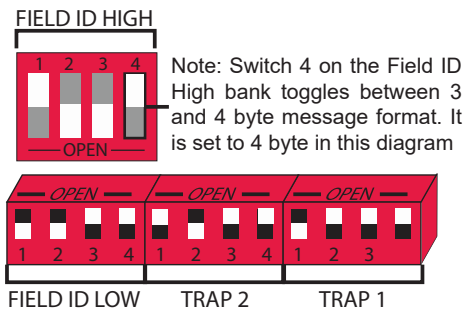   

Ch.20
Trap 1
Trap 2

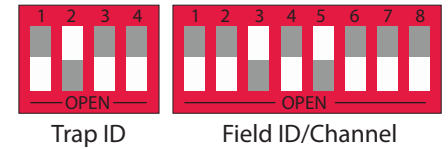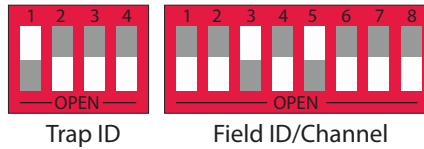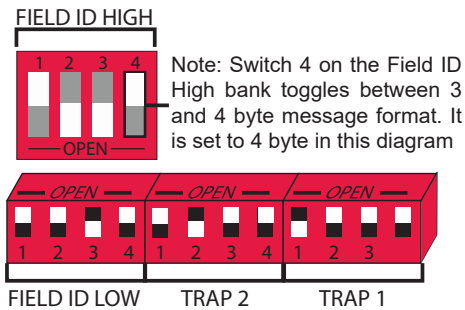   

Ch.21
Trap 1
Trap 2

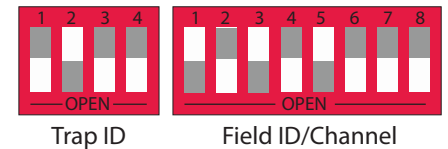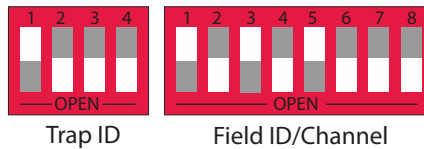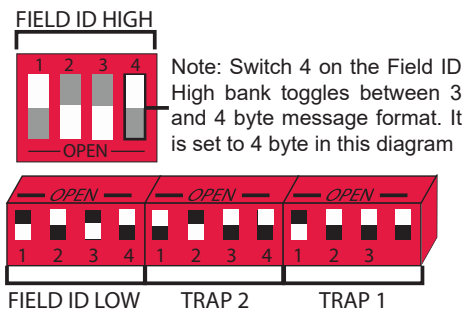   

Ch.22
Trap 1
Trap 2

