



# T4300 Trap



Long Range LLC. 26 Tannery Street Franklin, NH 03235

# Introduction

---

The T4300-Trap is a simple to use transmitter that can control a trap machine with the push of a button. The T4300-Trap has a voice version with the added ability to launch targets using voice control. Both transmitters require a 9-volt battery and an antenna.



Press the Trap button to power on the transmitter. Be aware the this first button press, even though the device is off, will fire the corresponding trap or traps.

The voice unit has a microphone included. For best results, clip this microphone to the lapel of vest or shirt, about 6-9 inches from your mouth.

## Button Operation

Press **Trap** to fire the corresponding trap.

## Voice Operation (Voice Option Only)

Be sure to have the supplied microphone plugged into the **Microphone Jack** on the top of the T4300-Trap and clipped to the lapel of vest or shirt, about 6-9 inches from your mouth. The transmitter can be clipped to a belt or put in a pocket of a shooting vest.

Once the microphone is plugged into the **Microphone Jack**, the T4300-Trap automatically enters voice activation mode. To fire a single target, press the **Trap** button. This arms the device but does not fire the trap. When ready, call "Pull" in a normal tone of voice to fire the designated trap.

## Lock On Mode (Voice Option Only)


The **Lock On Mode** is a feature of the T4300-Trap and is used in conjunction with voice operation. **Lock On Mode** allows the Trap button to be locked in and launched with a verbal command without pressing the button each time.

To lock in the trap, press and hold the **Trap** button for **5 seconds**. The trap is now locked in. When ready, call "Pull" in a normal tone of voice to fire the trap. After 4 seconds, the transmitter will re-arm and will be ready to fire the same trap. Request the target using the microphone and the trap will again fire. If the target does not launch, the button was not held down long enough to activate **Lock On Mode**. Redo the steps above and be sure to hold down the button for at least **5 seconds**. To exit **Lock On Mode**, press the **Trap** button.

## Link Mode (Alternative to Using Dip Switches)

**Link Mode** allows users to wireless link receivers to specific trap buttons. Be sure that the receiver you wish to link to is in **Link Mode**. If you are using the voice model, make sure that there is no microphone attached to the device.

- 1 Set desired **Field ID Channel** and **Trap Addresses** on the transmitter.
- 2 Power on desired receiver with all dip switches set to the **open/off** position. The red **Link LED** will blink for **15 Seconds**. This indicates that the receiver is in **Link Mode**. If a transmitter has not been linked to the receiver during this **15 seconds**, the receiver will revert to the previous settings.
- 3 Press and hold the trap button that you would like to assign to the receiver until the green **Tx Light** on the transmitter flashes.
- 4 The red **Link Mode** light on the receiver will go solid. The transmitter and receiver are now linked. Repeat this process to link another receiver.

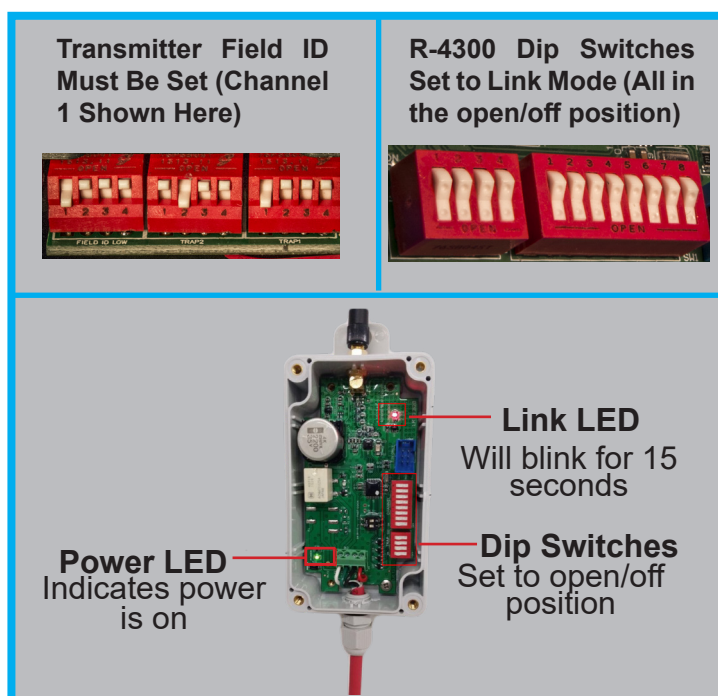

# Trouble Shooting

## Frequently Asked Questions

Questions	Answers
What should I do if my transmitter isn't turning on?	Be sure that the transmitter has a fresh 9-volt battery.
What should I do if my transmitter isn't working?	First, ensure that your transmitter is set to the same <b>Channel</b> as the trap that you are trying to fire. Second, ensure that your transmitter is set to the correct <b>Message Format</b> .  Please refer to the <b>Dip Switches Manual</b> included with your device.

## Contact

Please call us with any questions. Your satisfaction is our priority.

Call toll free:  
1 800 987-6749, Monday-Friday 8:30am-4:30pm EST

Website:  
<http://www.longrangellc.com>

**MAIL TO:** **Long Range LLC.**  
26 Tannery St.  
Franklin, NH 03235

Please carefully pack and ship, prepaid and insured, to Long Range LLC.