



Super Sporting Wireless Transmitter

T-3

T-3V

Instruction Manual



Long Range LLC. 26 Tannery Street Franklin, NH 03235

Introduction

The T3 and T3-V are simple to use transmitters that can control 3 trap machines with the push of a button. The T3-V has the added ability to launch targets using voice control. Both transmitters require a 9-volt battery and an antennae.



To turn on the T3, press the **On** button. The **Red Power LED** will illuminate indicating the device is on and ready to launch targets.

The T3-V has a microphone included. For best results, clip this microphone to the lapel of vest or shirt, about 6-9 inches from your mouth.

Button Operation (T3 & T3-V)

Single Targets

Press one of the 3 single trap buttons to fire the corresponding trap. The **Green Tx LED** will illuminate to indicate that a signal is being transmitted and the corresponding trap will fire.

True Pairs

To fire 2 traps simultaneously, press one of the **True Pair** combination buttons. The corresponding pair will fire simultaneously.

Voice Operation (T3-V Only)

Be sure to have the supplied microphone plugged into the **Microphone Jack** on the top of the T3-V and clipped to the lapel of vest or shirt, about 6-9 inches from your mouth. The T3-V transmitter can be clipped to a belt or put in a pocket of a shooting vest.

Single Targets

Once the microphone is plugged into the **Microphone Jack**, the T3-V automatically enters voice activation mode. To fire a single target, press one of the 3 trap buttons. This arms the device but does not fire the trap. The **Green Tx Light** will illuminate indicating the device is armed and waiting for the voice command. When ready, call "Pull" in a normal tone of voice to fire the designated trap. The trap will fire and the **Green Tx Light** will go out until another button is pressed.

True Pairs

To fire a true pair, press one of the **True Pair** combination buttons. The **Green Tx LED** will illuminate indicating the device is armed. Call "Pull" in a normal tone of voice. The corresponding pair will fire simultaneously and the **Green Tx LED** will go out until another button is pressed.

Report Mode (T3-V Only)

Report Mode is a feature of the T3-V and used in conjunction with voice operation. **Report Mode** allows shooter to call for the first target with the sound of their voice and the second target will fire on the report of the gun.

To set up **Report Mode**, press the first trap that you would like to fire (1-3). The **Green Tx LED** will illuminate to indicate that the device is armed. Before calling for the target, press another trap button to select the trap you would like to fire on the report. When you are ready, call "Pull" in a normal tone of voice to fire the first designated trap. The second selected trap will arm automatically and wait for the report of the gun. On the sound of the gun, the second trap will fire.

Lock On Mode

Lock On Mode allows singles, true pairs, report pairs or all 3 traps to be locked out. This feature automatically reloads the selected presentation allowing the shooter to call for targets hands free.

To lock in a single trap or true pair (T3-V only), press and hold a single trap or true pair button for 4 seconds until the **Green Tx Light** starts to flash. The selected trap(s) is now locked in. When ready, call "Pull" in a normal tone of voice to fire the designated trap(s). The trap(s) will fire and the **Green Tx Light** will go out. After 4 seconds, the **Green Tx Light** will begin to flash again and the T3-V will be ready to fire the same trap(s).

To cancel **Lock On Mode**, press the **On Button**.

A **Report Pair** may also be **Locked In** while using voice operation. First, press and hold the trap button you would like to see first for 4 seconds until the **Green Tx Light** begins flashing. Release the button and press the trap you would like to see on the report of the gun. The report pair is now locked in. Call for the first target by calling "Pull." The first target will fire. On the sound of the gun the second trap will fire. After 4 seconds, the first target of the report pair will again be armed on the transmitter. When ready, call "pull" and the report pair sequence begins again. To cancel the locked out report pair, press the **On** button.

To lock in all 3 traps, press and hold **Enter** for 4 seconds. Press the desired traps that you wish to fire simultaneously. These selected traps are now locked in. When ready, press **Enter** (T3) or call "Pull" in a normal tone of voice (T3-V) to fire the designated traps. When voice mode is inactive, the selected traps will fire each time the Enter Button is pressed. If voice mode is active, the selected traps will reload after 4 seconds, the **Green Tx Light** will begin to flash again and the unit will be ready to fire the same traps.



To exit **Lock On Mode**, press the **ON** button.

Link Mode (T3 & T3-V)

Link Mode allows users to wireless link receivers to specific trap buttons. Be sure that the receiver you wish to link to is in **Link Mode**. If you are using the T3-V make sure that there is no microphone attached to the device.

- 1 Set desired **Field ID Channel** on the transmitter.
- 2 Press and hold **On** and **Enter** until the red **Power Light** and the green **Tx Light** on the transmitter start alternately flashing. The red **Power Light** will go solid. It is now in **Link Mode**.
- 3 Power on desired receiver with all dip switches set to the **open/off** position.
- 4 Press the desired trap button that you would like to assign to the receiver (1-3). The T3 will link the receiver to that trap address and current channel. If the receiver linked successfully, the **Red Power LED** and **Green Tx LED** will alternately blink. If the link failed, the **Red Power LED** will turn off for 2 seconds.
- 5 The red **Link Mode** light on the receiver will go solid. The transmitter and receiver are now linked. Repeat this process to link another receiver.
- 6 To exit **Link Mode**, press and hold **On** until the **Red Power LED** turns off. The **Red Power LED** will turn back on. The unit is now back in normal operation.

**R4300 Dip Switches Set to Link Mode
(all in the open/off position)**

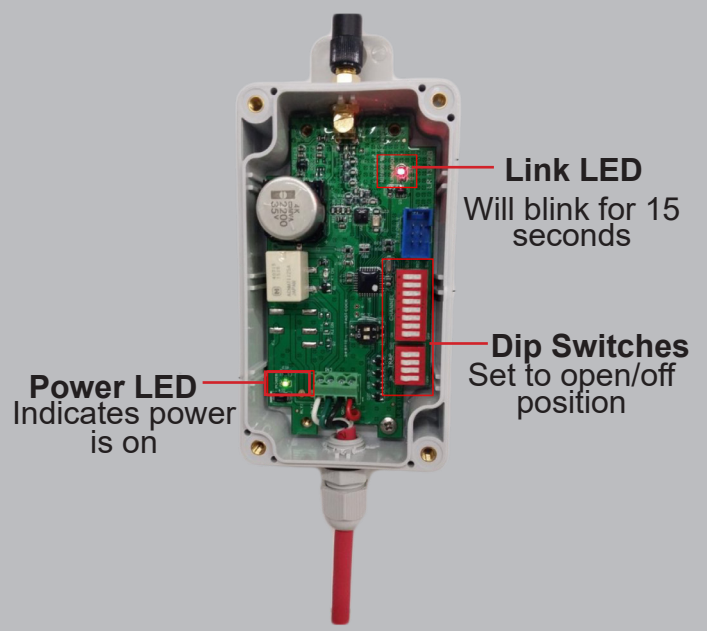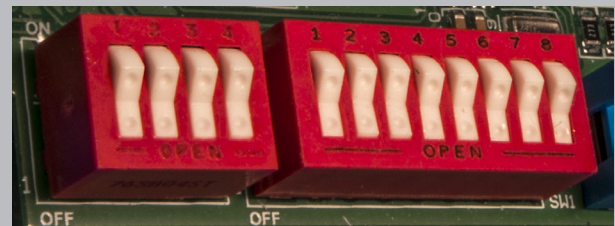

Trouble Shooting

Frequently Asked Questions

Questions	Answers
What should I do if my T3 isn't turning on?	Be sure that the T3 has a fresh 9-volt battery.
What should I do if my T3 isn't working?	First, ensure that your T3 is set to the same Channel as the trap that you are trying to fire. Second, ensure that your T3 is set to the correct Message Length . Please refer to the Dip Switches Manual included with your device.

Contact

Please call us with any questions. Your satisfaction is our priority.

Call toll free:
1 800 987-6749, Monday-Friday 8:30am-4:30pm EST

Website:
<http://www.longrangellc.com>

MAIL TO: **Long Range LLC.**
26 Tannery St.
Franklin, NH 03235

Please carefully pack and ship, prepaid and insured, to Long Range LLC.

Please carefully pack and ship, prepaid and insured, to Long Range LLC.