

DJ-20 REPLACEMENT

This head also fits several other makes and models

Remove the 4 bolts holding the bearing caps. The housing on the non-drive end will tap off (bearing will stay on the shaft). On the pulley end the bearing and housing must be removed together; there is a snap ring that holds the bearing in the housing. May be easier to change the bearings because some are hard to remove without damage. You may need a bearing separator or puller to remove the parts on the pulley side. Most auto parts stores have loan-a-tool services available. Bearings 6004zz(shielded) some use sealed type 6004 2rs operator side
6005zz(shielded) some use sealed type 6005 2rs pulley side

NOTE: some pulley keys vary, if the key is to tight, file only the bottom portion of the key so it fits the slot on the new head.



37-350 & 37-365X MODEL DJ-20 8" JOINTER

J-3C

PARTS LIST NO. 909947
DATE: 07-08-03



